


MIG-29 FULCRUM-A

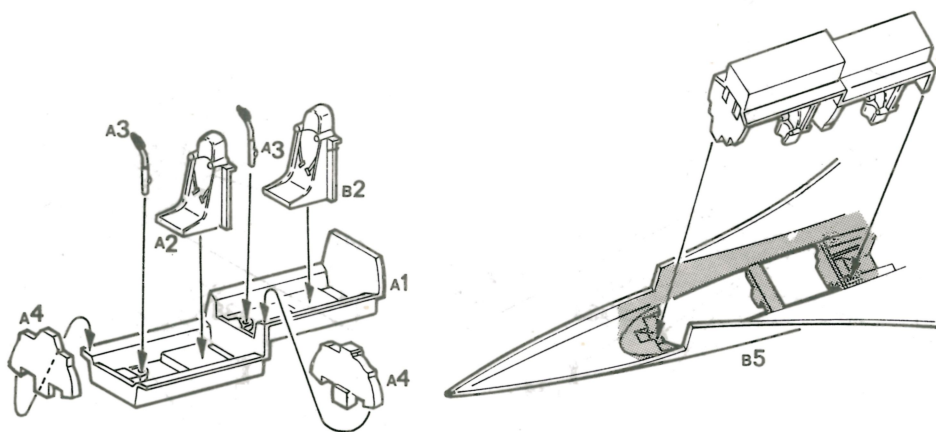


1 1•5




2 6•14


Nel montaggio non utilizzare il numero 11
 When assembling do not use no.11
 No 11 nicht verwenden.
 Dans l'assemblage ne pas utiliser le no.11
 En el montaje, no utilizar el número 11
 No 11 niet gebruiken.
 11 の部品は使いません。

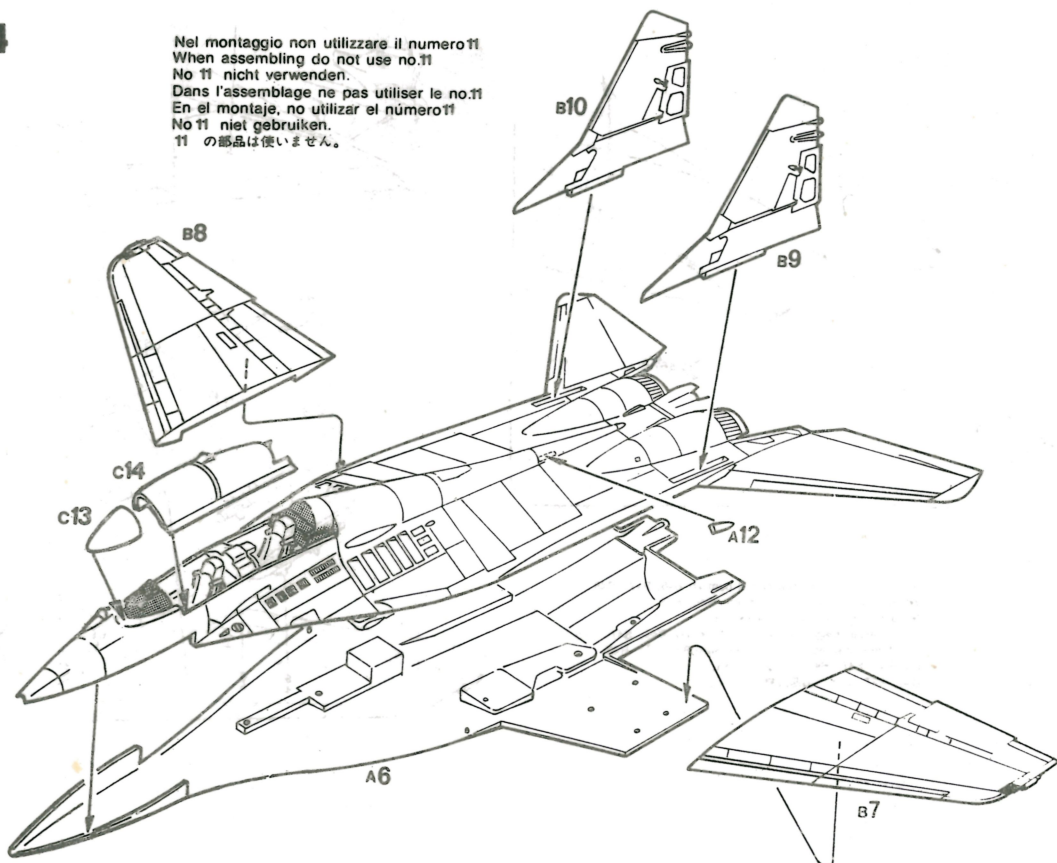




3 15•28

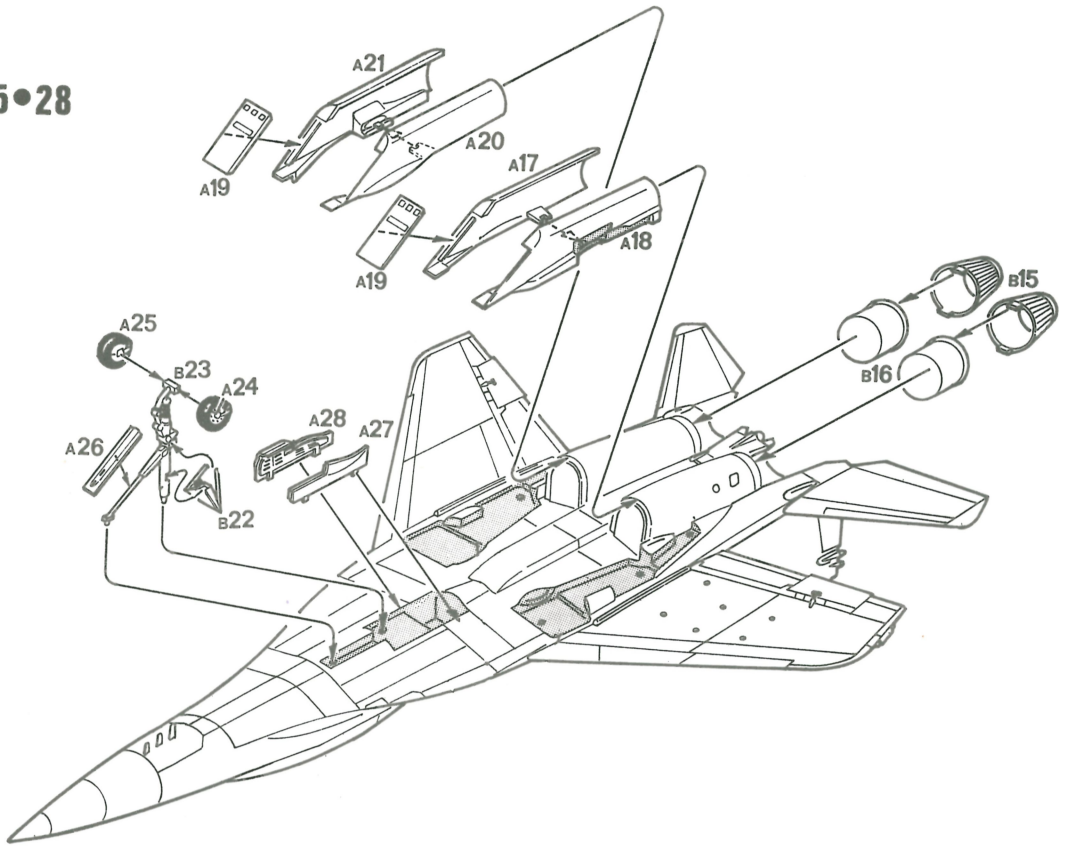

4 29•40

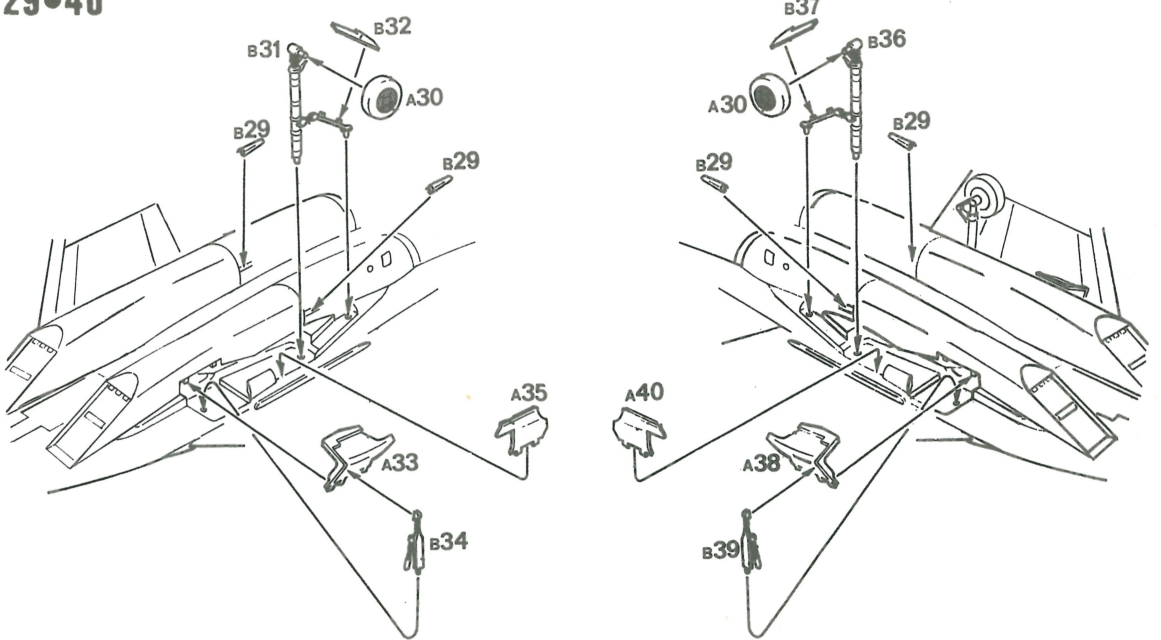

5 41•51

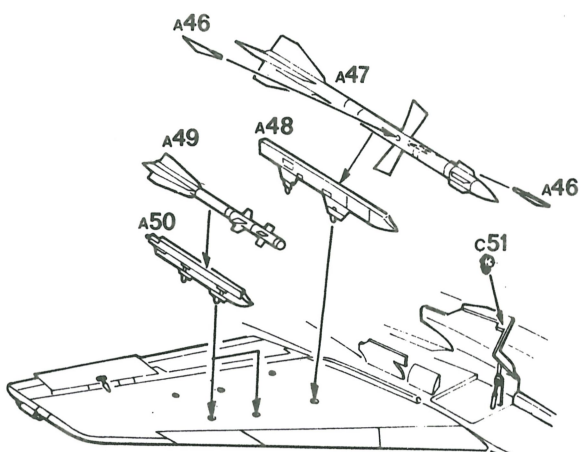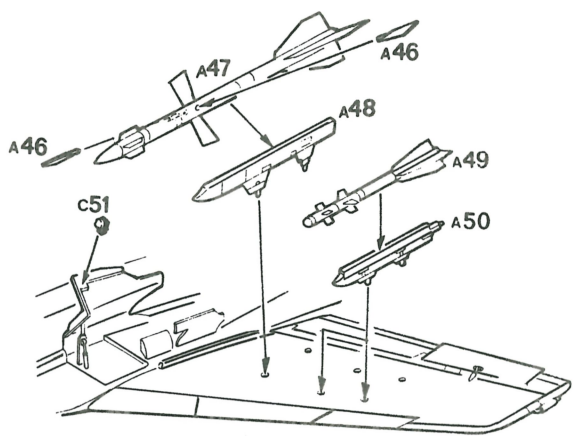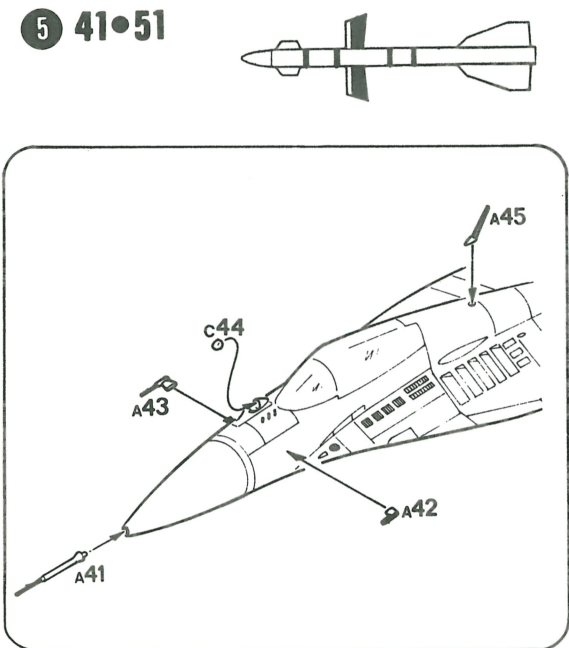

Nel montaggio non utilizzare il numero B46, B47, B48
 When assembling do not use no. B46, B47, B48
 No B46, B47, B48 nicht verwenden.
 Dans l'assemblage ne pas utiliser le no. B46, B47, B48
 En el montaje, no utilizar el numero B46, B47, B48
 No B46, B47, B48 nicht gebruiken.
 B46, B47, B48 の部品は使いません。