

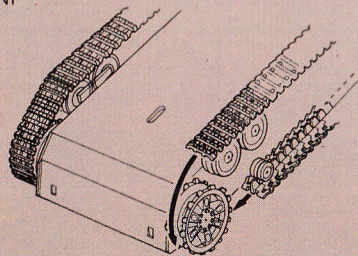



- READ ALL THE INSTRUCTIONS BEFORE STARTING ASSEMBLY
- USE CEMENT AND PAINT ONLY IN A WELL VENTILATED ROOM
- CAREFULLY CUT THE PARTS FROM THE RUNNERS WITH A SHARP BLADE OR A PAIR OF NIPPERS. TRIM ANY RESIDUE OFF THE ATTACHMENT POINTS.
- USE CEMENT SPARINGLY. USE A NORMAL OR SLOW-DRYING CEMENT TO ASSEMBLE THE TREAD BLOCKS.

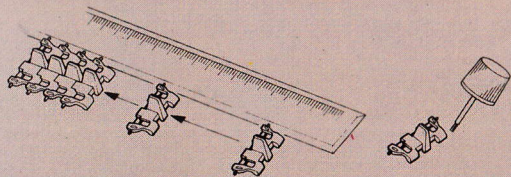

- ASSEMBLE THE TREAD BLOCKS AGAINST A STRAIGHT EDGE AS SHOWN.
- RECOMMEND CEMENTING 5 TO 6 BLOCKS AT A TIME, THEN FORMING THEM INTO THE SLACK OR STRAIGHT SEGMENTS AS YOU CHOOSE.

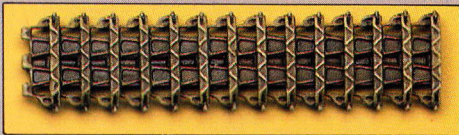

- PAINT THE TRACKS TO GENERALLY MATCH THE CAMOUFLAGE COLORS USED ON THE VEHICLE.
- AS A FINISHING TOUCH LIGHTLY DRY BRUSH BARE STEEL OR GUN-METAL GRAY ON THE RAISED LINES OF THE TRACKS TO RESEMBLE WEAR ON THE METAL TREADS

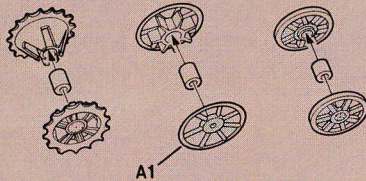

- IF YOU ARE PAINTING YOUR MODEL TO-RESEMBLE FIELD USE, APPLY PASTEL EARTH COLORS TO THE TREADS, TOP AND BOTTOM.



- FORM THE TRACKS WITHIN 60 MINUTES OF APPLYING CEMENT.

