

Tail views will help you painting and position the decals on your model.



#### Basic Instructions for the Application of Microscale Waterslide Decals:

- The object to be decalced must have a clean and relatively smooth glossy surface.
- Cut out the Decal lettering and dip in clean water (preferably Distilled water) anywhere from 10 to 20 seconds. Note: Some lettering might take a longer soaking time than other sheets. Set the Decal on a damp paper towel for a short period of time or until the Decal slides freely on the backing paper.
- Place Decal where desired on object. It might be of help if a layer of Micro-Set is brushed on the object first and then place the Decal. This process will allow the Decal to avoid the Silvering effect that can happen with just the water. Work as fast as you can in placing the lettering as the Micro-Set starts the wrinkling of the Decal and setting it to the object.
- Blot gently around the edges of the Decal with a paper towel or tissue to remove excess water and allow to dry completely. Add more Micro-Set as necessary over the top of the Decal very carefully. This process will make the Decal lettering a part of the model.
- When placing a Decal on slightly irregular surfaces, use Micro-Sol. This is the stronger of the two products and aids in soften the Decal to fill the contour, rivets and crevices on the object. The setting solution also improves adhesion by eliminating the tiny bubbles that can be trapped under the Decal film.
- When the Decals are completely dry, it is necessary to wash off the Decal glue and water spots from the object with a damp paper towel or you may brush the water on and then dab it dry. Do not wipe the Decal lettering. Drying time may vary, but allow several hours or overnight to before proceeding.
- It is recommended that a clear protective coating be applied to the entire surface of the object. The over spraying of the Decals will protect them from handling and seal the painted surface.

Decals design by: Netanel Deri.

For orders: Sammy Dekel: E-mail [skydecal@netvision.net.il](mailto:skydecal@netvision.net.il), Telefax 02-6454543, Israel

© 2007 sky's decals. all rights reserved.

No.23/24/25

**Sky's Decals**

# Israeli Air Force F-15I "Raam"

## 69 Squadron



#### Includes:

- New eagle head
- Complete low-vis stencils
- Marking for Lantirn pods, AIM-120 Amraam and Python-4
- Colorful instructions booklet!




© 2007 sky's decals. all rights reserved.

E-mail [skydecal@netvision.net.il](mailto:skydecal@netvision.net.il), Telefax 02-6454543, Israel




\* Apply decals both sides

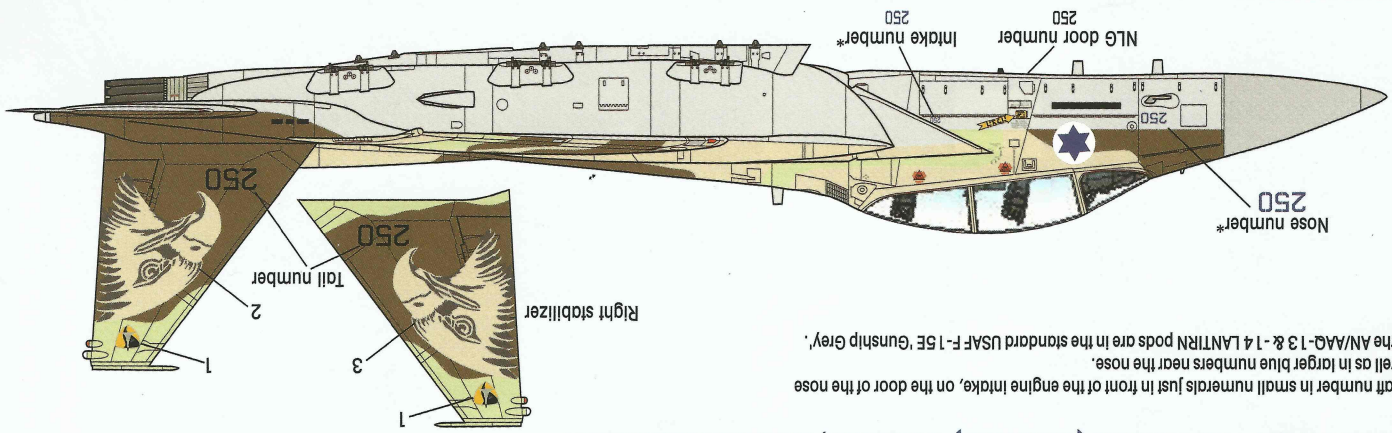


Note aircraft number in small numerals just in front of the engine intake, on the door of the nose gear, as well as in larger blue numerals near the nose. Also note the AN/AAQ-13 & -14 LANTIRN pods are in the standard USAF F-15E 'Gunship Grey'.

### F-151 RAAM NO. 250 - THE PATISHIM ('HAMMERS') SQUADRON, HATZERIM AIRBASE 2007

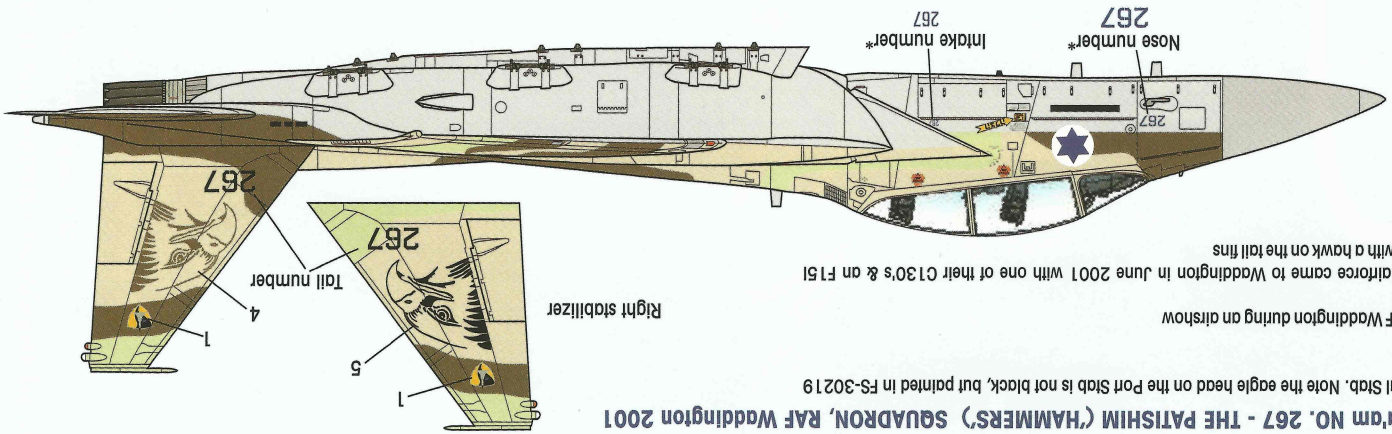

Port Vertical Stab. Note the eagle head on the Port Stab is not black, but painted in FS-30219 brown  
at 2001 RAF Waddington during an airshow  
The Israeli airforce came to Waddington in June 2001 with one of their C130's & an F151 decorated with a hawk on the tall fins

### F-151 RAAM NO. 267 - THE PATISHIM ('HAMMERS') SQUADRON, RAF Waddington 2001

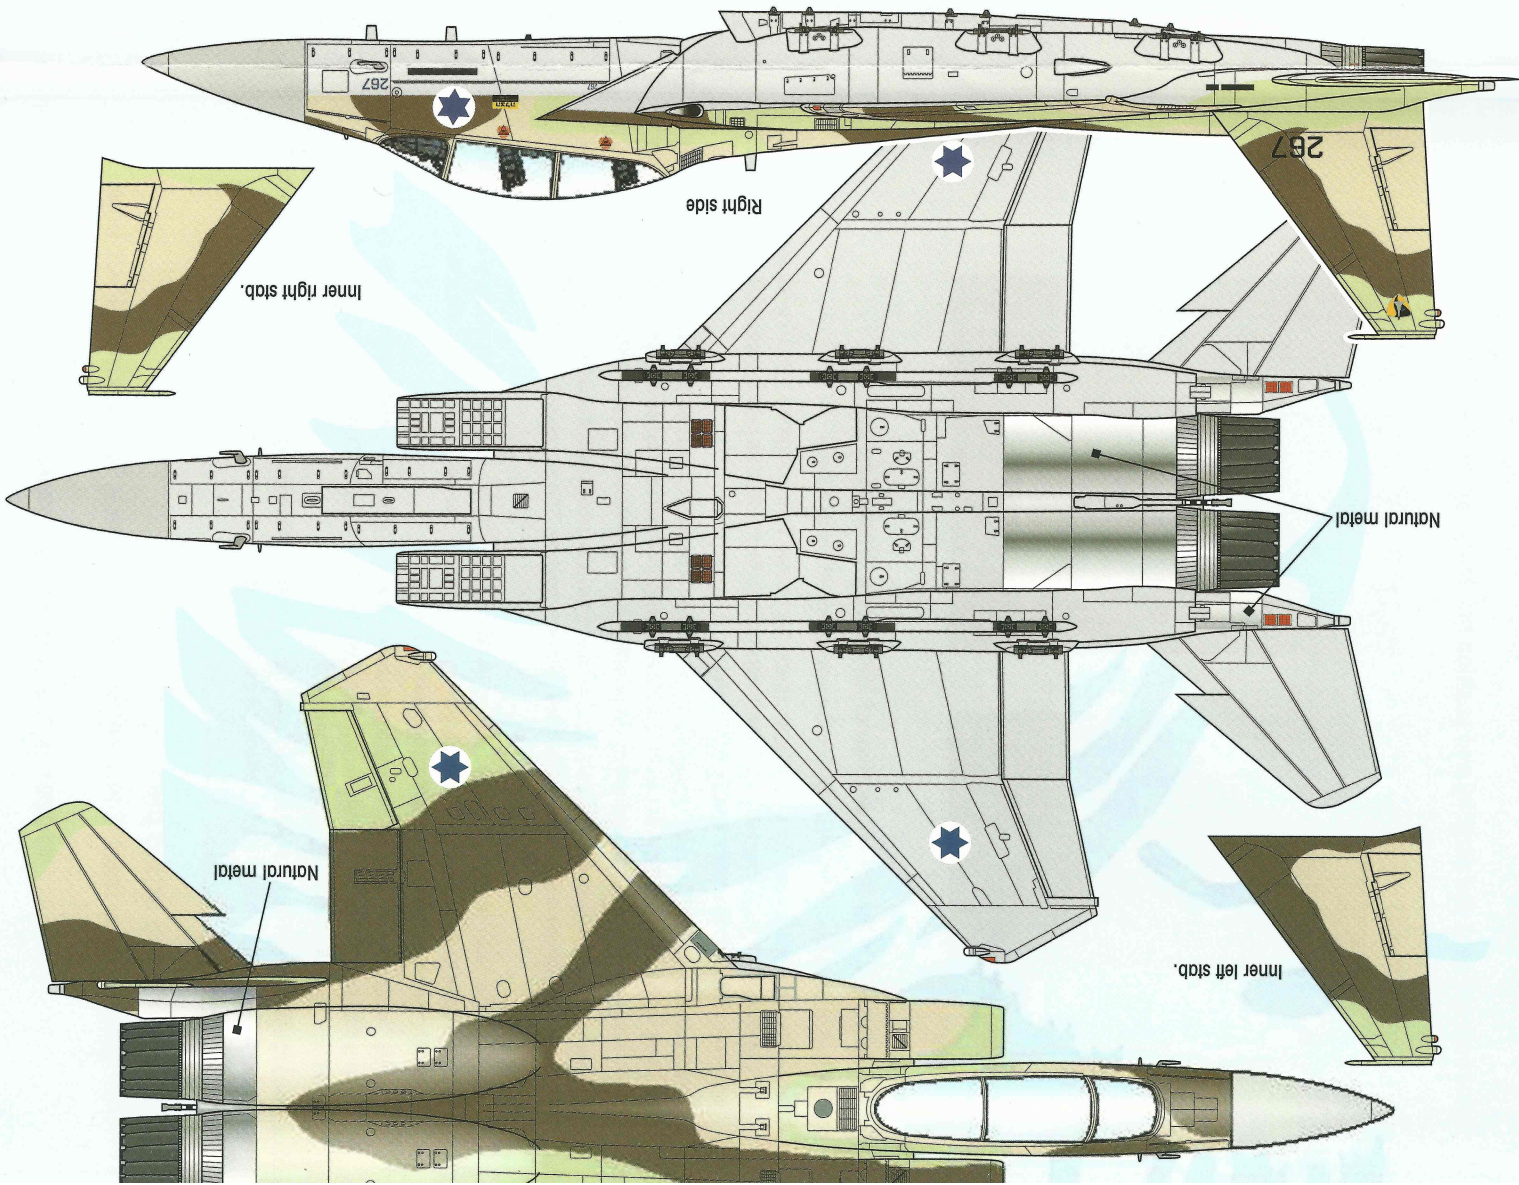




*SD-23/ 24/ 25 Israeli Air Force*  
**F-15I Ra'am ("Thunder")**

**F-15I Ra'am NO. 267 - THE PATISHIM ('HAMMERS') SQUADRON, HATZERIM AIRBASE 2006**

The F-15I is operated by the IDF/AF No 69 Hammers Squadron, which had previously been operating the F-4 Phantom.

Note aircraft number in small numerals just in front of the engine intake, on the door of the nose gear, as well as in larger blue numbers near the nose.

Also note the AN/AAQ-13 & -14 LANTIRN pods are in the standard USAF F-15E 'Gunship Grey'.





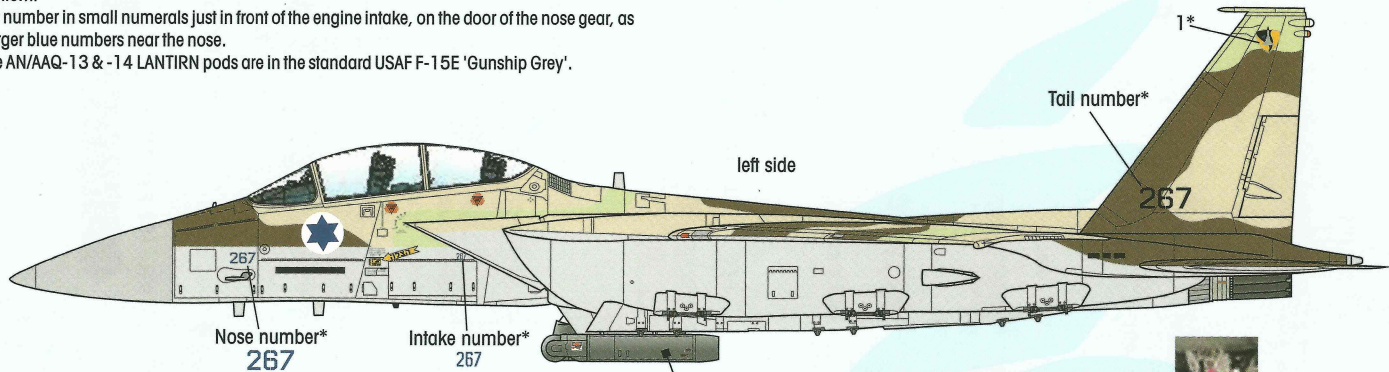


Sand	Green	Brown	Grey
FS 33531	FS 34424	FS 30219	FS 36375

Gunship grey




NLG door number 267

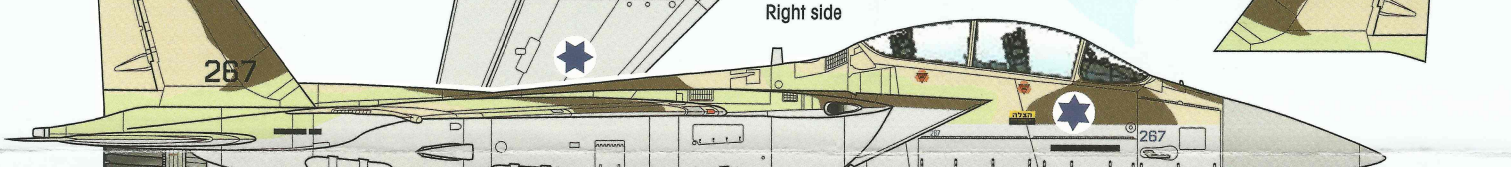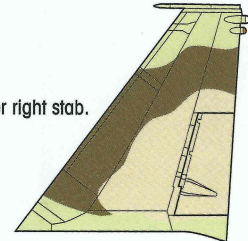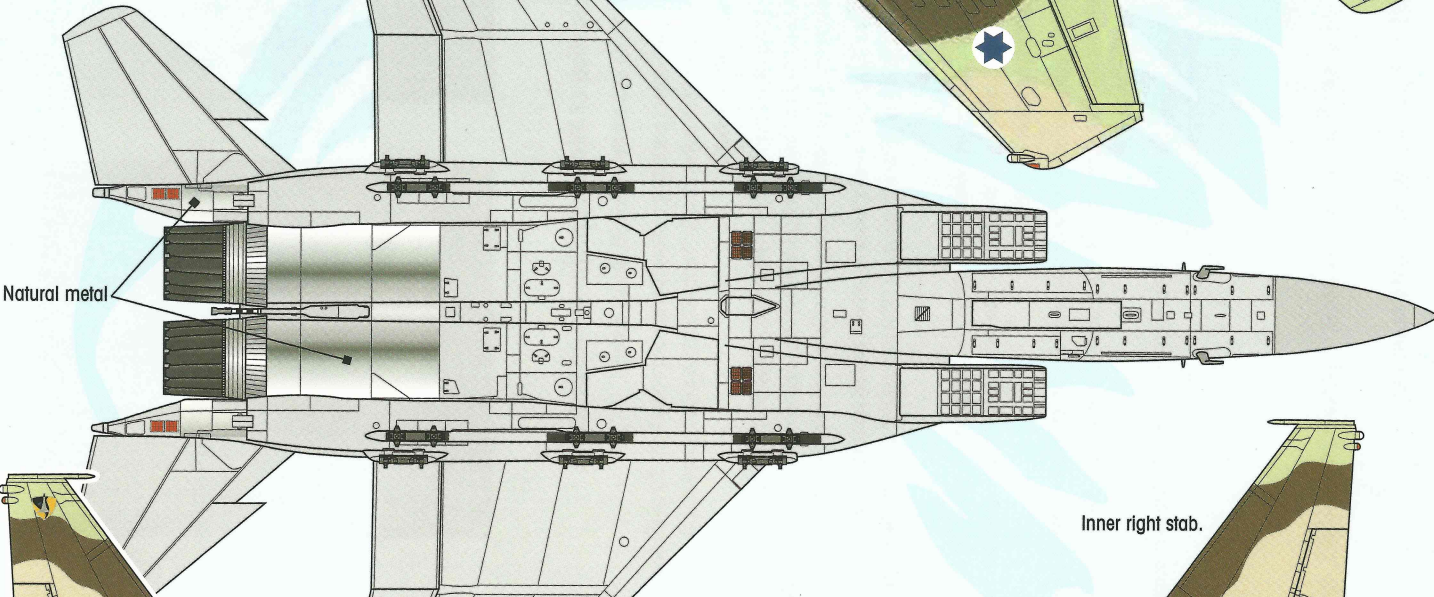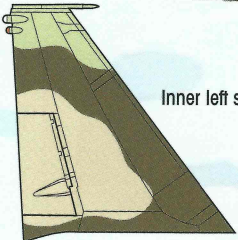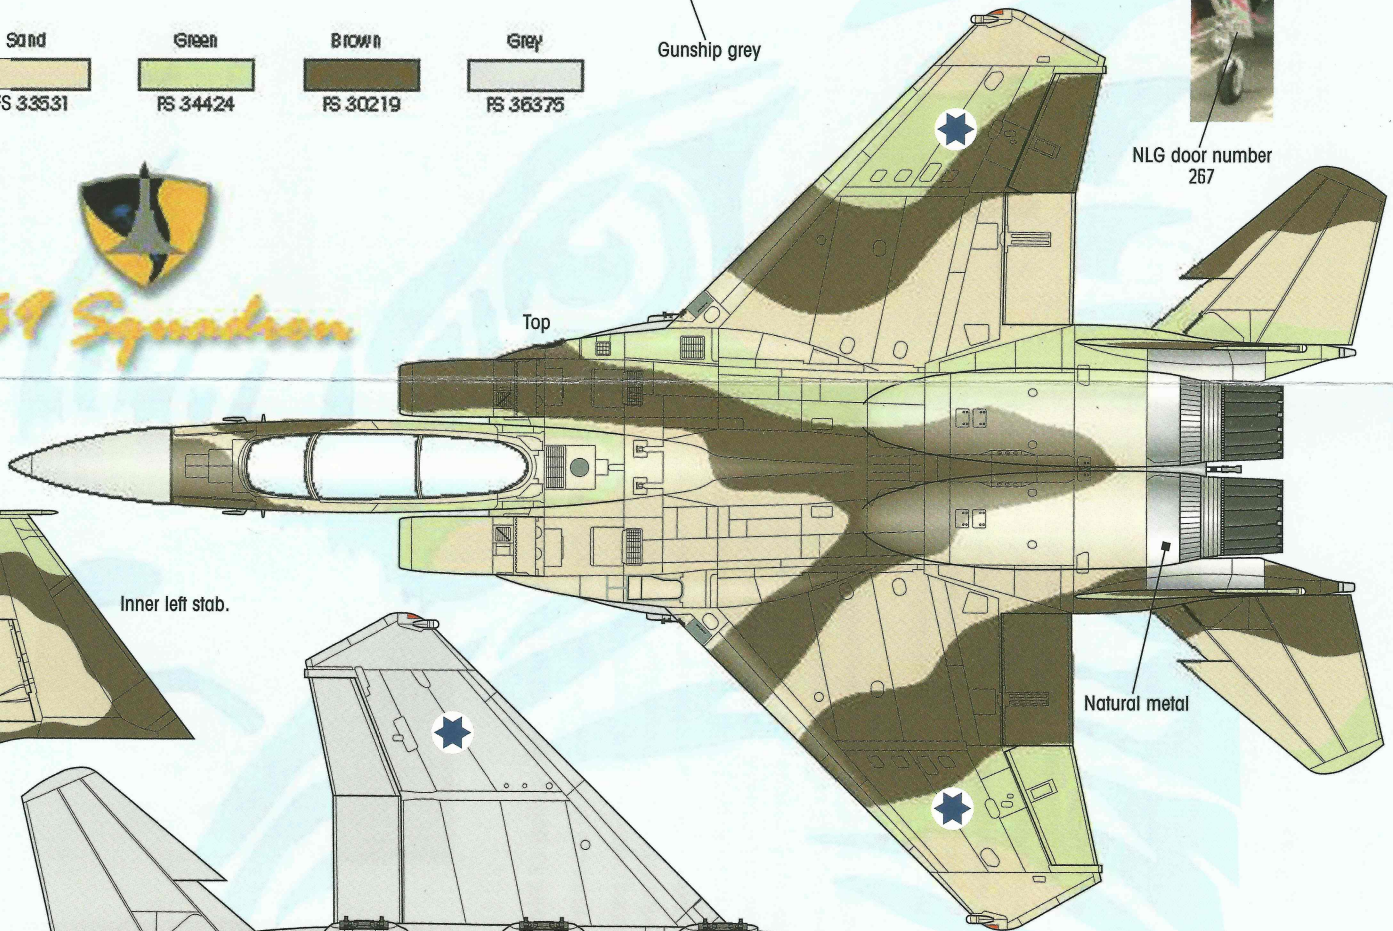




# F-15I Armament


AN/AAQ-13 LANTIRN  
Navigation pod

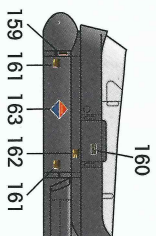

AN/AAQ-14 LANTIRN  
Targeting pod

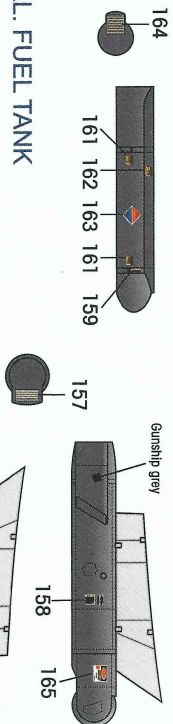


600 GAL. FUEL TANK

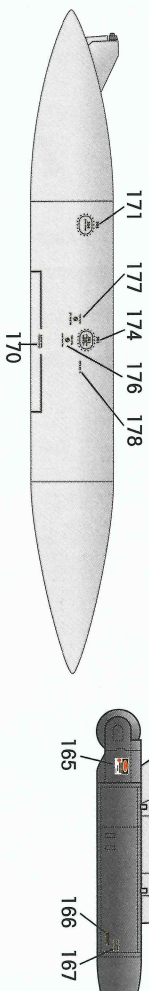

\* Apply decals both sides


\*\* Apply decals all sides in the same manner

## WING PYLON

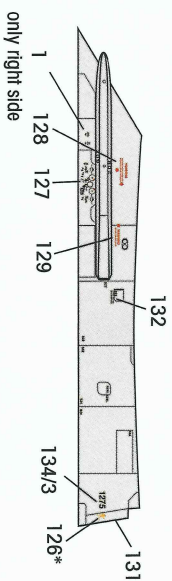


only right side

## LAU-128 LAUNCU RAIL

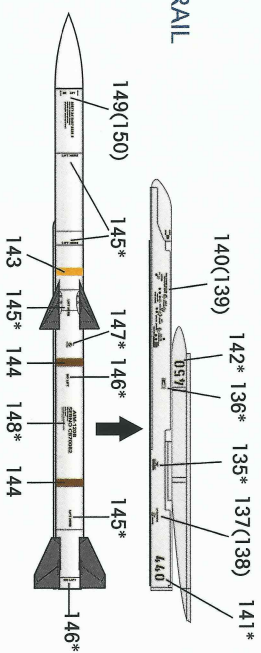

## LAU-7(I) LAUNCU RAIL

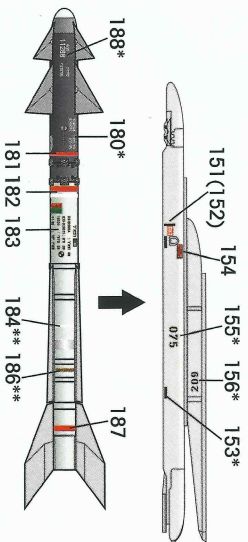

## PYTHON-4

Tail views will help you painting and position the decals on your model.



### Basic Instructions for the Application of Microscale Waterslide Decals:

- The object to be decalced must have a clean and relatively smooth glossy surface.
- Cut out the Decal lettering and dip in clean water (preferably Distilled water) anywhere from 10 to 20 seconds. Note: Some lettering might take a longer soaking time than other sheets. Set the Decal on a damp paper towel for a short period of time or until the Decal slides freely on the backing paper.
- Place Decal where desired on object. It might be of help if a layer of Micro-Set is brushed on the object first and then place the Decal. This process will allow the Decal to avoid the Silvering effect that can happen with just the water. Work as fast as you can in placing the lettering as the Micro-Set starts the wrinkling of the Decal and setting it to the object.
- Blot gently around the edges of the Decal with a paper towel or tissue to remove excess water and allow to dry completely. Add more Micro-Set as necessary over the top of the Decal very carefully. This process will make the Decal lettering a part of the model.
- When placing a Decal on slightly irregular surfaces, use Micro-Sol. This is the stronger of the two products and aids in softening the Decal to fill the contour, rivets and crevices on the object. The setting solution also improves adhesion by eliminating the tiny bubbles that can be trapped under the Decal film.
- When the Decals are completely dry, it is necessary to wash off the Decal glue and water spots from the object with a damp paper towel or you may brush the water on and then dab it dry. Do not wipe the Decal lettering. Drying time may vary, but allow several hours or overnight to before proceeding.
- It is recommended that a clear protective coating be applied to the entire surface of the object. The over-spraying of the Decals will protect them from handling and seal the painted surface.

Decals design by: Netanel Deri.



For orders: Sammy Dekel: E-mail: skydecal@netvision.net.il, Telefax 02-6454543, Israel

© 2007 sky's decals. all rights reserved.



# Sky's Decals

## SD-23/24/25 IAF F-15I Raam -Stencils

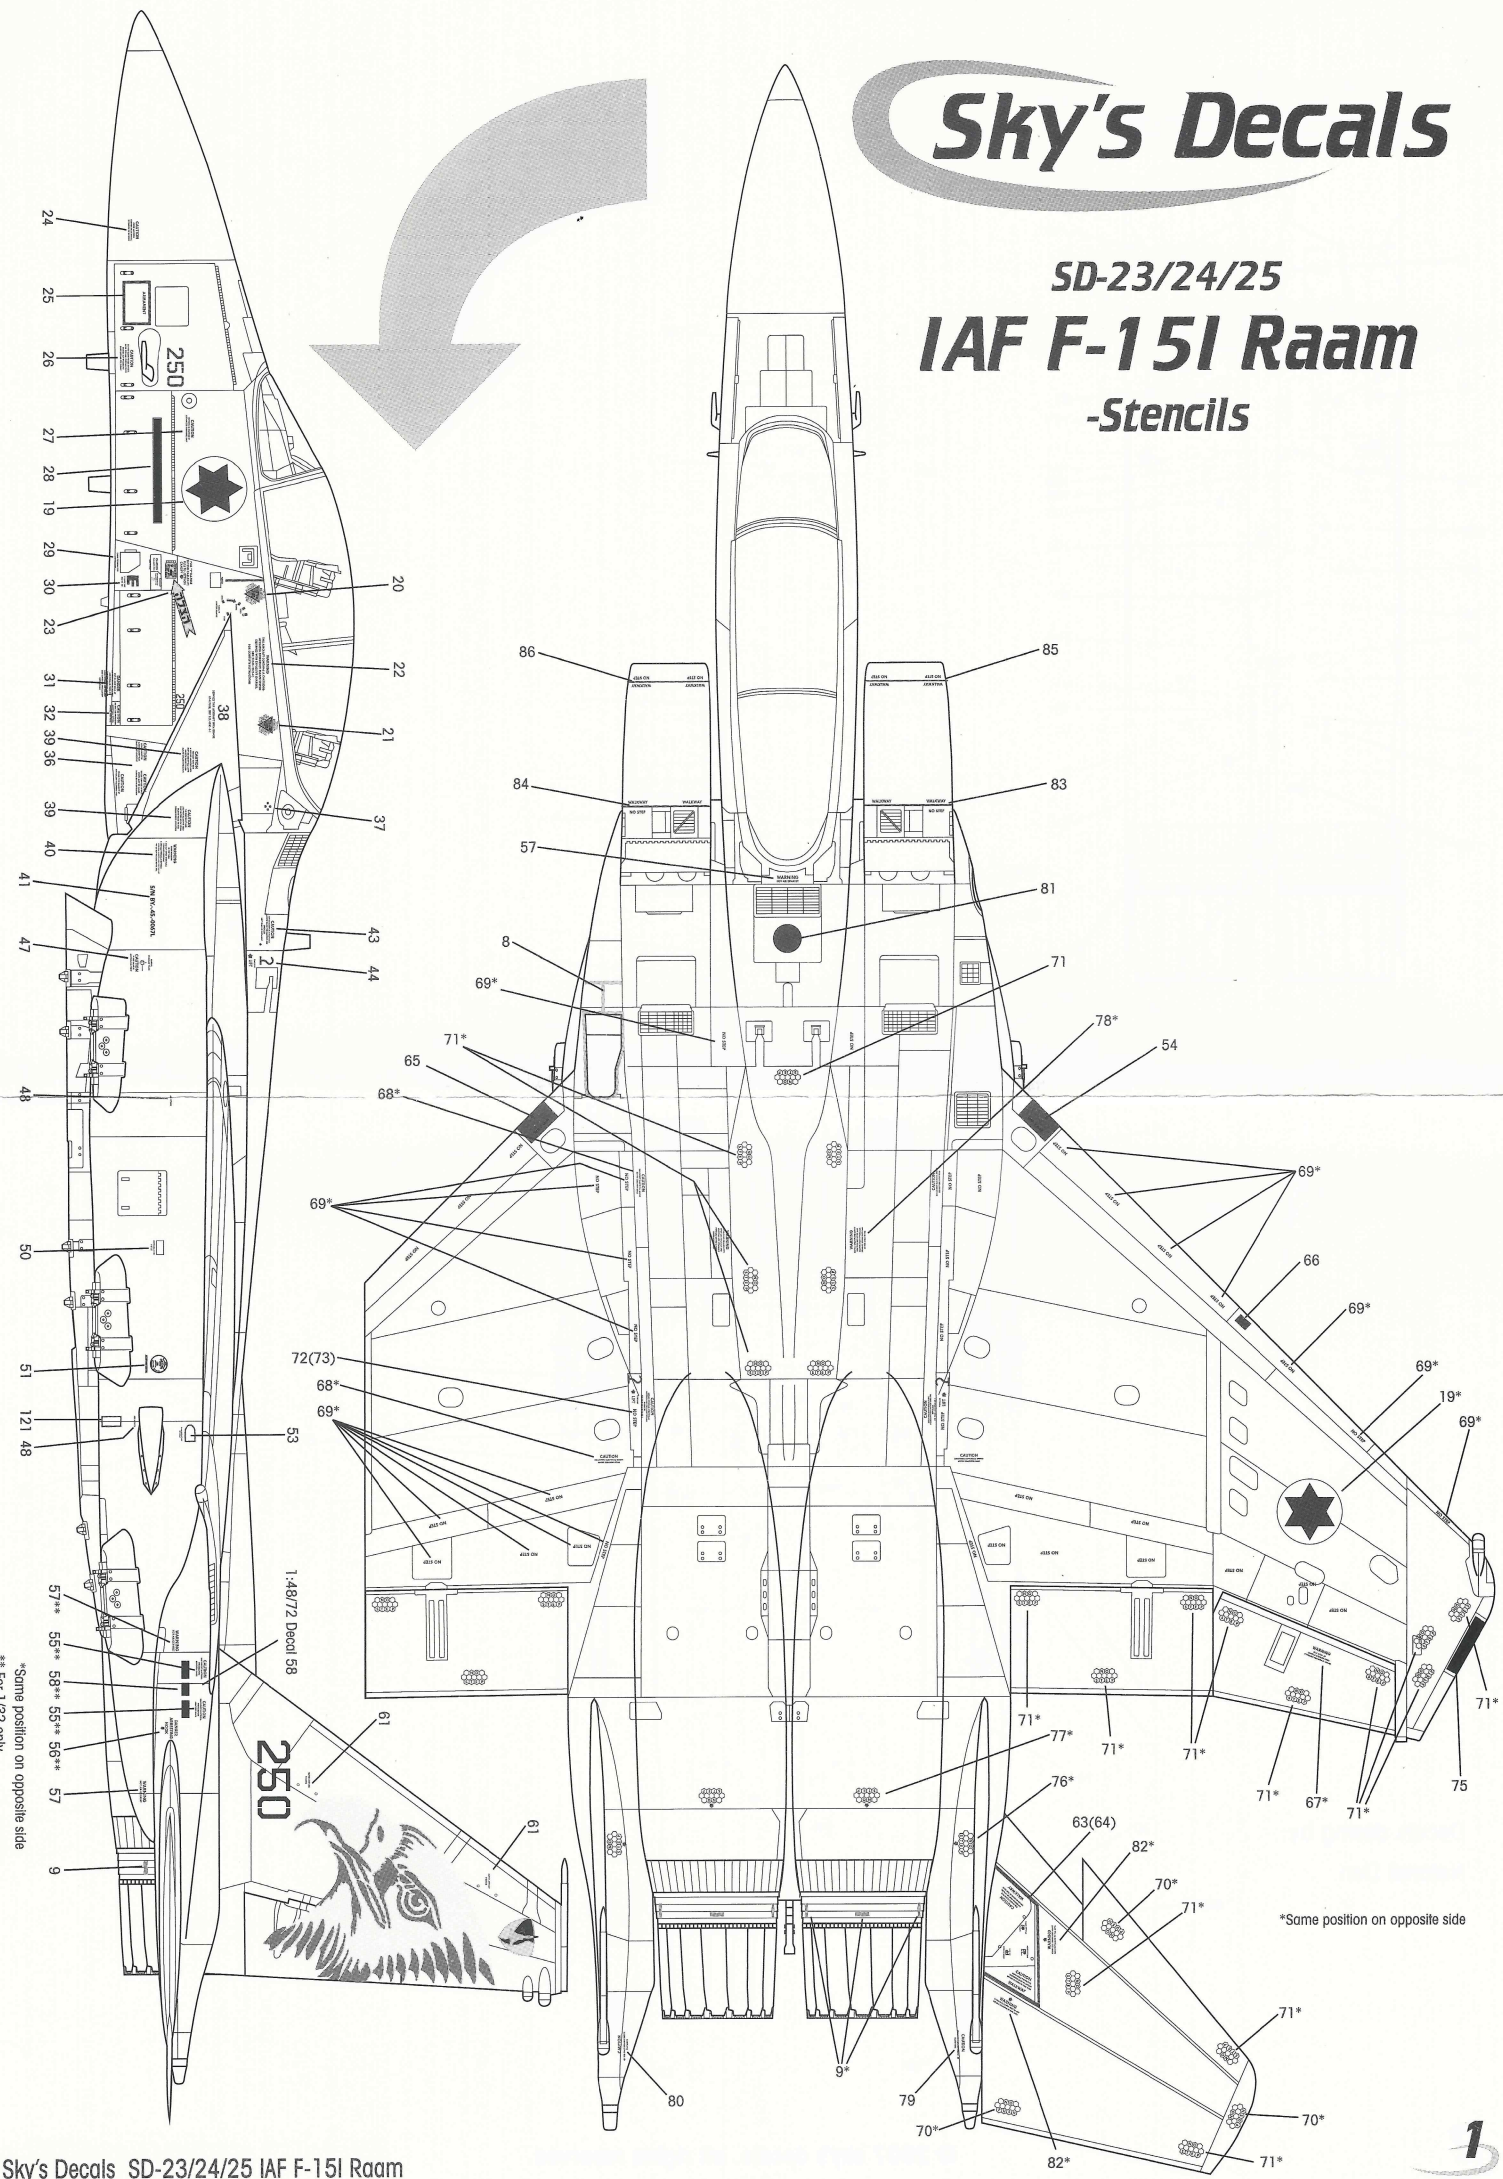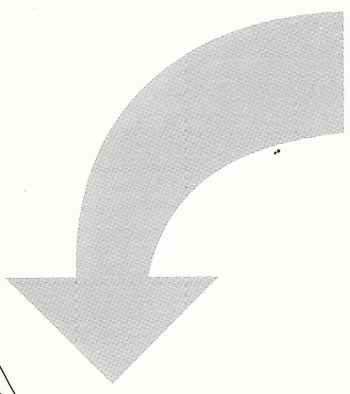






Some position on opposite side  
\*\* For 1/32 only

\*Same position on opposite side







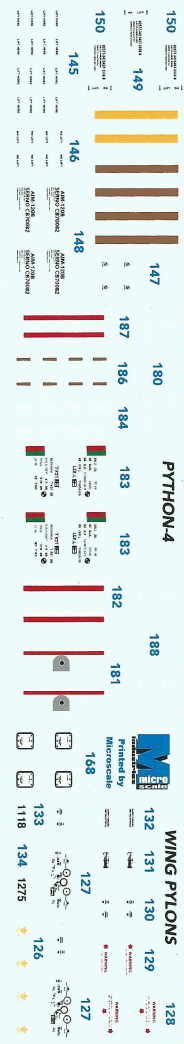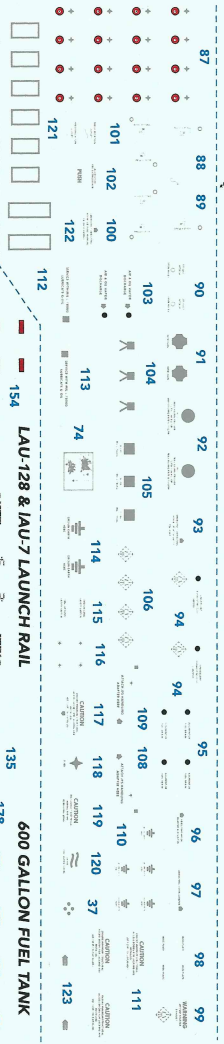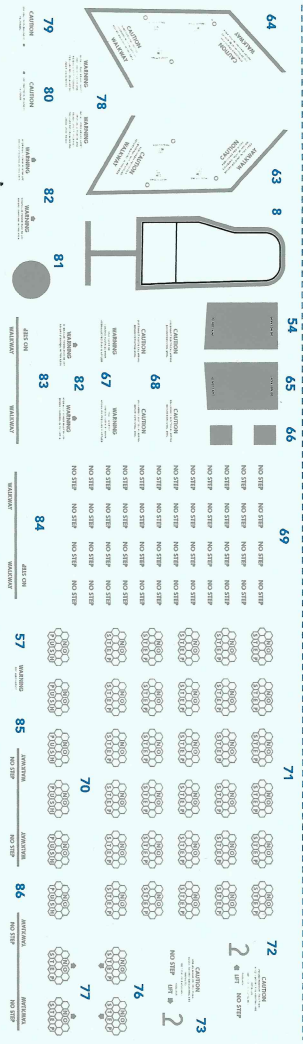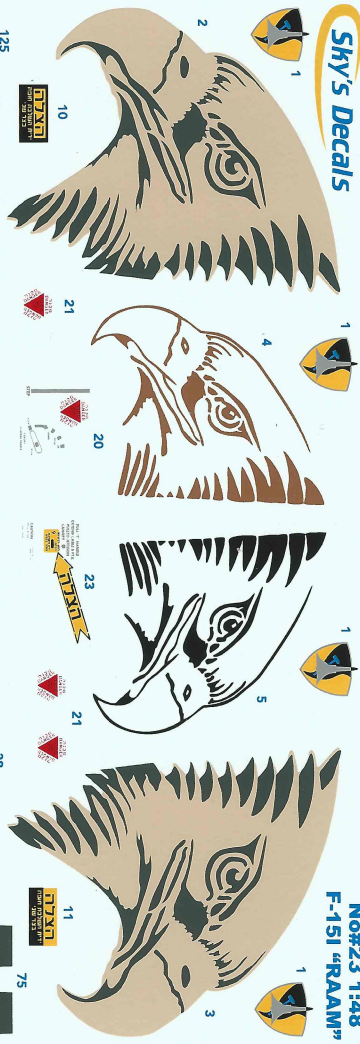

**Sky's Decals**  
No#23 1:48 F-151 "RAAM"

NLG door nu. 267 250  
0 1 2 2 3 4 4 5 5 6 7 8 9

Nose nu.  
250 267 0 1 2 2 3 4 4 5 5 6 7 8 9

Tail numbers  
250 267  
250 267

Printed by Microscale

Intake nu.  
267 250 0 1 2 2 3 4 4 5 5 6 7 8 9  
267 250 0 1 2 2 3 4 4 5 5 6 7 8 9  
175 178  
176 177