


**7361**  
**1/72** **Matra F2 Rocked Pod**  
(4 pcs)



Navštivte naše stránky / Visit our official website

**www.cmkkits.com**

**Polyurethane parts PUR**

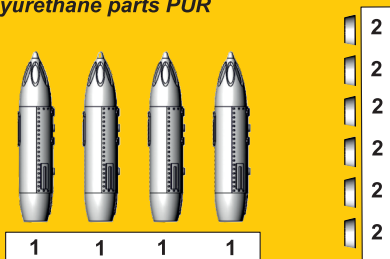

2x díl PUR 2 je náhradní / Spare parts 2x PUR 2

Díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnány do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy). Různé drátky a tyčinky nejsou přiloženy.

K lepení použijte kyanoakralátové lepidlo.

Kontaktní plochy doporučujeme před lepením odmastit.

*Parts slightly distorted and bended owing to temperature changes or due to material ageing can be straightened to requested shape by hot water or hot air jet. (hair dryer). Wires and holes not included.*

*This process can be repeated till result is entirely satisfactory.*

*For best results gluing use cyanoacrylate glue. Contact areas ungrease is recommended before gluing*

**OSTATNÍ SETY / OTHER ITEMS SETS 1/72**

**7350 Messerschmitt Me 163A -**

Interior Set for Special Hobby/Condor kits

**7351 Messerschmitt Me 163A -**

Control Surfaces Set for Special Hobby/Condor kits

**7352 Antisubmarine Bomb 250lb Mk.VIII -**

(Great Britain, WW II) 2 pcs

**7353 Antisubmarine Bomb 500lb Mk.IV -**

(Great Britain, WW II) 2 pcs

**7354 Antisubmarine Bomb 600lb Mk.I -**

(Great Britain, WW II) 2 pcs

**7360 AS 12 Missile (2 pcs)**

