


This is a direct replacement for the inaccurate kit supplied TSS.

Use sprue cutters to remove part from supports and lightly sand remaining support nibs.

Paint inside of the EO/TV windows black and detail to suit your preference.

Glass can be replicated by applying thin layers of epoxy until the voids are filled.

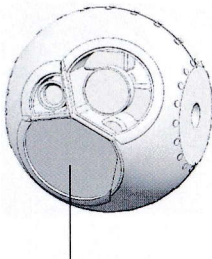

Apply holographic vinyl piece to replicate FLIR window after part is painted

*Master by Jason Liang*