

WWII German Tiger I Late Production

二战德军虎I坦克后期型改造件



FOR DRAGON 7203

卷曲 CRIMP	弯折 BEND	切除 REMOVE	开孔 OPEN HOLE	焊接 SOLDER	退火 ANNEAL
填补 FILL	冲压 PRESS	打磨 GRIND	对侧相同 REPEAT ON OPPOSITE SIDE	选择安装 OPTIONAL	金属件 METAL PART
注意 BE CAREFUL	制作2组 MAKE 2pcs	铜管制作 BRASS TUBE	胶棒制作 ABS ROD	自制 MAKE IT YOURSELF	树脂件 RESIN PART

A1 改造件零件编号
NUMBER OF PE PART

B2 原零件编号
NUMBER OF KIT PART

C3 被替换的原零件编号
NUMBER OF REPLACED KIT PART

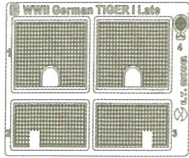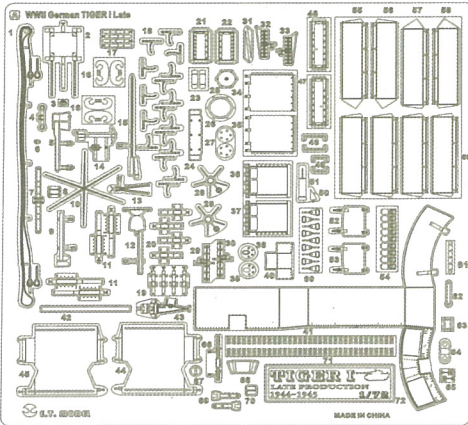

A18 A A19 x4 B A11 x4 C A20 x4 D

A16 A17 x2 E A5 F A9 G

A13 H A12 I

A3 5mm x 5mm x 0.8mm A2 J A15 K

B R J G R B L F H G

Removed from other model kit

B4

x2 A69

A49 A39 A38 A10 A49 A25 A54 A60 A54

A3 A26 A6 A42 A60 A60

A43 A52 A53 A40 A70

A41

Ø0.3mm x 1.5mm

C7

