



CUT

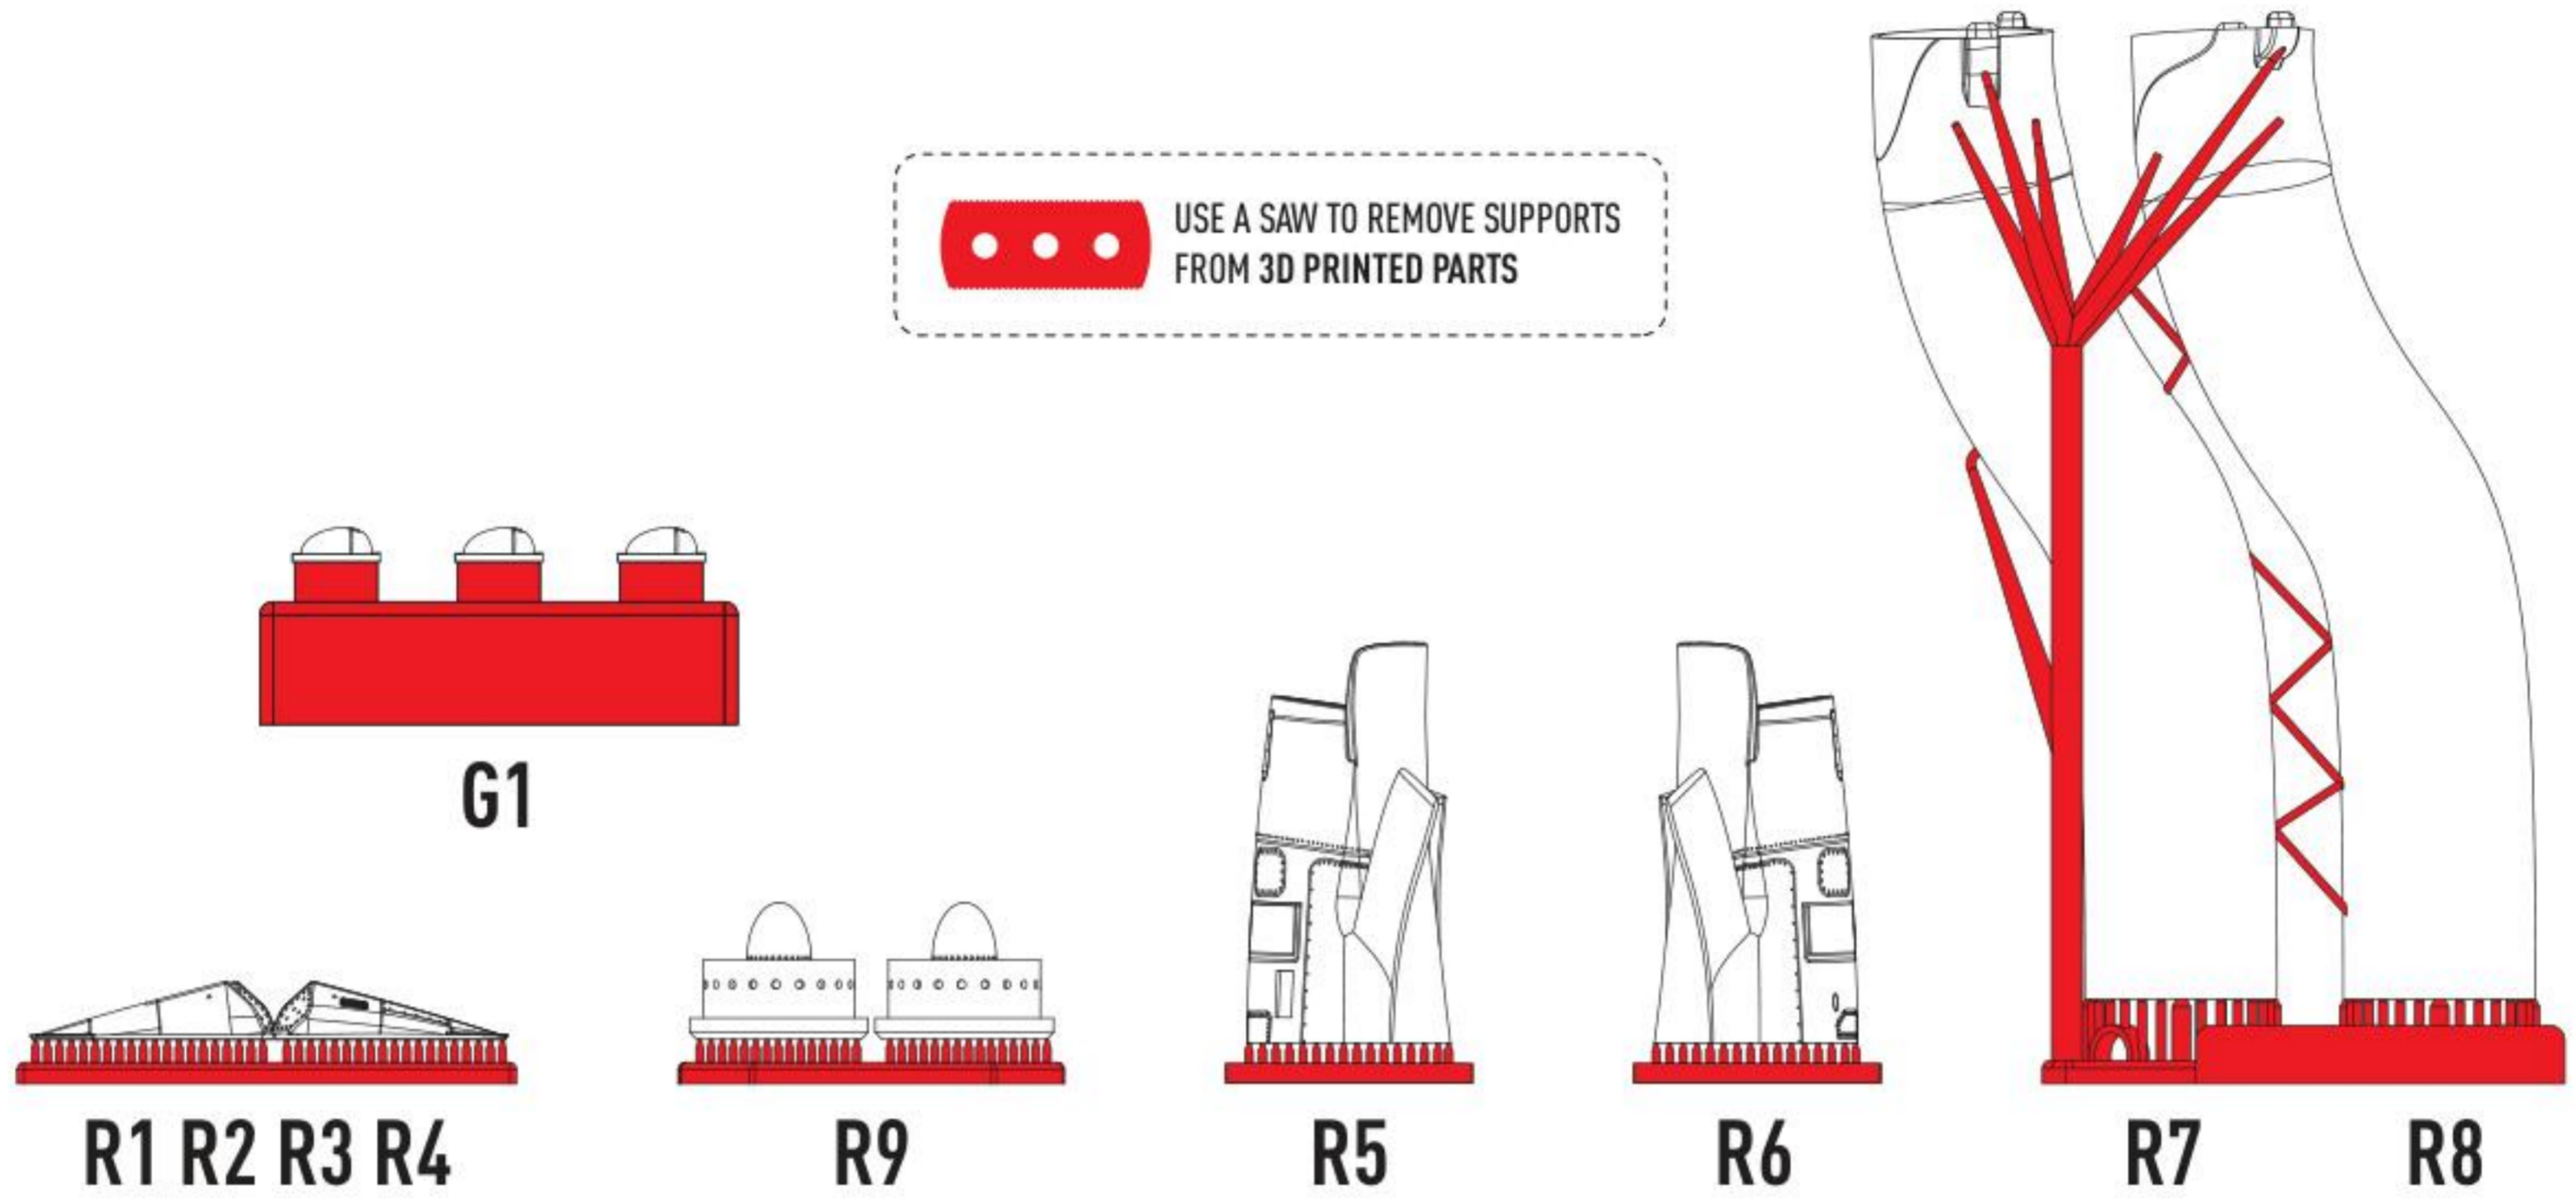


REMOVE PARTS 21, 22, 23, 24, 25, 26, 37 FROM THE ORIGINAL KIT

1 LEFT AIR INTAKE

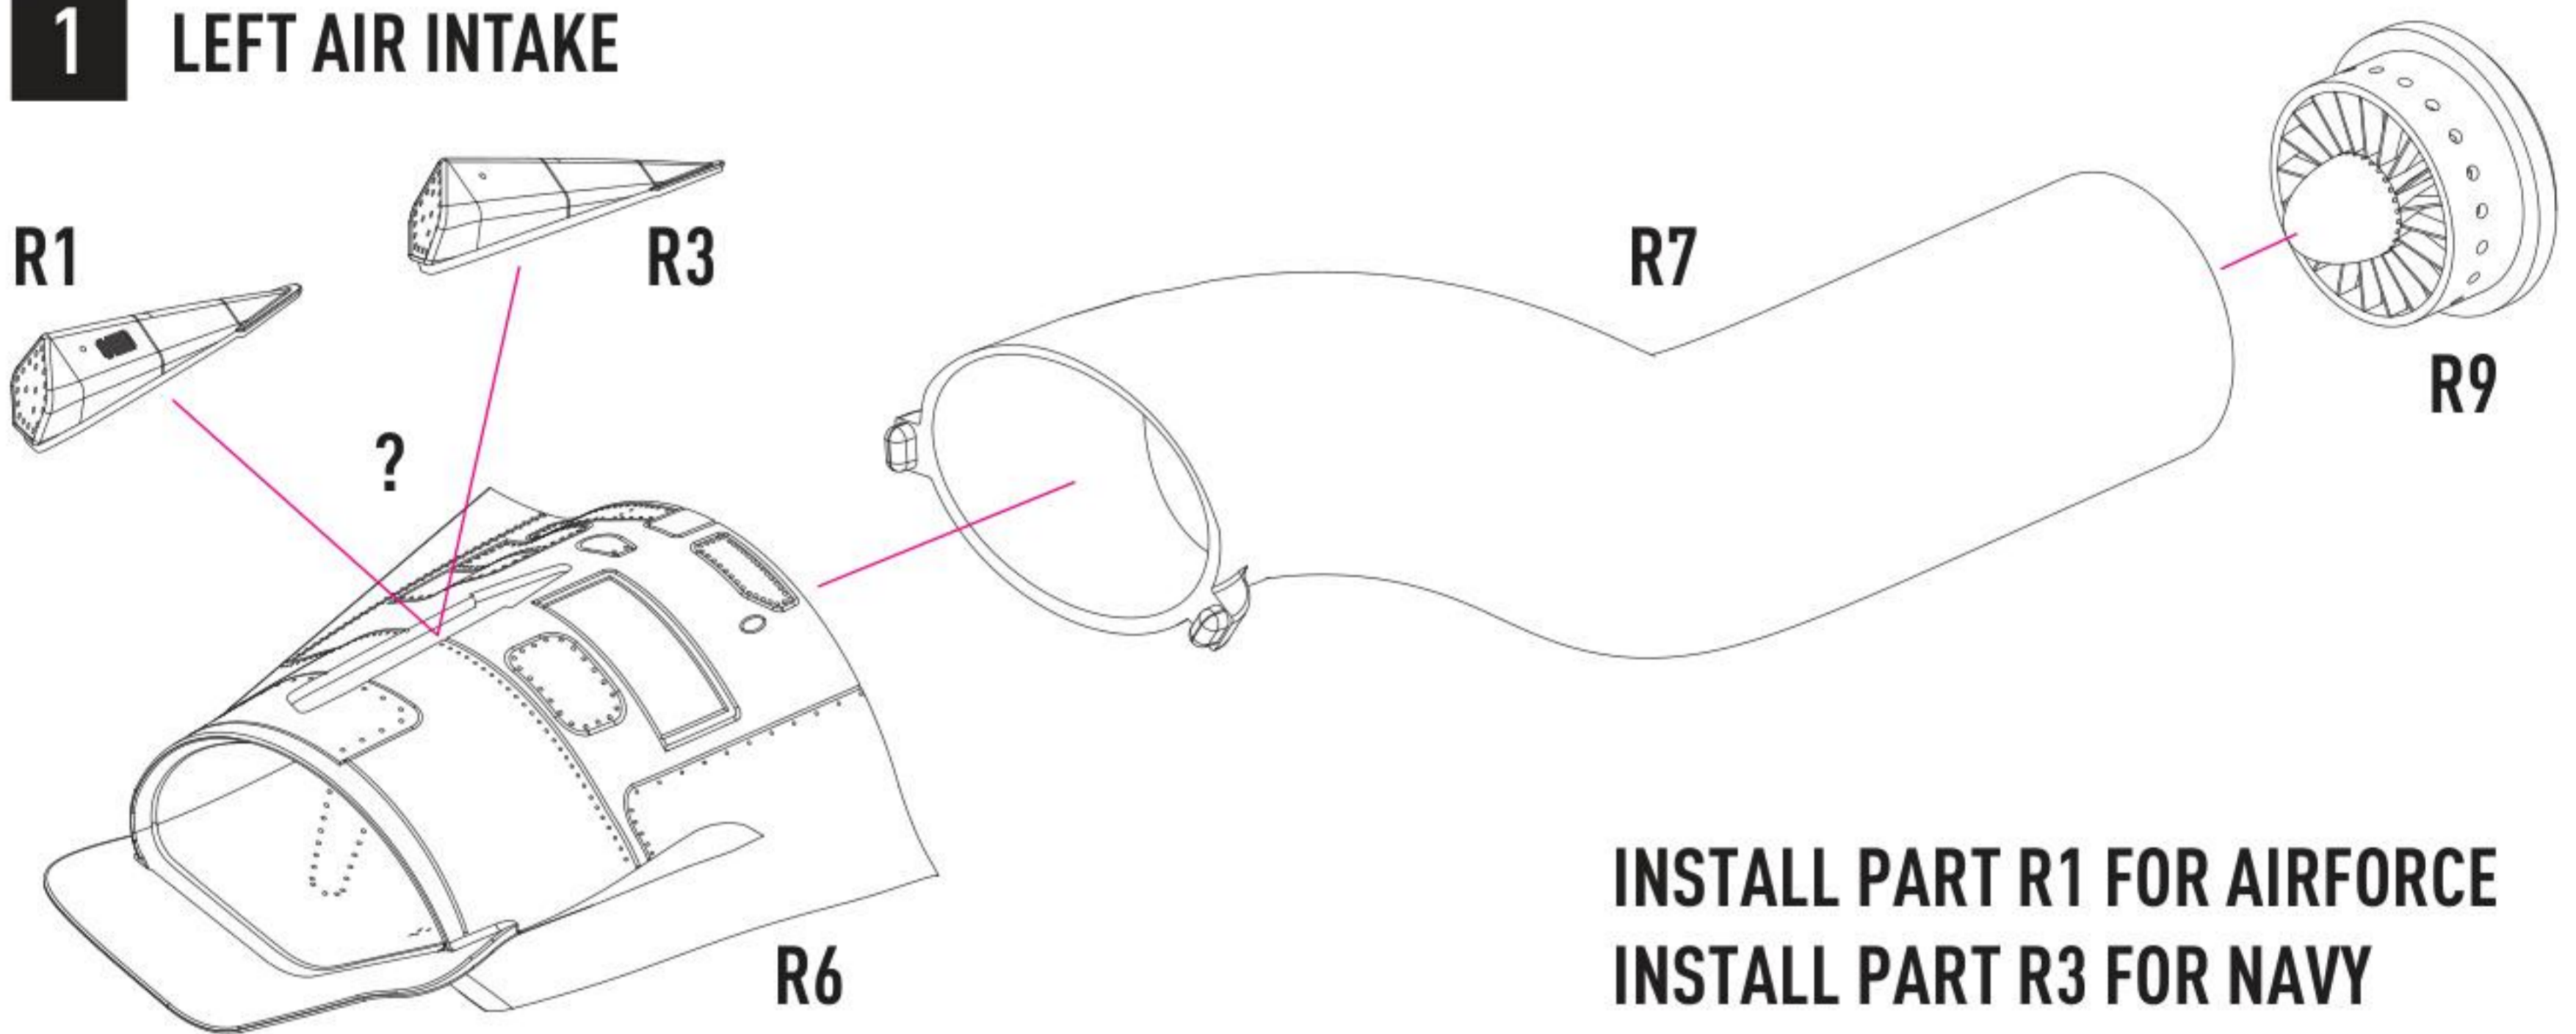

2 RIGHT AIR INTAKE

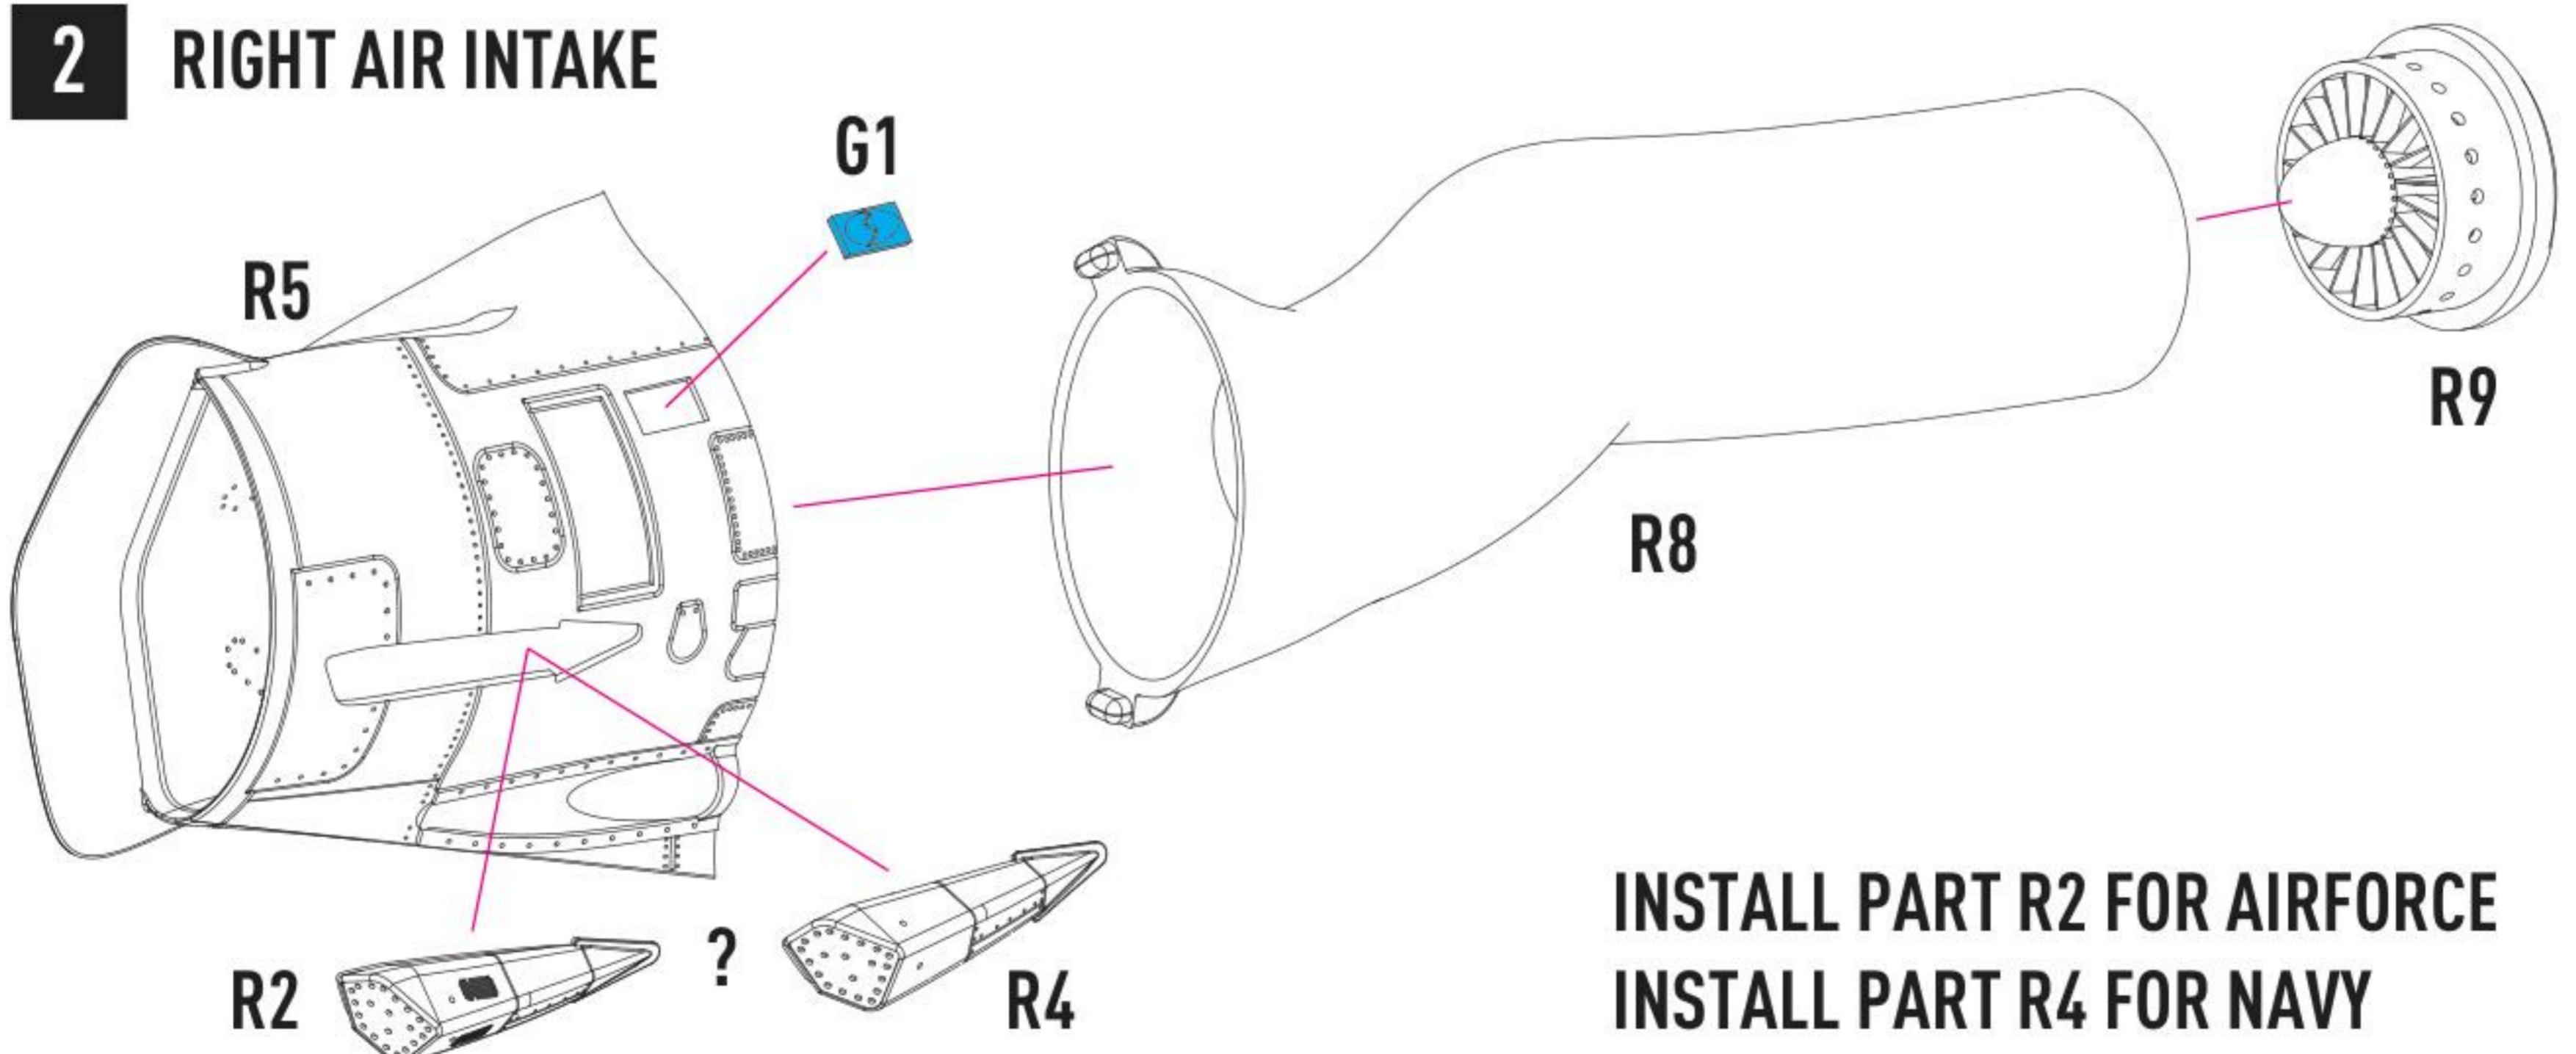

3 INSTALL AIR INTAKES THROUGH HOLES IN THE FUSELAGE

