





GREY MATTER AVIATION

GMAB3203 HURRICANE WHEEL WELL DETAIL SET 1:32 SCALE

Please remember to use a dust mask and work in a well-ventilated area when sanding resin. A medium-viscosity cyanoacrylate glue is recommended for gluing resin to polystyrene parts. Before starting wash parts to remove residues. Resin can deform when curing but is able to Chemically 'remember' the mould shape. If you have parts which have warped, place them in hot (not boiling) water for a few seconds, remove and place on a flat surface for about 5 seconds.

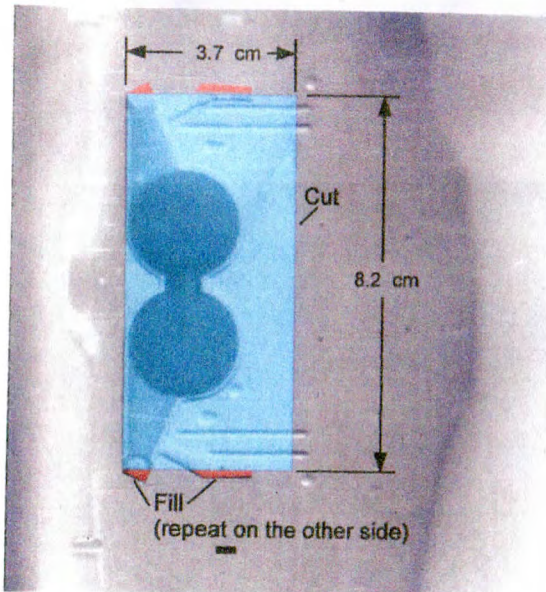



Remove the shaded area and fill as shown

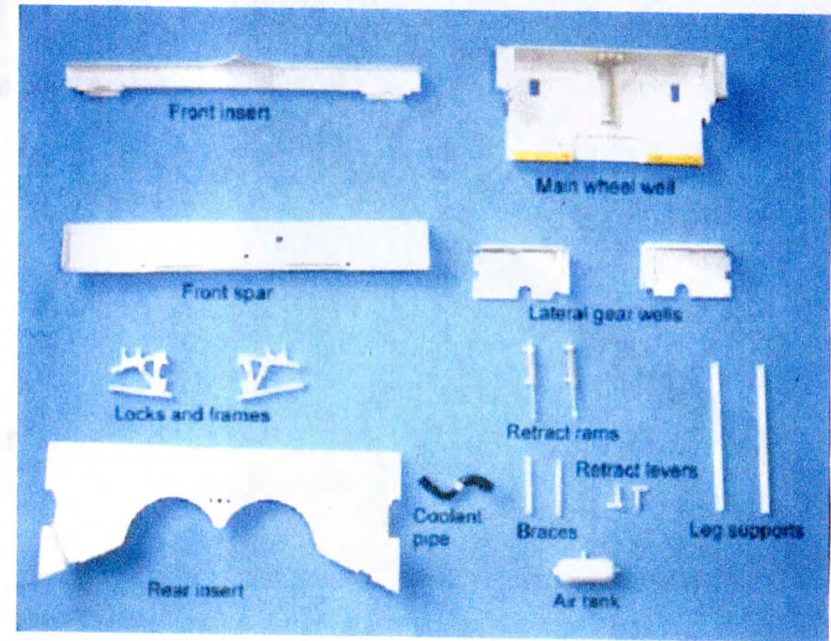


Attach retracting rams and levers to front spar
Air lines had 1 or 2 loops

Attach locks and frames to front spar

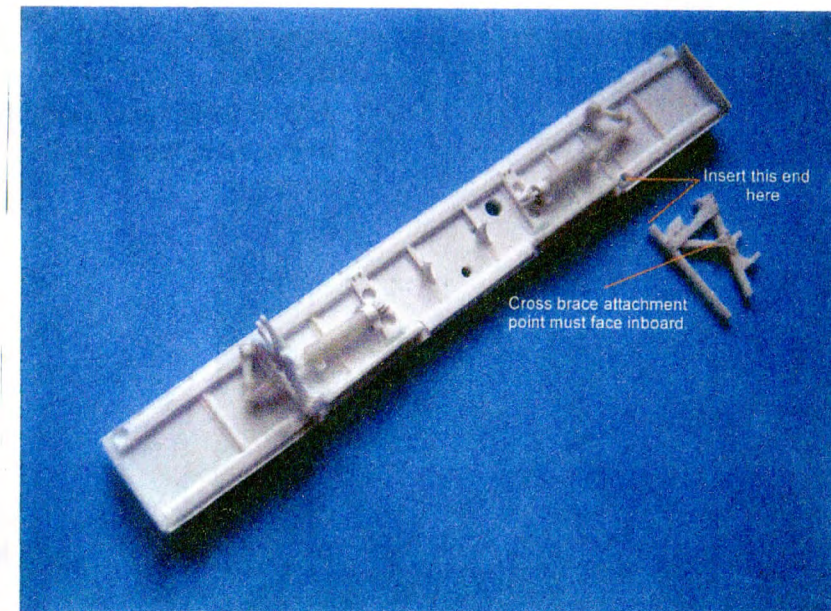


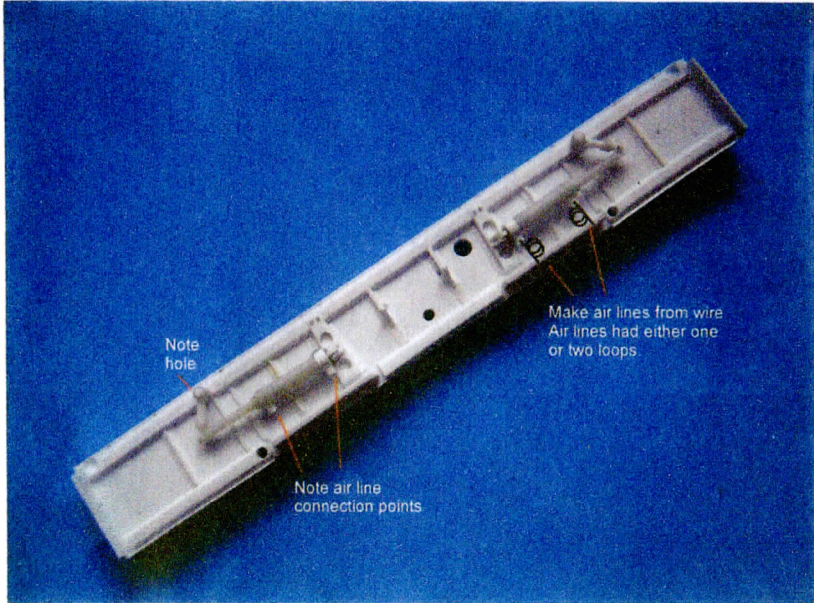


Attach air tank

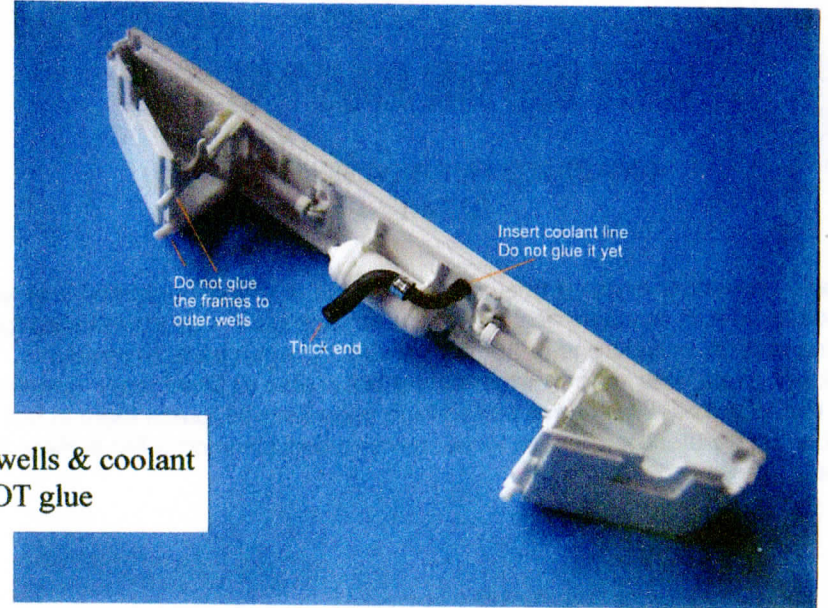



Fit lateral gear wells & coolant pipe but DO NOT glue

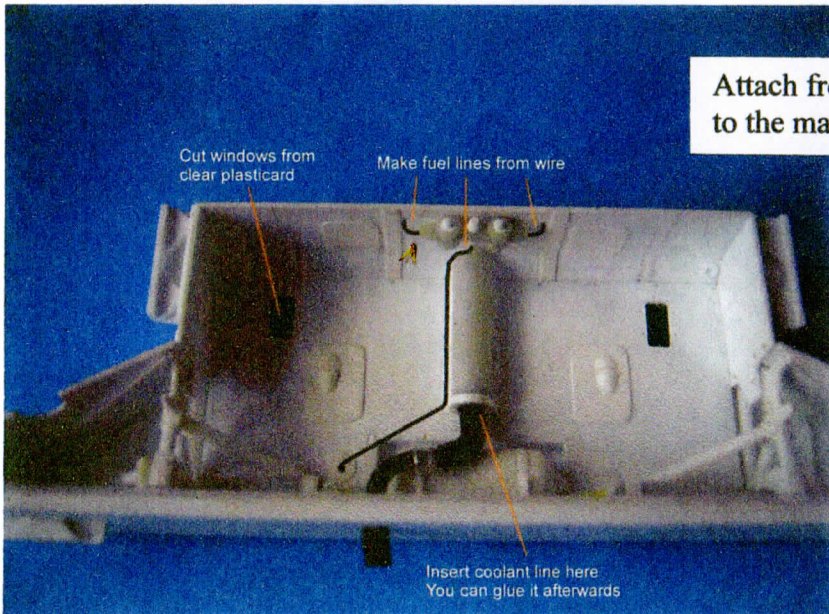

Attach front spar assembly to the main wheel well

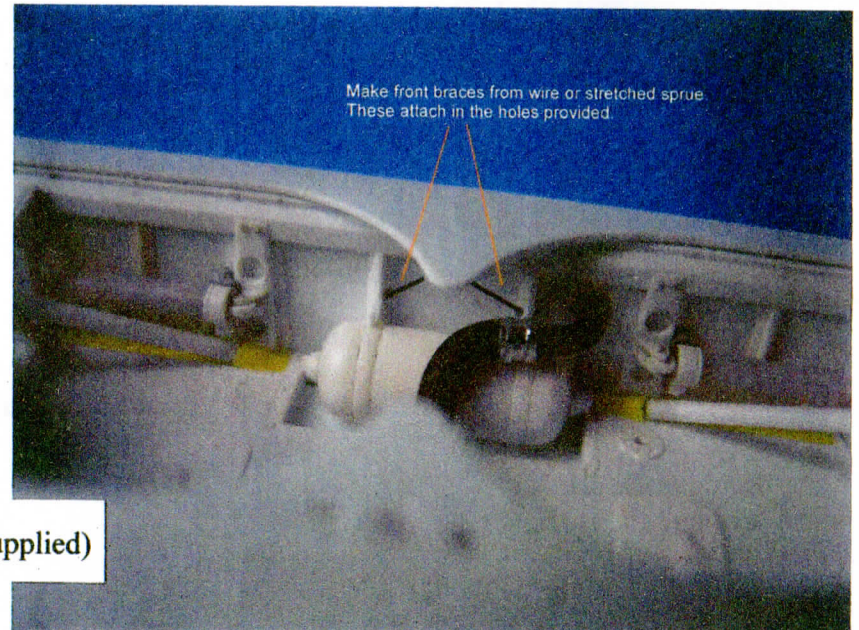

Add braces (not supplied)

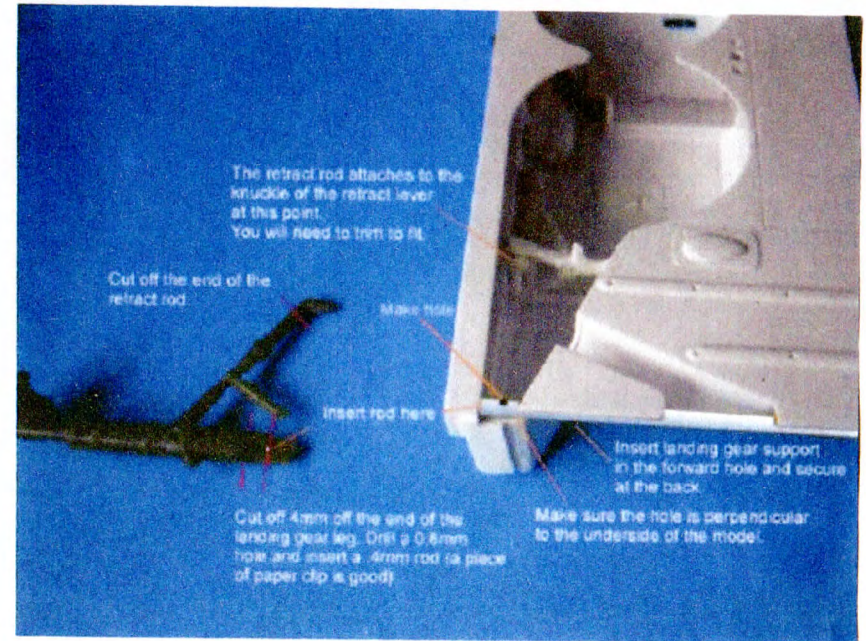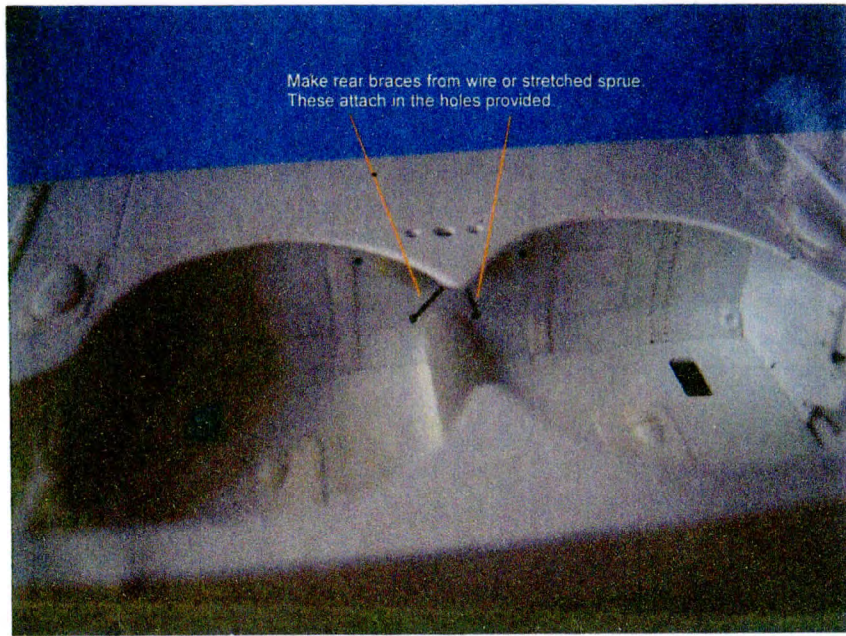

Fit the front and rear inserts to the wheel well.

The kit undercarriage legs can now be altered to fit the wheel

Masters by Radu Brinzan
 Photography by Tim Skelton
 Layout by Kassie Bednall
 Made in England by Grey Matter Aviation
 19 Moseley Street
 Ripley, Derbyshire, DE5 3DA, UK
 Tel: 01773 743720
 www.greymatterfigures.com