


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968


# Modern German Schutzenpanzer PUMA Basic





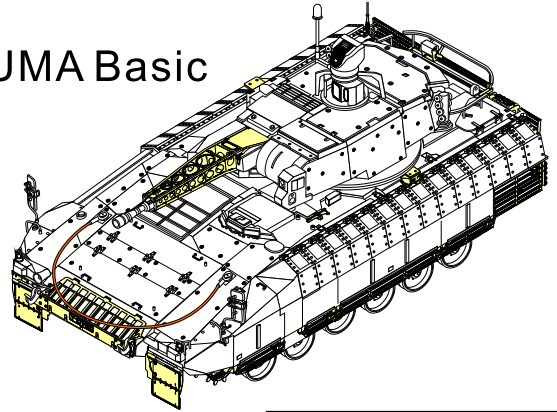



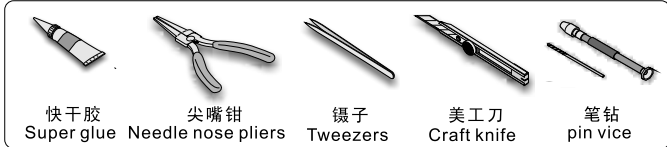

## 现代德国 美洲狮 步兵战车改造件

[For HOBBYBOSS 83899]





■ 推荐使用工具 RECOMMENDED TOOLS






-   
 安装  
install
-   
 折叠  
bend
- A1**  
 改造件零件编号  
PE/resin part number
- B12**  
 原零件编号  
kit part number
- C22**  
 被替换的原零件编号  
replaced kit part number
-   
 另一侧相同制作  
repeat on opposite side
-   
 切除  
remove
-   
 打磨  
grind off
-   
 弧度卷曲  
radial bending
-   
 制作若干组  
multiple assembly
-   
 选择安装  
alternative
-   
 钻孔  
drill
-   
 注意  
caution

  
 用尖端在凹槽处冲压  
use penpoint to press on the dent




蚀刻片零件内朝面向上  
Put the part upside down  
 用笔尖在凹槽处刺  
Use penpoint to press on the dent

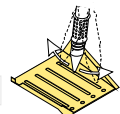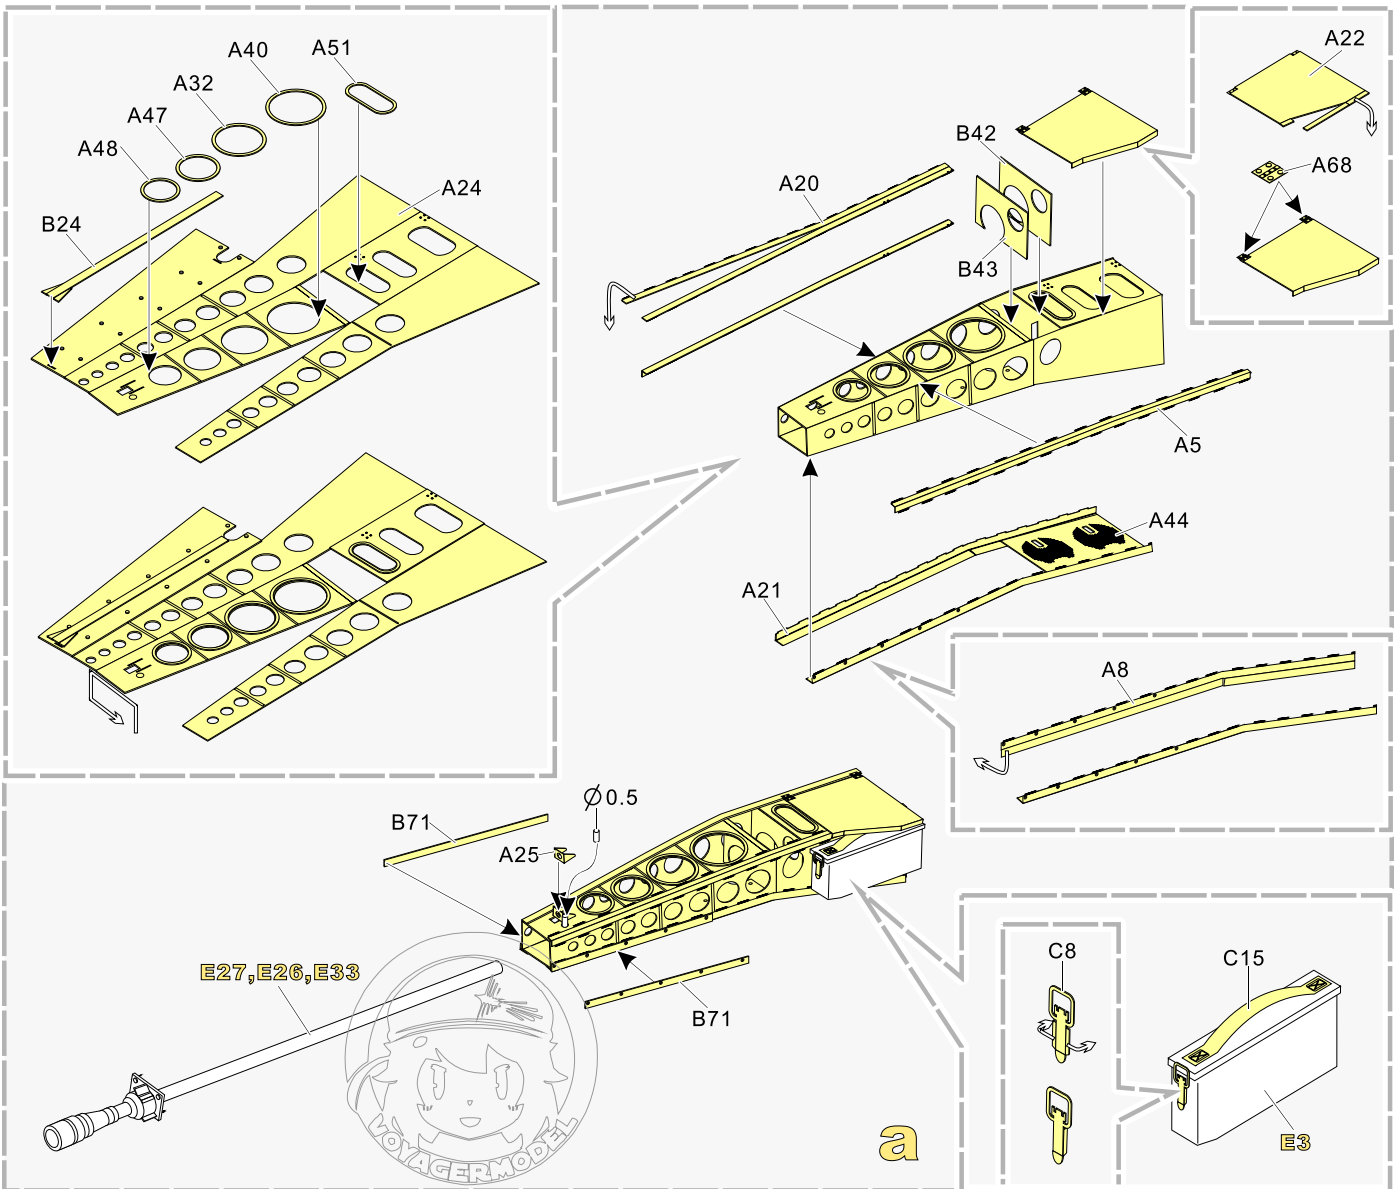
1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

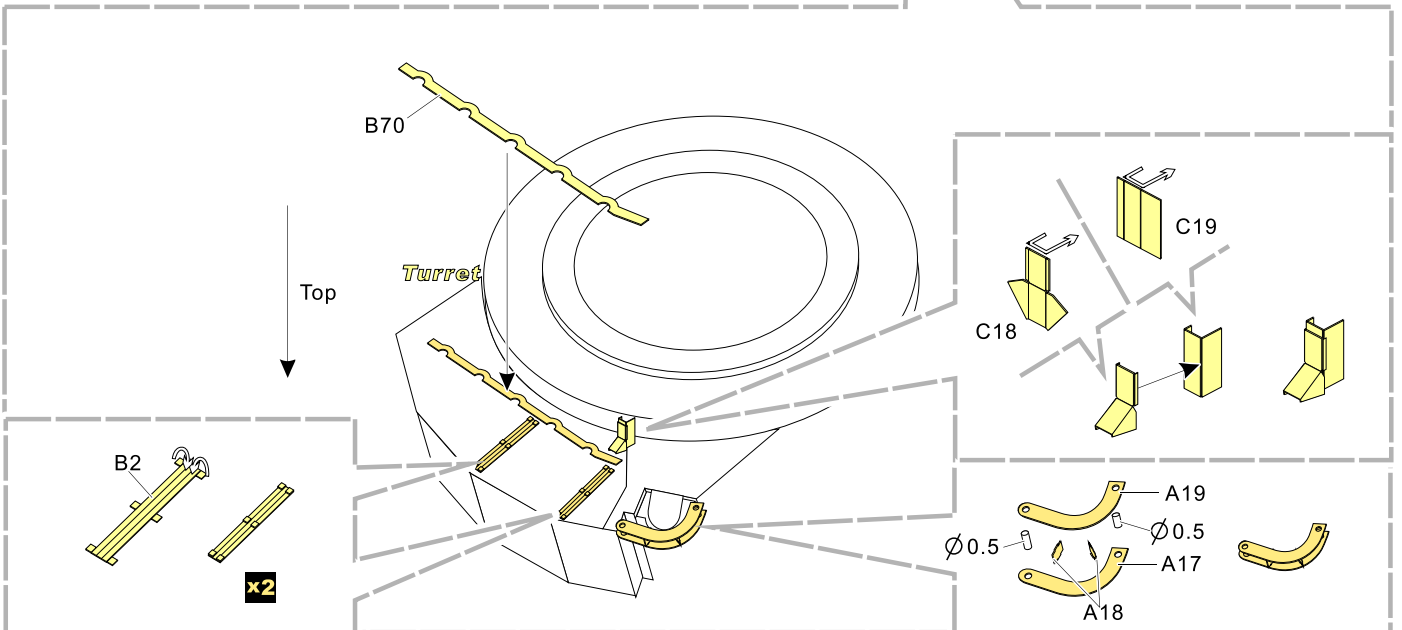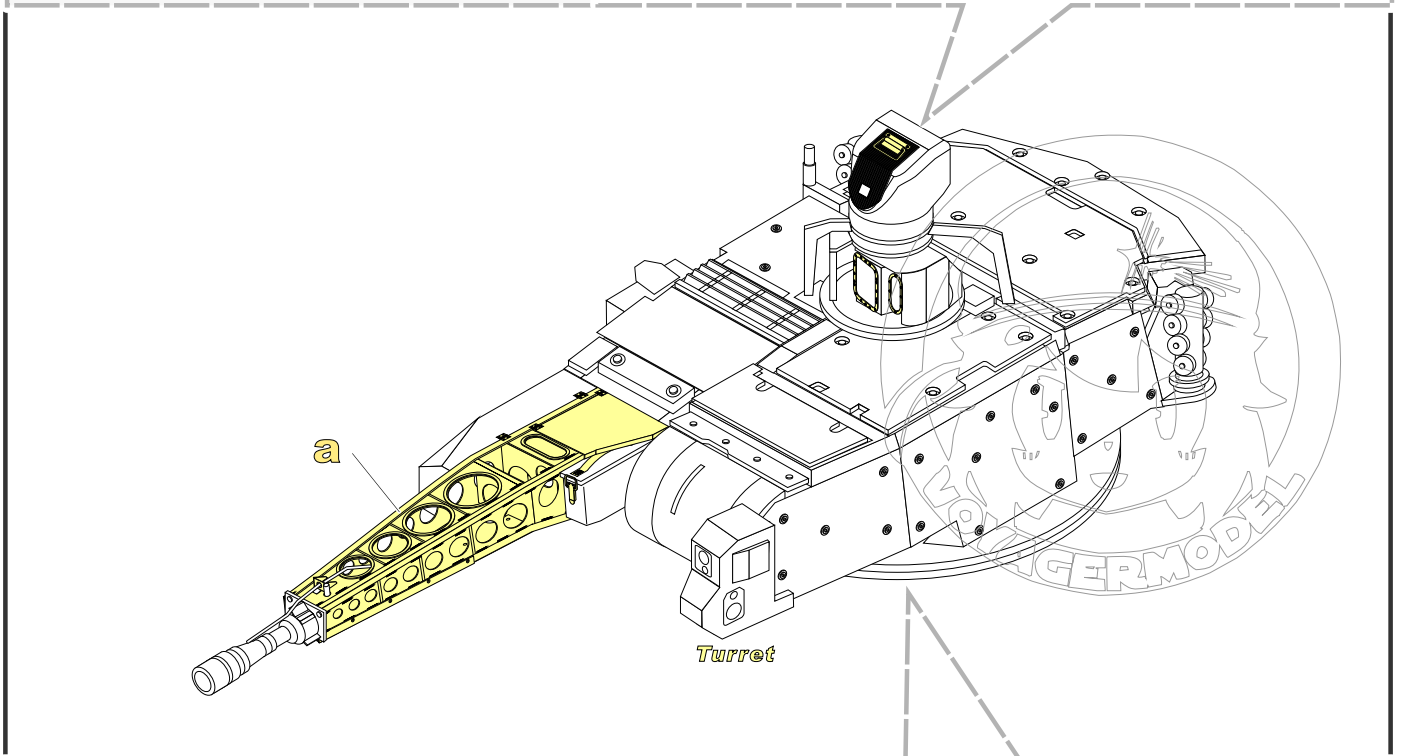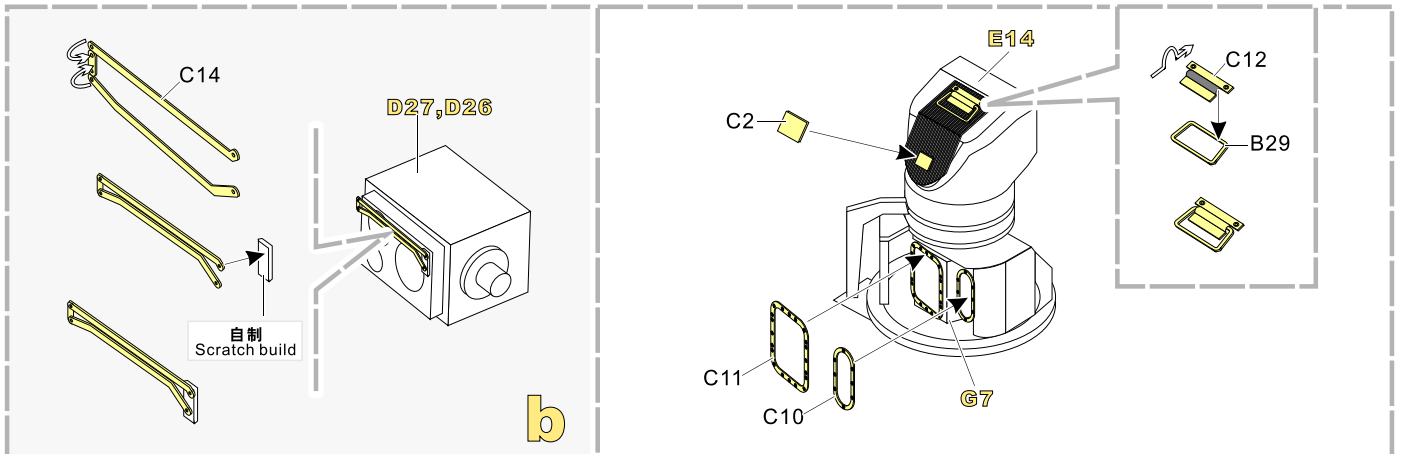

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

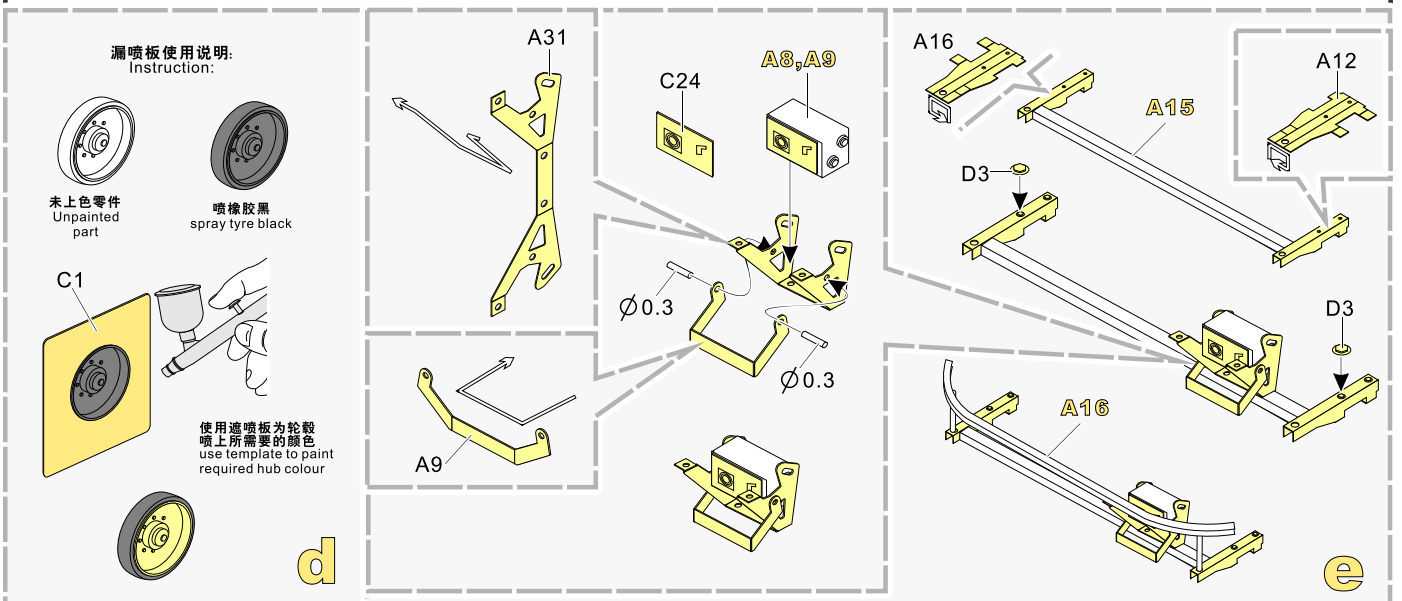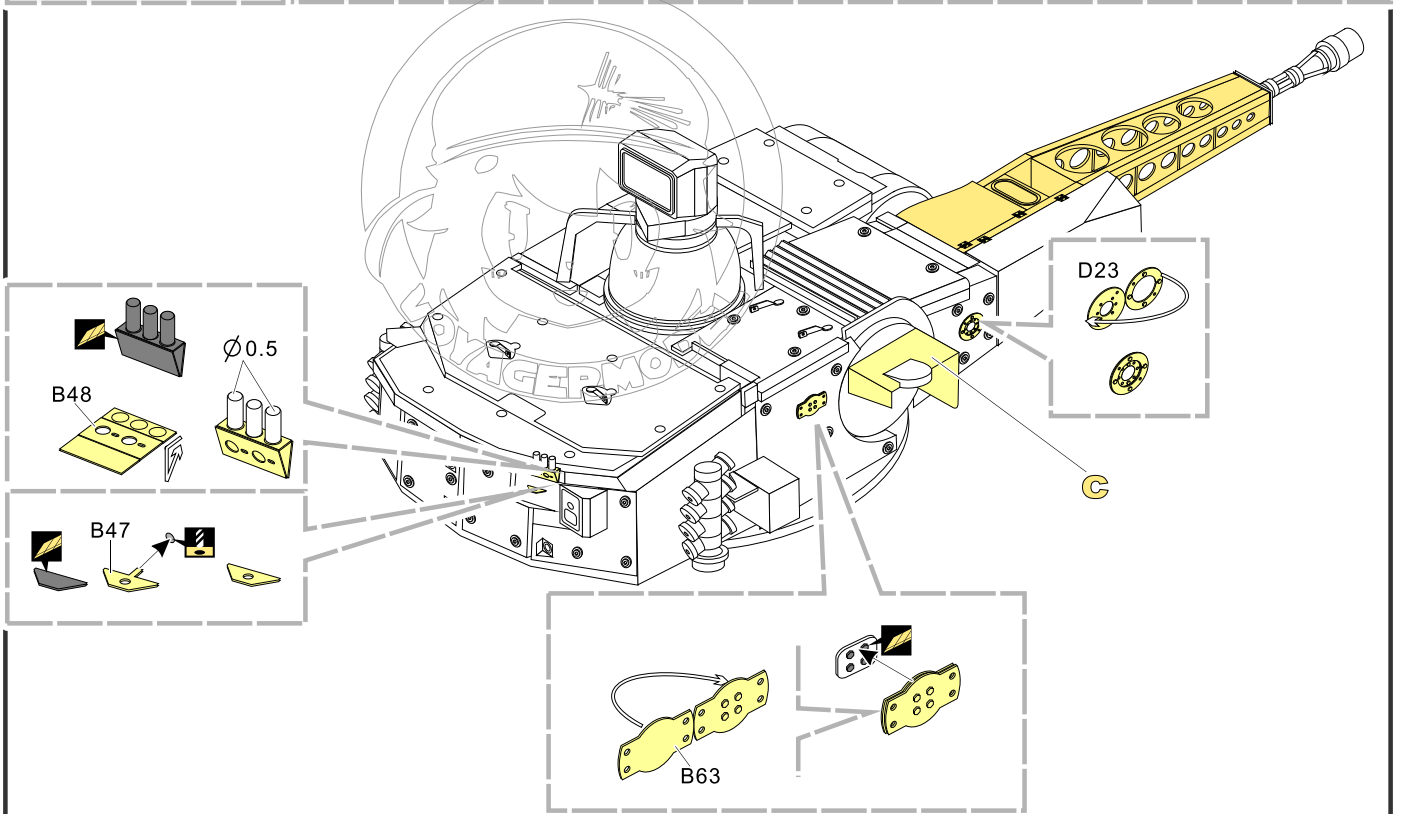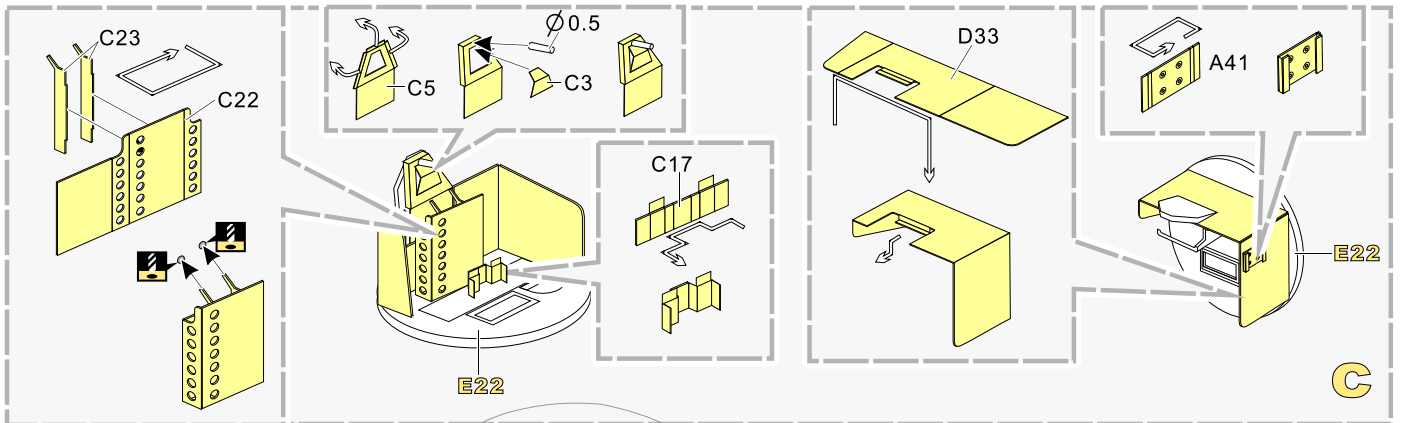

**漏喷板使用说明:**  
Instruction:

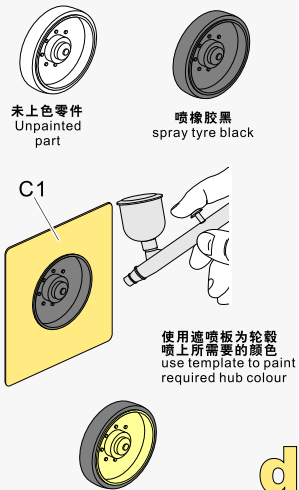

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

**f**

**g**

**h**

**i**

**j**


**k**

需配合PEA440使用  
Should be with PEA440

自制  
Scratch build

Spare  
备用状态

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968



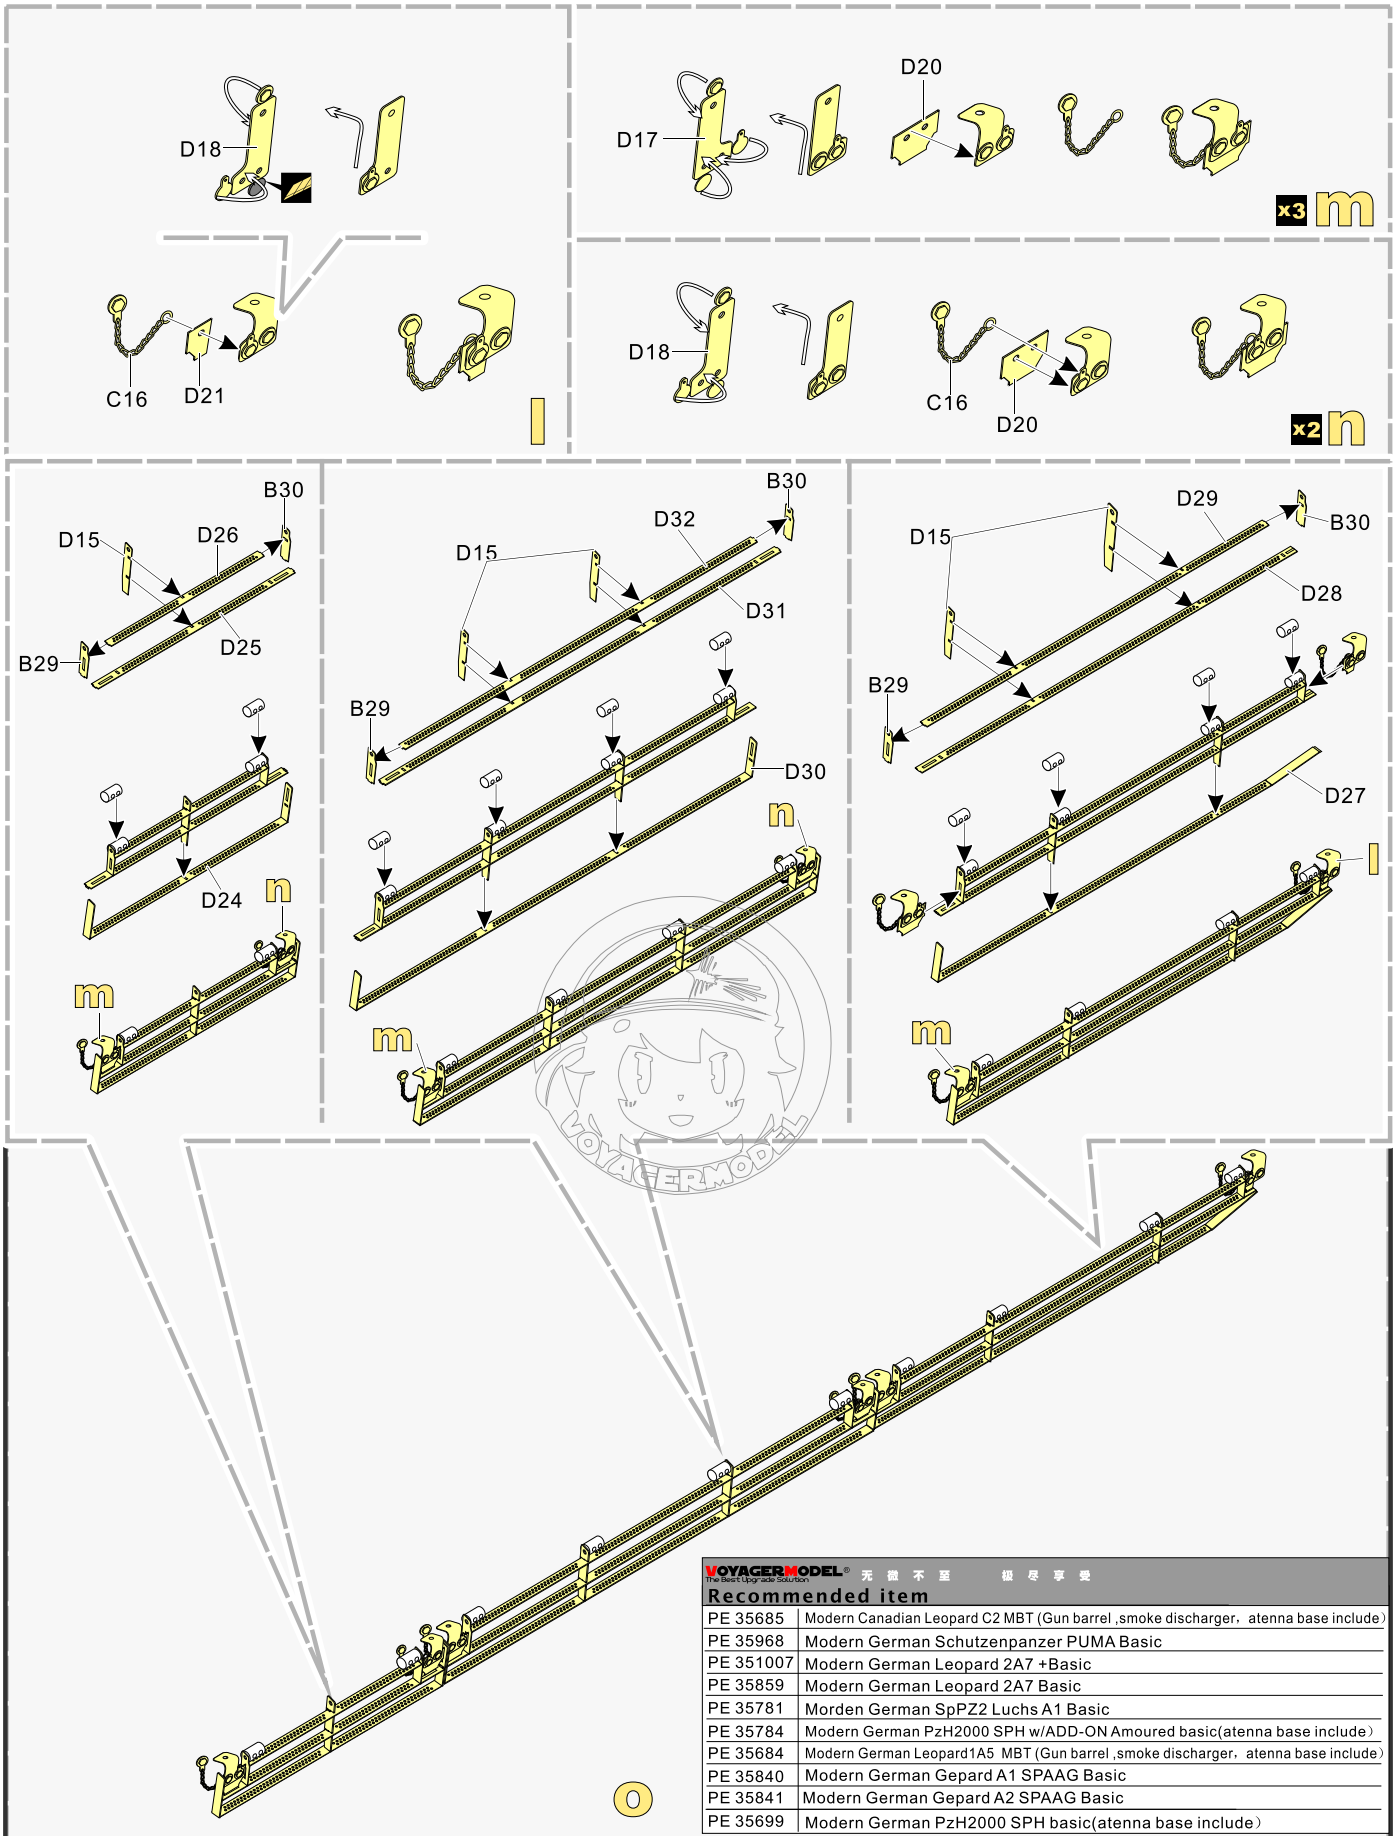


**VOYAGERMODEL**<sup>®</sup> 无微不至 极致享受


**Recommended item**

PE 35685	Modern Canadian Leopard C2 MBT (Gun barrel ,smoke discharger. atenna base include)
PE 35968	Modern German Schutzenpanzer PUMA Basic
PE 351007	Modern German Leopard 2A7 +Basic
PE 35859	Modern German Leopard 2A7 Basic
PE 35781	Morden German SpPZ2 Luchs A1 Basic
PE 35784	Modern German PzH2000 SPH w/ADD-ON Amoured basic(atenna base include )
PE 35684	Modern German Leopard1A5 MBT (Gun barrel ,smoke discharger. atenna base include)
PE 35840	Modern German Gepard A1 SPAAG Basic
PE 35841	Modern German Gepard A2 SPAAG Basic
PE 35699	Modern German PzH2000 SPH basic(atenna base include)


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

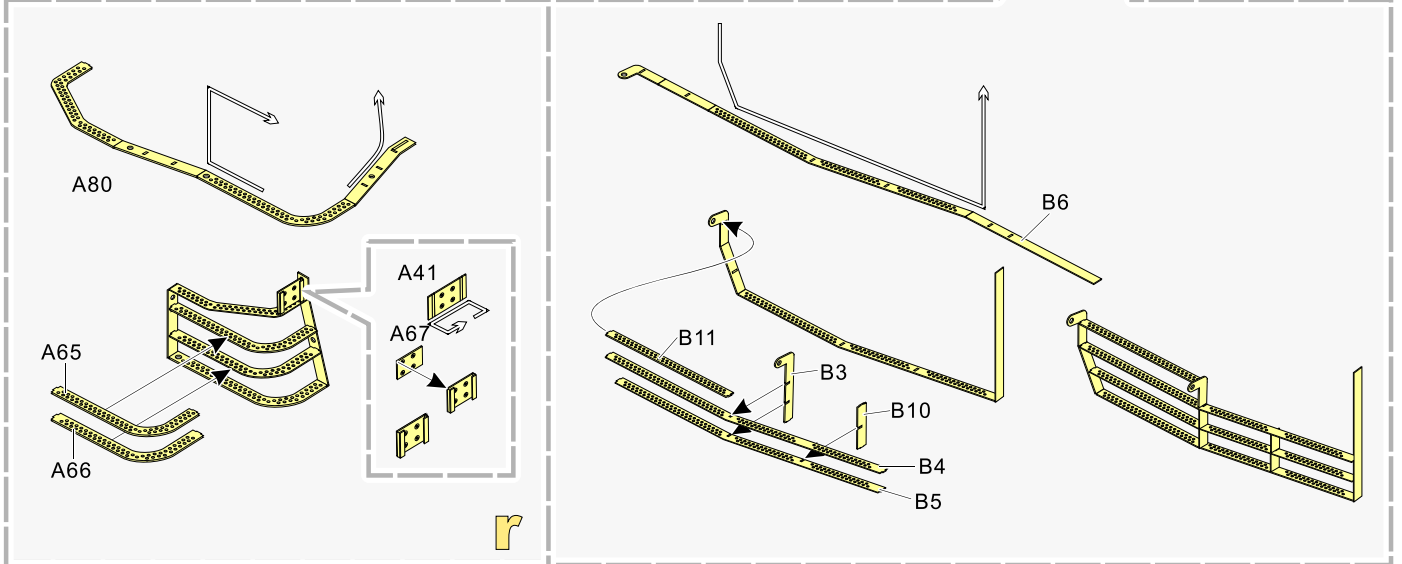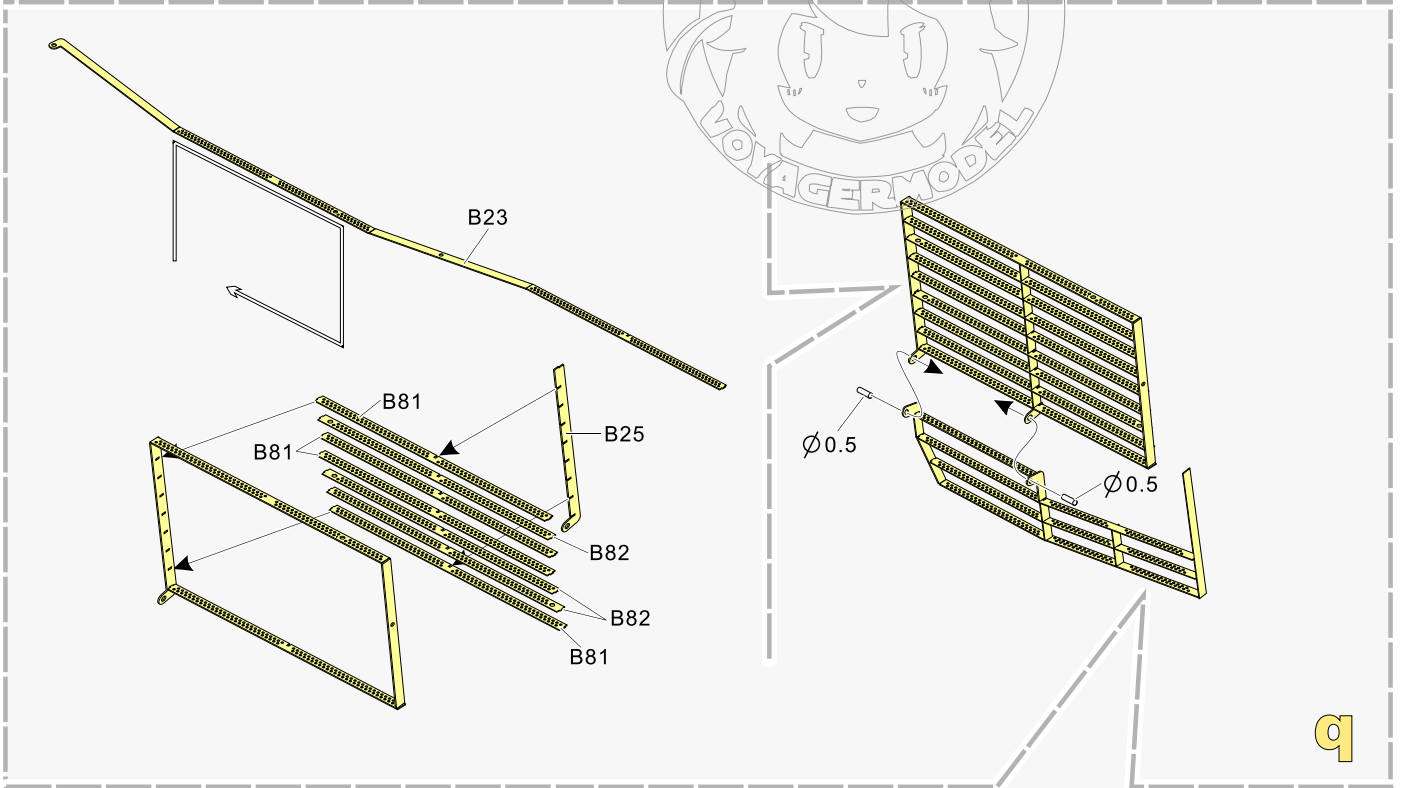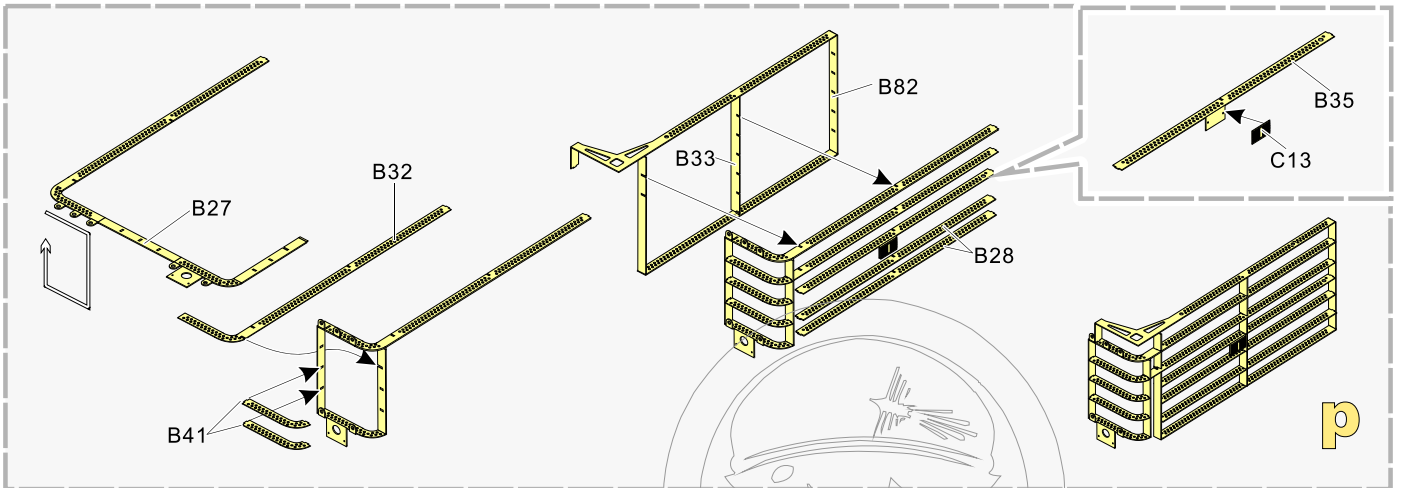

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968



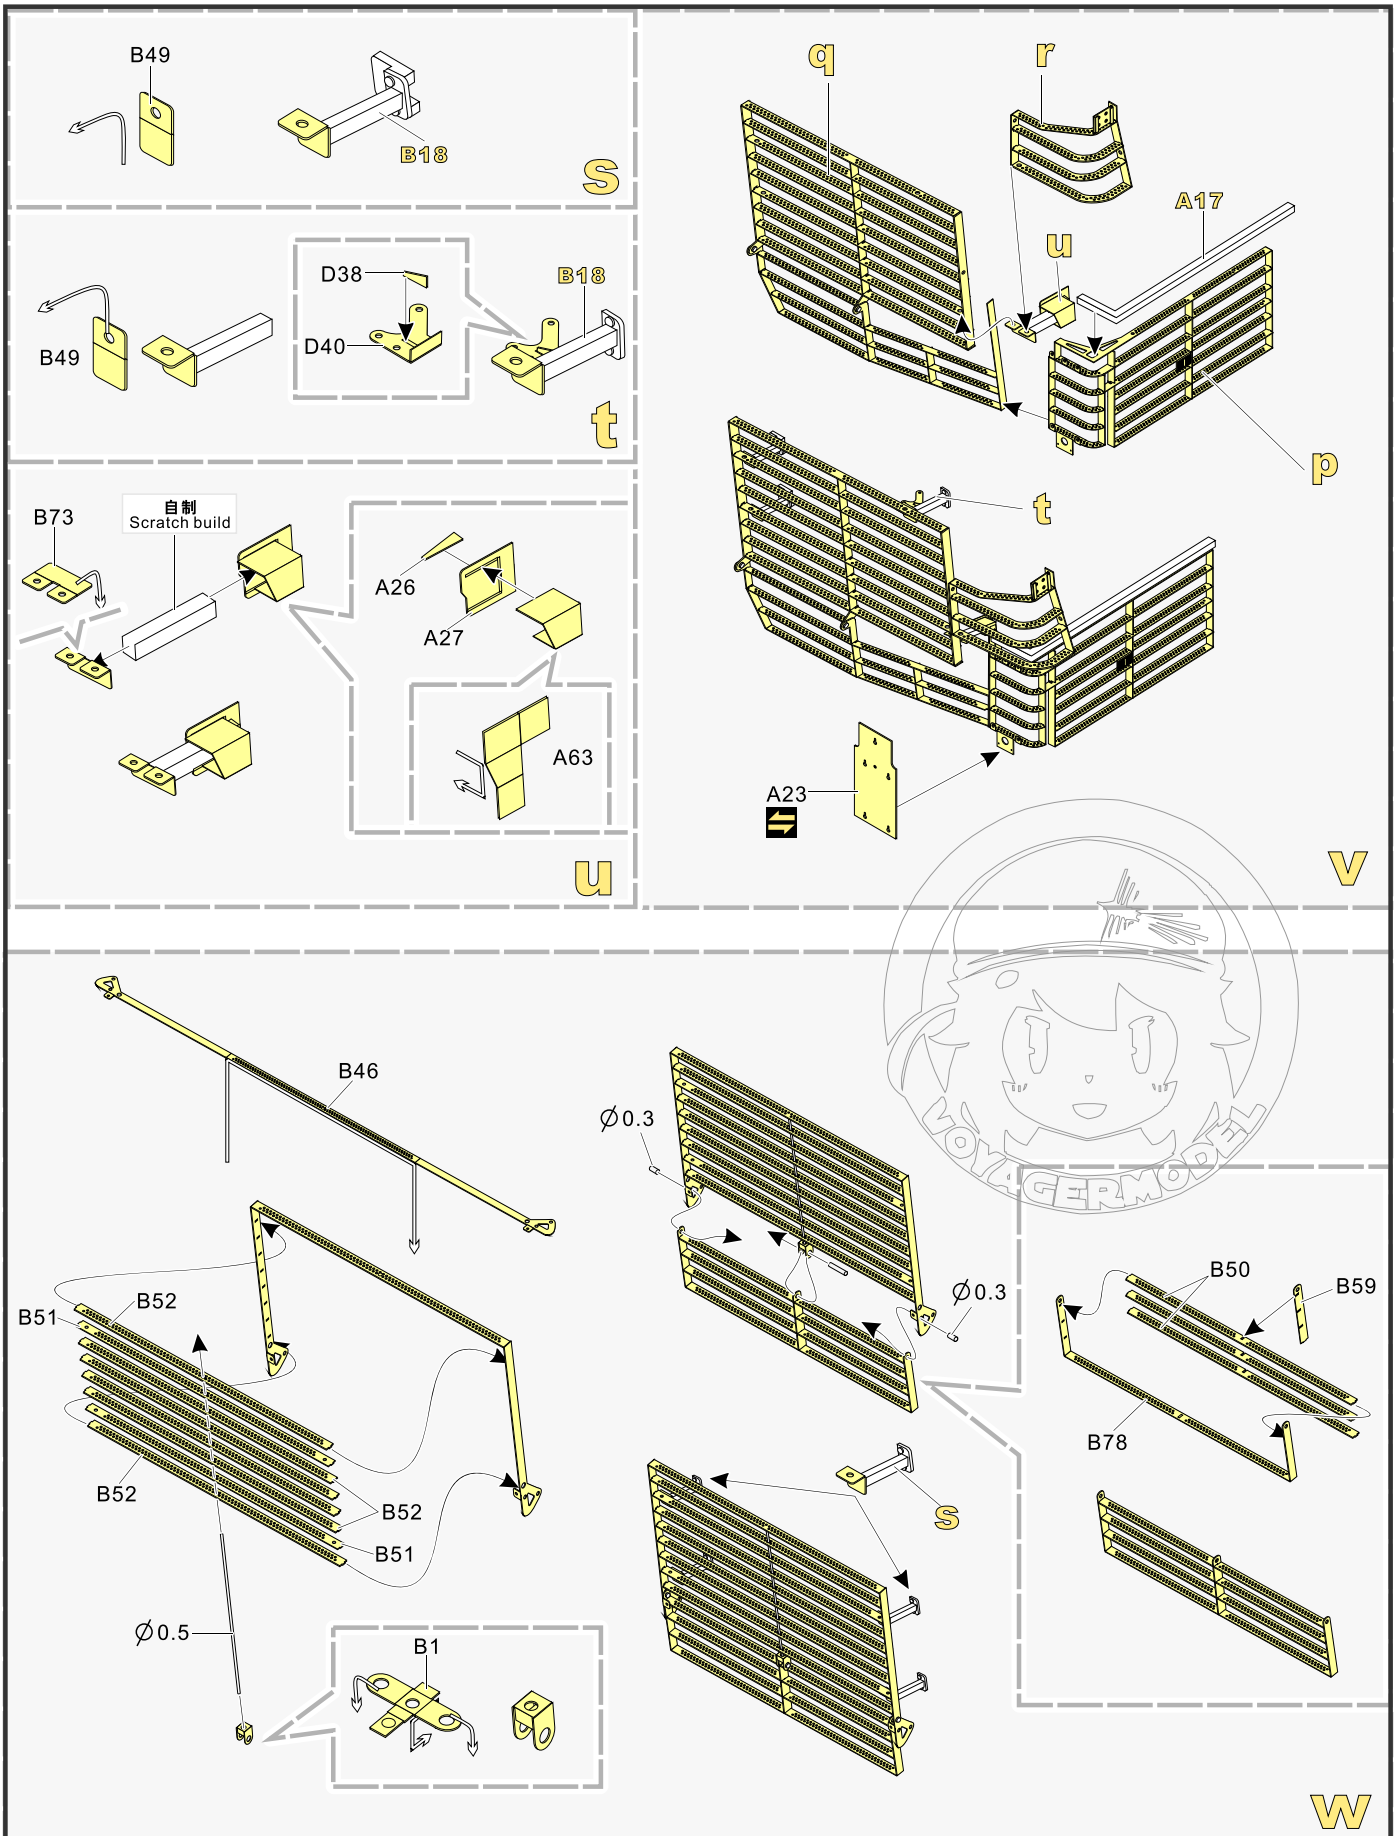


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968




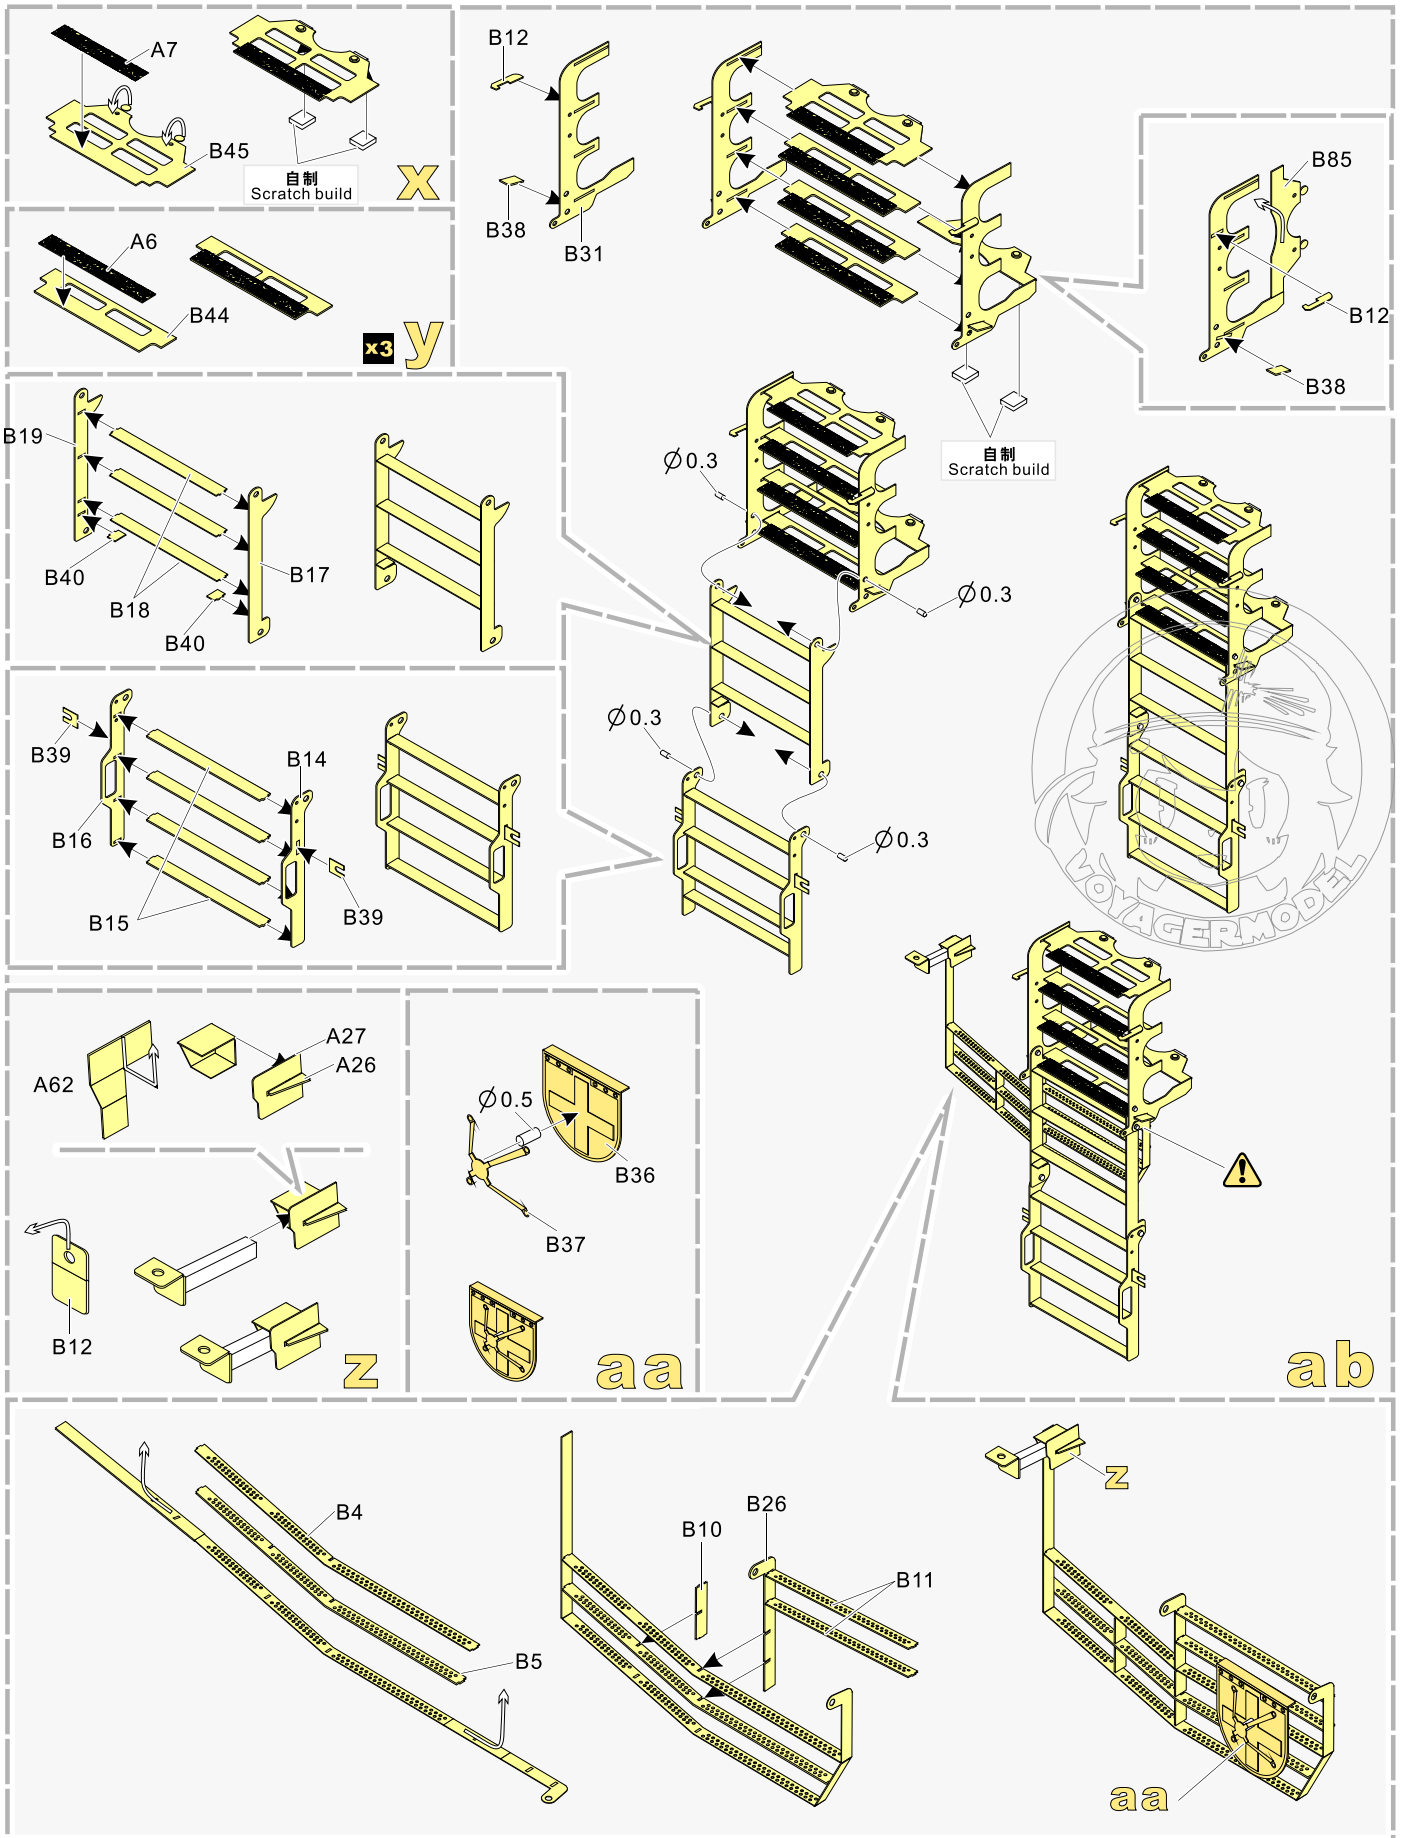







1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

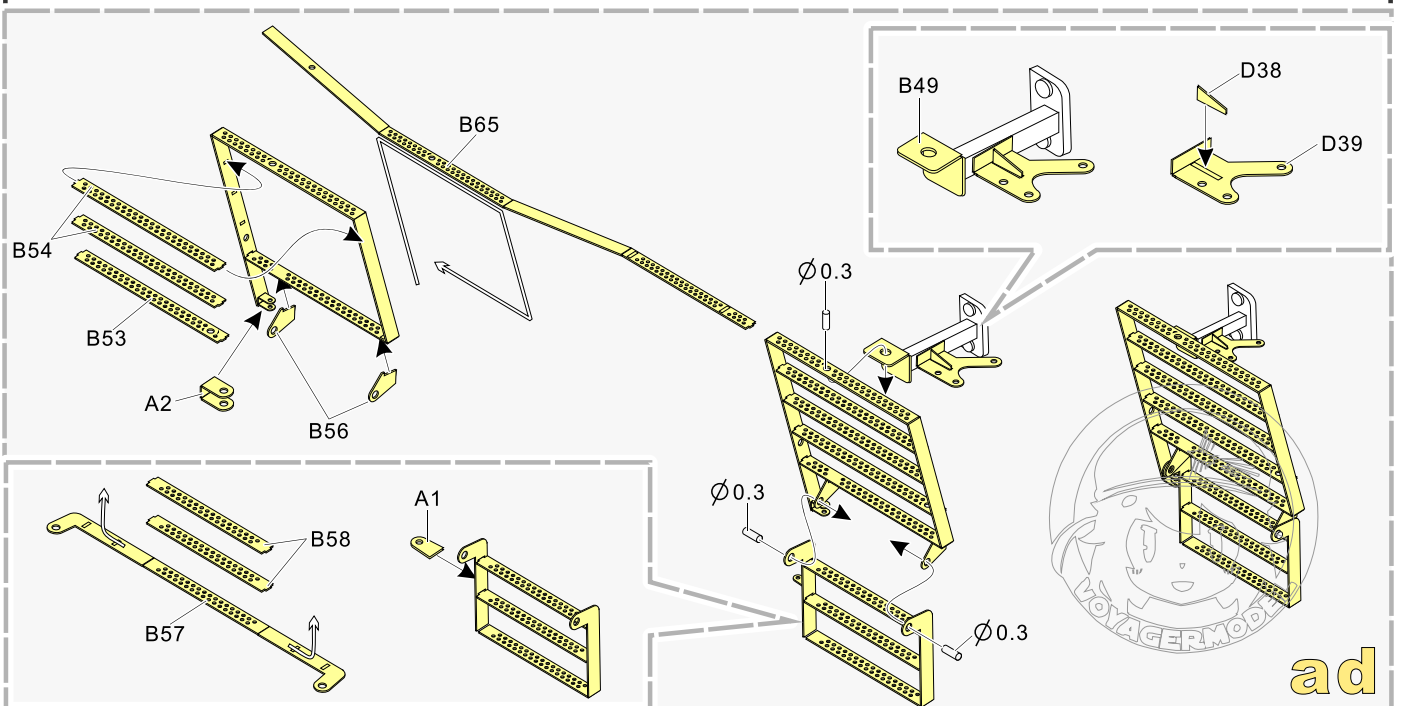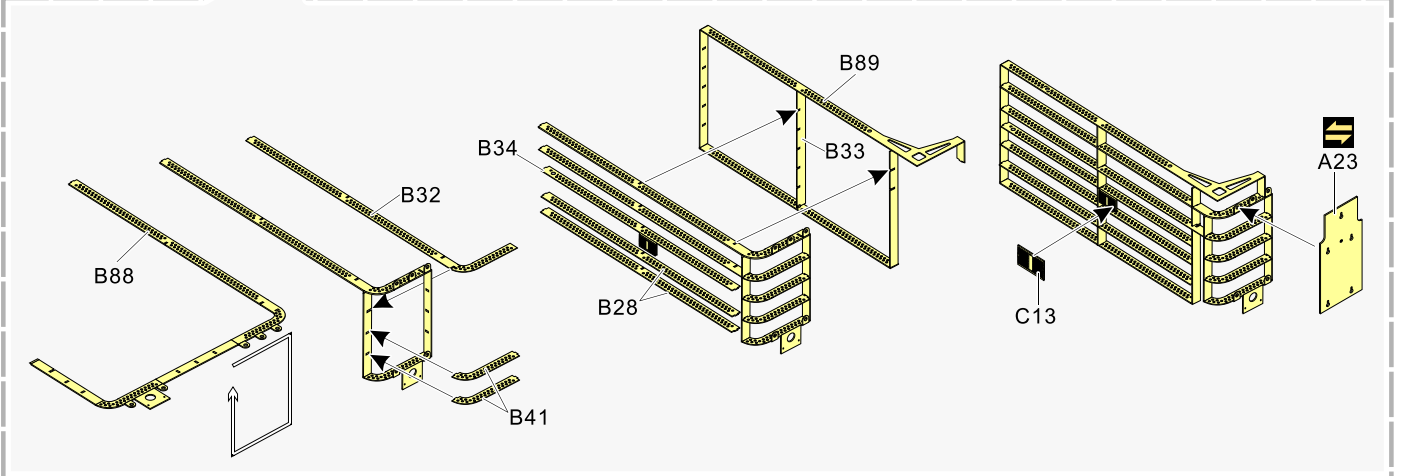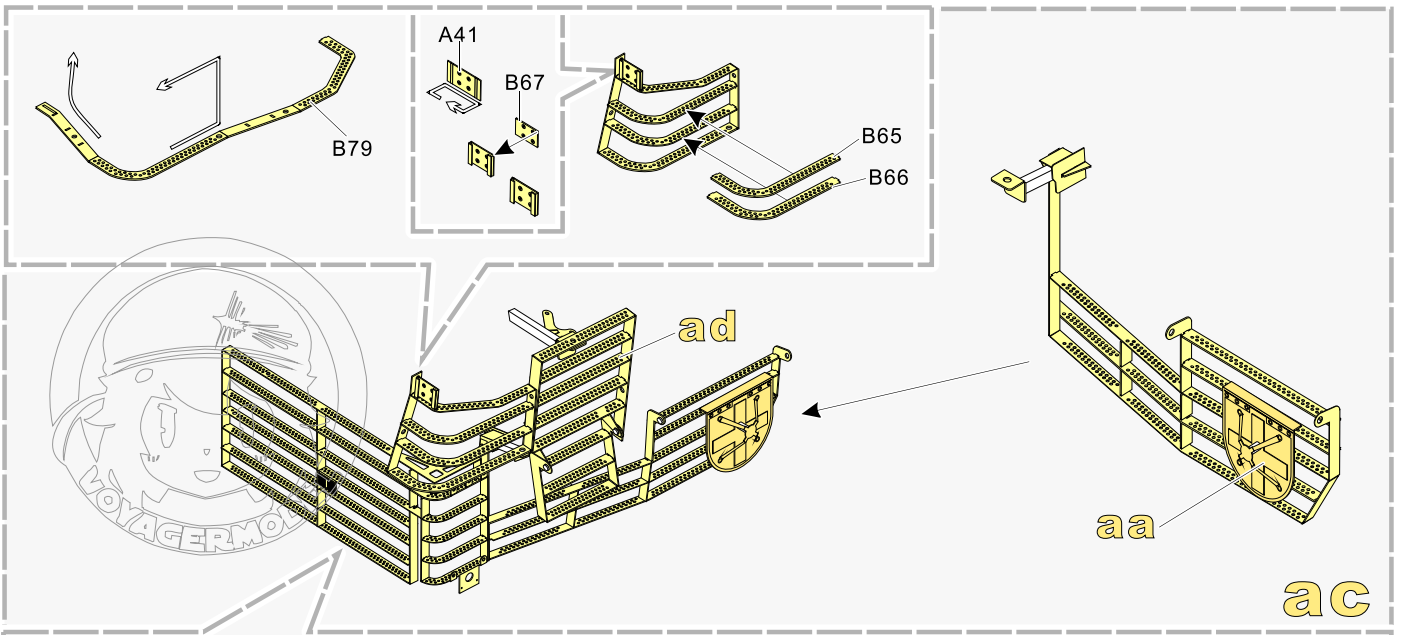



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

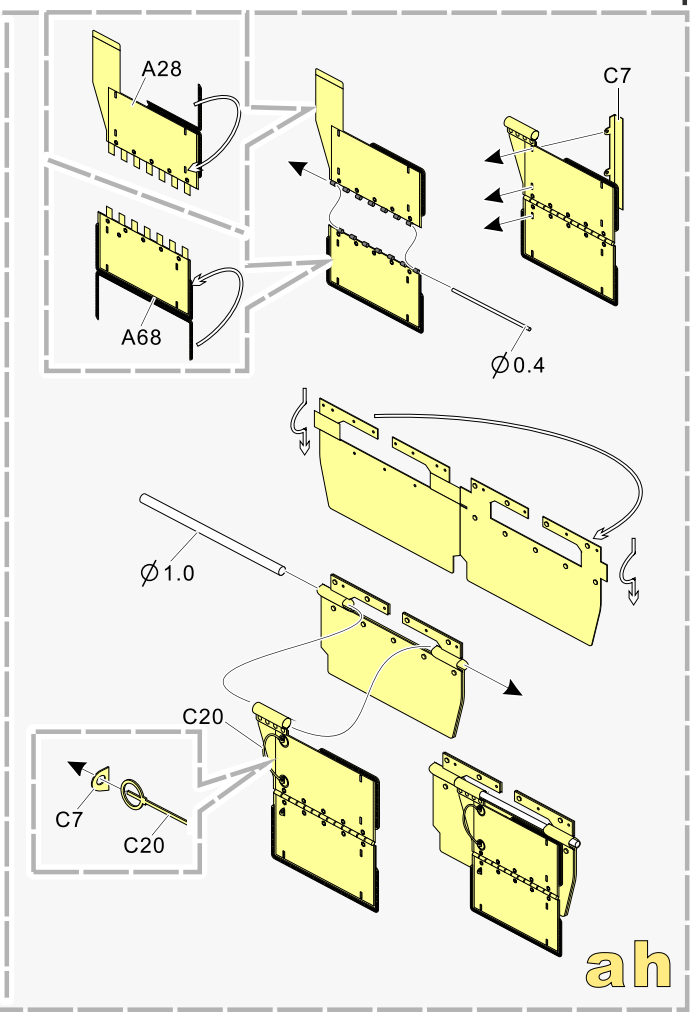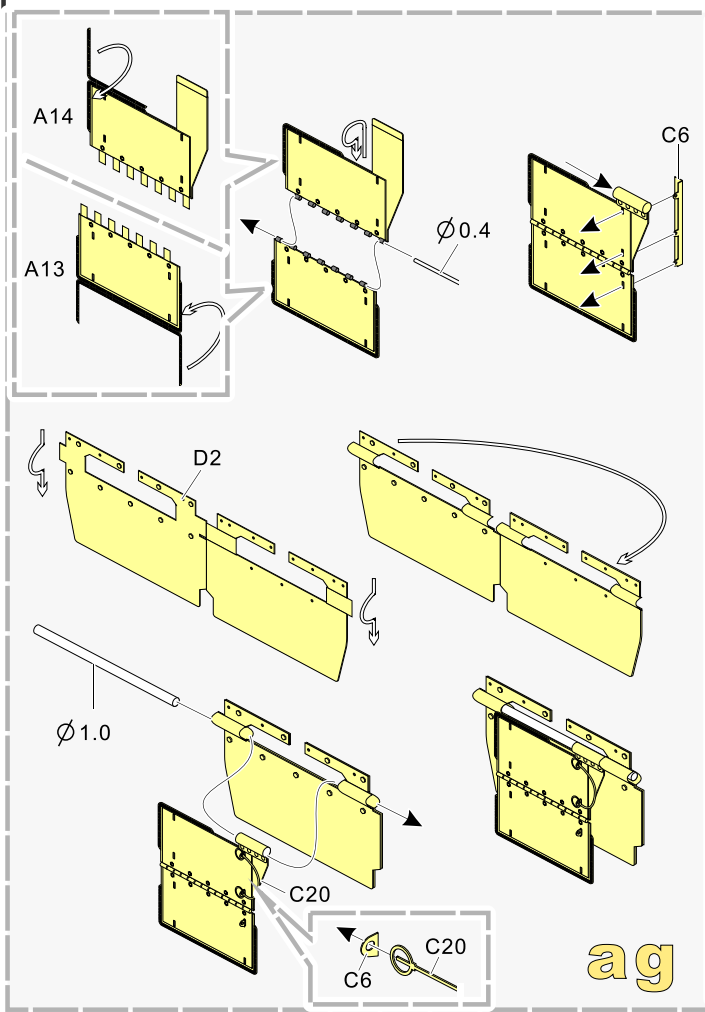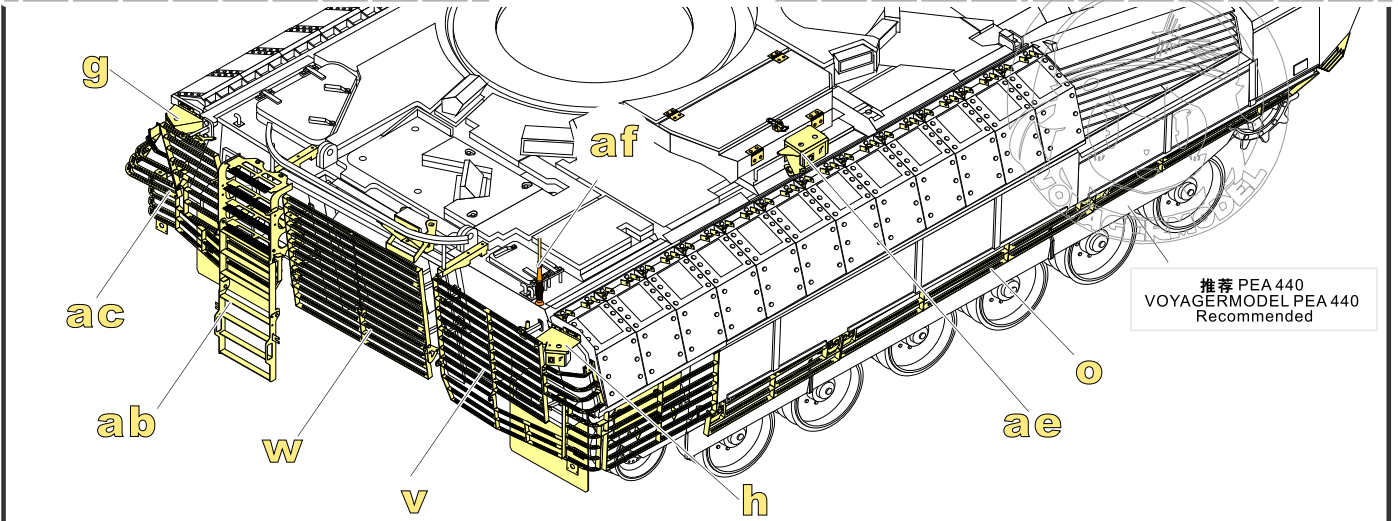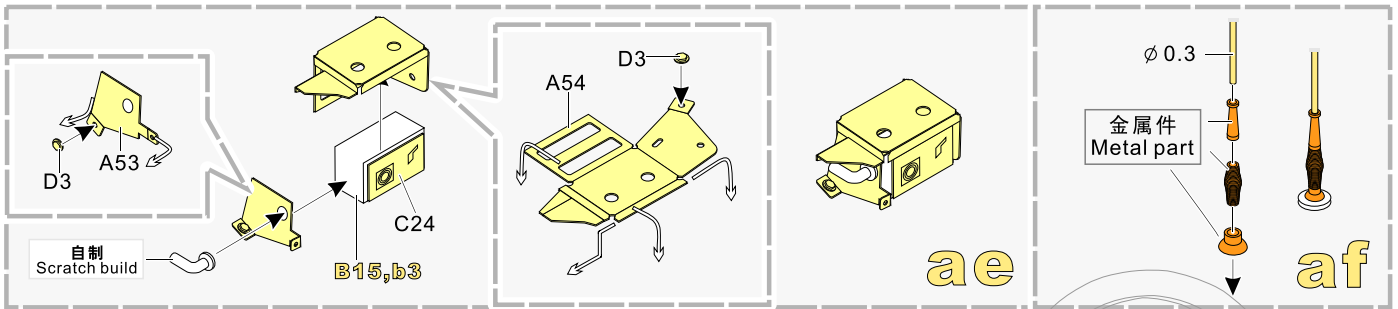

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

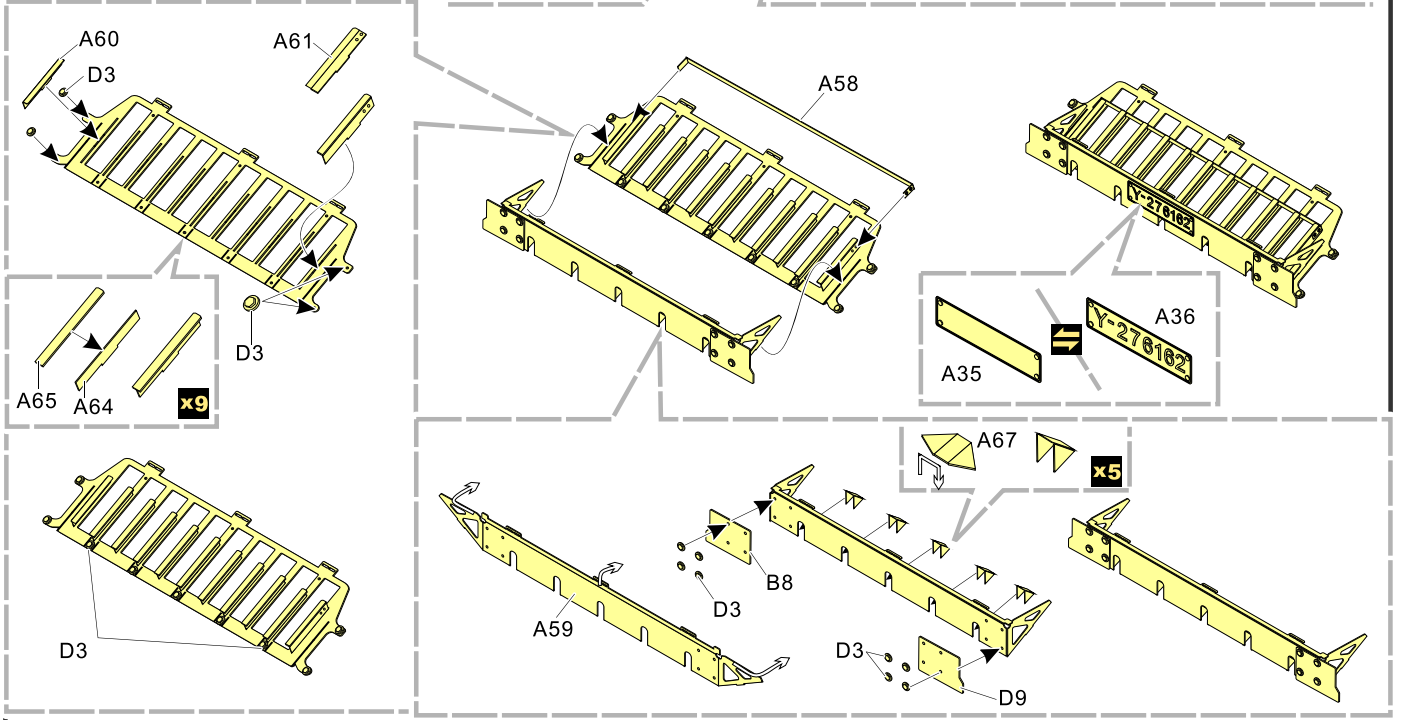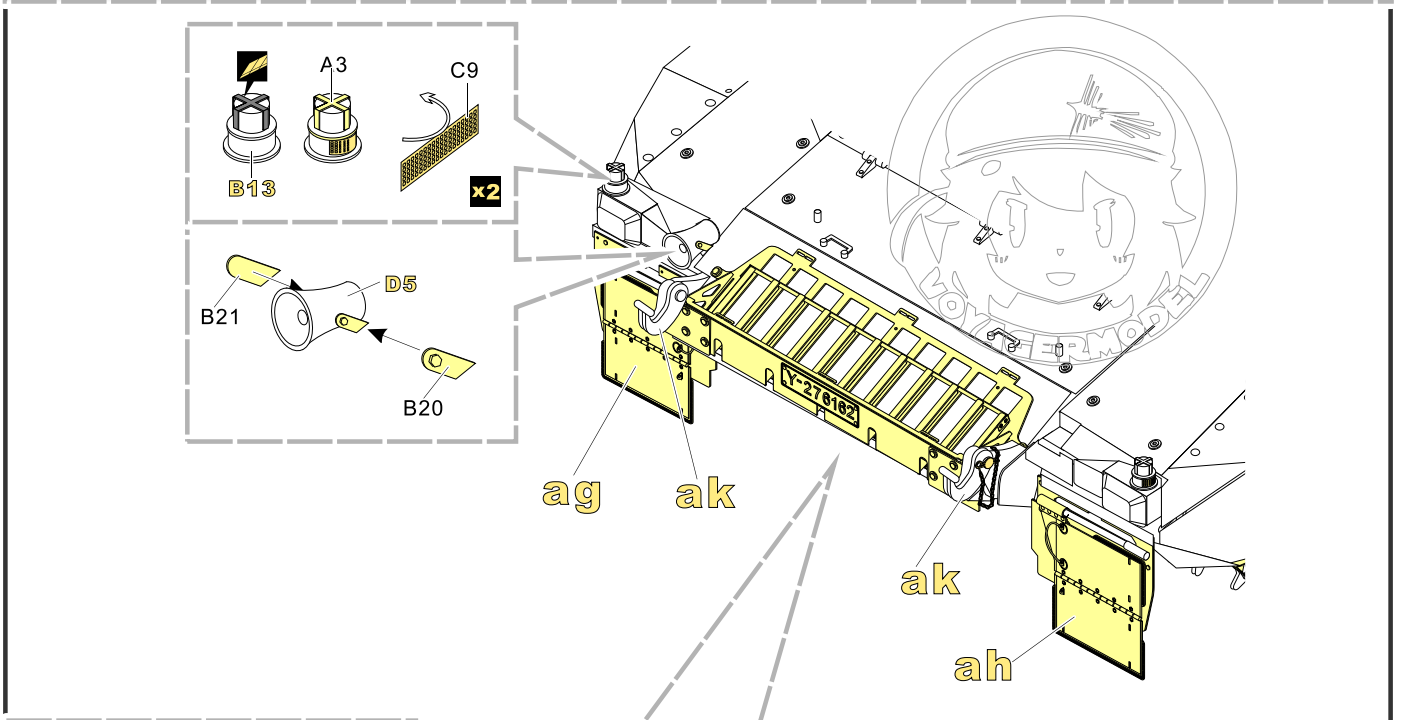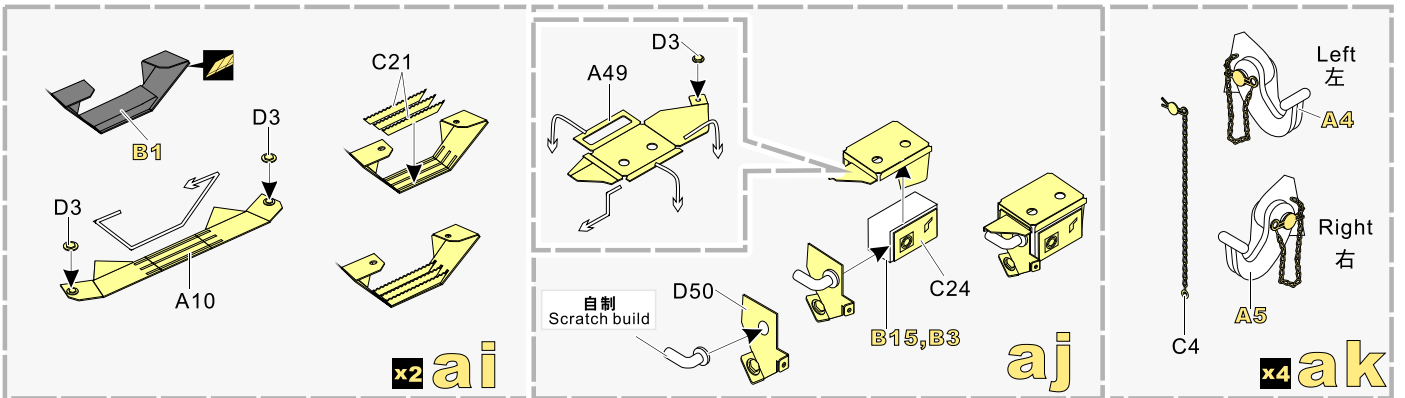


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

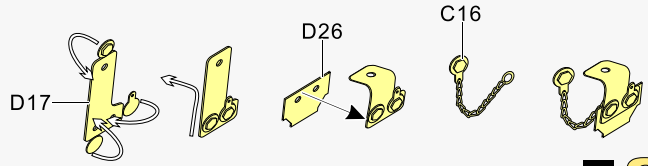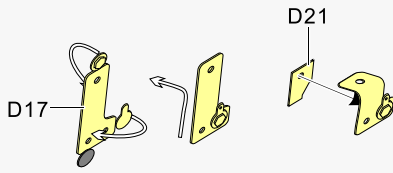


**x2 am**



**x2 al**

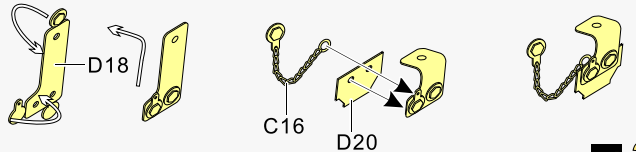


**x4 an**

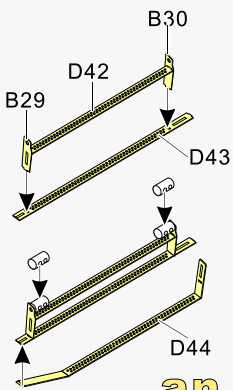


**al**

**an**

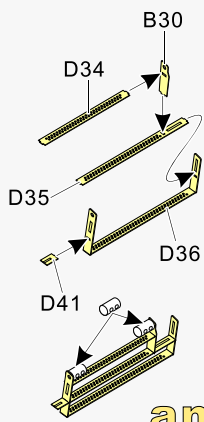


**al**

**an**

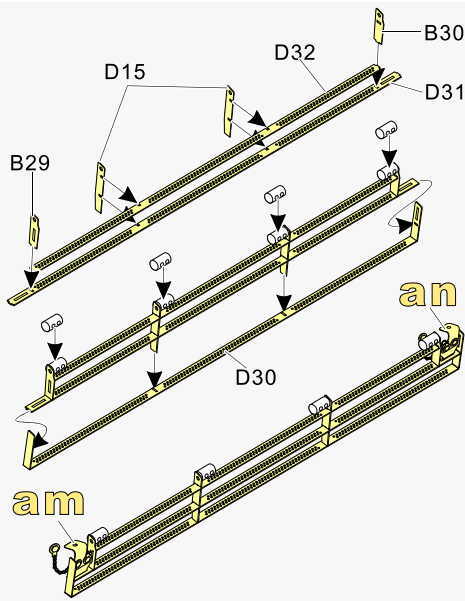


**am**

**an**

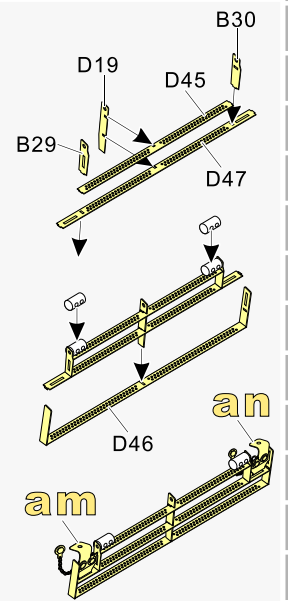

**am**

**an**

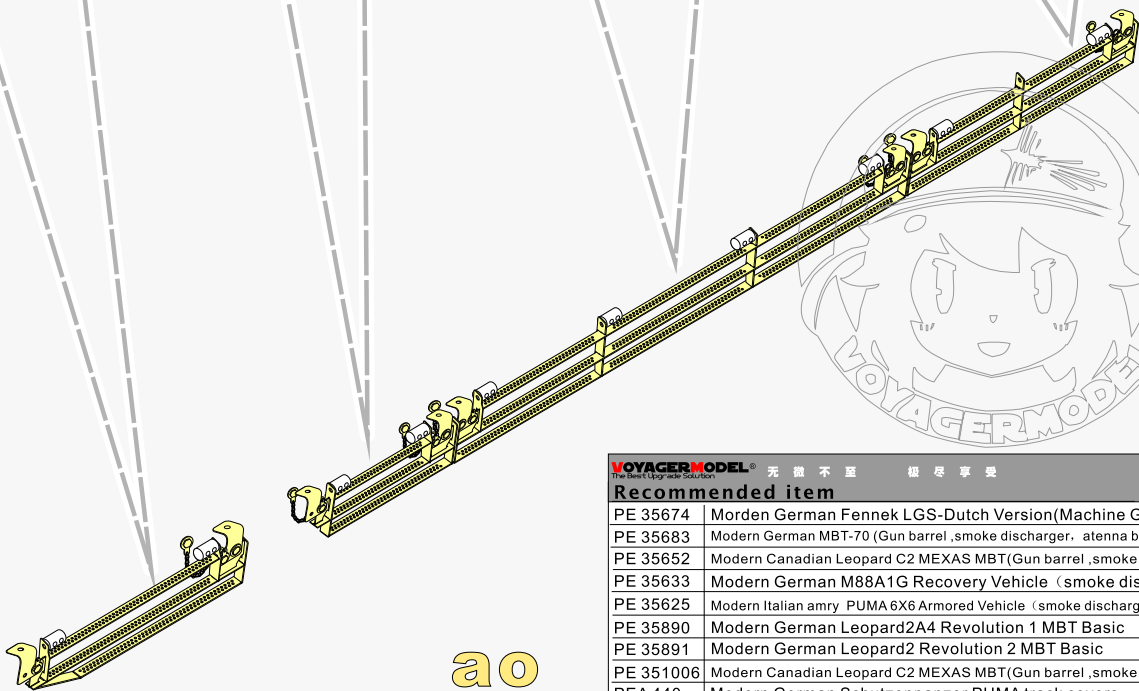


**ao**

VOYAGERMODEL® 无微不至 精益求精

**Recommended item**

PE 35674	Morden German Fennek LGS-Dutch Version(Machine Gun includ)
PE 35683	Modern German MBT-70 (Gun barrel ,smoke discharger, antenna base include)
PE 35652	Modern Canadian Leopard C2 MEXAS MBT(Gun barrel ,smoke discharger include )
PE 35633	Modern German M88A1G Recovery Vehicle (smoke discharger include )
PE 35625	Modern Italian amry PUMA 6X6 Armored Vehicle (smoke discharger include )
PE 35890	Modern German Leopard2A4 Revolution 1 MBT Basic
PE 35891	Modern German Leopard2 Revolution 2 MBT Basic
PE 351006	Modern Canadian Leopard C2 MEXAS MBT(Gun barrel ,smoke discharger include )
PEA 440	Modern German Schutzenpanzer PUMA track covers
PE 35977	Modern German Schutzenpanzer PUMA Basic

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35968

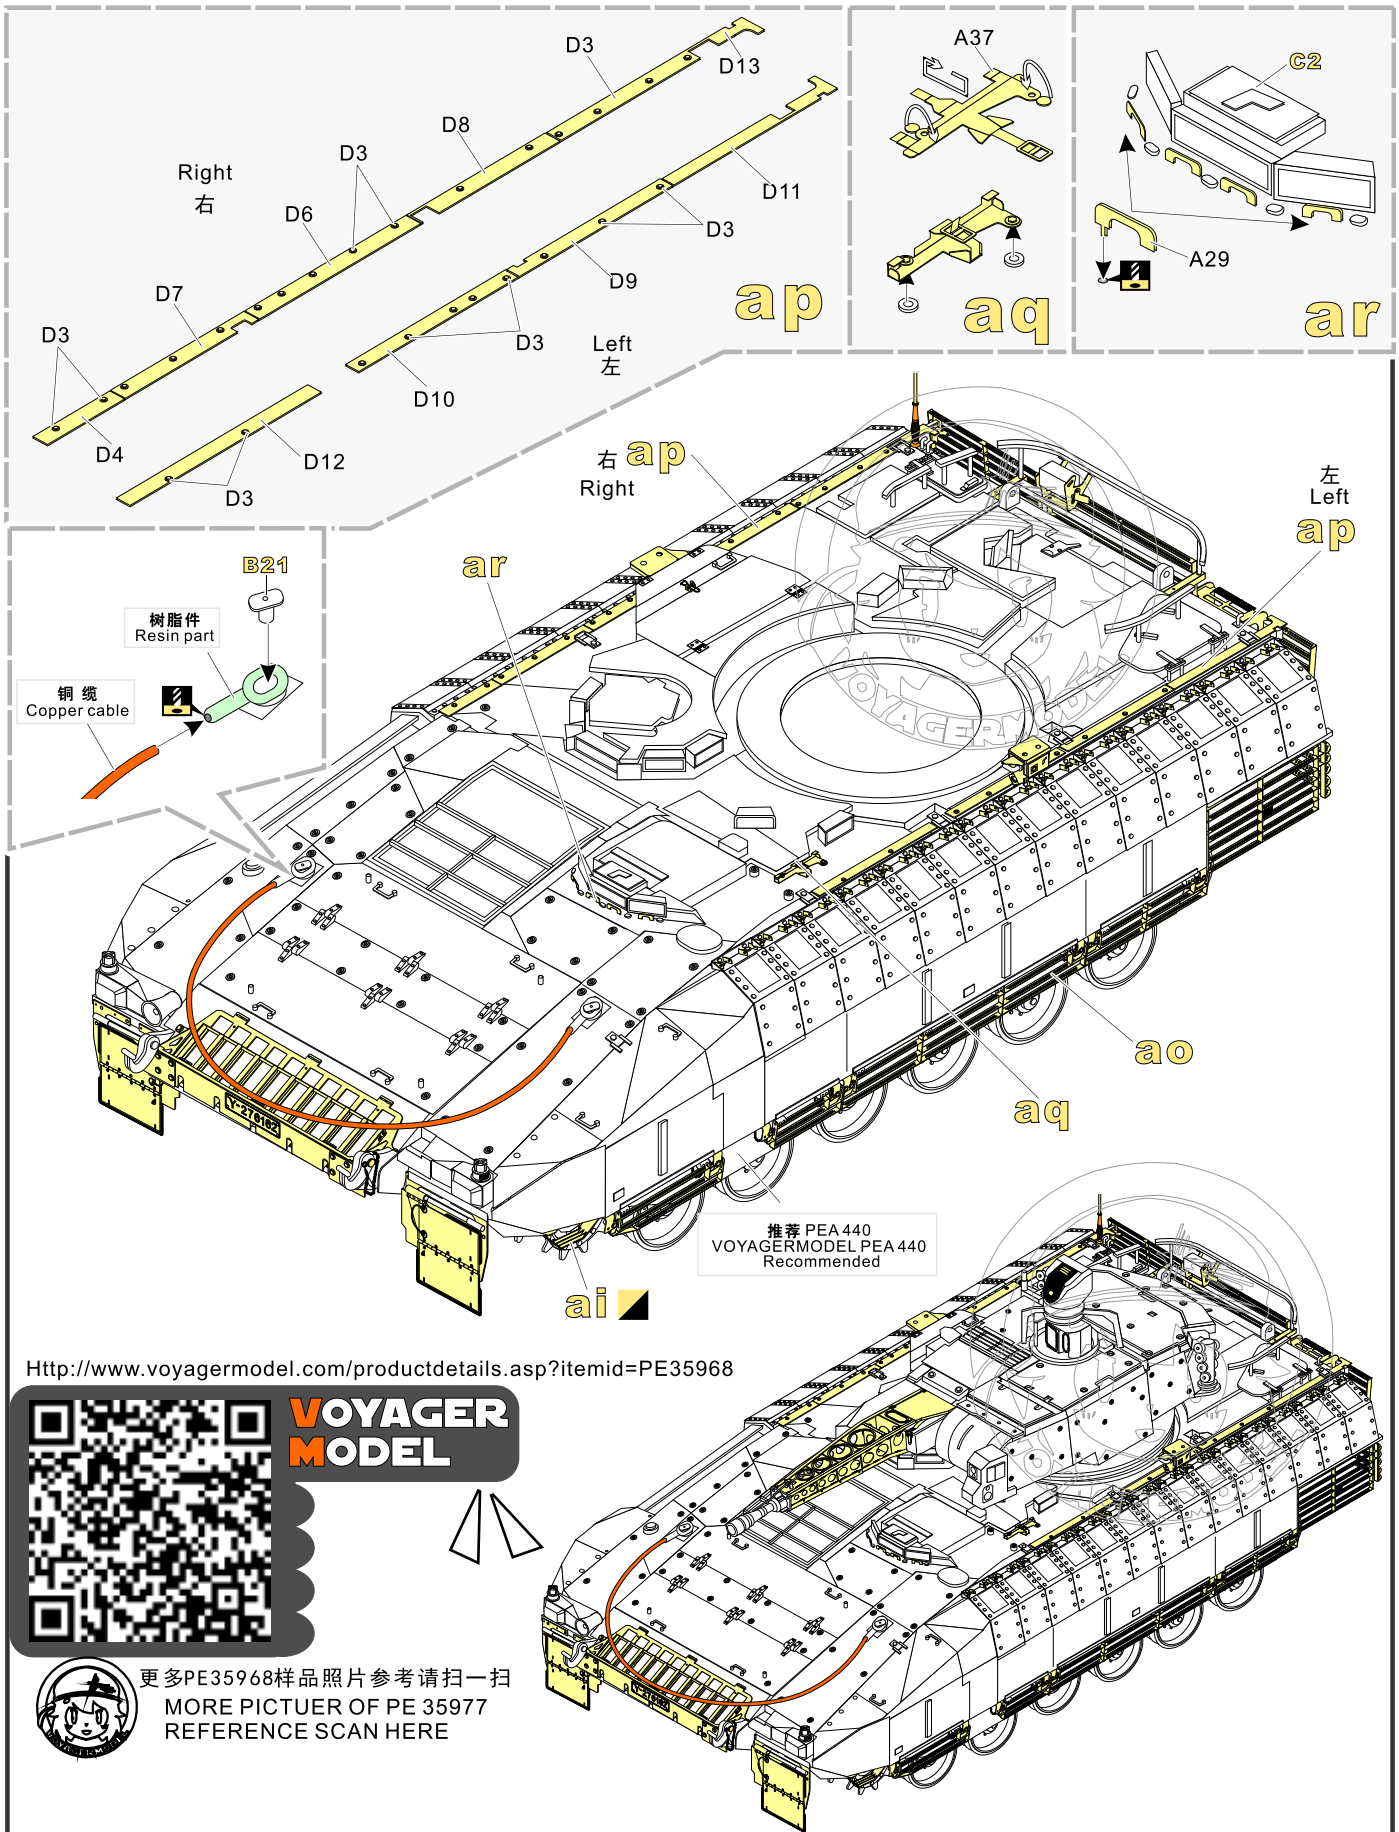

[Http://www.voyagermodel.com/productdetails.asp?itemid=PE35968](http://www.voyagermodel.com/productdetails.asp?itemid=PE35968)



**VOYAGER  
MODEL**



更多PE35968样品照片参考请扫一扫  
MORE PICTUER OF PE 35977  
REFERENCE SCAN HERE