


Q72 257 1/72 Blenheim Mk.I

Seats with Harness for Airfix kit

PUR - Polyuretane parts

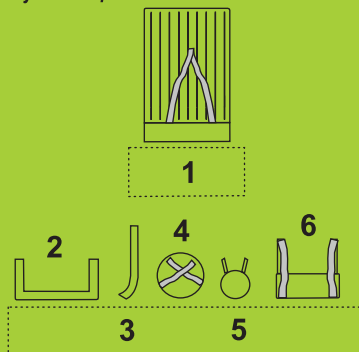

© CMK

Díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnané do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy). K lepení použít kyanokrylátové lepidlo! Kontaktní plochy doporučujeme před lepením odmastit. Různé drátky a tyčinky nejsou přiloženy.

Parts slightly distorted and bent owing to temperature changes or due to material aging can be straightened to requested shape by hot water or hot air jet (hair dryer). This process can be repeated till result is entirely satisfactory. For best result use cyanoacrylate glue! Ungreasing contact areas is recommended before gluing. Wires and rods not included.

www.cmkkits.com
www.specialhobby.eu
www.facebook.com/specialhobby/



OSTATNÍ SETY / OTHER SETS 1:72

- Q72 203 Vampire T.11 - Ejection seats MB Mk.3B for Airfix kit
- Q72 204 MG 131 - WWII Germ. Air. Machinegun 13mm (8pcs)
- Q72 205 Bf 109G-6 - Exhausts for Airfix kit
- Q72 206 Lancaster Mk. I/II/III - Seats for Airf./Has.
- Q72 207 Lancaster Mk. I/II/III - Instrument panel for Airf./Has.
- Q72 208 Typhoon Mk.I - Exhausts for Airfix kit
- Q72 211 Bf 109E-7/Trop - Exhausts for Airfix kit
- Q72 213 BAC Lightning F2.A - Ejection set MB Mk.4C for Airfix/Trum. kit
- Q72 225 F-4A/B/C/D/E/F/G - Nose Undercarriage Leg in Taxiing and Take Off Position for Hasegawa kit

Sestavení a montáž sedaček / Seats assembly and adjustment

