

German Panzerjägerwagen Vol.1

ドイツ 装甲列車 編成BP-44/砲車 德国铁道反装甲载卡1型

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
- Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- *推荐使用的模型工具(请自备): 专用模型胶水,专用模型油漆,水口剪刀,长咀钳,刀片, 锉刀,镊子钳,钻,剪刀,软布,砂纸,瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- *用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过 量,否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴上水贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍 而引起意外。



Cyanoacrylate glue

and no bubble existing.

Make hole

Cut /Remove

Option

No cement

Repair

Install it first



File / Sand

The method to apply the decals


- 1.Cut off the decal from the decal paper and put it into the warm water 40 °C for 10
- 2. Take the decal from the water and put it on a piece of clean cloth.
- 3. Remove the decal slowly from the paper to the targeted location by a wet finger. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry


水贴纸的使用方法:


- 一.把相关的印花从水贴纸上剪下,放入40℃左右的 温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 拿上印花纸板, 手指蘸水将印花移到适当的位置。
- 四.用软干布轻压印花直至水干,气泡消失。


*说明书中含有重要信息,应保留。 Please Keep instruction since it contains important information.


部品图 Parts

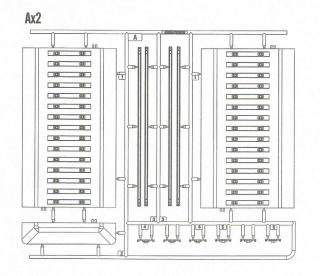

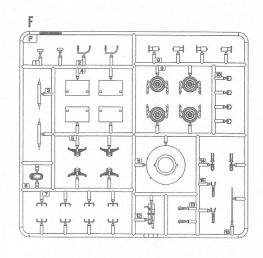

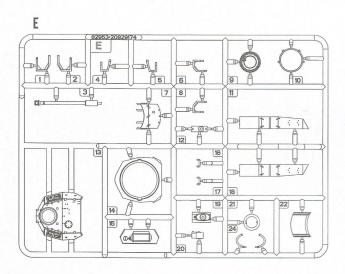

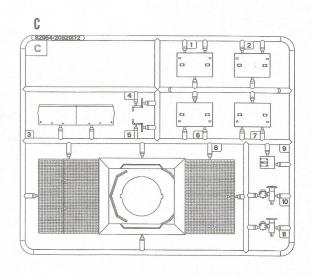

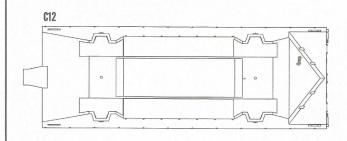

《水贴纸》 Decal


#1###2#


1:72 Scale German Panzerjägerwagen Vol.1 HobbyBoss NO.:82954





不用部件: E21, E24;


Unused parts F1, F4, F6, F7, F8, F11, F12, F16;

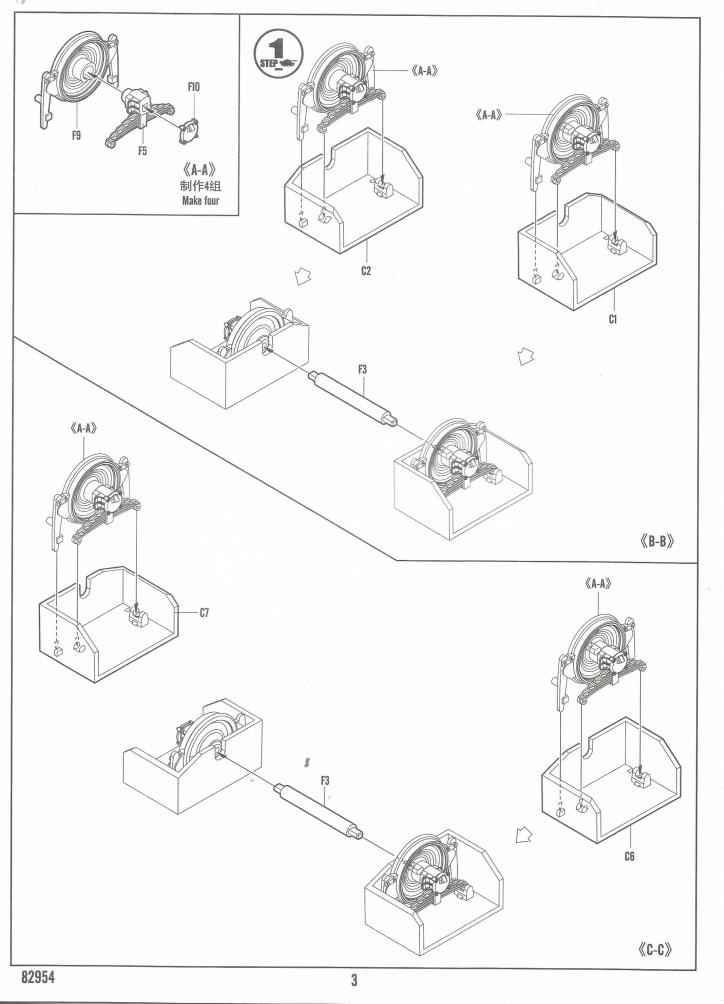


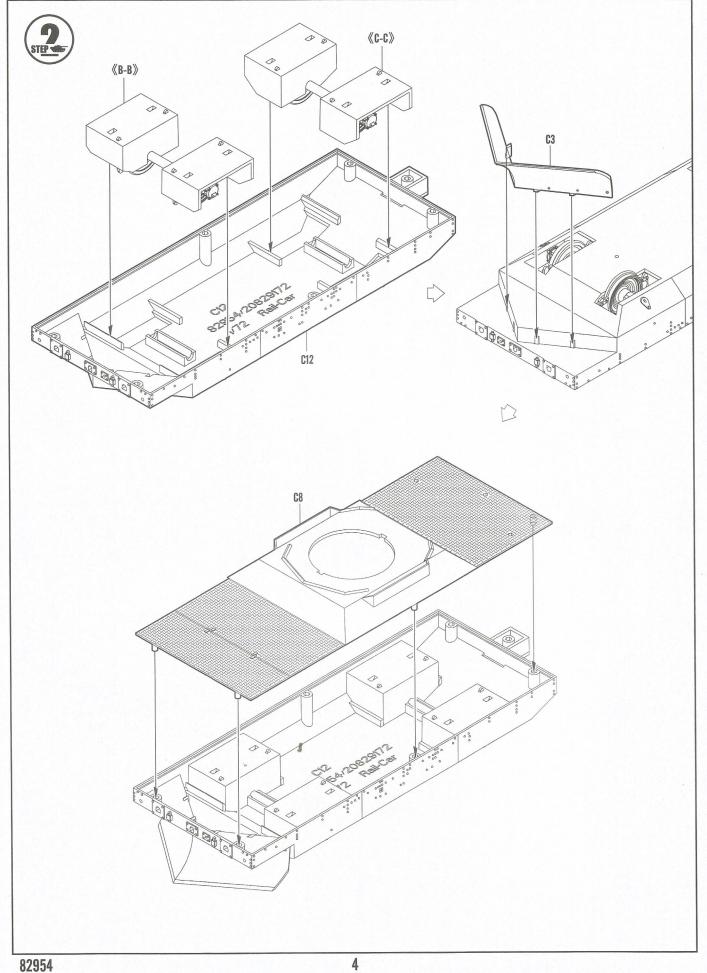

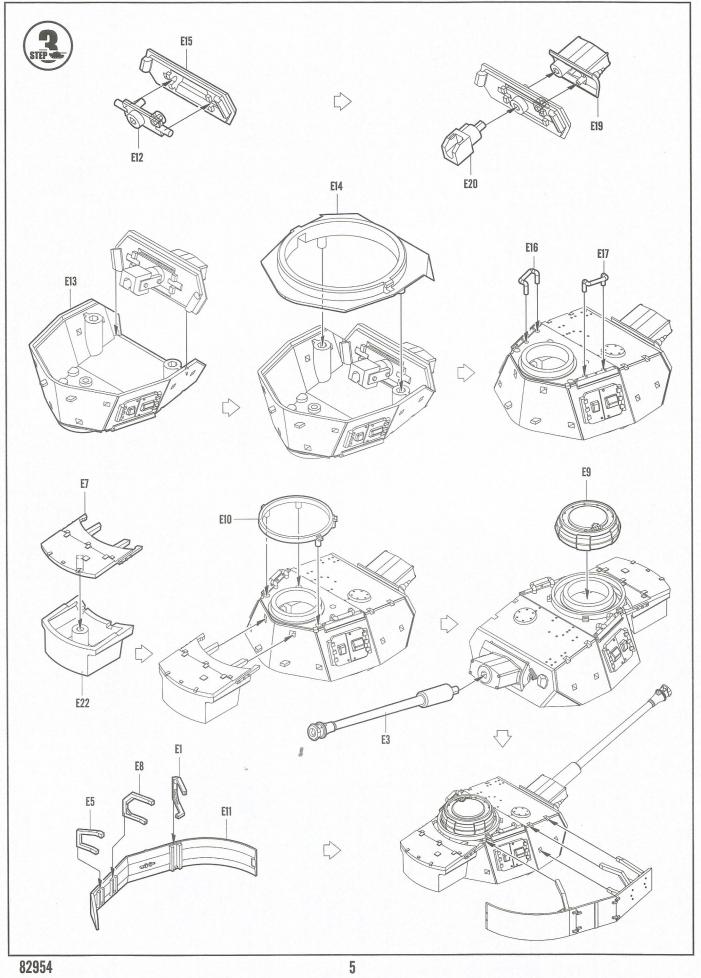

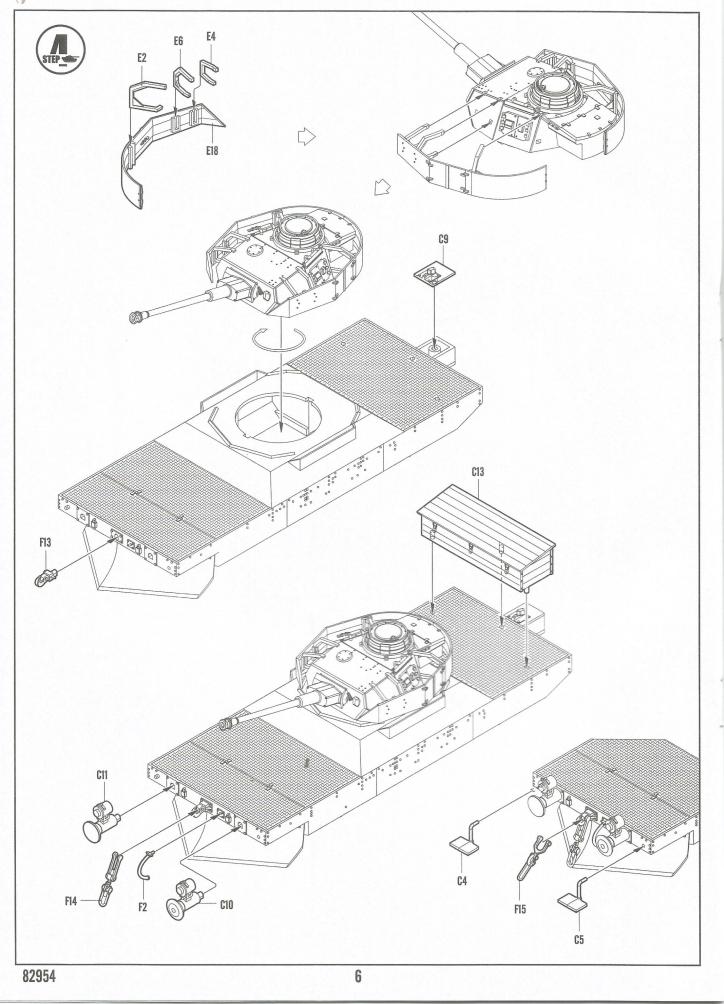

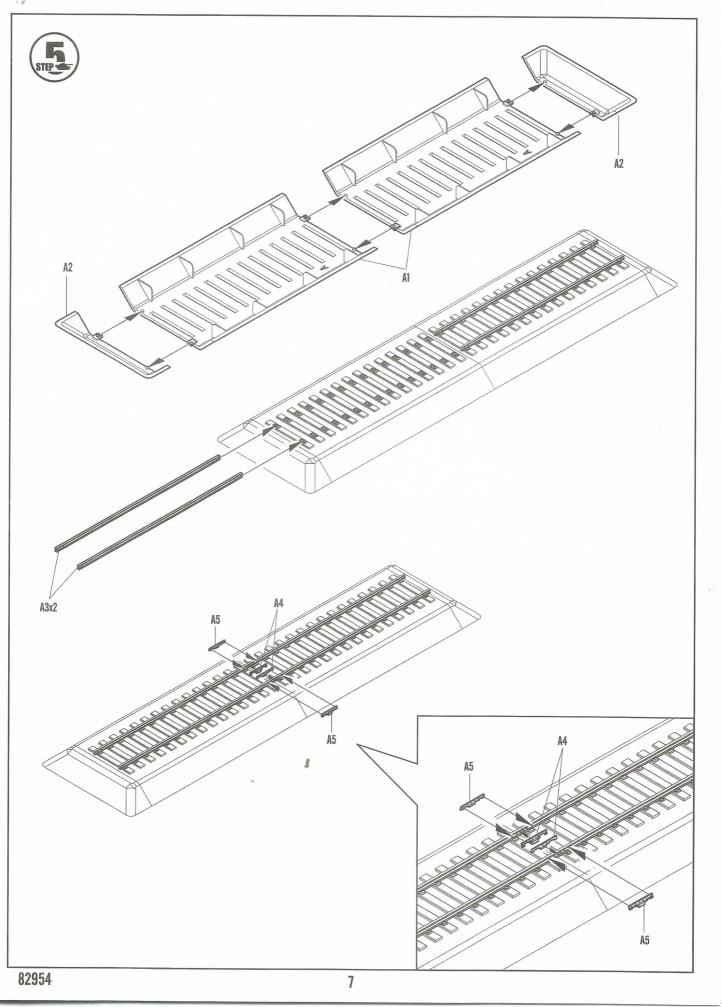

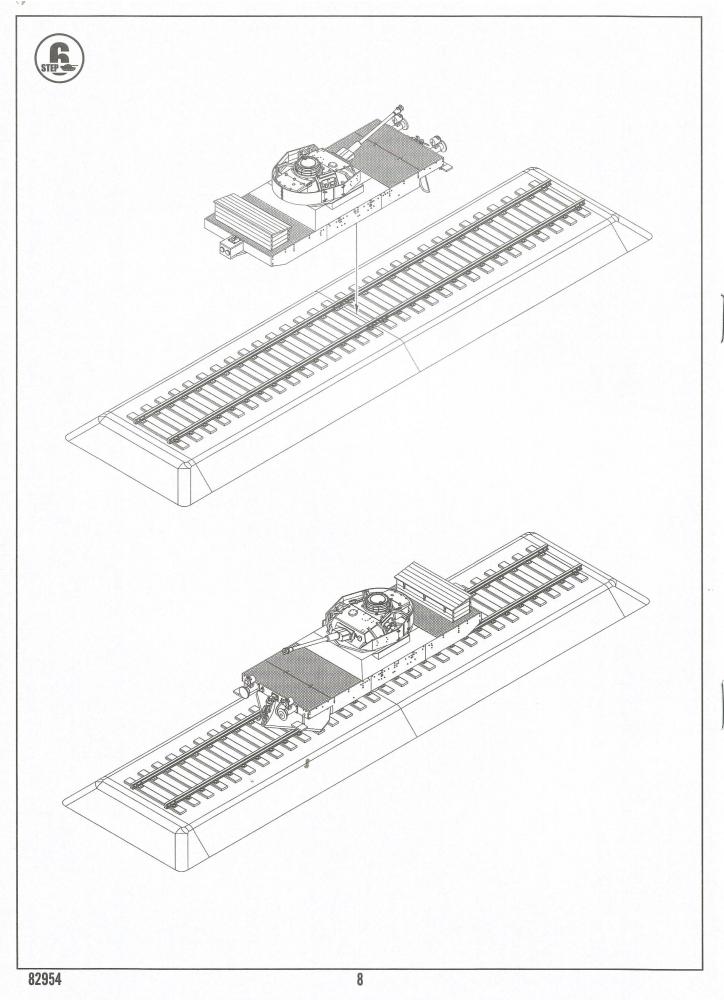



German Panzerjägerwagen Vol.1


ドイツ 装甲列車 編成BP-44/砲車


。 德国铁道反装甲载卡Ⅰ型




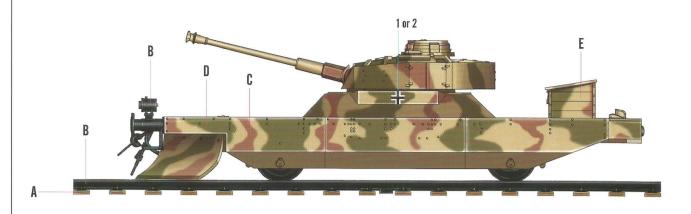

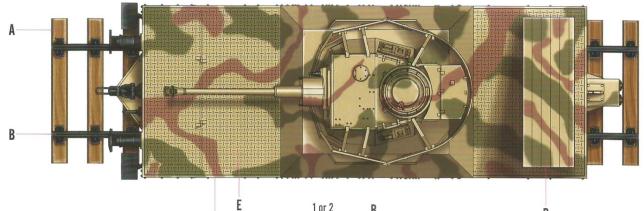

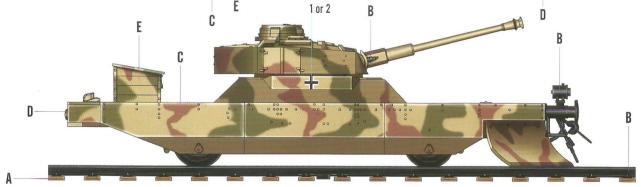

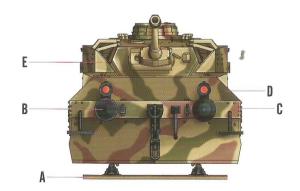

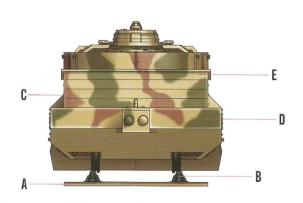

	Color	Mr.Hobby	Acrysion	Vallejo	Model Master	Tamiya	Humbrol
A	木棕色 Wood Brown	37 43	N 37	983	1701		186
B	黑铁色 Steel	H 18 28	N 18	864	1402	XF84	
C	红棕色 Red Brown	H 47 41	N 47	984		XF64	160
D	战车绿 Dark Green	H 70	$N\square$				
E	土黄色 Middle Stone	H 71 21	N 71	821			84

H⊠ AQUEOUS HOBBY COLOR Mr. COLOR N⊠ ACRYSION COLOR

NO.:82954