


# 132091

# Fokker E.II / E.III

1/32 scale detail set for WINGNUT WINGS kit • sada detailů pro model 1/32 WINGNUT WINGS

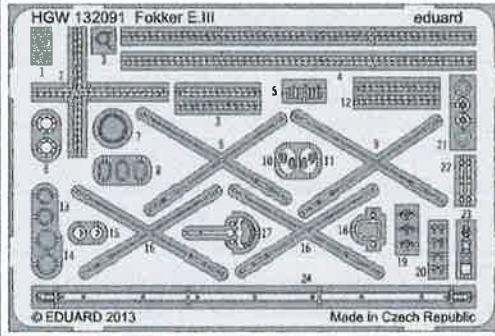

- ★ APPLY EXPRESS MASK AND PAINT BEFORE GLUING  
POUŽIT EXPRESS MASK NABARVIT PŘED SLEPENÍM
- ☉ SYMMETRICAL ASSEMBLY  
SYMETRICKÁ MONTÁŽ
- ◻ REMOVE  
ODSTRANIT
- ▨ GRIND  
OBROUSIT
- ⚪ DRILL HOLE  
VRTAT OTVOR
- ↷ BEND  
OHNOUT
- ❓ OPTION  
VOLBA
- Ⓜ REPLACE  
NAHRADIT

[WWW.HGWMODELS.CZ](http://WWW.HGWMODELS.CZ)  
[info@hgwmodels.cz](mailto:info@hgwmodels.cz)

ORIGINAL KIT PARTS  
PŮVODNÍ DÍLY STAVEBNICE
PHOTO-ETCHED PARTS  
LEPTANÉ DÍLY
PARTS TO BE REMOVED  
DÍLY K ODSTRANĚNÍ
FILL  
TMELIT

The main assembly diagrams include:

- Top Left:** Assembly of fuselage parts A26, A19, A17, A18, and A16. Includes a red fill symbol.
- Top Middle:** Assembly of fuselage part A28 with photo-etched parts 6, 15, and 1.
- Top Right:** Assembly of fuselage part A35 with photo-etched parts 13, 12, 19, and 20. Includes a red fill symbol.
- Middle Left:** Assembly of fuselage part A11 with photo-etched part 14.
- Middle Center:** Assembly of fuselage part A5 with photo-etched part 23 and decal 54.
- Middle Right:** Assembly of fuselage part F4 with photo-etched part 7.
- Bottom Left:** Large assembly diagram of the fuselage showing the installation of photo-etched parts 3, 4, 8, 10, 11, and 2. Includes a red fill symbol for parts B1 and B12.
- Bottom Middle:** Assembly of landing gear part A36 with photo-etched parts 21, 22, and A33.
- Bottom Right:** Assembly of fuselage part A22 with photo-etched part 5 and option A23.

# FOKKER E.II / E.III




# 132512

WWW.HGWMODELS.CZ

**TEXTILE PART**      **PHOTOETCHED PART**

1. Take the precut textile part out of the sheet.
2. Remove supporting paper.
3. Crumple the belt into a little ball and need it between the fingers.
4. Thread the belts through the buckles - use superglue.
5. Put the belts into the seat.
6. Spray by the glossy varnish.
7. Impregnate the belts with very diluted oil color (mix black and brown) - it will highlight the texture.
8. Spray by matt varnish.

After the varnish becomes dry it is possible to drybrush with light oil colour.

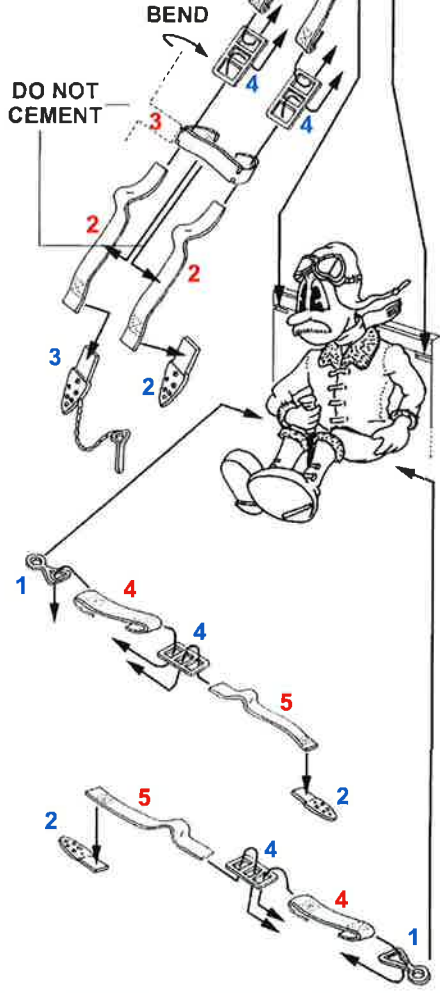


# HGW 632015

FOR WINGNUT WINGS KIT

## Fokker E.II / E.III

MADE IN CZECH REPUBLIC

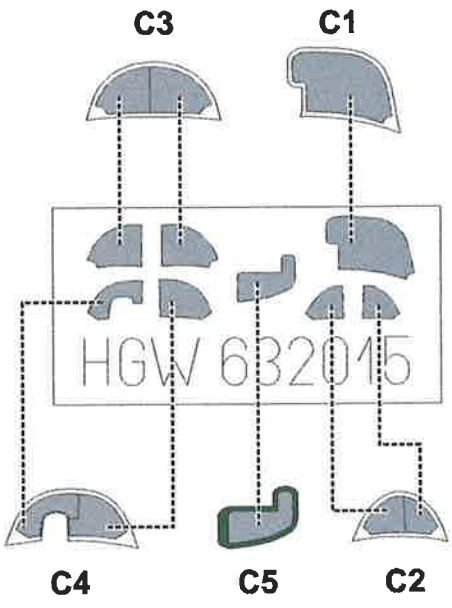

WWW.HGWMODELS.CZ