


## 7451 Hurricane Wing Armament 1/72 (8 guns)

for Arma Hobby kit



PUR - Polyurethane parts



PE - Photo-etched parts



© Special Hobby 2021

Díly ohnuté popř. pokroucené vlivem teplotních změn a stárnutí materiálu, mohou být narovnány do požadovaného tvaru pomocí proudu teplé vody nebo vzduchu (fén na vlasy).

Parts slightly distorted and bent owing to temperature changes or due to material ageing can be straightened to requested shape by hot water or hot air jet. (hair dryer)

This process can be repeated till result is entirely satisfactory.

K lepení použít kvanoakrylátové lepidlo!

For best result gluing use cyanoacrylate glue!

Kontaktní plochy doporučujeme před lepením odmastit

Contact areas ungrease is recommended before gluing.

Visit our official website and e-shop at  
[www.cmkkits.com](http://www.cmkkits.com)  
[www.specialhobby.eu](http://www.specialhobby.eu)  
[www.facebook.com/specialhobby/](http://www.facebook.com/specialhobby/)

Other 1/72 CMK resin sets:

- 7441 Phantom FG.1 Cockpit Correction
- 7440 Supermarine Swift Control Surfaces
- 7439 Beaufighter TF Mk.X Dinghy Set
- 7437 Beaufighter TF Mk.X Cockpit, for Airfix kit
- 7438 Beaufighter TF Mk.X Main Undercarriage Bays Correction
- 7437 Beaufighter TF Mk.X Cockpit
- 7436 A-4B/Q Skyhawk Undercarriage Set
- 7435 F4F-4 Wildcat Dinghy Set, for Airfix kit
- 7434 F4F-4 Wildcat Interior, for Airfix kit

Special Hobby, Mezilesí 718, Praha 9, 193 00, Czech Republic  
e-mail: office@specialhobby.eu



Use this!

### CMK H1010

The Razor Saw with Handle (cat. n. H1010) is a great tool for cutting both plastic and resin.

CMK also offers a wide variety

Bf 109E-4 of coarse / medium / fine saws. Bf 109E-3



SH72439  
Awesome New 1/72 Kit  
Messerschmitt Bf 109E  
from Special Hobby!




SH72443

The CMK sets for 1/72 Special Hobby Messerschmitt Bf 109E




1

vyřiznout, ztenčit hrany a vyzkoušet usazení na sucho  
cut off, thin the edges and dry fit first

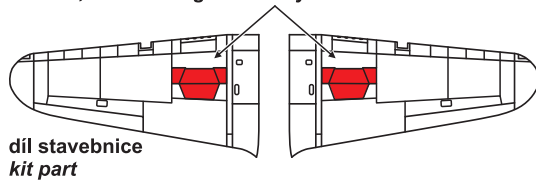


díl stavebnice  
kit part

3

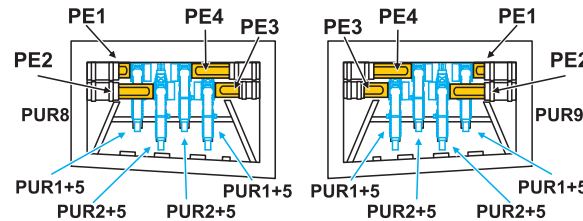


4

sestavte pro levé a pravé křídlo  
assemble for left and right wing

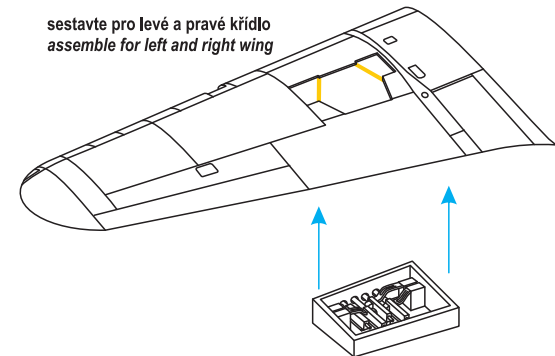


2

PE5

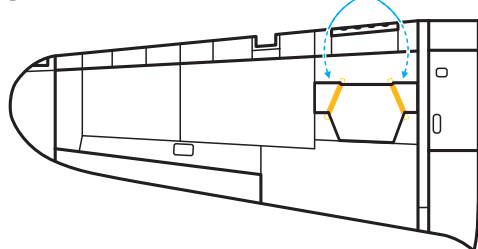

PE5

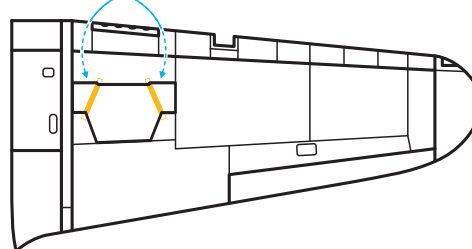

5

krity PUR 3, 4, 6 a 7 položte volně na křídlo  
place covers PUR 3, 4, 6 and 7 loosely on the wing