



Model Alliance Decals - UK & The Aviation Workshop are trading names of The Aviation Workshop Publications Ltd & Gary Madgwick. The On-Target Publications, AIRframe Journal & Airfix Magazine for Aircraft Modellers are all names registered to The Aviation Workshop Publications Ltd and may not be used without the permission in writing of the The Aviation Workshop Publications Ltd.

Decals Instructions:


**These decals are a high quality product produced for The Aviation Workshop by Microscale - USA.
The decals are very thin but very strong and flexible.**

1. Before painting the model, clean with 'Model Wipes'. This cleans the grease and any dust from the surface.
2. We recommend that you wear 'Model Gloves' to handle the model whilst preparing it for painting.
3. For best results, spray the model with a Light Grey primer, any defects can then be made good.
4. For demarcation and camouflage lines, we recommend that you use 'Masking Film'.
5. If you wish to use a decal fixing and finishing system, we recommend you use the Microscale System, do not use strong decal solvents such as Solvaset.
6. Once you are happy with the painting of the model, coat it in a clear gloss finish, this can either be over the entire model if the model is finished glossy or spot gloss finish in the areas that have a decal. A good surface finish are clear floor shine's such as Johnson wax - Klear. This is sold under different names around the world. Klear can be either brushed on or sprayed.
7. Cut each decal from the sheet as needed. Do not trim the clear varnish finish to close to the decal. Submerge the decal in warm water for about 10 seconds and remove to a flat surface and wait for the decal to release from the backing sheet. A small amount of washing up liquid in the warm water helps the decal release from the sheet.
8. These decals do not require a decal setting solution to lay flat or to conform to the model contours.
9. With a pair of tweezers to hold the backing sheet, slide the decal in position on the model using a small soft brush. Do not use an old painting brush as bits can get under the decal.
10. Carefully remove any excess water with a soft cloth or tissue once you are happy with the position of the decal. Should you make a mistake, dip a brush in the warm water and ease under the edge of the decal. The decal will then easily move to the correct position and again remove the excess water.
11. When the decals are completely dry, gently wipe off all excess decal adhesive.
12. Leave the model to dry completely, spray or paint over the decals with a further coat of Klear or gloss.
13. Should the decal silver for any reason, this is because small air bubbles are under the decal. If found, prick with a pin and apply a small drop of Micro Sol to the decal and allow to dry for up to 12 hours.
14. Finally, coat the model with the required finish, either gloss, semi gloss or matt.
15. Decals are best stored flat and in a cool, dry place and should not be stored in direct sunlight, hot or humid conditions.
16. Should you have any problems with these decals please contact us at the address below.

MODEL ALLIANCE

DECALS

CAC F-86 SABRES MK 31/32 IN RAAF SERVICE

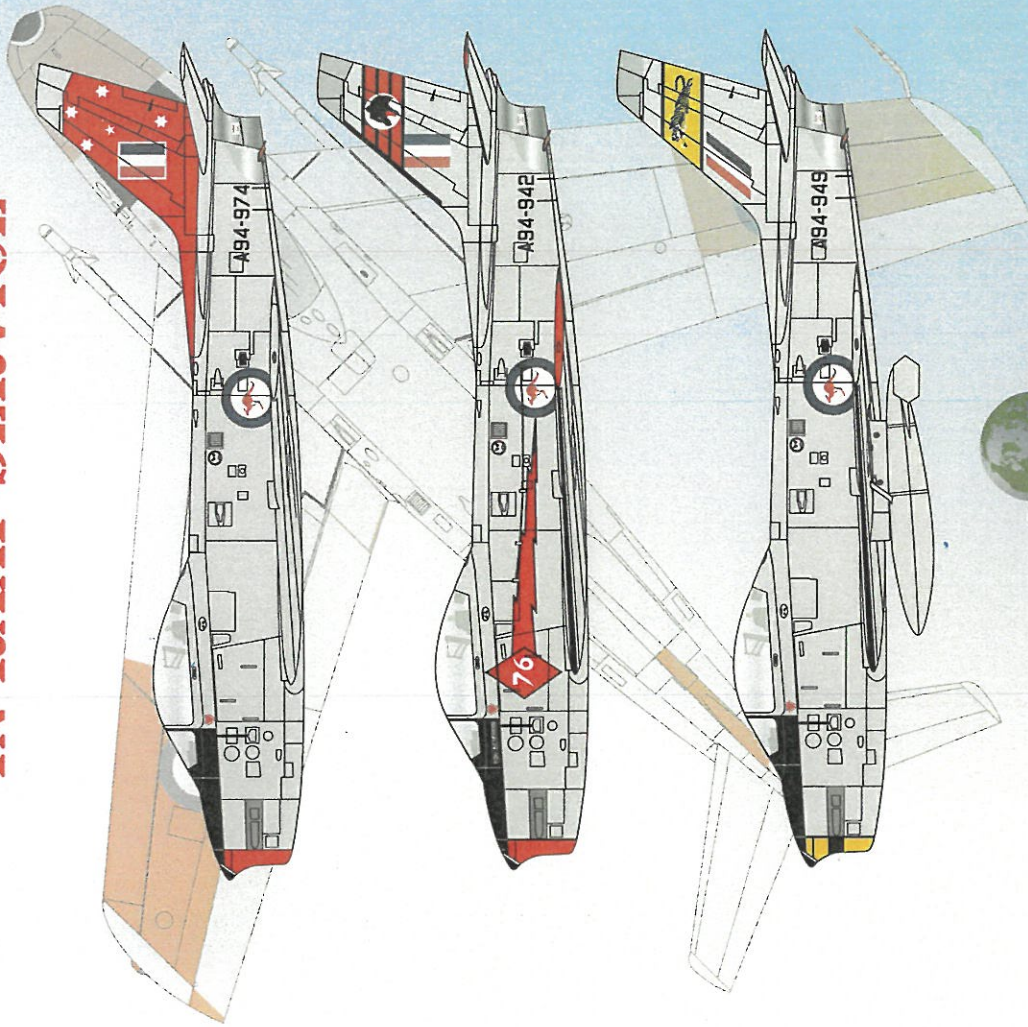


The Aviation Workshop
Watermill Studio, Unit 13/14A Home Farm,
Ardington, Wantage, Oxon, OX12 8PD, UK
www.theaviationworkshop.co.uk
Email: info@theaviationworkshop.co.uk

Aviation Workshop
Publications Ltd


Sheet No
MA-72125
MA-48125

RAAF F-86 Sabres


North American (CAC) Sabre Mk 31, 'A94-974', of 3 Squadron, RAAF, Butterworth, Malaysia, May 1958.
Overall Aluminium lacquer finish with a Red fin and nose. Black anti-glare panel.
See On Target Book Page 25.

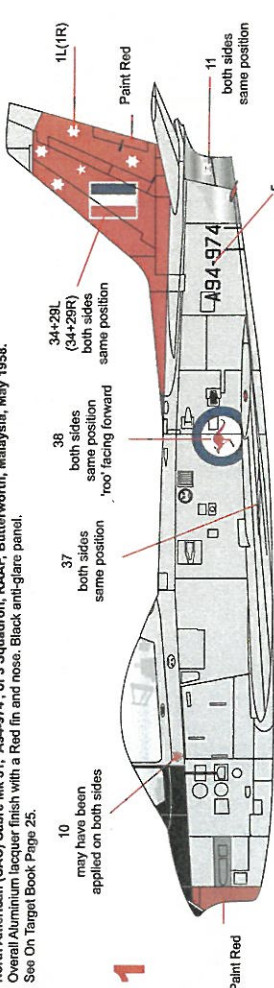


North American (CAC) Sabre Mk 32, 'A94-942', of 76 Squadron, 'Red Diamonds Aerobatic Team', RAAF, Williamstown, September 1962.
Overall Aluminium lacquer finish with Red wing and tailplane tips and nose. Black anti-glare panel, wing and tailplane leading edges.

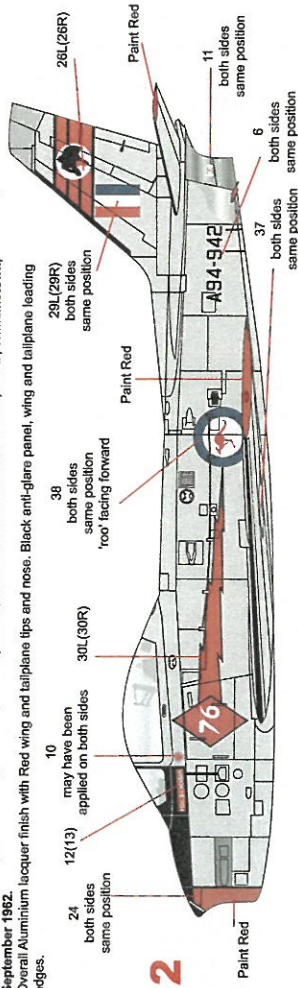


North American (CAC) Sabre Mk 32, 'A94-946', of Aircraft Research & Development Unit, (ARDU), RAAF, Laverton, 1960.
Overall Aluminium lacquer finish with fluorescent Day-Glo wing, nose and tailplane areas. Black anti-glare panel.
See On Target Book Page 29.

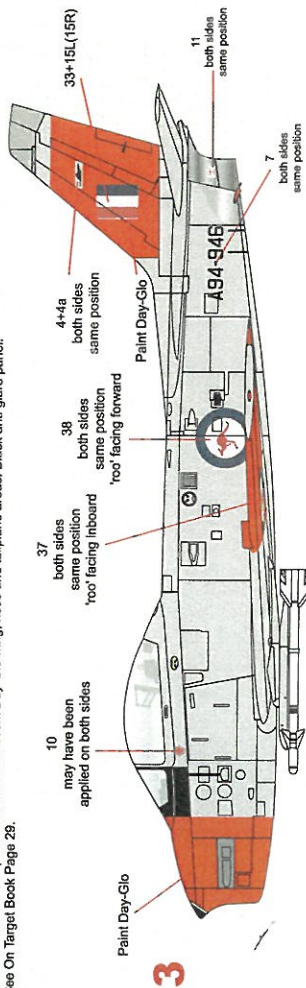


North American (CAC) Sabre Mk 32, 'A94-949', of 2 (F) OCU, RAAF, Williamstown, late 1960's.
Overall Aluminium lacquer finish with a Yellow nose and Black anti-glare panel, wing and tailplane leading edges.
See On Target Book Page 31.

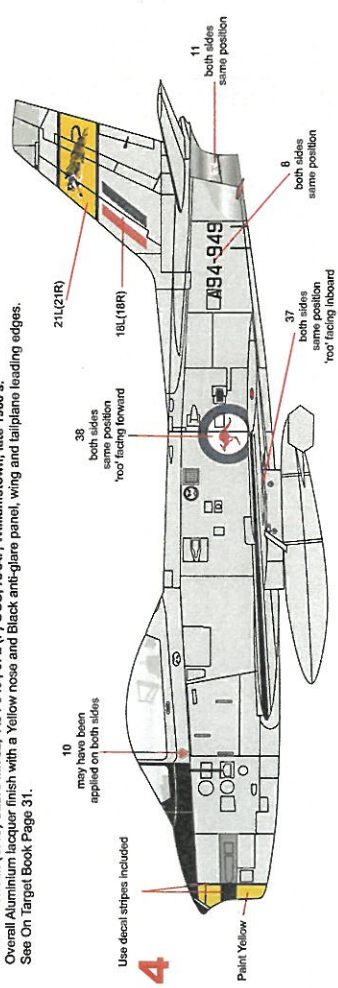


North American (CAC) Sabre Mk 32, 'A94-974', of 77 Squadron, RAAF, Butterworth, Malaysia, late 1960's.
Overall Aluminium lacquer finish with Green tailplane tips, wingtips and nose. Black anti-glare panel.
See On Target Book Page 28.

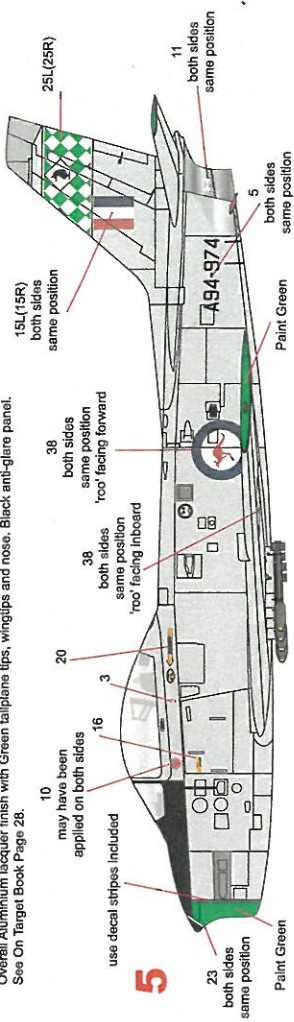


North American (CAC) Sabre Mk 32, 'A94-366', of 5 (F) OCU, RAAF, Williamstown, mid 1960's.
Overall Aluminium lacquer finish with a Blue nose and White bands. Black anti-glare panel.
See On Target Book Page 37.

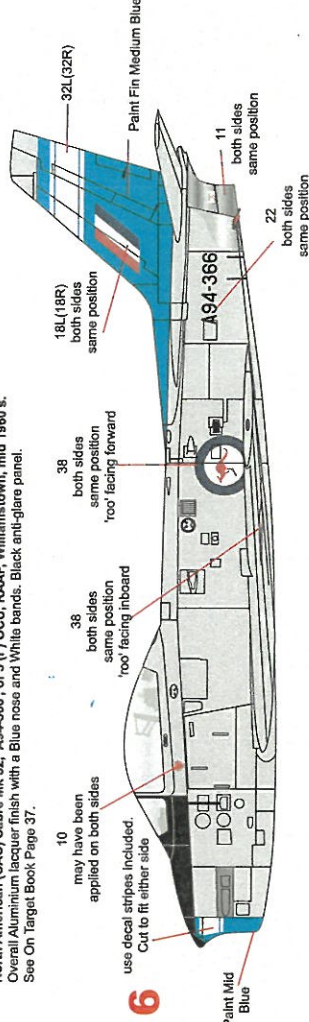

North American (CAC) Sabre Mk 32, 'A94-954', of 2 (F) OCU, RAAF, Williamstown, mid 1960's.
Overall Aluminium lacquer finish with Yellow fin and nose. Black anti-glare panel.
See On Target Book Page 32.


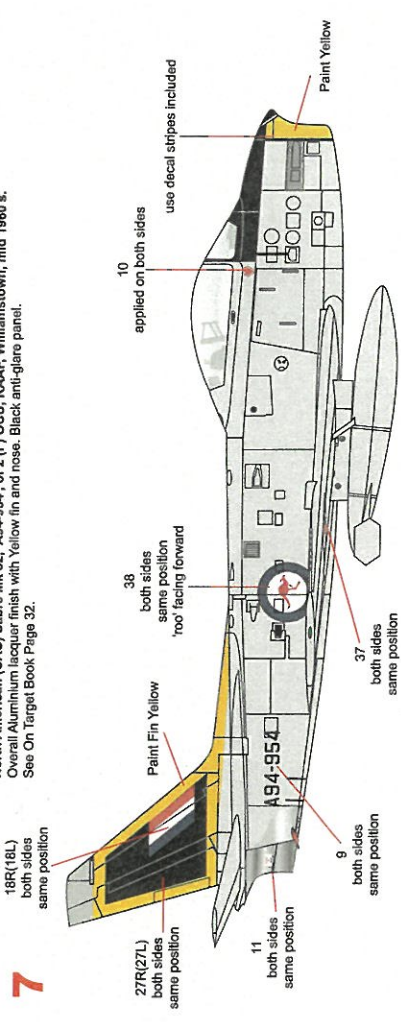


North American (CAC) Sabre Mk 32, 'A94-988', of 5 (F) OCU, RAAF, Mid 1960's.
Overall Aluminium lacquer finish with Medium Blue fin and nose. Black anti-glare panel.
See On Target Book Page 32.

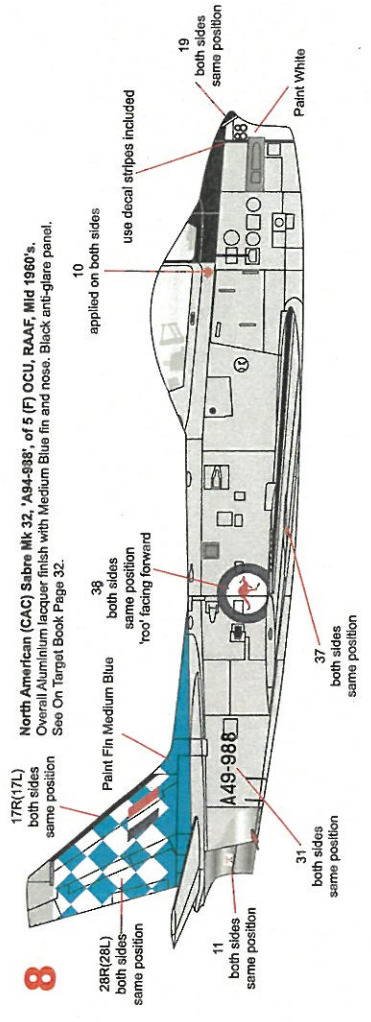

Common to All

2L(2R)
Some RAAF Sabres
carried these markings
on the wing upper surfaces

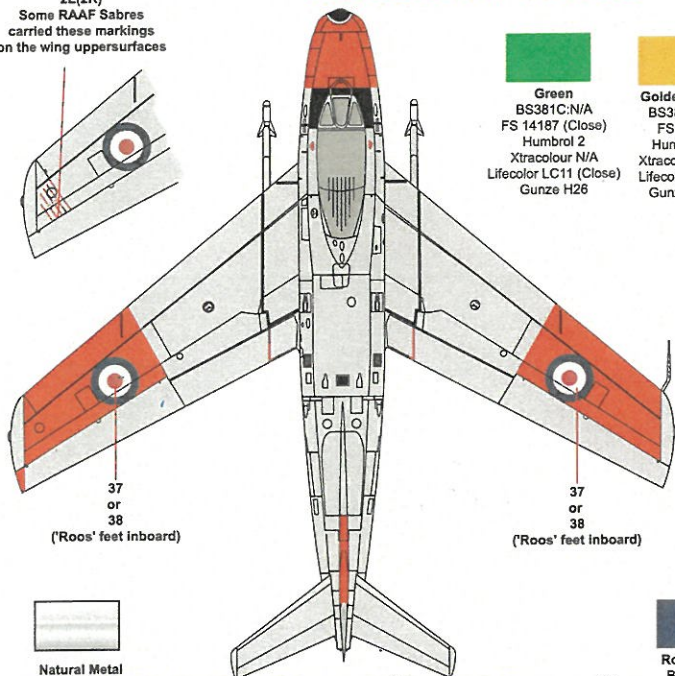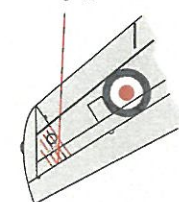

Green
BS381C:N/A
FS 14187 (Close)
Humbrol 2
Xtracolor N/A
Lifecolor LC11 (Close)
Gunze H26

Golden Yellow
BS381C:356
FS 13538
Humbrol 24
Xtracolor X011
Lifecolor UA140
Gunze H024

Titanium
BS381C:N/A
FS N/A
Humbrol 27004-7
Xtracolor X504
Lifecolor LC26
Gunze N/A

Medium Blue
BS381C:N/A
FS 15180 (Close)
Humbrol N/A
Xtracolor N/A
Lifecolor LC09 (Close)
Gunze N/A



Insignia White
BS381C:N/A
FS N/A
Humbrol 22
Xtracolor X405
Lifecolor LC01
Gunze H1



Natural Metal
BS381C:N/A
FS N/A
Humbrol 27002-3
Xtracolor X502
Lifecolor LC24
Gunze N/A



Roundel Blue
BS381C:110
FS15056
Humbrol 25
Xtracolor X030
Lifecolor LC10
Gunze H56


Flourescent Day-Glo
BS381C:N/A
FS38903
Humbrol 205
Xtracolor N/A
Lifecolor LC23
Gunze H98



Aluminium Laquer
BS381C:N/A
FS N/A
Humbrol N/A
Xtracolor N/A
Lifecolor N/A
Gunze N/A



Post Office Red
BS381C:538
FS11136
Humbrol 19
Xtracolor X031
Lifecolor LC06
Gunze H327

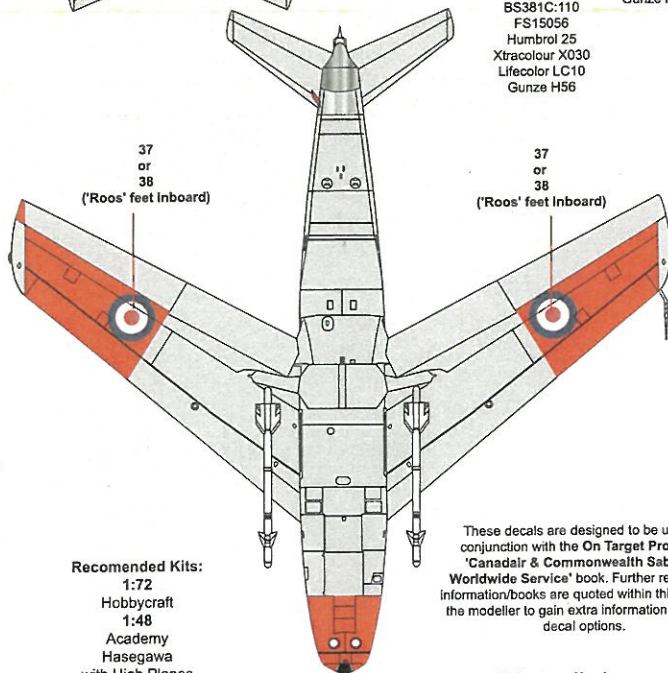

Recommended Kits:
1:72
Hobbycraft
1:48
Academy
Hasegawa
with High Planes
CAC Sabre Conversion Set

These decals are designed to be used in conjunction with the On Target Profiles 6 'Canadair & Commonwealth Sabre In Worldwide Service' book. Further reference information/books are quoted within this book for the modeller to gain extra information on these decal options.

References Used:
Canadair & Commonwealth Sabre In Worldwide Service, by Jon Freeman, On Target Profiles 6
The Canadair Sabre, by Larry Milbury, CANAV Books, 1986
Canadair and Commonwealth Sabre, by Steve Hazell, Warpaint Books, 1986.

Private Photo Archives of Gary Madgwick & Rod Farquhar via Darren Mottram

