

F-4 Phantoms - RAAF Amberley

References:

Phantom, Hornet and Skyhawk in


Australian Service - Stewart Wilson







1/72 Scale
No: A72036

P.O. Box 88, Kerrimuit,
Victoria, 3129, Australia
Email: aussiedecals@bigpond.com

F-4E Phantom - RAAF
1 & 6 Squadrons
Amberley

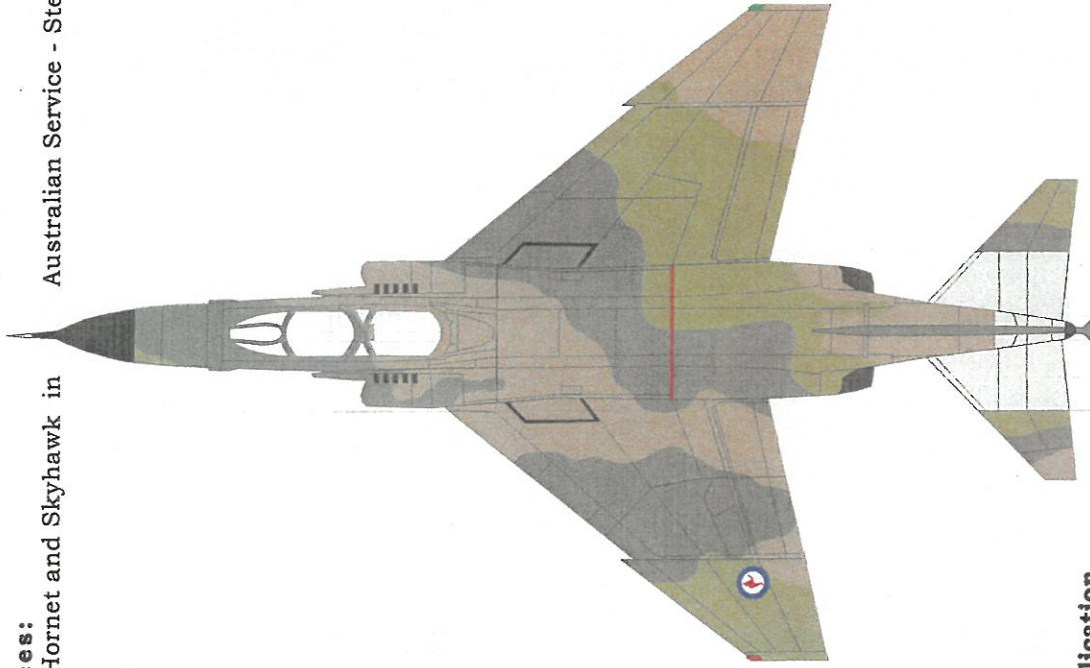

F-4E Phantoms 1 & 6 Sqns RAAF Base Amberley QLD 1970 to 1973.

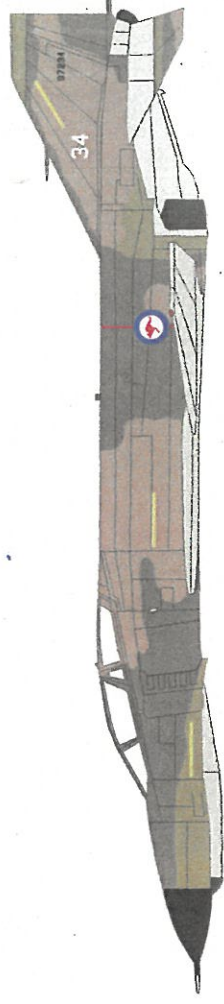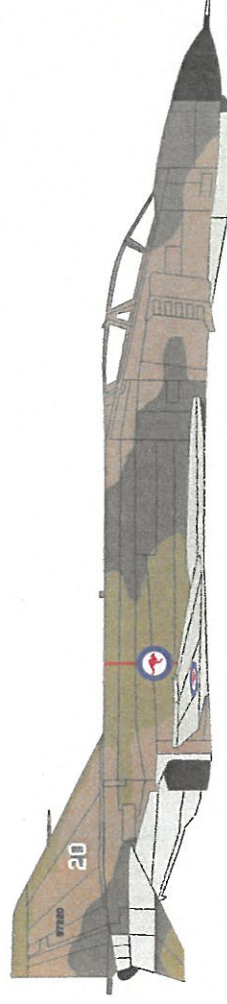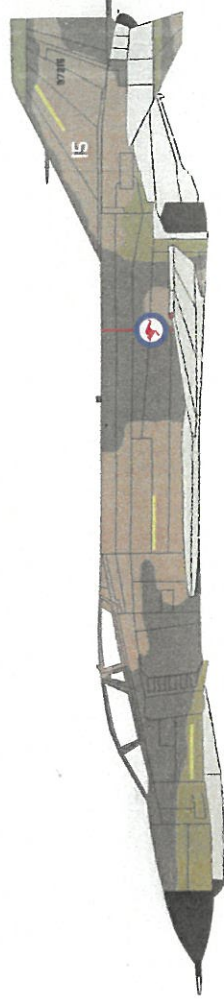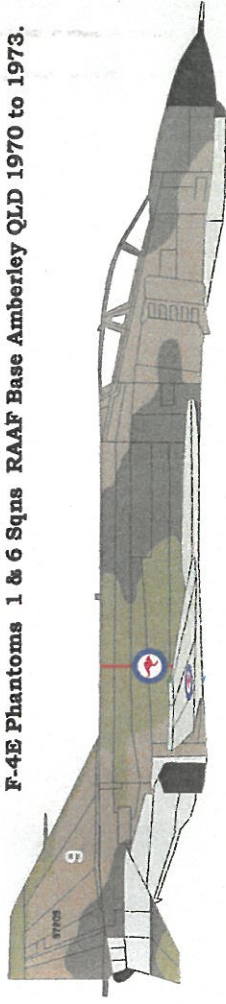

Decal Application



1. Cut around the required design.
2. Soak in luke warm water for 10 seconds.
3. Stand the decal on facial tissue.
4. Moisten the application area with plenty of water.
5. Apply decal by carefully sliding off the backing paper using a small brush and tweezers.
6. Use decal setting agent to nestle decal around body detail.
7. Paint model with clear laquer to hide decal film.

NB: Decals adhere best to gloss surfaces.

This decal film is very thin and will need extra care in application. Whenever you move a decal use water on your brush.

F-4 Phantoms - RAAF Amberley

Decal Placement.

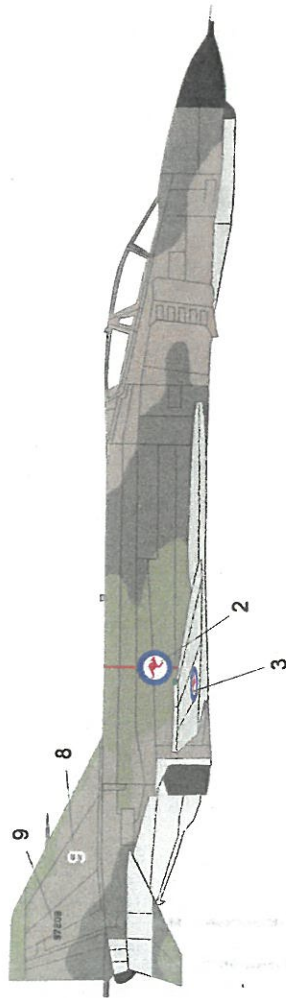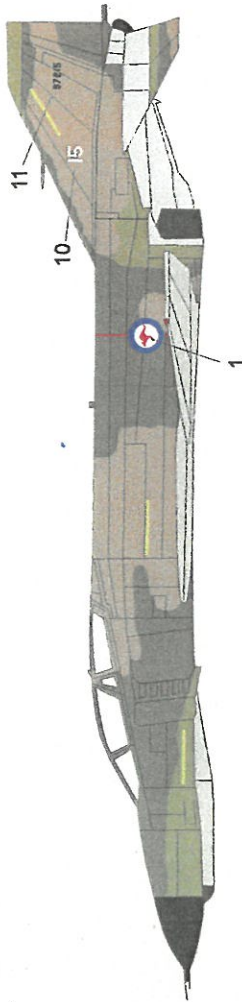

Modellers Notes:


Supplied within this set are numbers for the following aircraft: 69-7215, 69-7234, 69-7205, 69-7209 & 69-7220. By using these numbers as a basis, other aircraft serial numbers can be constructed.

Roundels:

The large 18" Roundels (Decal No.1 & No.2) are placed on the fuselage instead of the USAF Stars and Bars. The smaller 16" Roundels (Decal No.3) is placed on top of the Port wing and on the underside of the Starboard wing.

However there are some variations on this with photographic evidence to suggest that some aircraft wore 16" Roundels on the Fuselage and 18" Roundels on top of the wings. Please refer to your favourite reference to determine which options to construct.

Starboard Underwing Roundel Placement

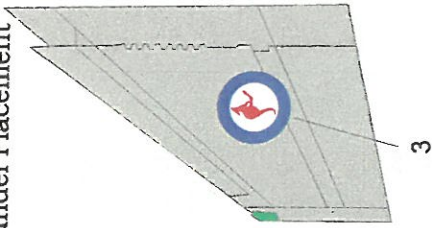

Colours:

	Tan	FS-30219
	Medium Green	FS-34102
	Dark Green	FS-34079
	Light Grey	FS-36622
	Satin Black	FS-27038
	Aluminium	

