



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35736

Modern US Army M1082 LMTVT

现代美军 M1082 轻型战术卡车挂车

[For TRUMPETER 01010]

推荐使用工具 RECOMMENDED TOOLS

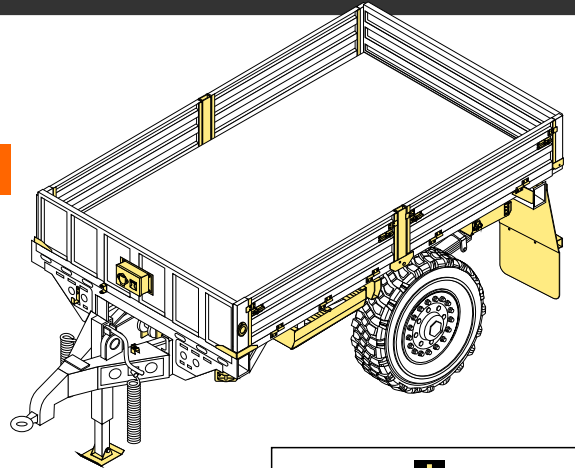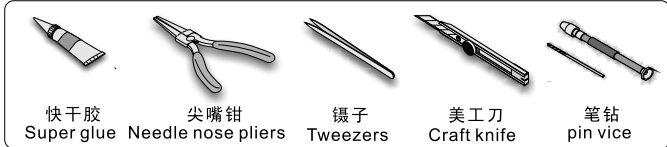

- 安装
install
- 折叠
bend
- A1**

改造件零件编号
PE/resin part number
- B12**

原零件编号
kit part number
- C22**

被替换的原零件编号
replaced kit part number
- 另一侧相同制作
repeat on opposite side
- 切除
remove
- 打磨
grind off
- 弧度卷曲
radial bending
- x2**

制作若干组
multiple assembly
- 选择安装
alternative
- 钻孔
drill
- 用胶棒制作
make from plastic rod

用尖端在凹槽处冲压
use penpoint to press on the dent

蚀刻片零件内侧面向上
Put the part upside down
用笔尖在凹槽处刺
Use penpoint to press on the dent

a

b

c

d

e

f

g


h

i


j

VOYAGERMODEL [®] 无微不至 极尽享受 Recommended item	
PE 35585	Modern US M1078 LMTV Basic
PE 35586	Modern US M1078 LMTV [Armor CaB] Basic
PEA207	Modern US Army M1078 Road Wheels
PEA 314	Modern US M1078 LMTV [Armor CaB] add PARTS
PE 35587	Modern US M1083 FMTV Basic
PE 35588	Modern US M1083 FMTV [Armor CaB] Basic
PE 35648	Modern US M1083 FMTV [Armor CaB] Basic
VBS0211	Modern US Army HUMVEE carried M2 machine gun (full kit)

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35736

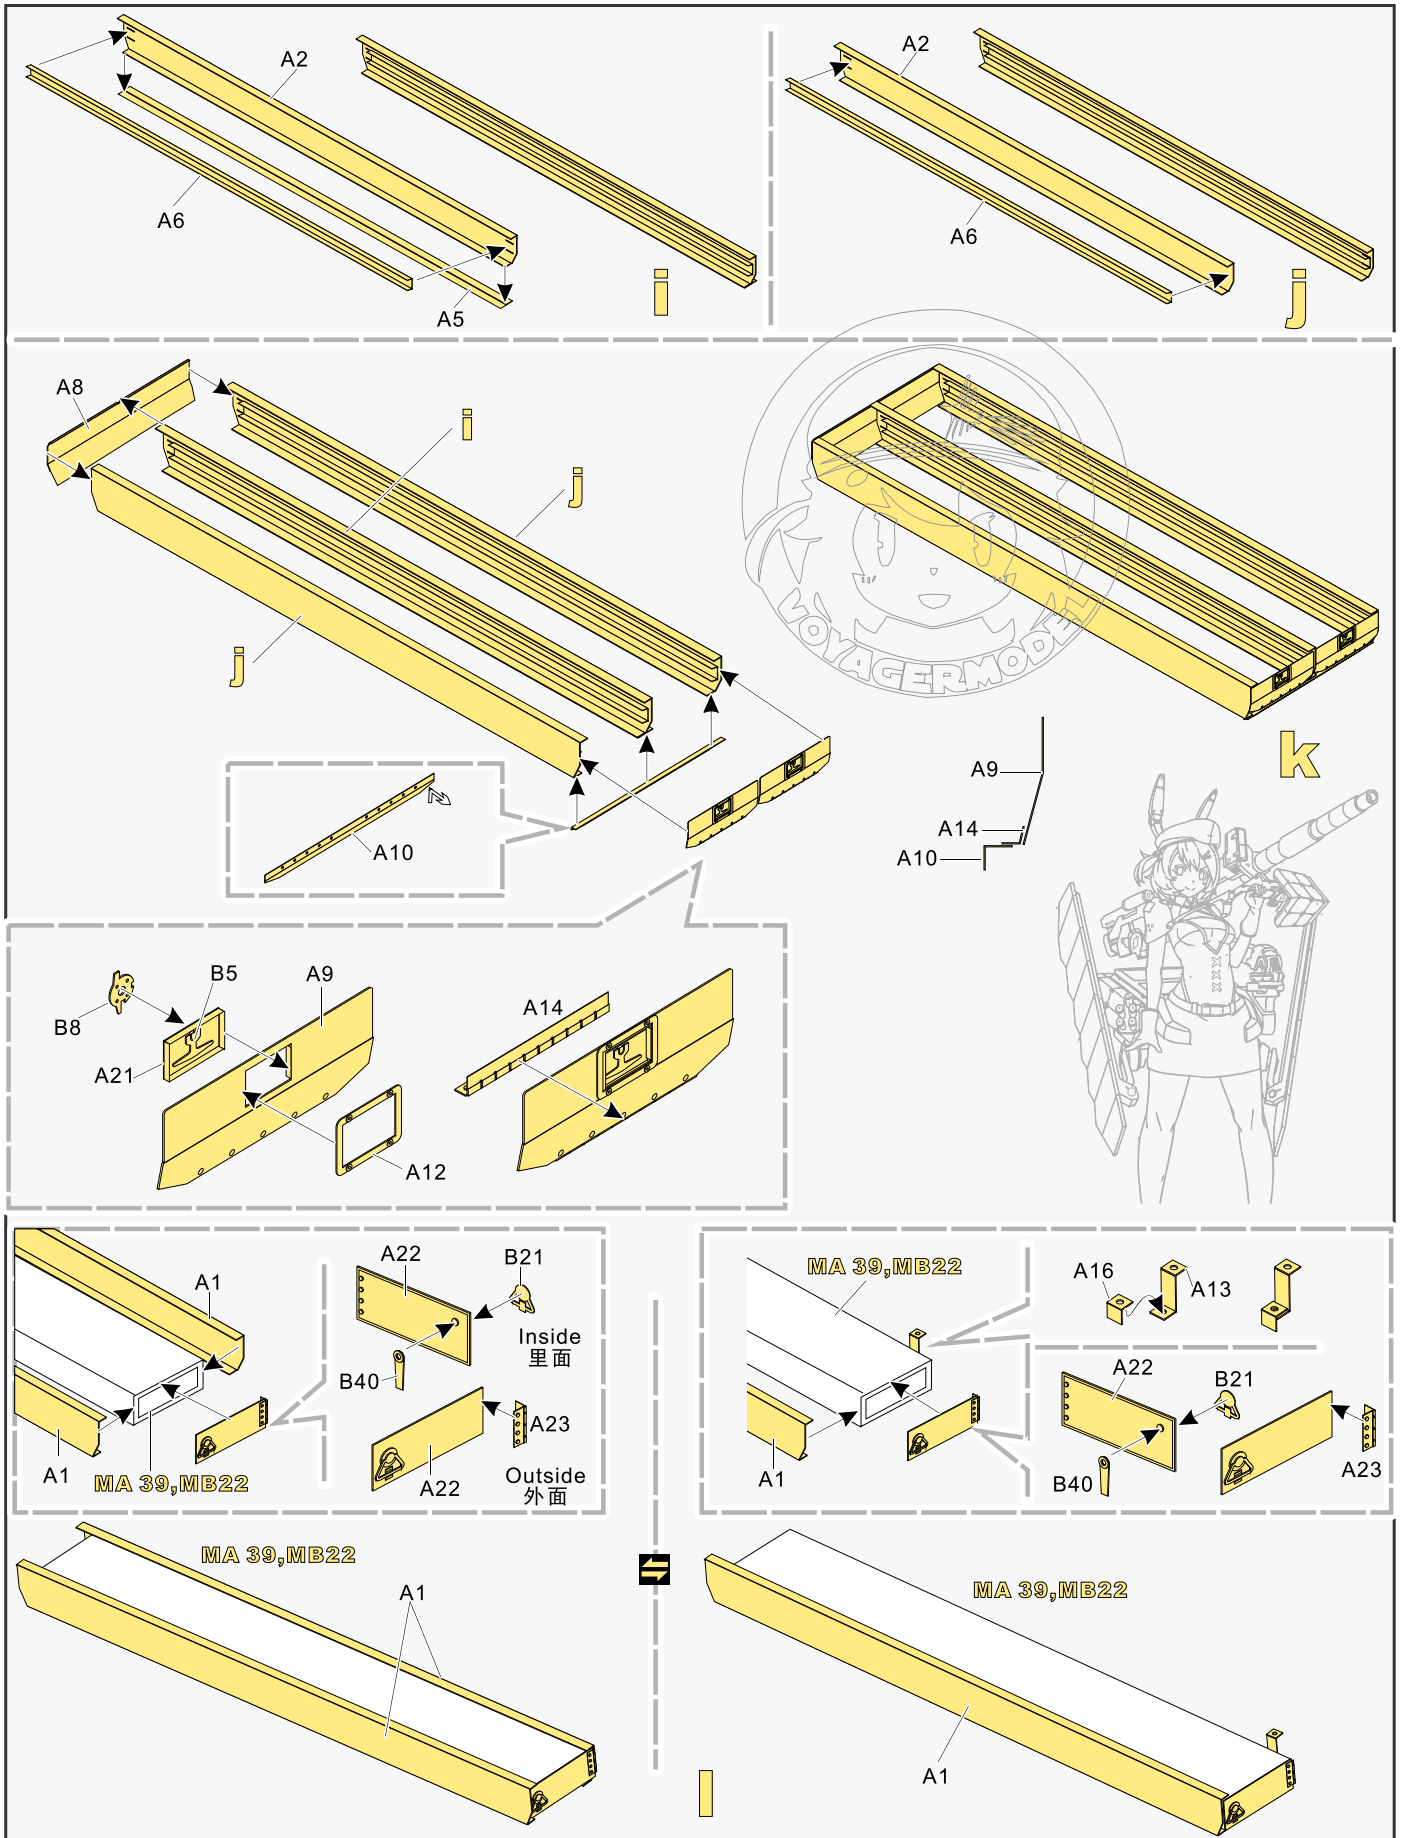


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35736

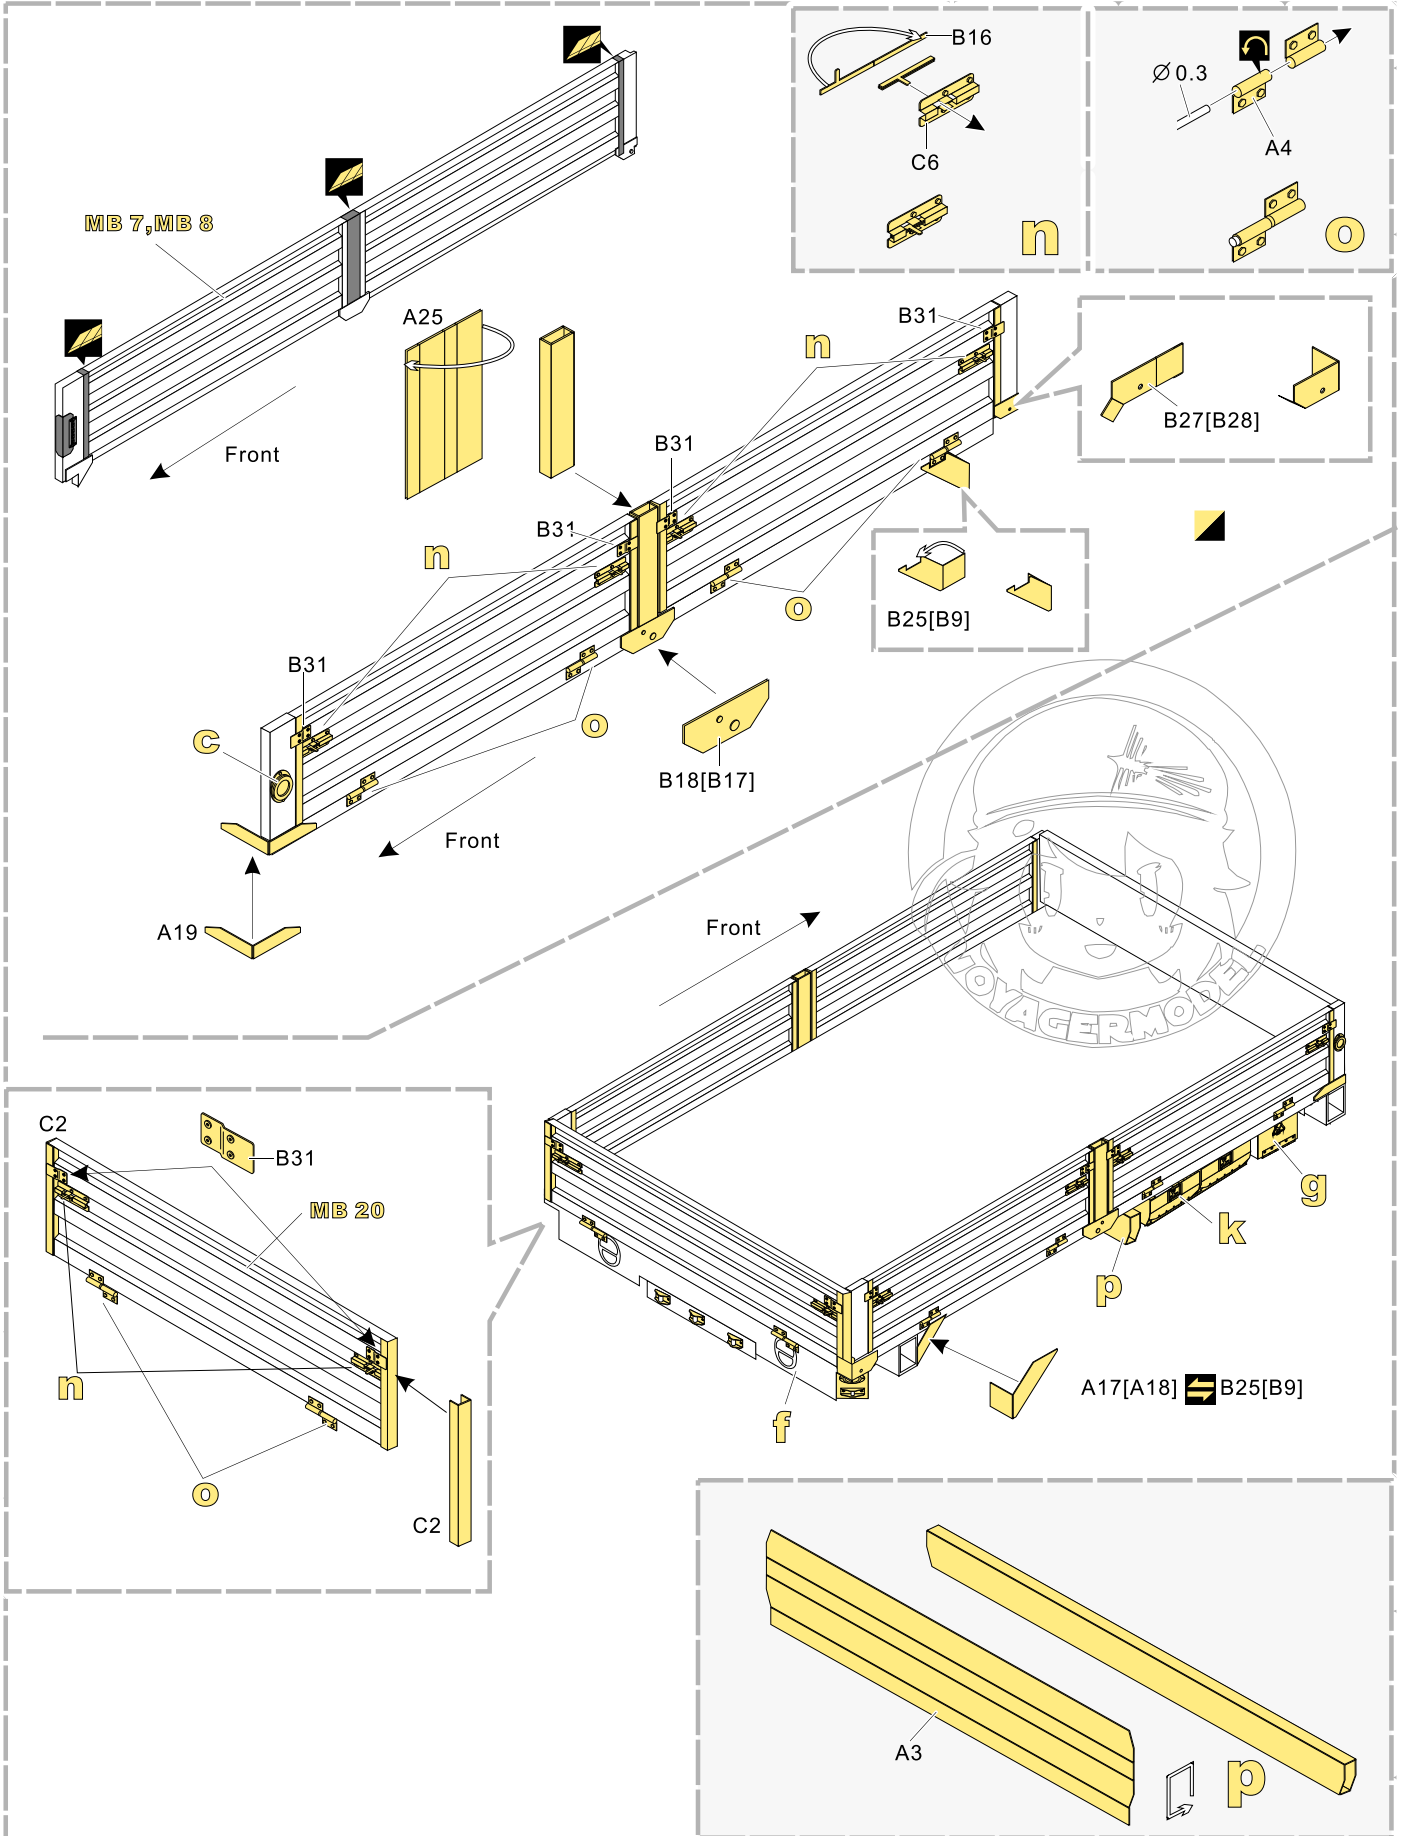

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35736

[Http://www.voyagermodel.com/productdetails.asp?itemid=PE35736](http://www.voyagermodel.com/productdetails.asp?itemid=PE35736)

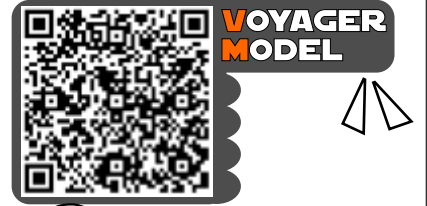

更多PE35736样品照片参考请扫一扫
MORE PICTUER OF PE 35736
REFERENCE SCAN HERE

