


48th Scale  
NO.  
48-79

A-1H and A-1J SKYRAIDERS  
**MICROSCALE DECAL**  
BY KRASEL INDUSTRIES, INC., SANTA ANA, CA. 92705

AIRCRAFT

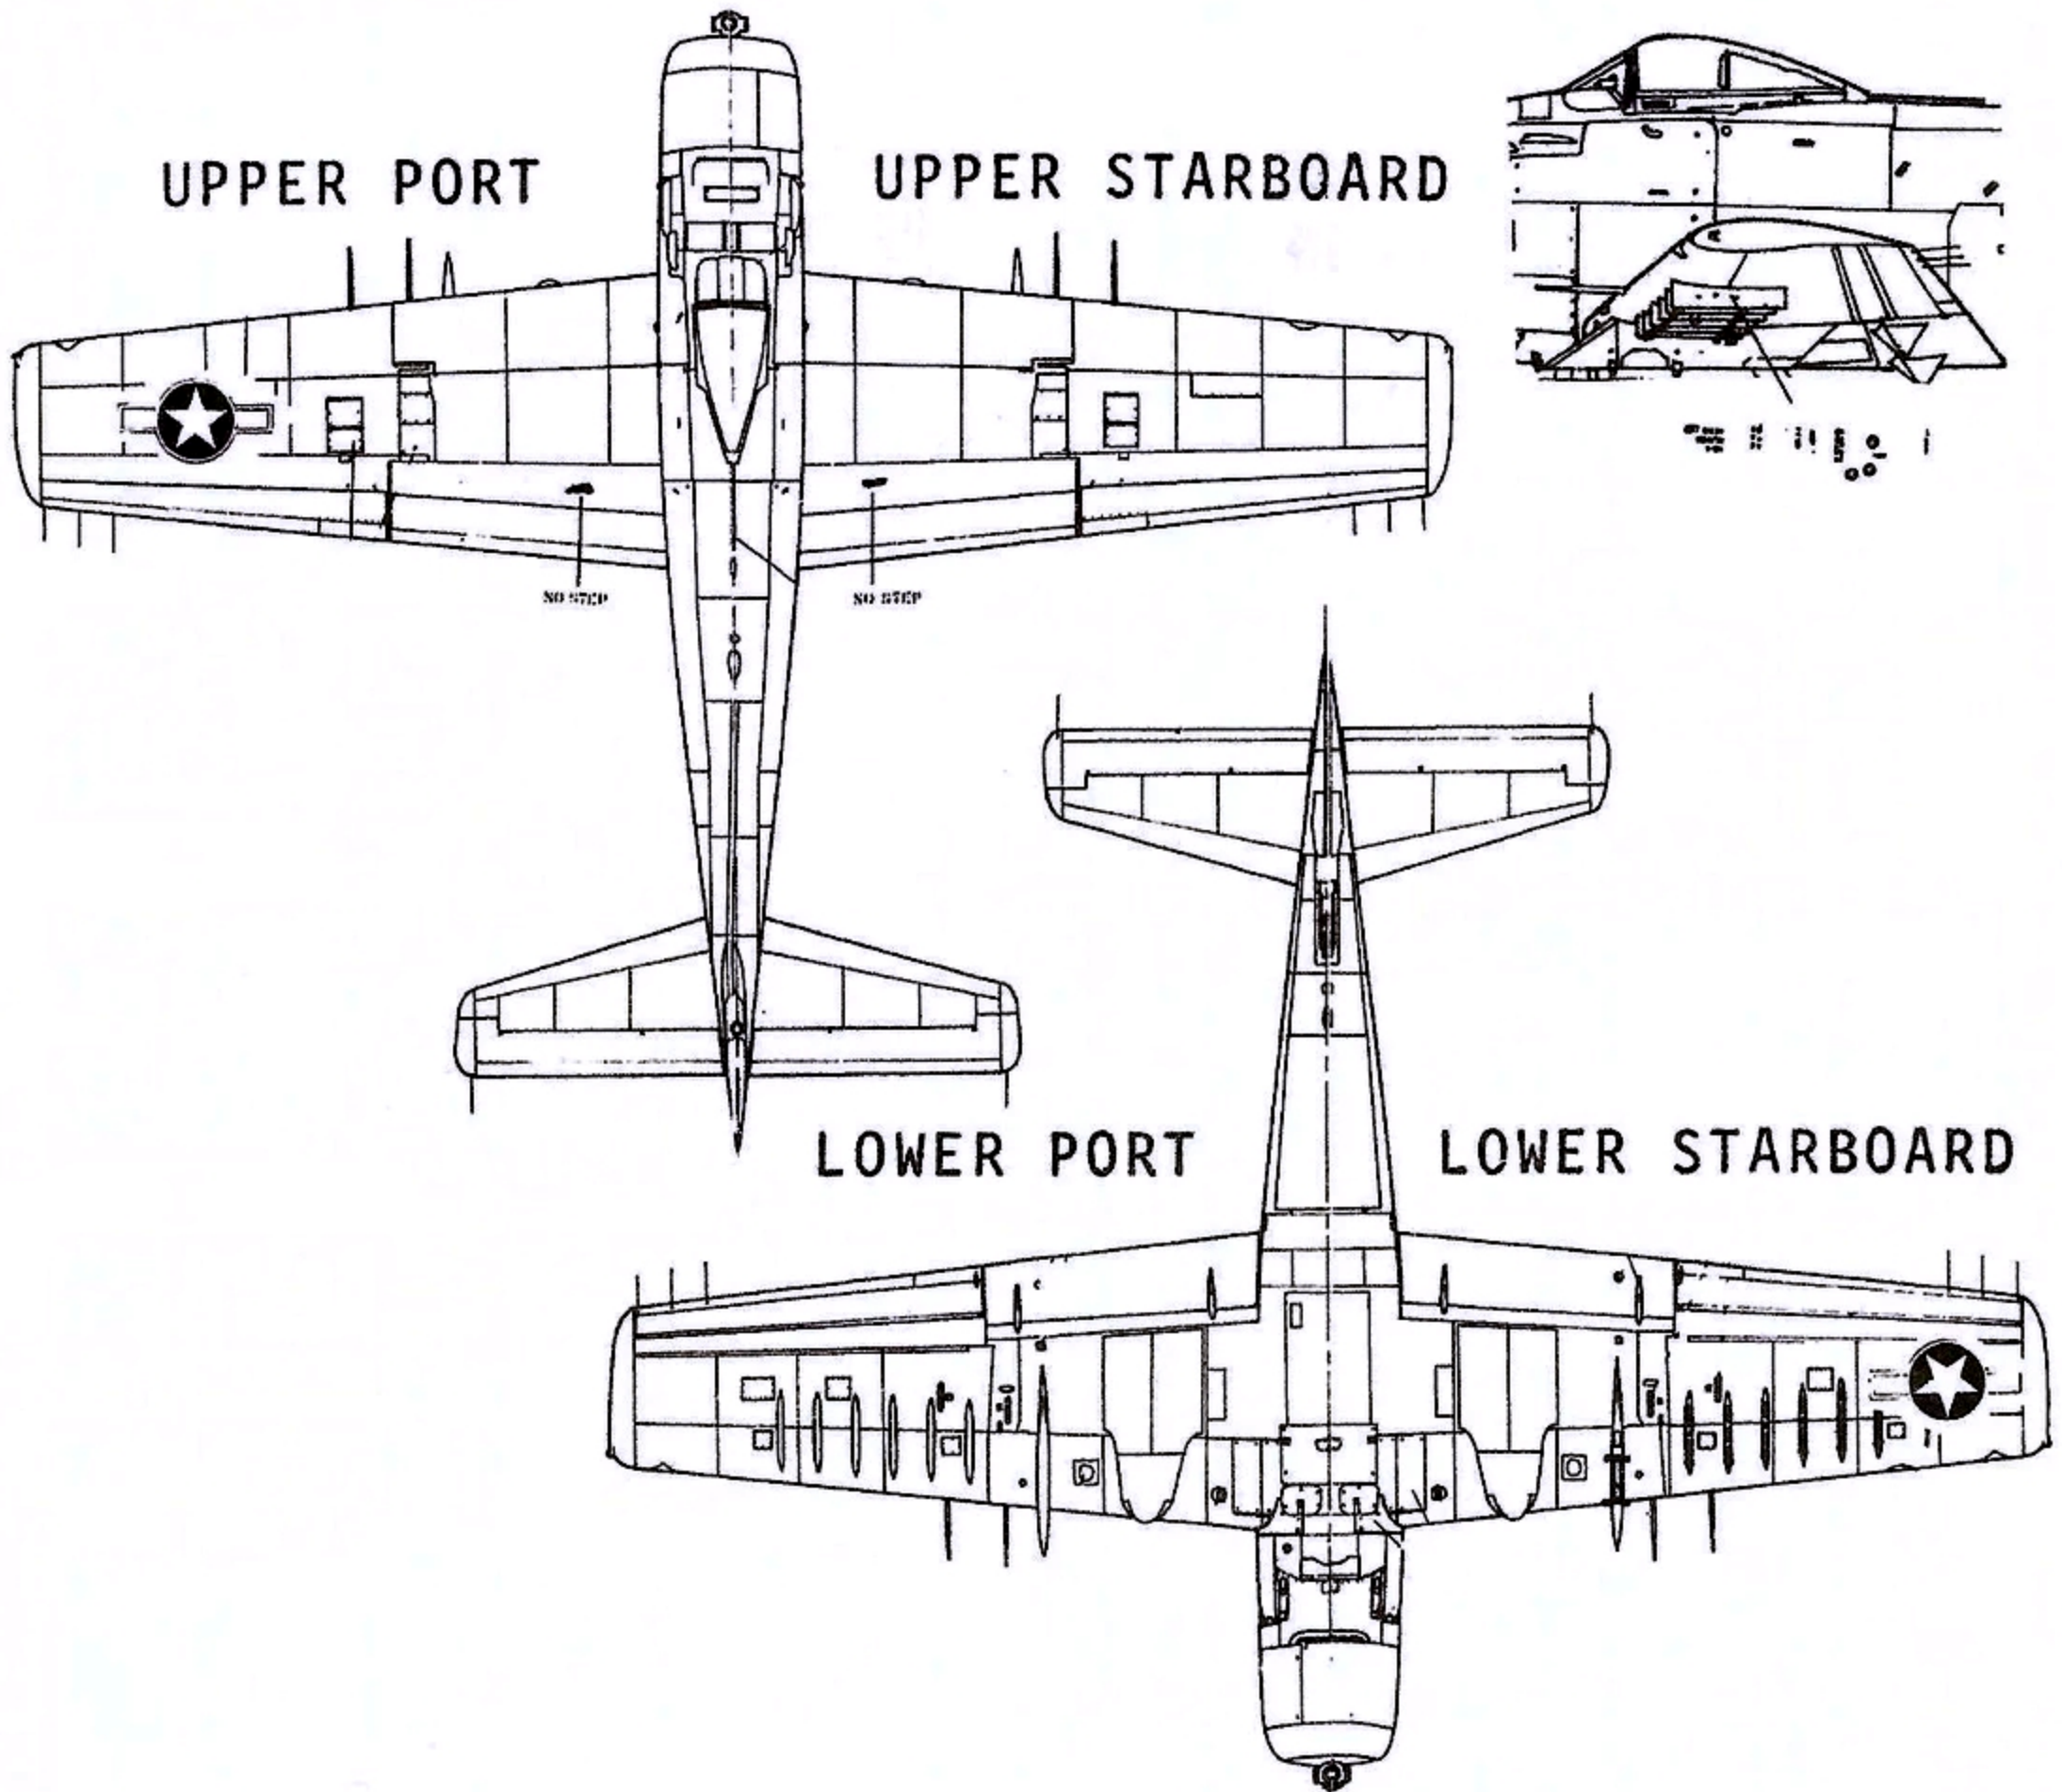

NATIONAL INSIGNIA UPPER PORT WING AND LOWER STARBOARD WING CAMOFLAGE PLANE DOESNT RECIEVE NATIONAL INSIGNIAS ALTHOUGH OUR ONLY RESOURCE DOES NOT SHOW THE NATIONAL INSIGNIA ON THE UPPER PORT WING BUT WE HAVE PROVIDED IT INCASE YOU HAVE A REFERENCE THAT STATE OTHERWISE.

RECOMENDED KIT

MONOGRAM A-1H SKYRAIDER

INFORMATION THANKS TO DON GARRETT

We recomend Polly S paints for matching federal standard colors.





The International Plastic Modelers Society is an organization devoted to developing the plastic modeling art.

It was formed "By Modelers - For Modelers". If you wish to expand your modeling talents, write for further information to: IPMS/USA, New Member Information, P.O. Box 2555, Long Beach, Ca., 90801;

A-1J  
142064  
516 FIGHTER SQUADRON


OVERALL FINISH - LT. GREY  
ENGINE COWL INTERIOR - ENGINE GREY  
U/C AND WHEEL WELLS PRESUMED TO BE - INSIGNIA WHITE  
CANOPY FRAME AND ANTI GLARE PANEL - MATT BLACK  
WALKWAYS - BLACK  
WING TIPS - RED  
HUB BLADES - MAT BLACK

WHITE AND RED RESCUE ARROW

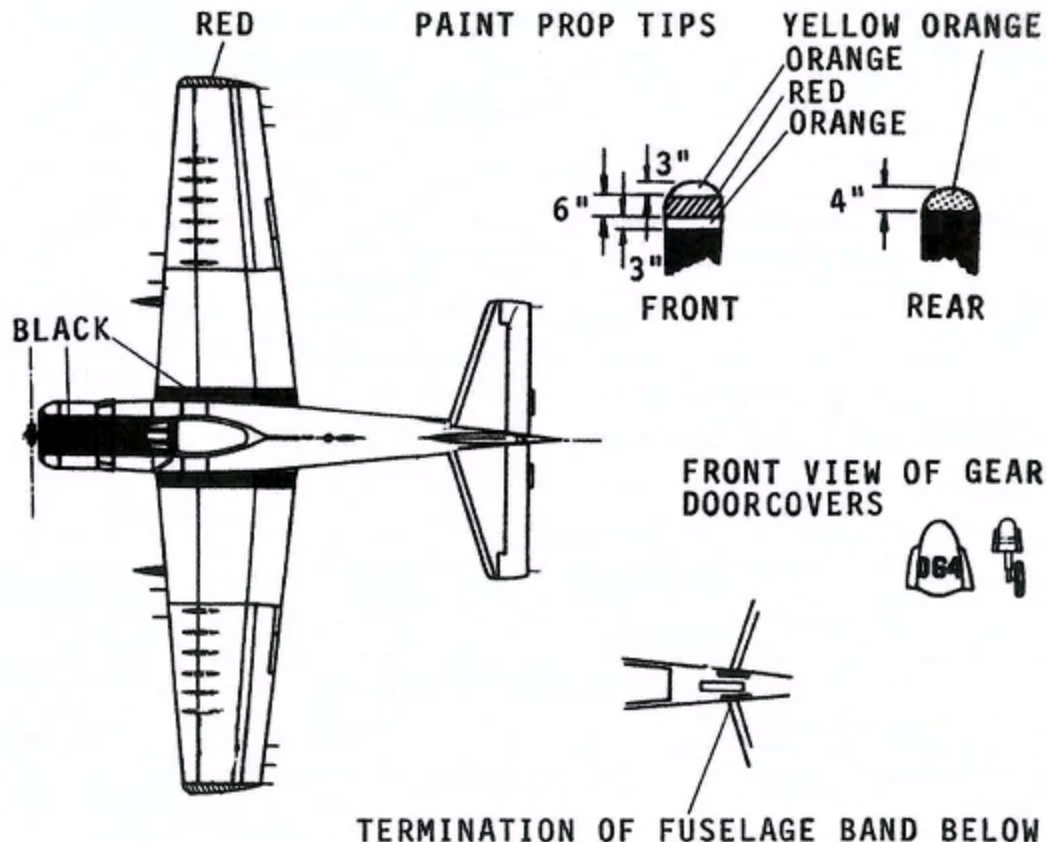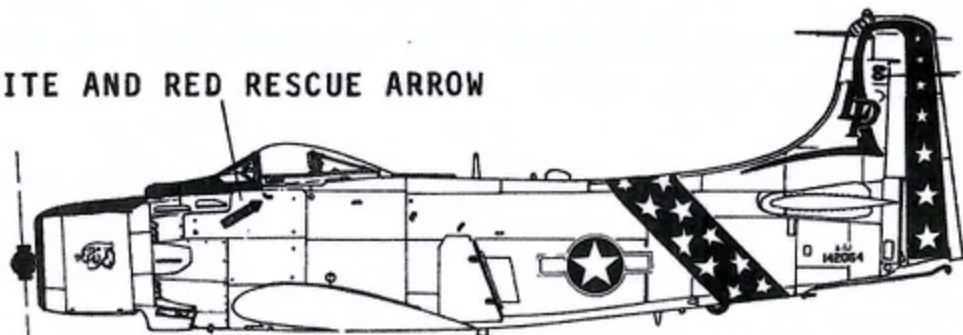


A-1H 139778  
BUBBLES N BUST  
56th SPECIAL OPERATIONS WING  
VIETNAM 1970

HUB BLADES - MAT BLACK  
PAINT PROP TIPS YELLOW  
YELLOW AND BLACK RESCUE ARROW

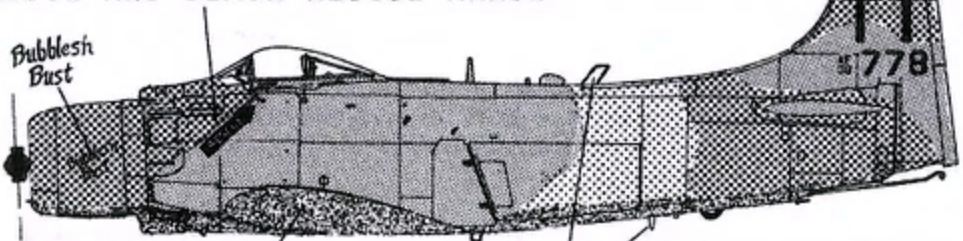

LOWER AIRCRAFT BLACK  
NOTE ANTENNAS TO BE ADDED TO KIT

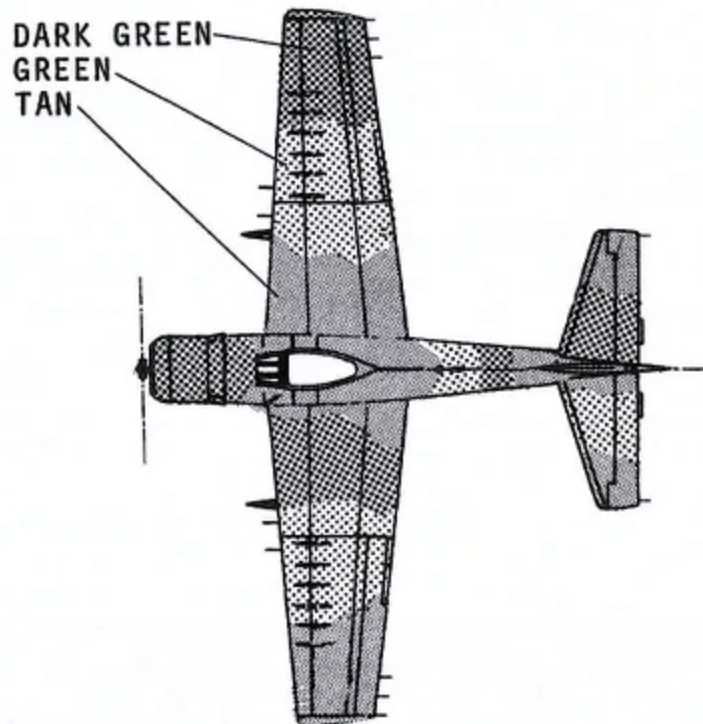

**48th Scale**

NO.

48-79



A-1H and A-1J SKYRAIDERS

**MICROSCALE DECAL**

BY KRASEL INDUSTRIES, INC., SANTA ANA, CA. 92705

**AIRCRAFT**

The MICRO SCALE DECAL is the thinnest, most versatile decal made. It will conform to the irregular surfaces found on models because of its strength and flexibility. These characteristics are not found on any other decal made. When used with the MICRO SCALE SYSTEM the MICRO SCALE DECAL will help produce the most realistic model you can make.

The MICRO SCALE SYSTEM is simple to use but each step must be followed as described to assure perfect results. The elimination of any step may cause blushing (silvering of the decal film) or an uneven finish on the completed model.

### **The MICRO SCALE DECAL SYSTEM**

1. Surface to be decalced must have a smooth, glossy, painted finish. (Do not apply decals to unpainted surfaces or they will not adhere.) To obtain this surface either paint the model with glossy paints or spray MICRO GLOSS over matte-finish paint. **IMPORTANT:** Spray MICRO GLOSS over entire model or uneven patches will appear when the flat finish is added later. Allow paint to dry thoroughly.
2. For best results, surface to be decalced should be horizontal. A small vise is helpful here, or a box can be made into a jig to allow the model to lay on its side.
3. Cut each decal subject from the sheet only as needed. **DO NOT** cut clear film away from design. Using tweezers, dip decal completely into water then remove and allow decal adhesive to soften. About one minute should be sufficient.
4. While adhesive is softening use a soft, medium-size brush, a No. 7 red sable water color brush is ideal, and wet the area to be decalced with a few drops of MICRO SET (Blue label). This contains a wetting agent and helps eliminate tiny air bubbles.
5. Holding the decal paper with tweezers, use the brush to slide the loosened decal into the MICRO SET on the model.
6. Now place a few drops of MICRO SOL (Red label) directly onto the decal and position the decal exactly where it is to remain.
7. The MICRO SOL will soften the decal and allow it to conform exactly to the surface beneath. **DURING THIS PROCESS THE DECAL WILL WRINKLE AND DISTORT. DO NOT TOUCH IT! THIS IS NATURAL AND AN IMPORTANT PART OF THE SYSTEM!** As the decal dries it will flatten-out and lay down. When finally dry there will be no distortion and the decal will be permanently bonded to the paint beneath. Actual drying time will vary according to temperature and humidity.
8. When decal is dry, examine it for any air bubbles. If any are found, puncture them with a sharp needle and put a drop of MICRO SOL over the bubble and allow to dry.
9. Carefully examine the clear film to be sure no silvering has appeared. If any is present, puncture the film several times with a sharp needle and apply MICRO SOL. The silvering should vanish as the SOL touches it.
10. After the decals have dried for several hours, carefully wash the decal adhesive from the entire model.
11. After the decals have dried for at least 12 hours, complete the model by spraying with either MICRO FLAT or MICRO GLOSS, depending on the sheen desired on the finished model.