




Sd.Kfz 252 MUNITIONWAGEN 1/35 CONVERSION SET 1/35

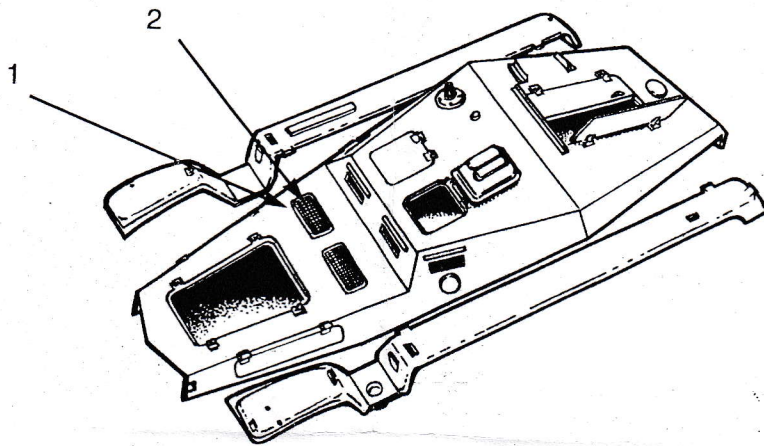


Návod na sestavení:

Všechny díly pečlivě očistěte od otřepů a nálitků. Potom seřízněte spodní část korby podle nákresu tak, aby Vám nový hlavní díl dobře sedl. Dále pokračujte jako při stavbě normální stavebnice. Můžete také použít čisté blatníky z tohoto setu. Na otvory nad motorem nalepte mřížky z tohoto setu. Nejprve díl č.2 a přes něj díl č.1. Na místech kde jsou v původní stavebnici závěsné háčky nalepte háčky opět z tohoto setu, které slepíte z dílů č.3 a 4. Při lepení nových dílů použijte vteřinové nebo 5ti minutové lepidlo.

Instruction:

Firstly, remove all flashes and risers properly. Then cut off bottom part of the original hull in accordance with the instruction drawing to fit well the new upper part of the hull. Go on constructing the model like from the box. You can use clean fenders from this set instead original kit fenders with the equipment. Cement metal photo etched grills from the set on the openings on the upper surface of the engine hood (part No. 2 first and part No. 1 over it). The original hinges on the kit can be exchanged by the metal photo etched hinges from this set.

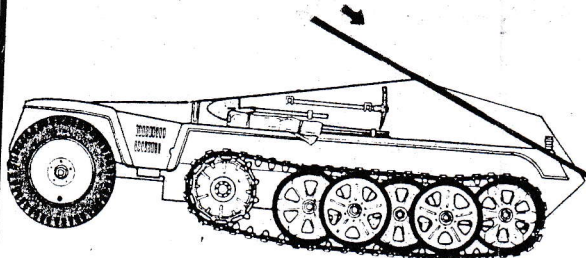

107

For the cementing of the new parts you can use so called "five minute epoxy resin" with the best results.