


These picture are very obviously copies of the fantastic instructions in the Wing Nut Wings kit - copied here only for the purpose of indicating the photo etch part locations. Follow Kits bracing wire plan and drill out more all the kits pilot holes. Dry fit first and then when happy re-locate part with CA glue.

Note on 'C' and 'D' - drill into kit part A56 as deep as possible at all 4 points to allow the greatest adjustment

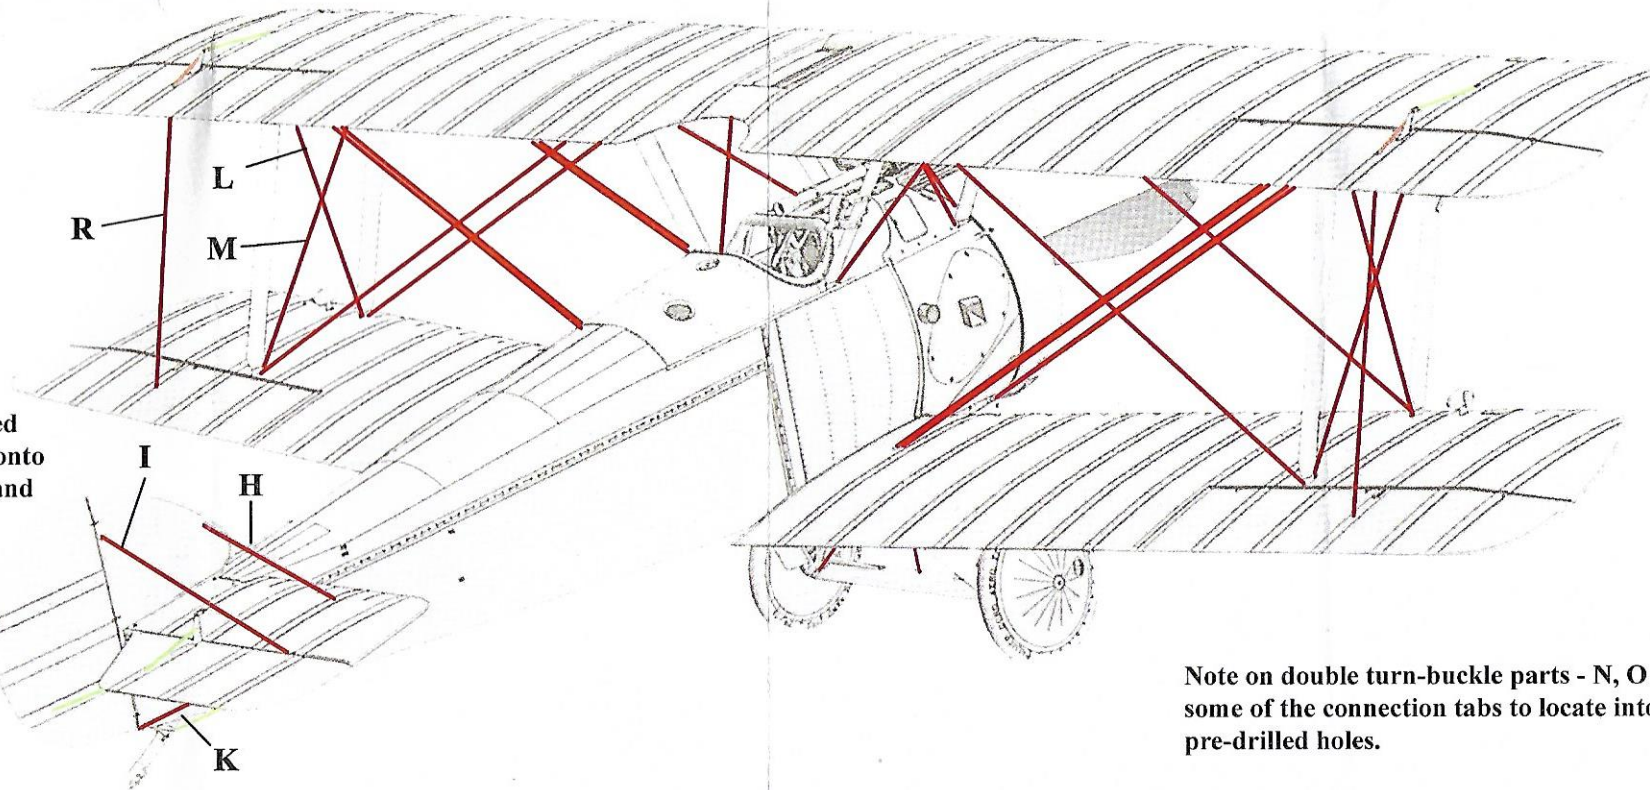

Note on tail bracing - no need to keep tabs as PE parts fit onto raised surface detail on fin and lower tail surface

Note on double turn-buckle parts - N, O and S - keep some of the connection tabs to locate into the pre-drilled holes.