

MiG-17F Fresco C

MiG-17F フレスコ C 米格-17F 壁画 C型歼击机

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
 - Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes,face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- * 推荐使用的模型工具(请自备):
 - 专用模型胶水,专用模型油漆,水口剪刀,长咀钳,刀片,锉刀,镊子钳,钻,剪刀,软布,砂纸,瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- *用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴,切忌过量,否则可能导致可动零件被粘住。
- *注意某些零件表面需在装配时同步贴上水贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥,谨防小孩玩耍而引起意外。



cyanoacrylate glue 强力胶



weight 配重



make hole 钻孔.



cut / remove



option 选择



no cement 不涂胶水



deca



bend




rep.


The method to apply the decals


- 1.Cut off the decal from the decal paper and put it into the warm water 40 $^{\circ}\mathrm{C}$ for 10 seconds.
- 2. Take the decal from the water and put it on a piece of clean cloth.
- 3.Remove the decal slowly from the paper to the targeted location by a wet finger.
- 4.Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


水贴纸的使用方法:


- 一.把相关的印花从水贴纸上剪下,放入40℃左右的 温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三.拿上印花纸板,手指蘸水将印花移到适当的位置。
- 四.用软干布轻压印花直至水干,气泡消失。

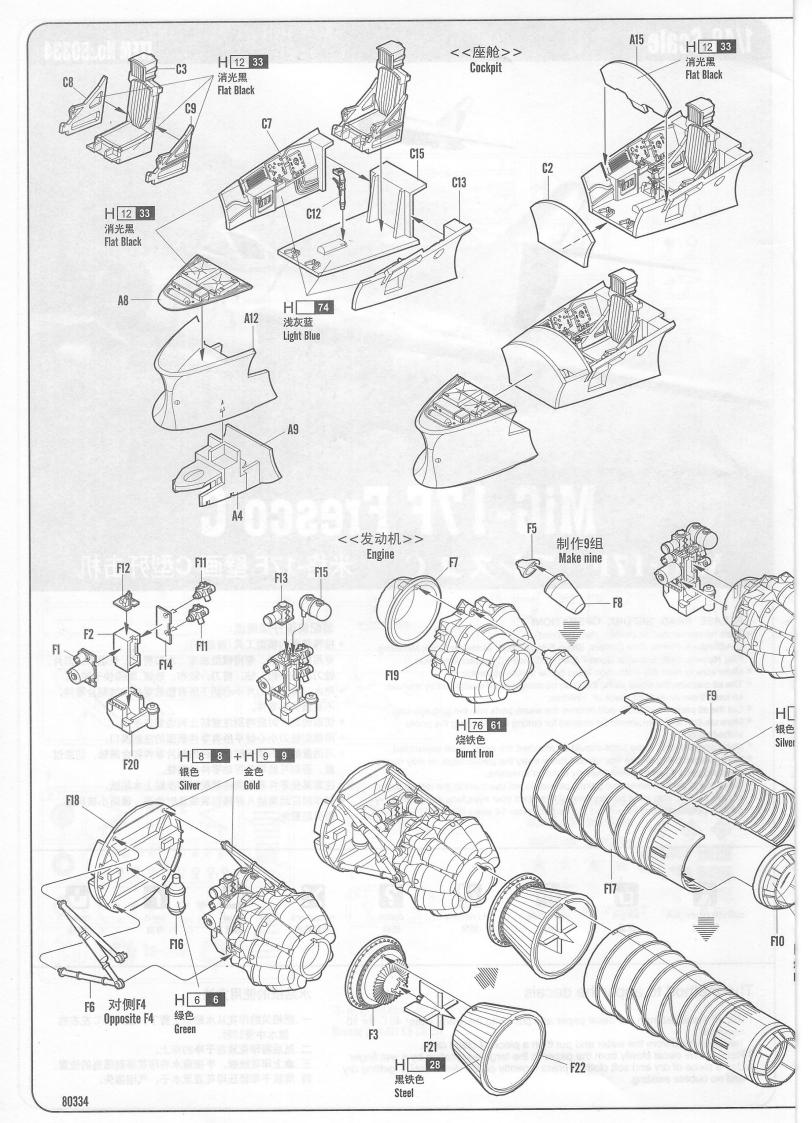


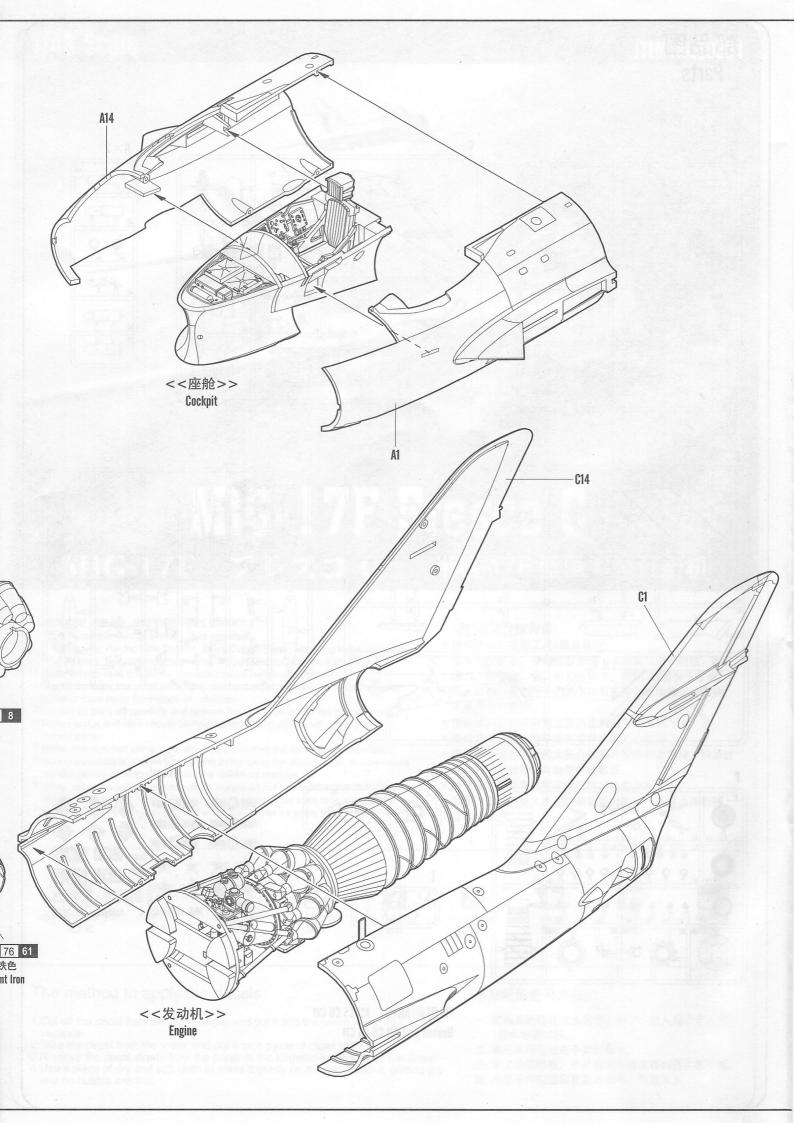

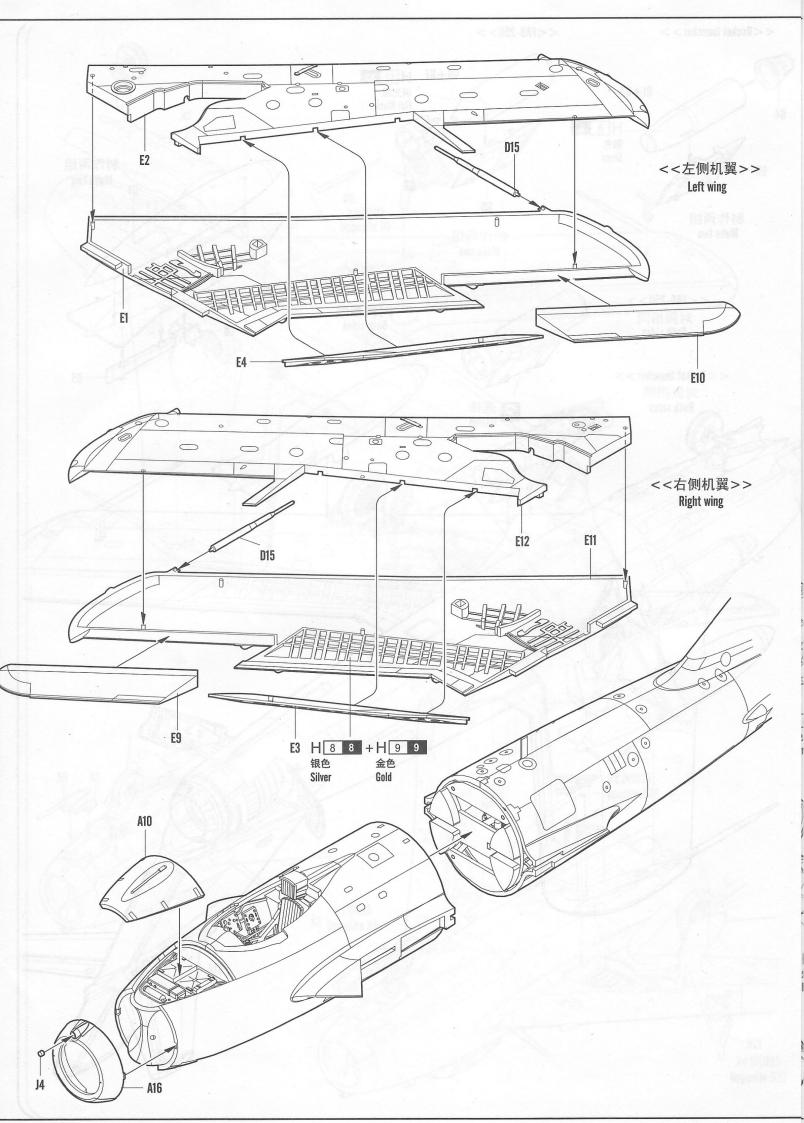


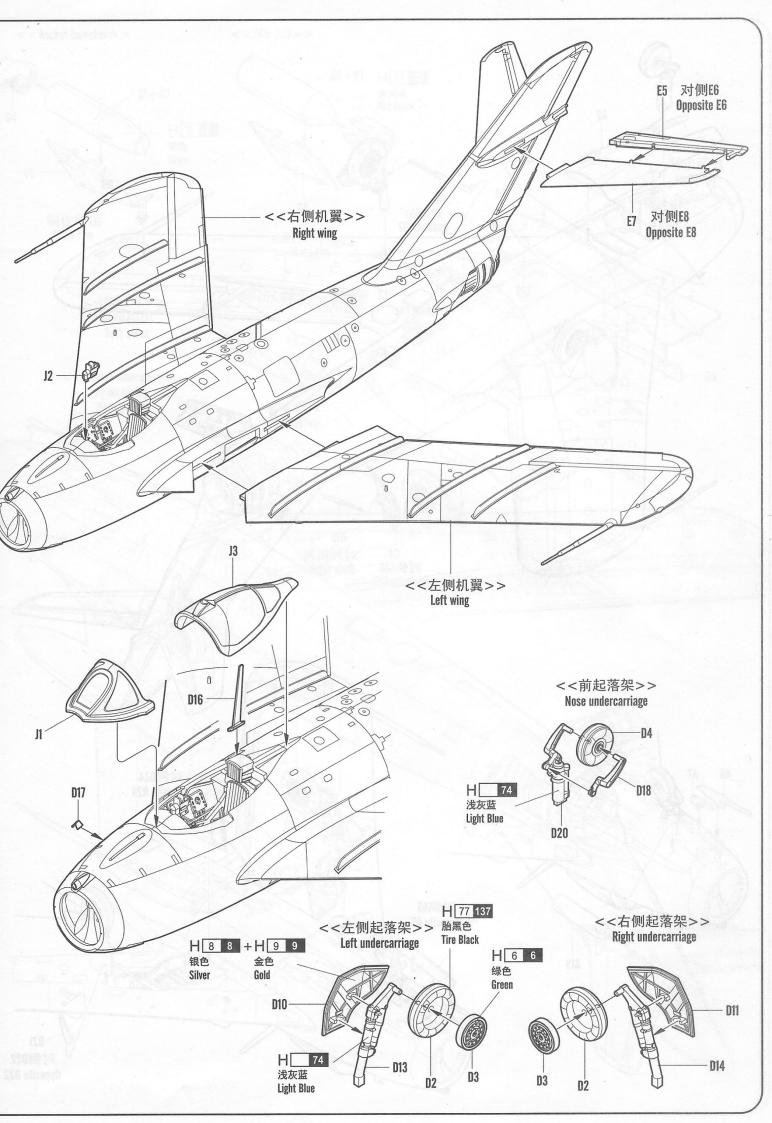


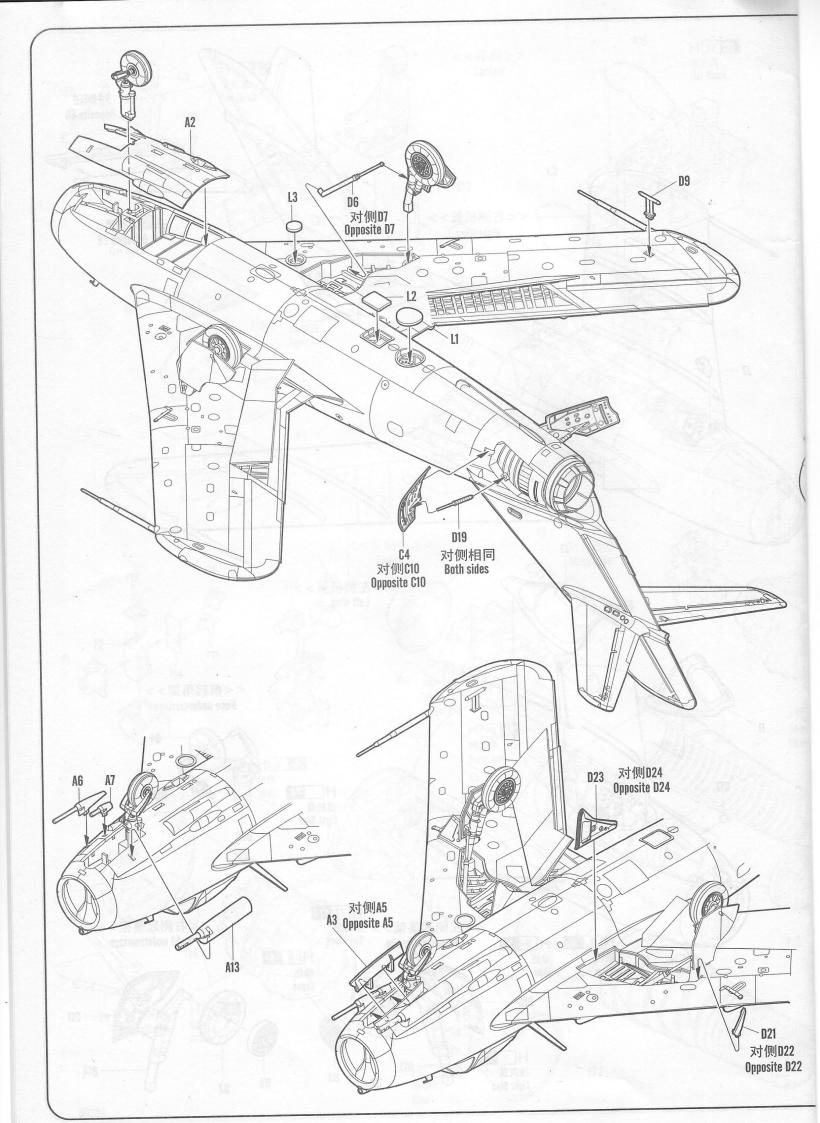


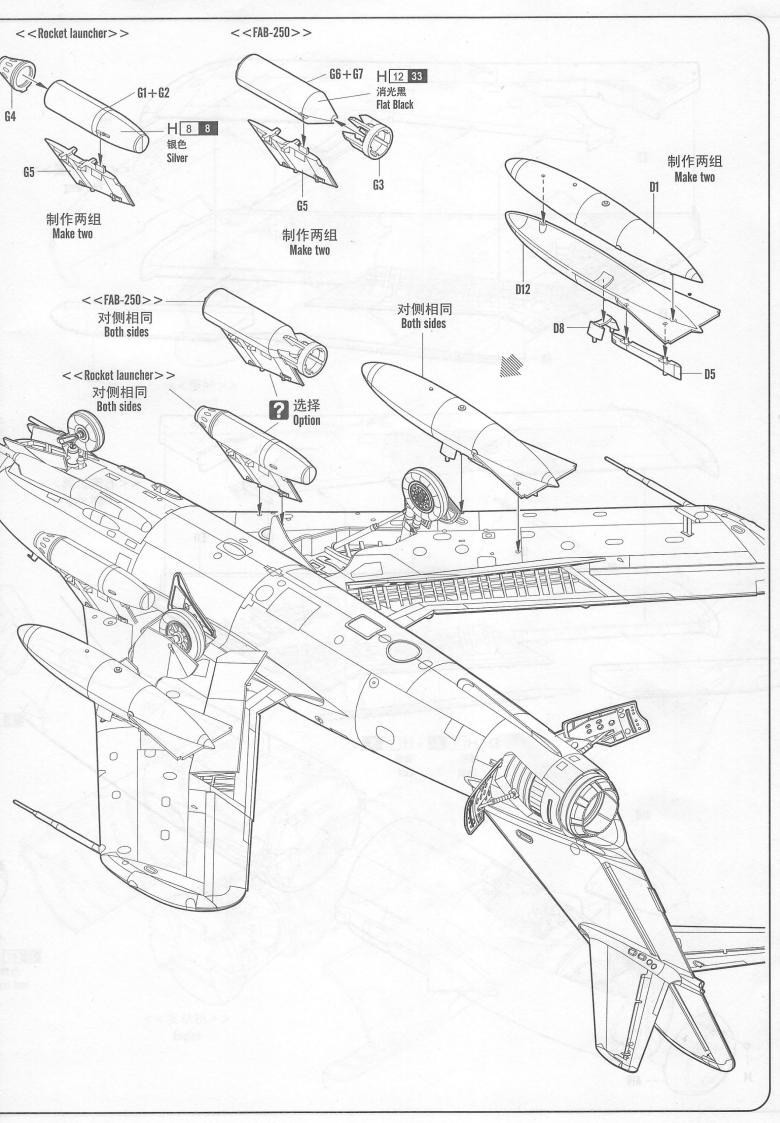



部品图 Parts

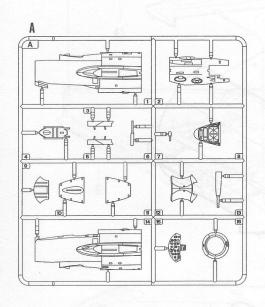


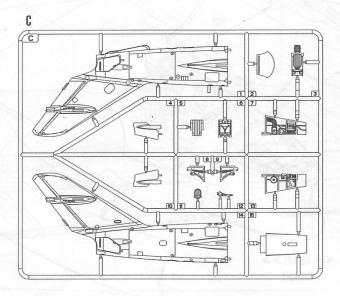




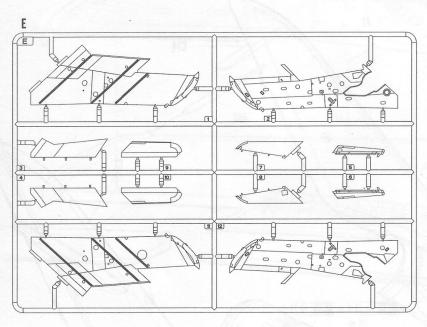

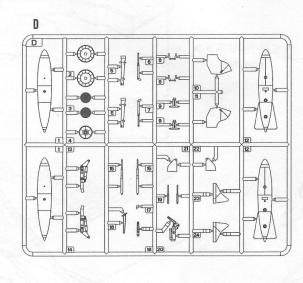

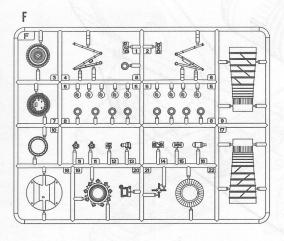








不用的部件: A11 C5 C6 C11 Unused part:A11 C5 C6 C11

MiG-17F Fresco C

MiG-17F フレスコ C 米格-17F壁画C型歼击机




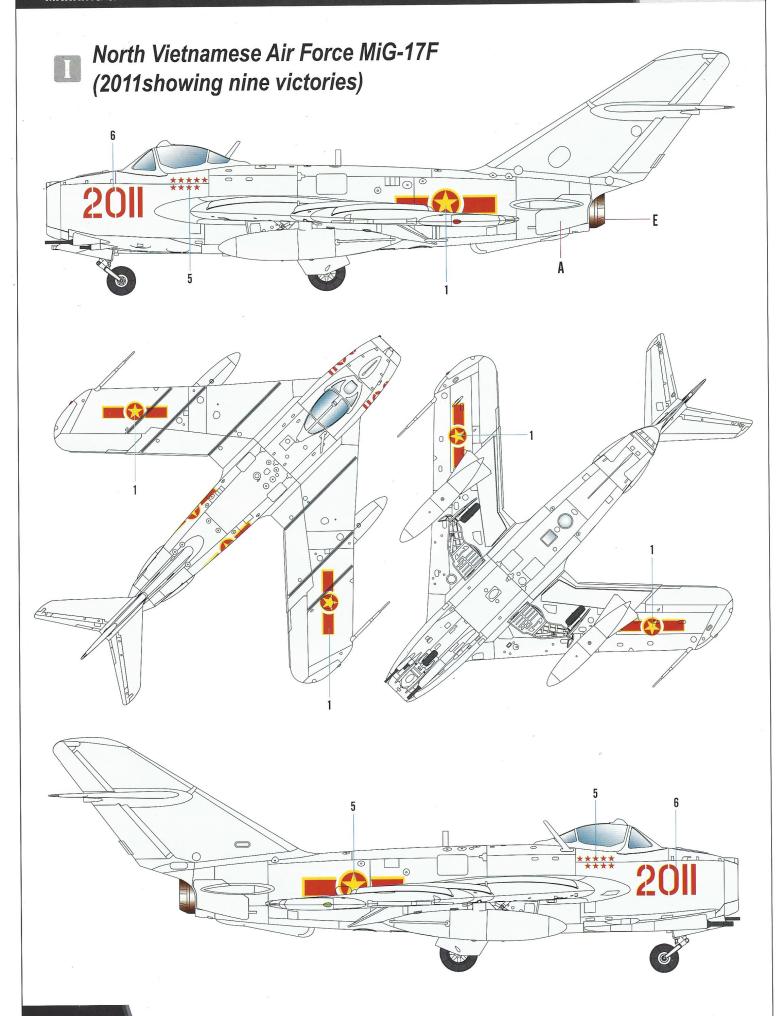

MiG-17F Fresco C

MiG-17F フレスコ C 米格-17F壁画C型歼击机



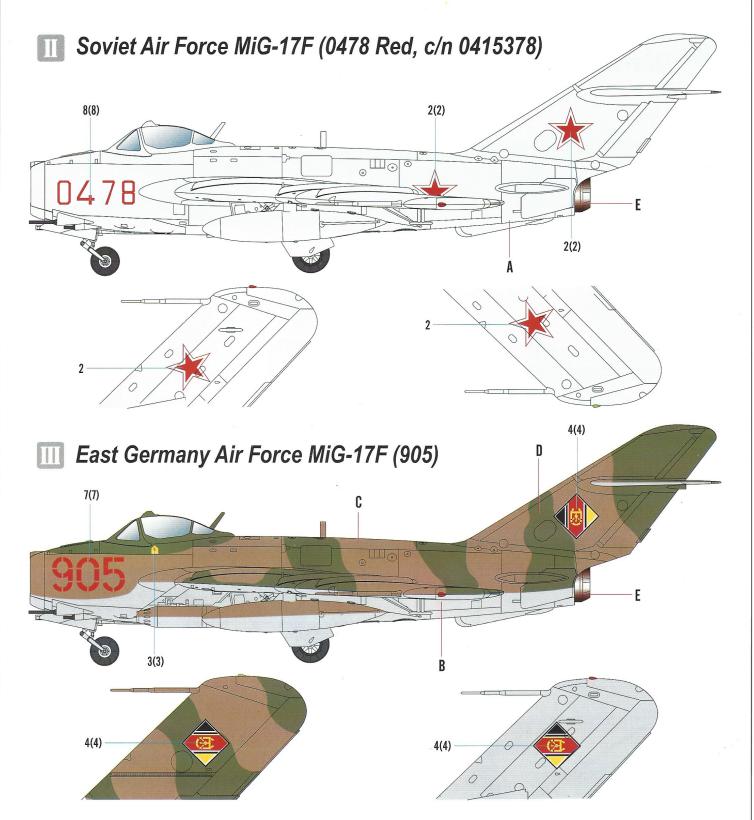

	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
A	银色 Silver	H 8 8	997	1546	X11	11
В	浅蓝色 Air Superiority Blue	H 74	-		1	
C	棕色 Brown	H 310 310	874	1742		118
D	苏联绿 Russian Green(2)	H 136	823			
E	烧铁色 Burned Iron	H 76 61	863	1795	X10	53