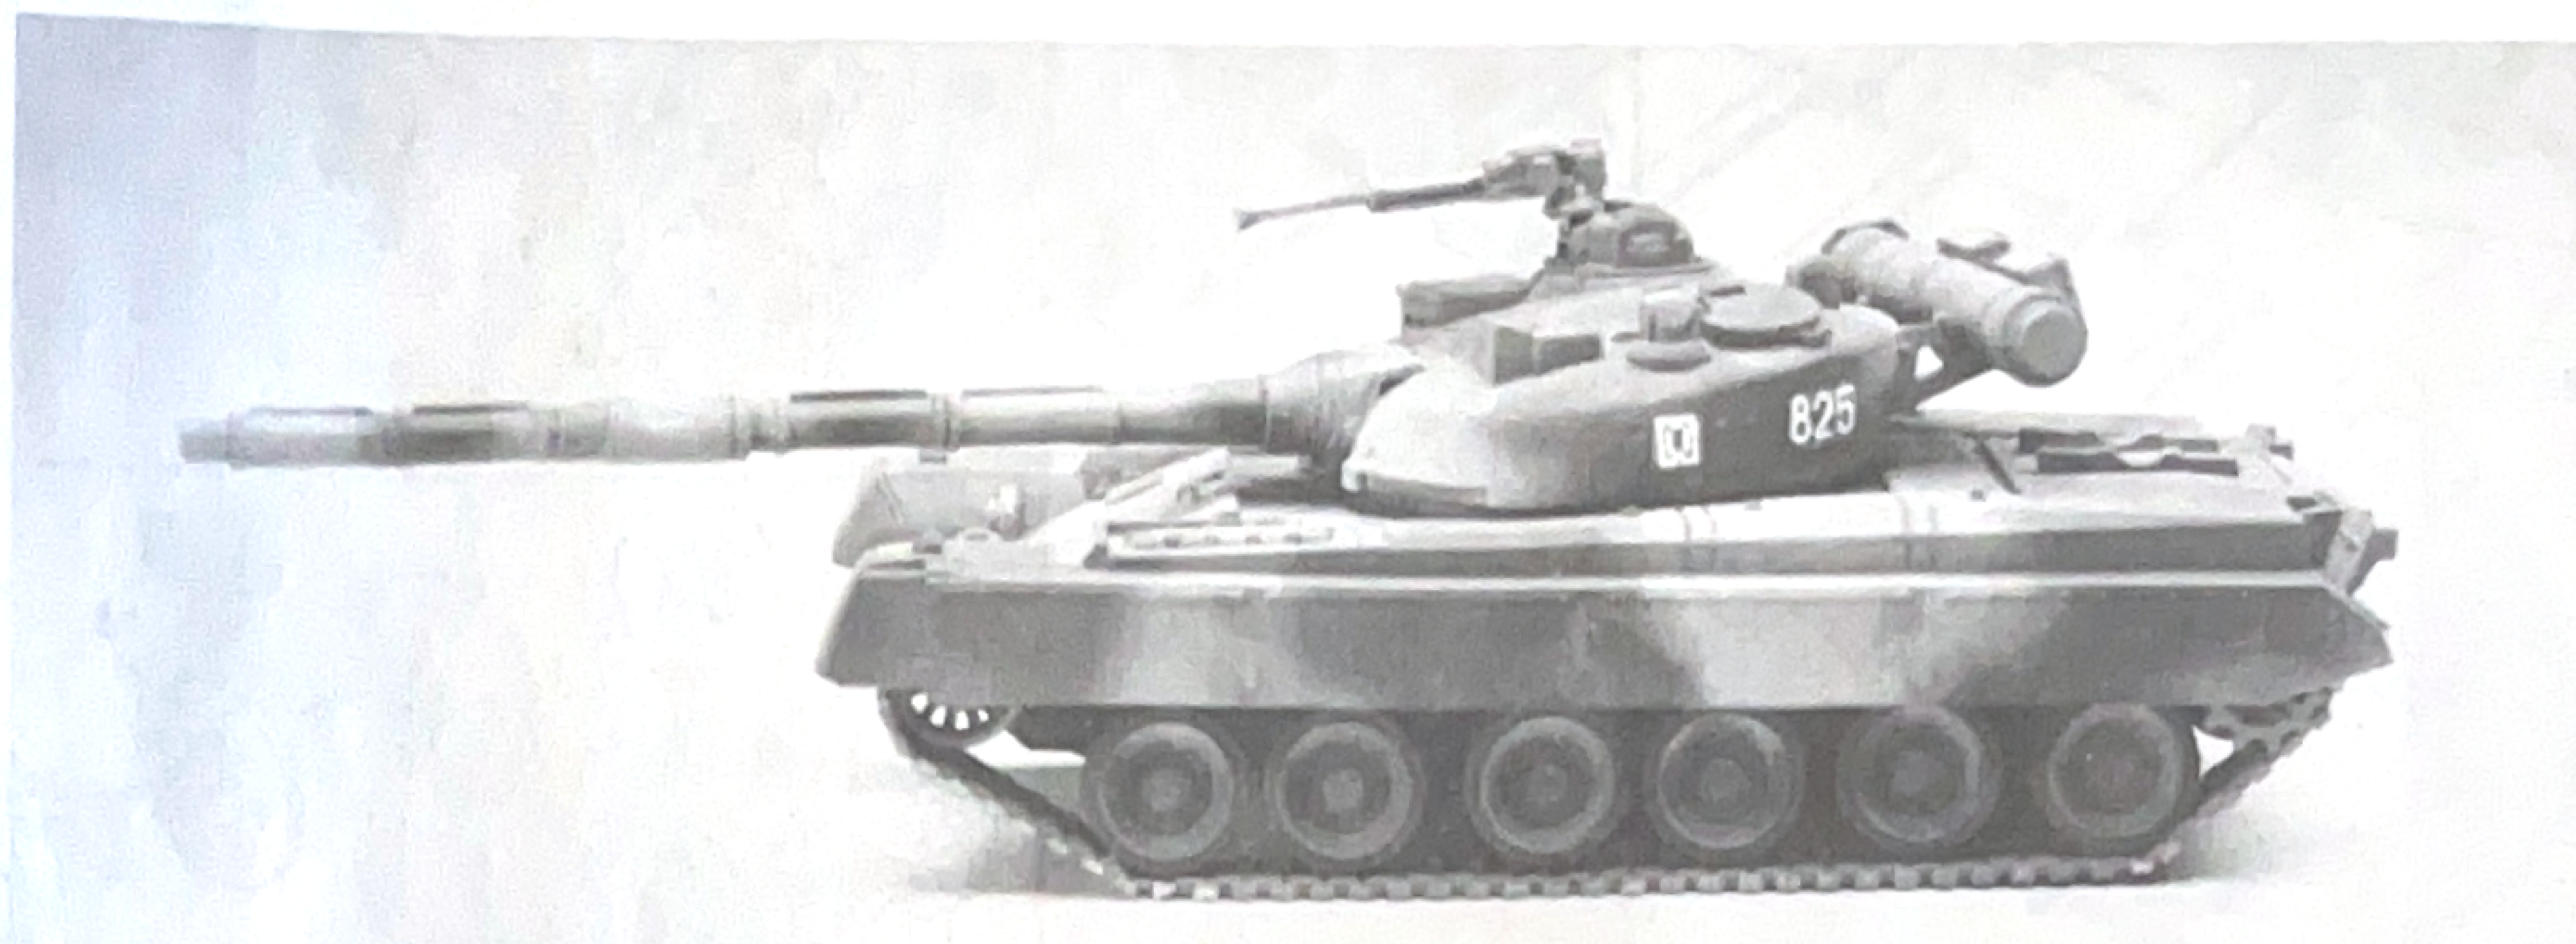


MONOGRAM

T-80 B SOVIET MAIN BATTLE TANK

KIT 2323**1/72 SCALE****MASSTAB 1:72****ESCALA 1/72****1/72 ESCHELLE 85232300200****READ THIS BEFORE YOU BEGIN**

- Study the assembly drawings.
- Each plastic part is identified by a number.
- Check the fit of each piece before cementing in place.
- Do not use too much cement to join parts.
- Use only cement for polystyrene plastic.
- Model may be painted to match photos on box.
- Allow paint to dry thoroughly before handling parts.
- Scrape paint from areas to be cemented.
- For better paint and decal adhesion, wash the plastic parts in a mild detergent solution.
- Rinse and let air dry.

ALLGEMEINE HINWEISE

- Die Anordnung der Bauteile ist aus den Zeichnungen der Anleitung ersichtlich.
- Jedes Plastikteil ist durch eine Nummer gekennzeichnet.
- Die Teile vor dem Verkleben ungeleimt zusammenhalten, um ihren Passitz zu prüfen.
- Klebstoff nicht zu dick auftragen.
- Nur Modellbaukleber (für Polystyrol) verwenden.
- Man kann das Modell nach den Fotos auf der Schachtel anstreichen.
- Bemalte Teile vor Weiterverwendung gut trocknen lassen.
- Die Farbe muss von allen späteren Klebestellen abgetrennt werden.
- Damit die Farbe und die Abziehbilder besser kleben, sind die Plastikteile in einer milden Seifenlauge zu waschen. Dann abspülen und an der Luft trocknen lassen.

LEA ESTO ANTES DE EMPEZAR

- Estudie los dibujos de ensamblaje.
- Cada pieza de plástico se identifica por un número.
- Verifique que cada pieza encaje bien antes de pegar en posición.
- No use demasiado pegamento para unir las piezas.
- Use únicamente pegamento para plástico de poliestireno.
- El modelo puede pintarse de acuerdo con las fotografías de la caja.
- Permita que se seque la pintura completamente antes de tocar las piezas.
- Raspe la pintura de las superficies que serán pegadas.
- Para una mejor fijación de la pintura y de las calcomanías, lávense las piezas plásticas en una solución de detergente suave. Enjuáguelas y déjense secar al aire.

LISEZ CE QUI SUIT AVANT DE COMMENCER LE MONTAGE

- Etudier les schémas d'assemblage.
- Chaque pièce plastique porte un numéro d'identification.
- Contrôler que pièce soit bien conforme avant de la coller saplace.
- N'utilisez pas trop de colle pour réunir les pièces.
- Utilisez uniquement une colle spéciale pour polystyrène.
- Le modèle peut être peint conformément aux photos sur la boîte.
- Laissez sécher la peinture complètement, avant de manipuler les pièces.
- Grattez la peinture sur les surfaces devant être collées.
- Pour assurer la meilleure adhésion possible de la peinture et des décalcomanies, laver les pièces de plastique avec une légère solution savonneuse. Rincer et laisser sécher à l'air.

To complete this kit as shown, We recommend the following ProModeler™ paints.

DESERT TAN 88-0025	GELBBRAUN	CANELA	BRUN CLAIR
FLAT BLACK 88-0022	GLANZLOSES SCHWARZ	NEGRO APAGADO	NOIR TERNE
SILVER 88-0013	SILBERN	PLATA	ARGENT
STEEL 88-0015	METALLIC	METALICO	METALLIC
OLIVE DRAB 88-0028	OLIVGRUN	ACEITUNADO	VERT OLIVE
GLOSS RED 88-0003	ROT	ROJO	ROUGE

***RUST**

To create a realistic rust/weathered paint scheme, We recommend mixing the following ProModeler™ paints to achieve the desired color.

RUBBER(88-0020) + ENGINE ORANGE(88-0018) = RUST



DO NOT CEMENT
NE PAS COLLER
NICHT KLEBEN
NO USE PEGAMENTO



DECAL (DIP IN WATER)
DECALCOMANIE (A PLONGER DANS L'EAU)
ABZIEHBILD
DECALCOMANIA (MOJE CON AGUA)



REPEAT SEVERAL TIMES
A REPETER PLUSIEURS FOIS
ARBEITSGANG MEHRMALS WIEDERHOLEN
REPITA VARIAS VECES



OPTIONAL PARTS
PIECES EN OPTION
BAUTEILE NACH
PIEZAS OPCIONALES







Every effort has been made to create and manufacture a model kit that is the finest available. If a part may be missing, please write to:

Be sure to include the kit number, part number, description, and your return address.


Revell-Monogram
Consumer Service Department
301 North Third Avenue
Des Plaines, Illinois 60016

If you have any problems building this model, call our modeling tips hotline at: **(800) 833-3570**


REVELL-MONOGRAM, INC. Morton Grove, IL. Copyright © 1996. All rights reserved. Made in U.S.A.

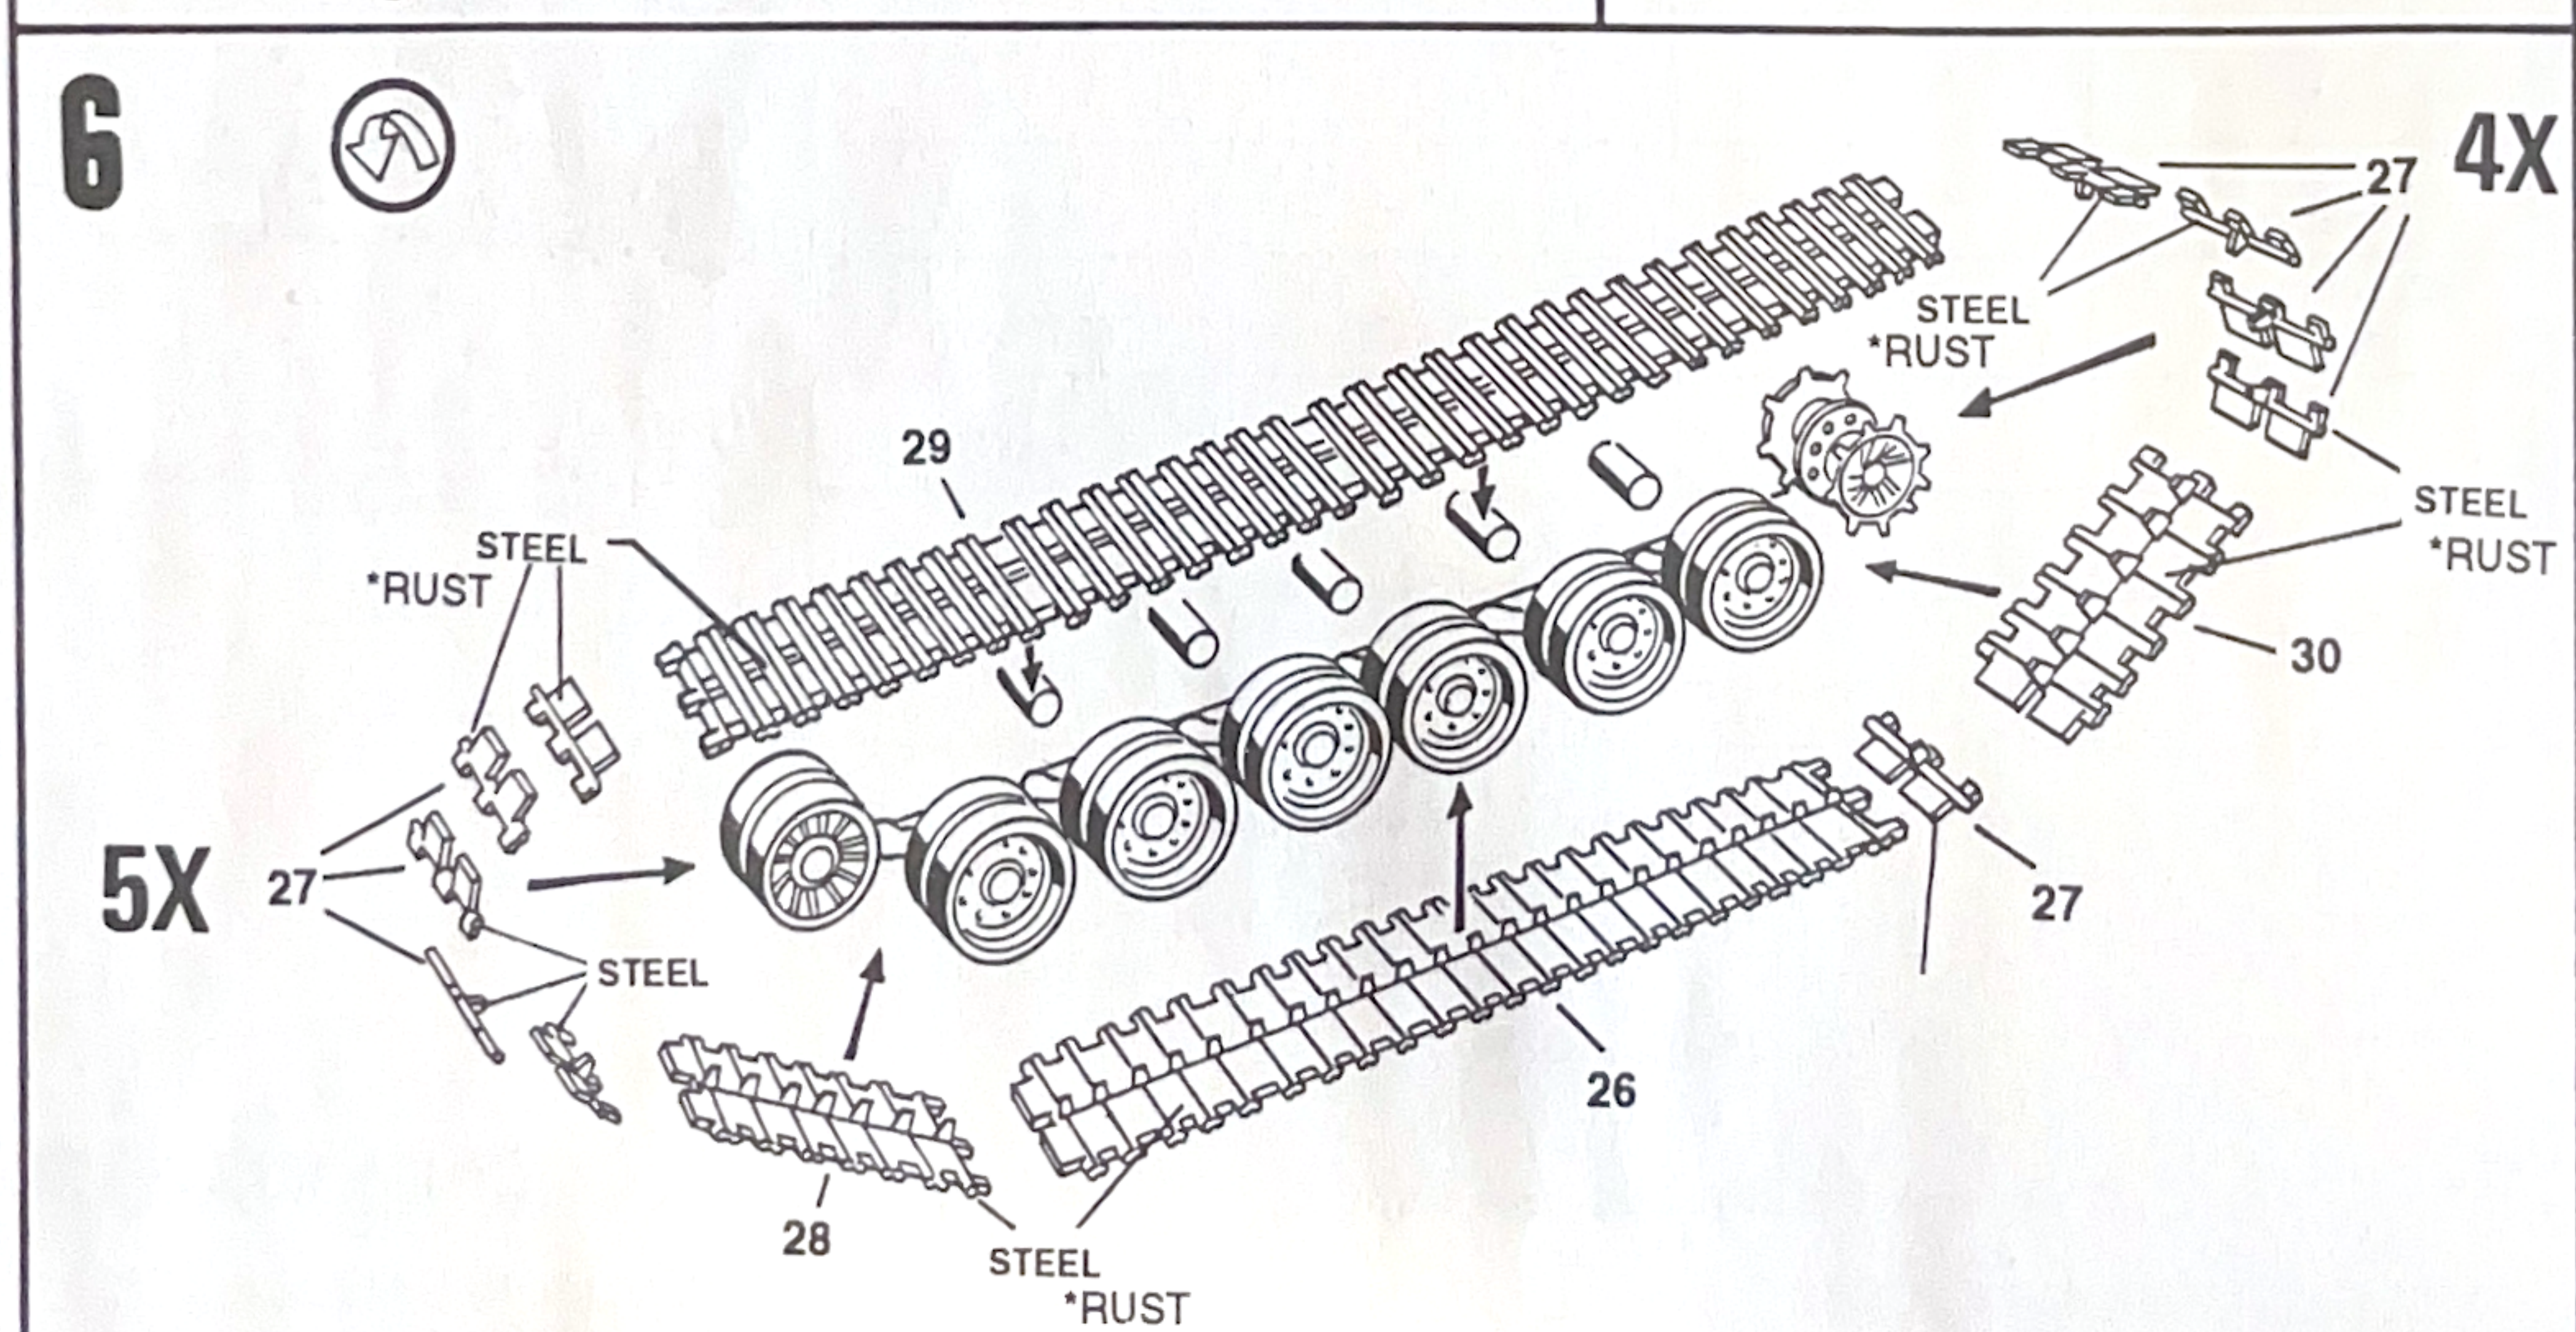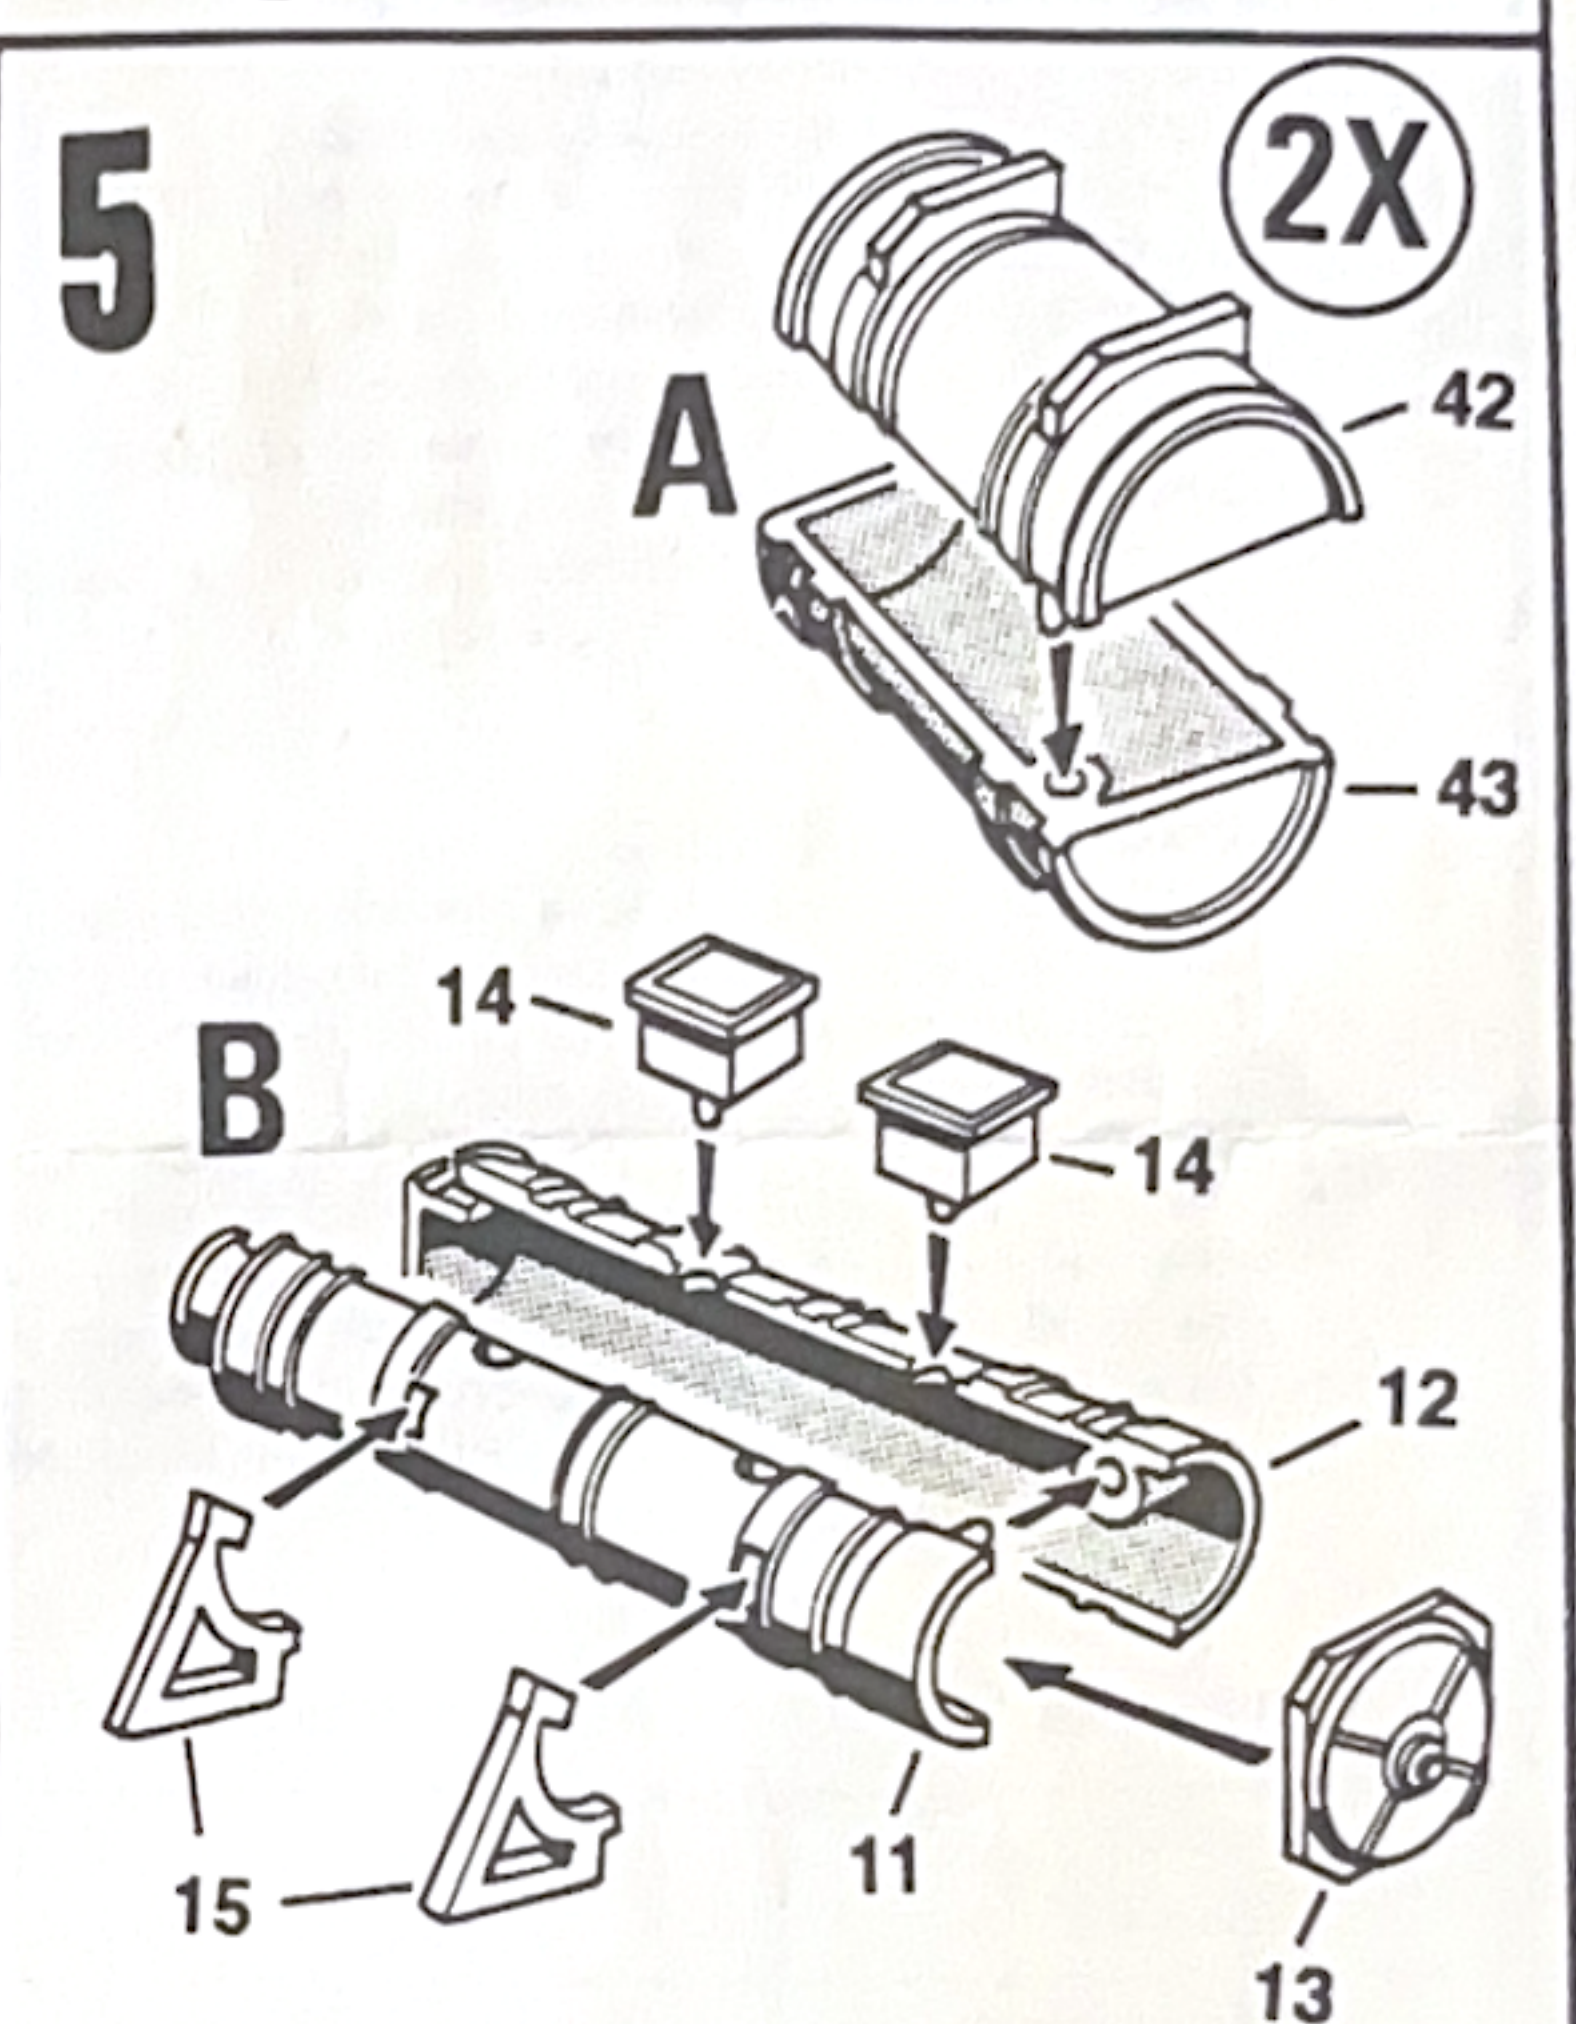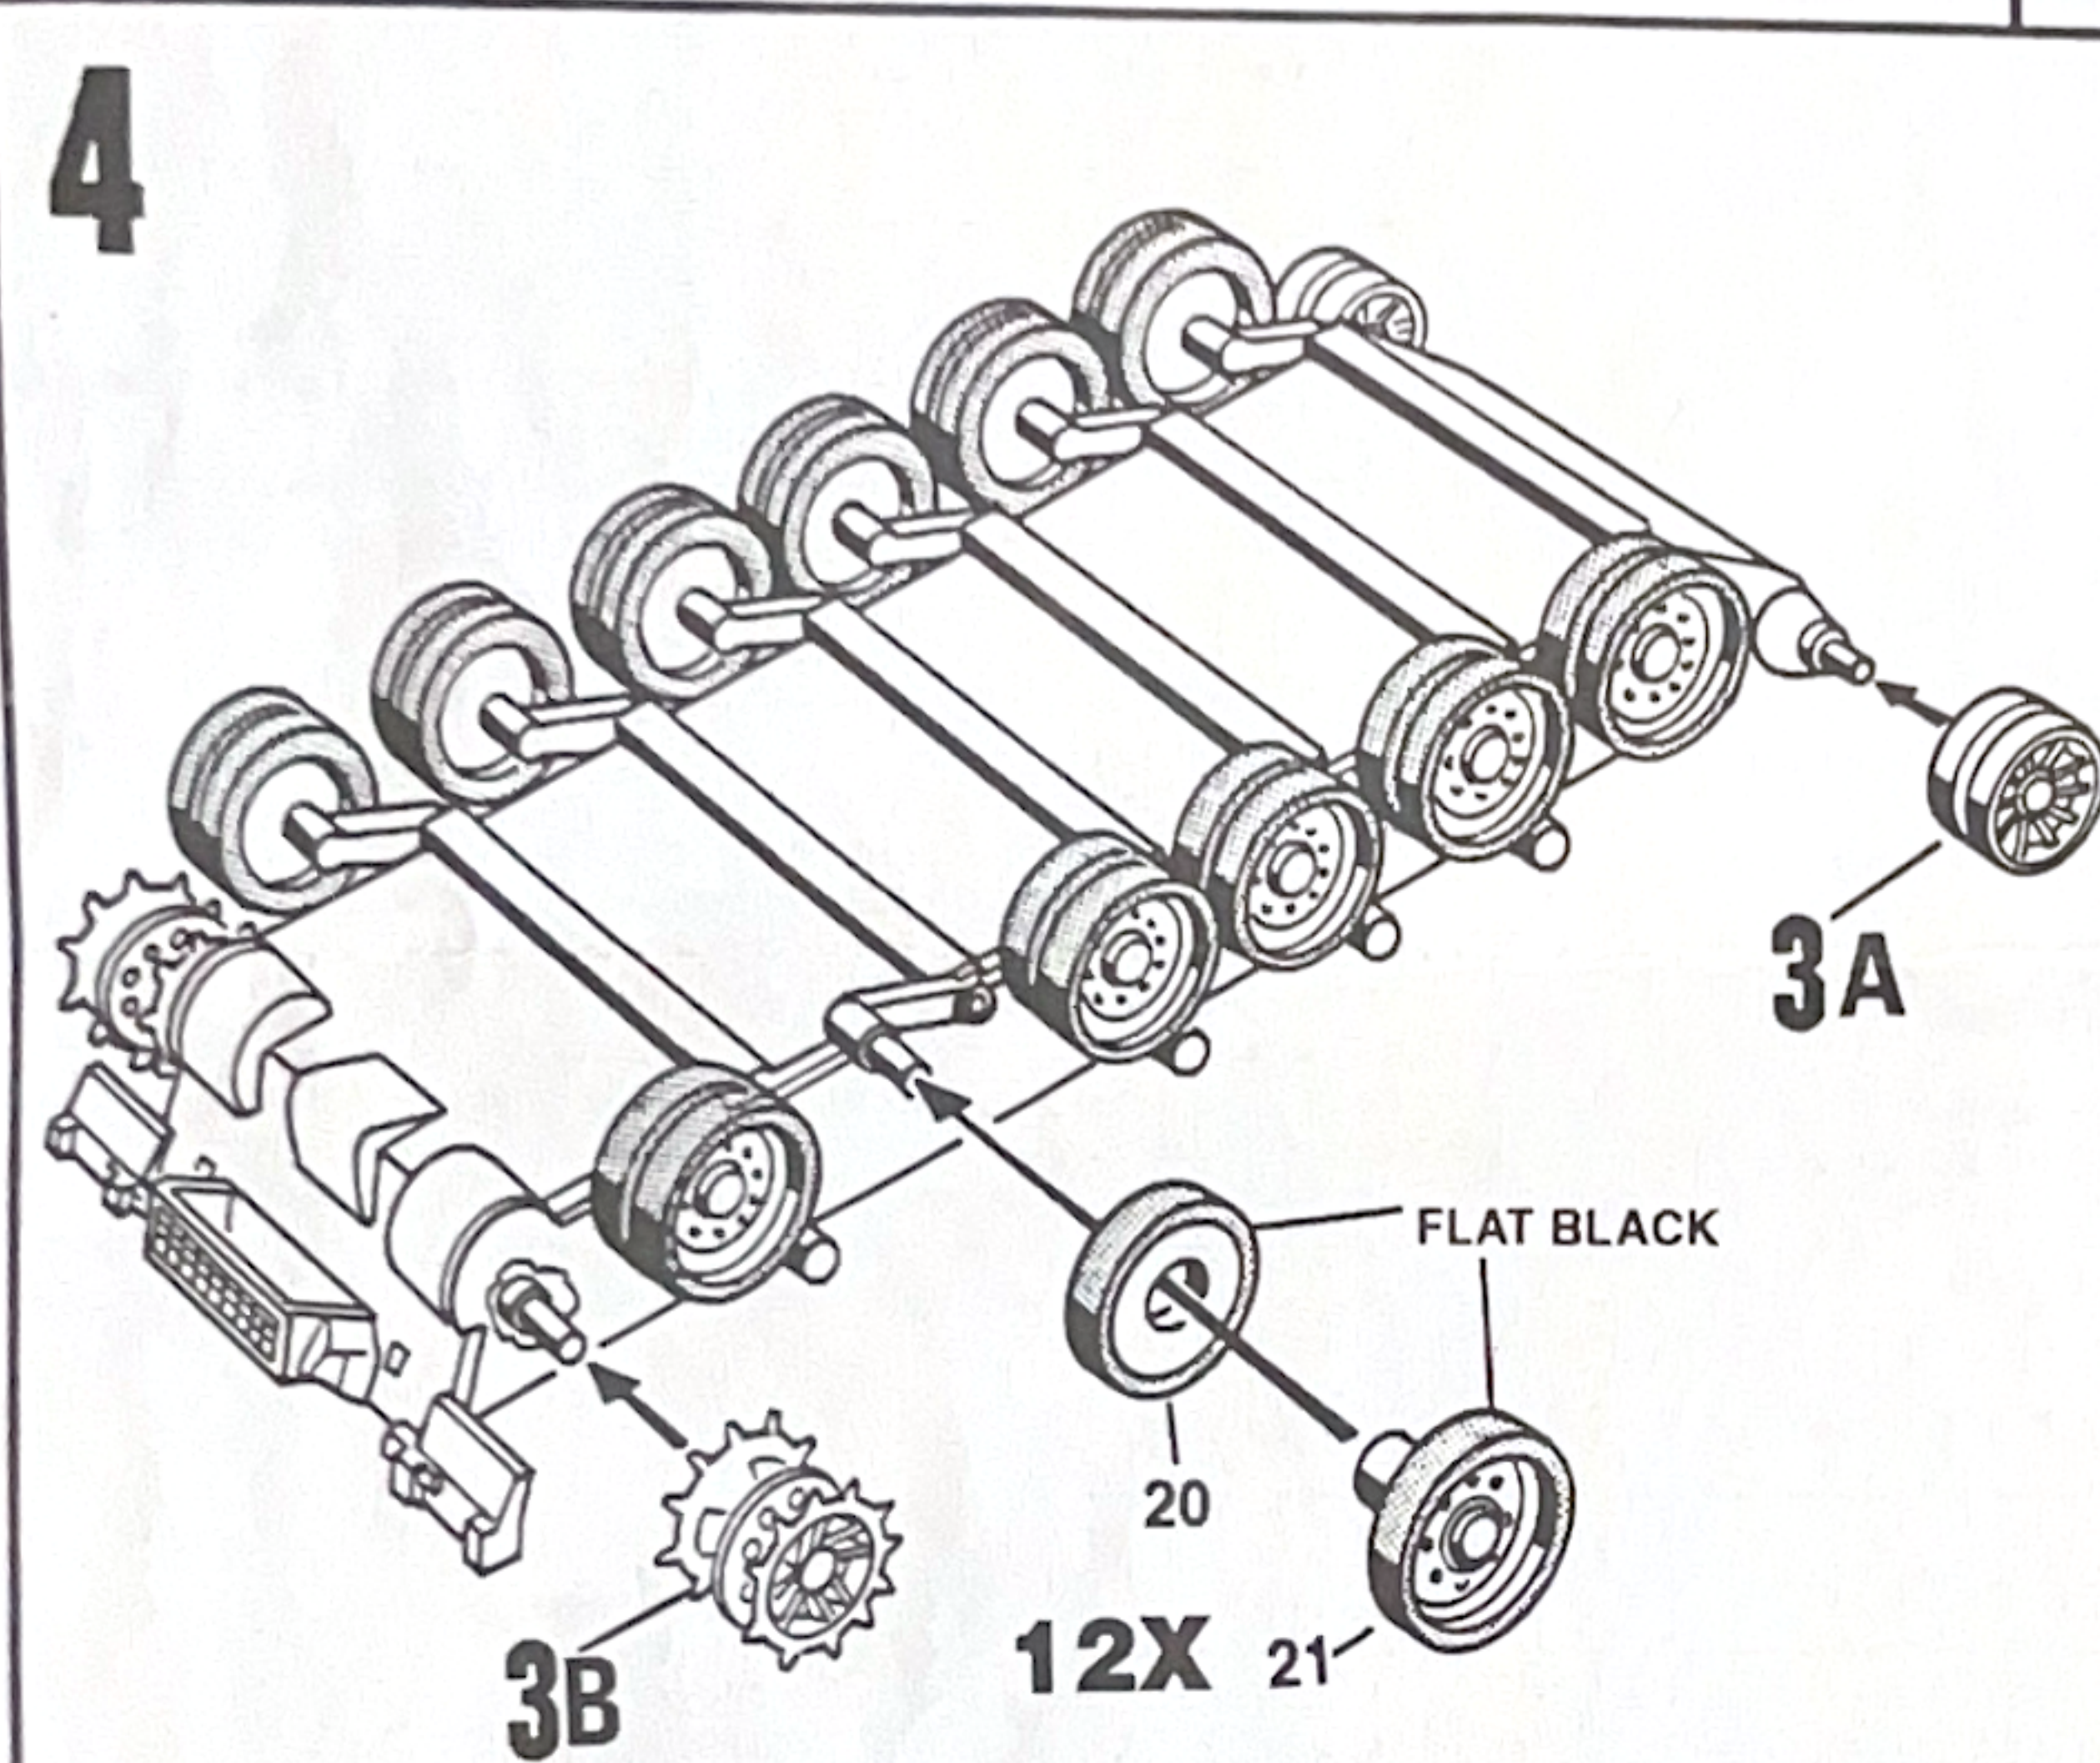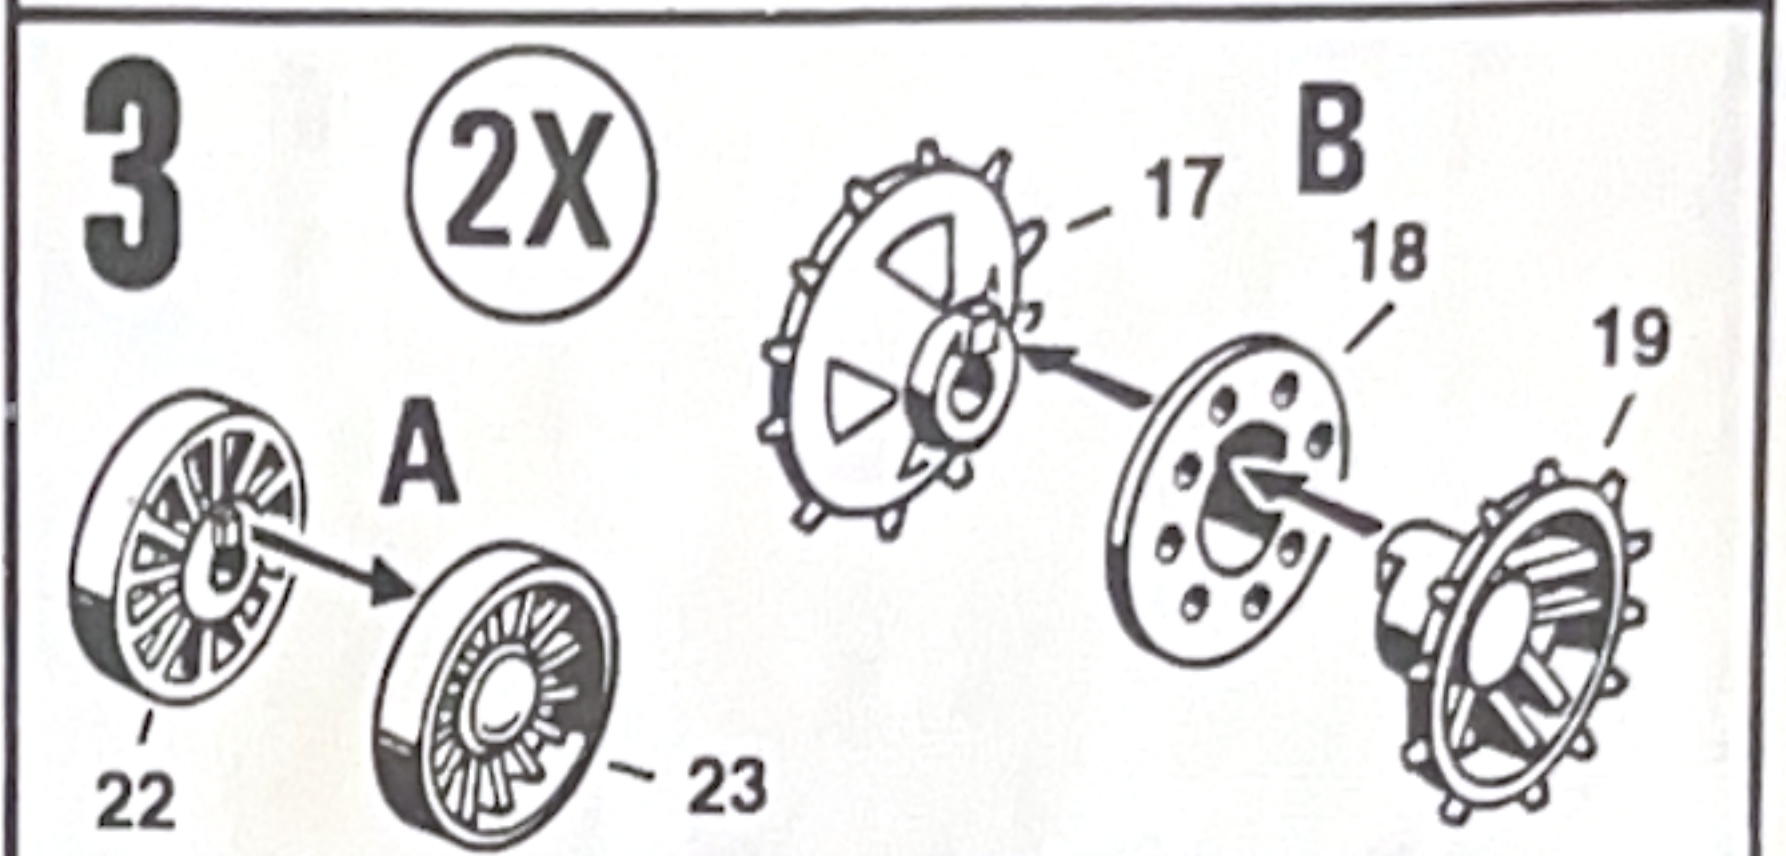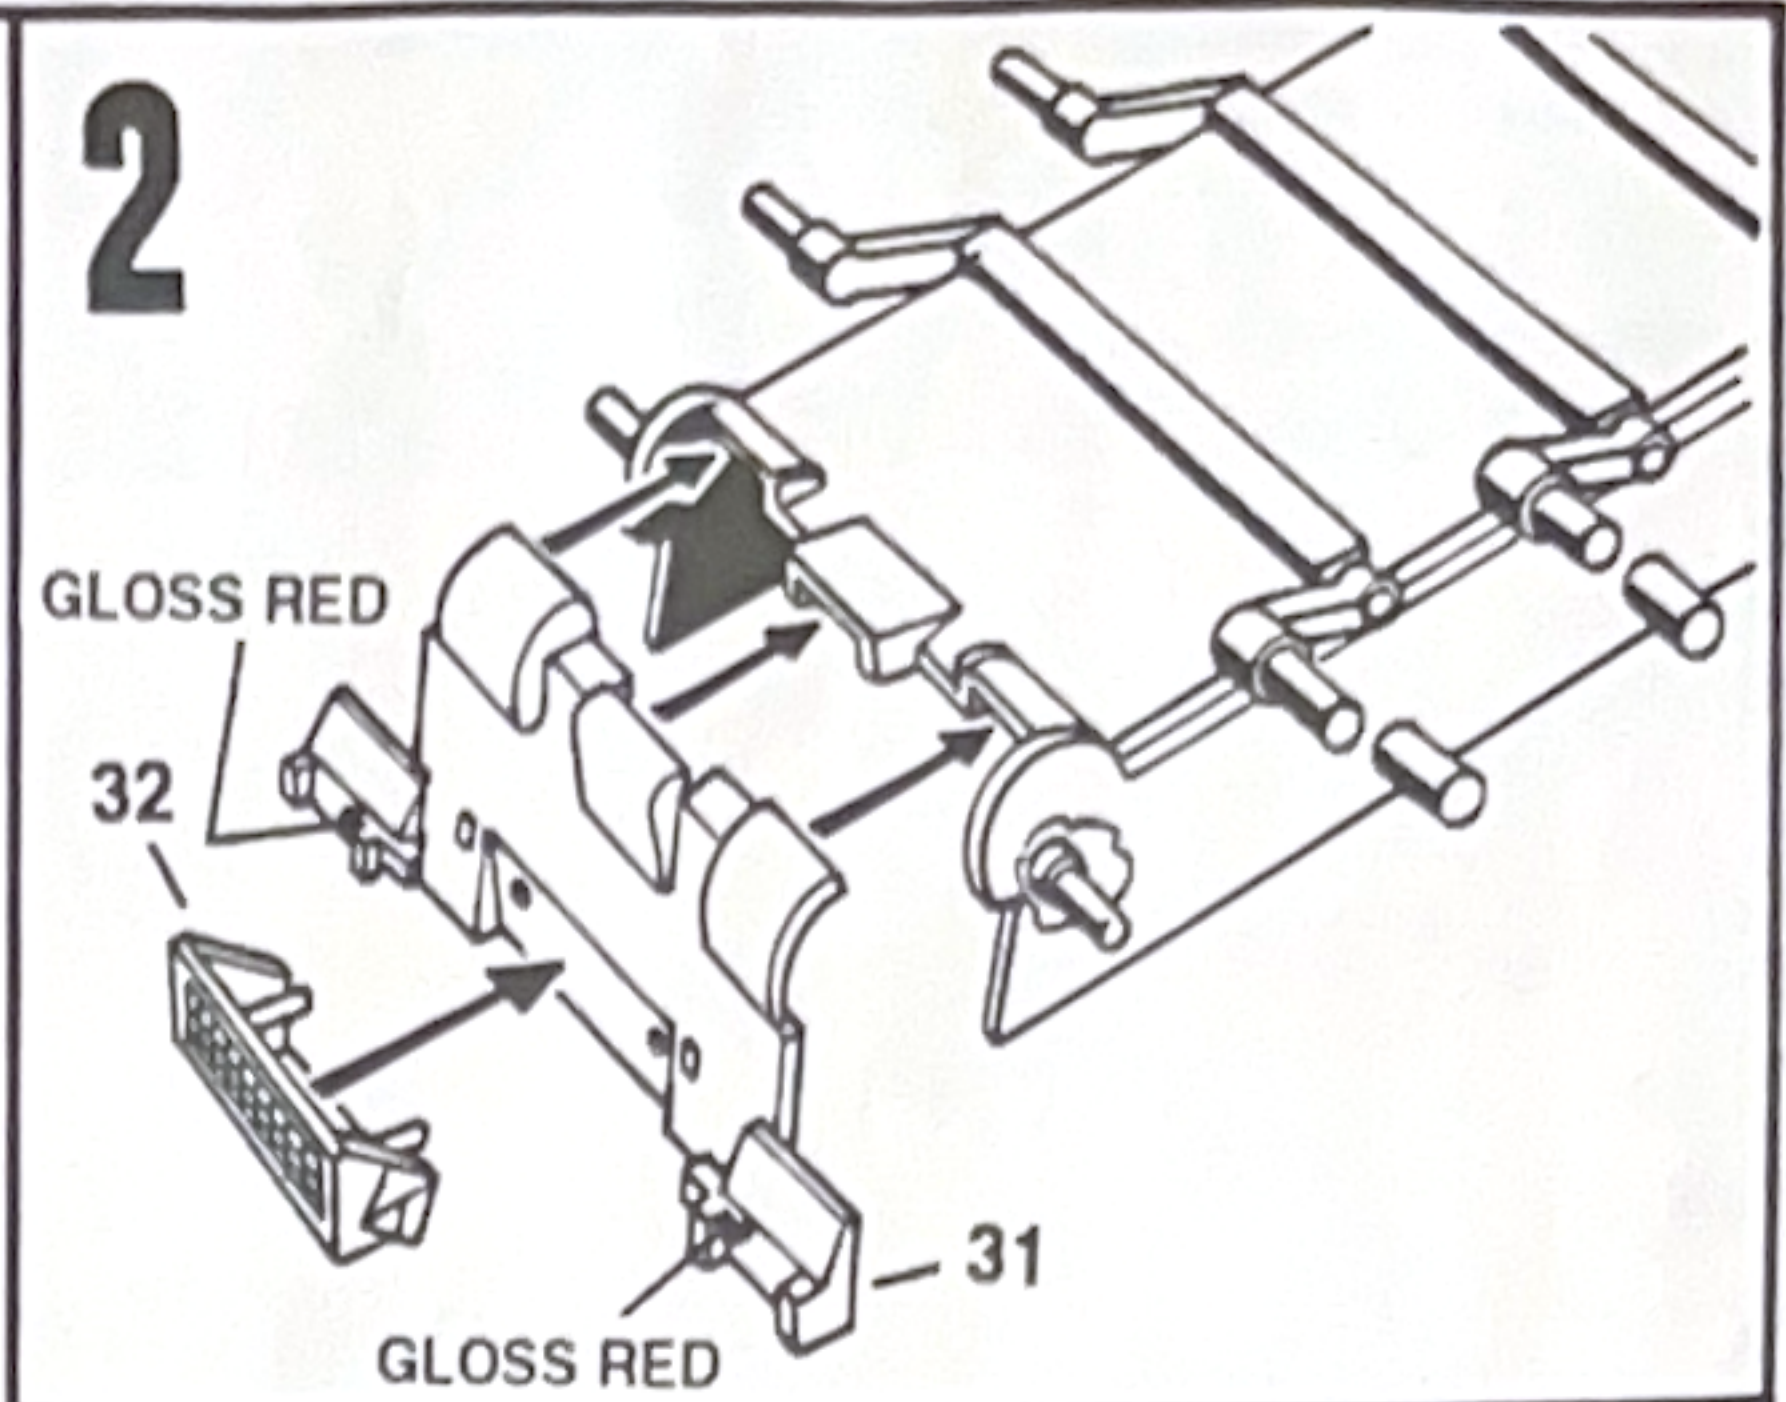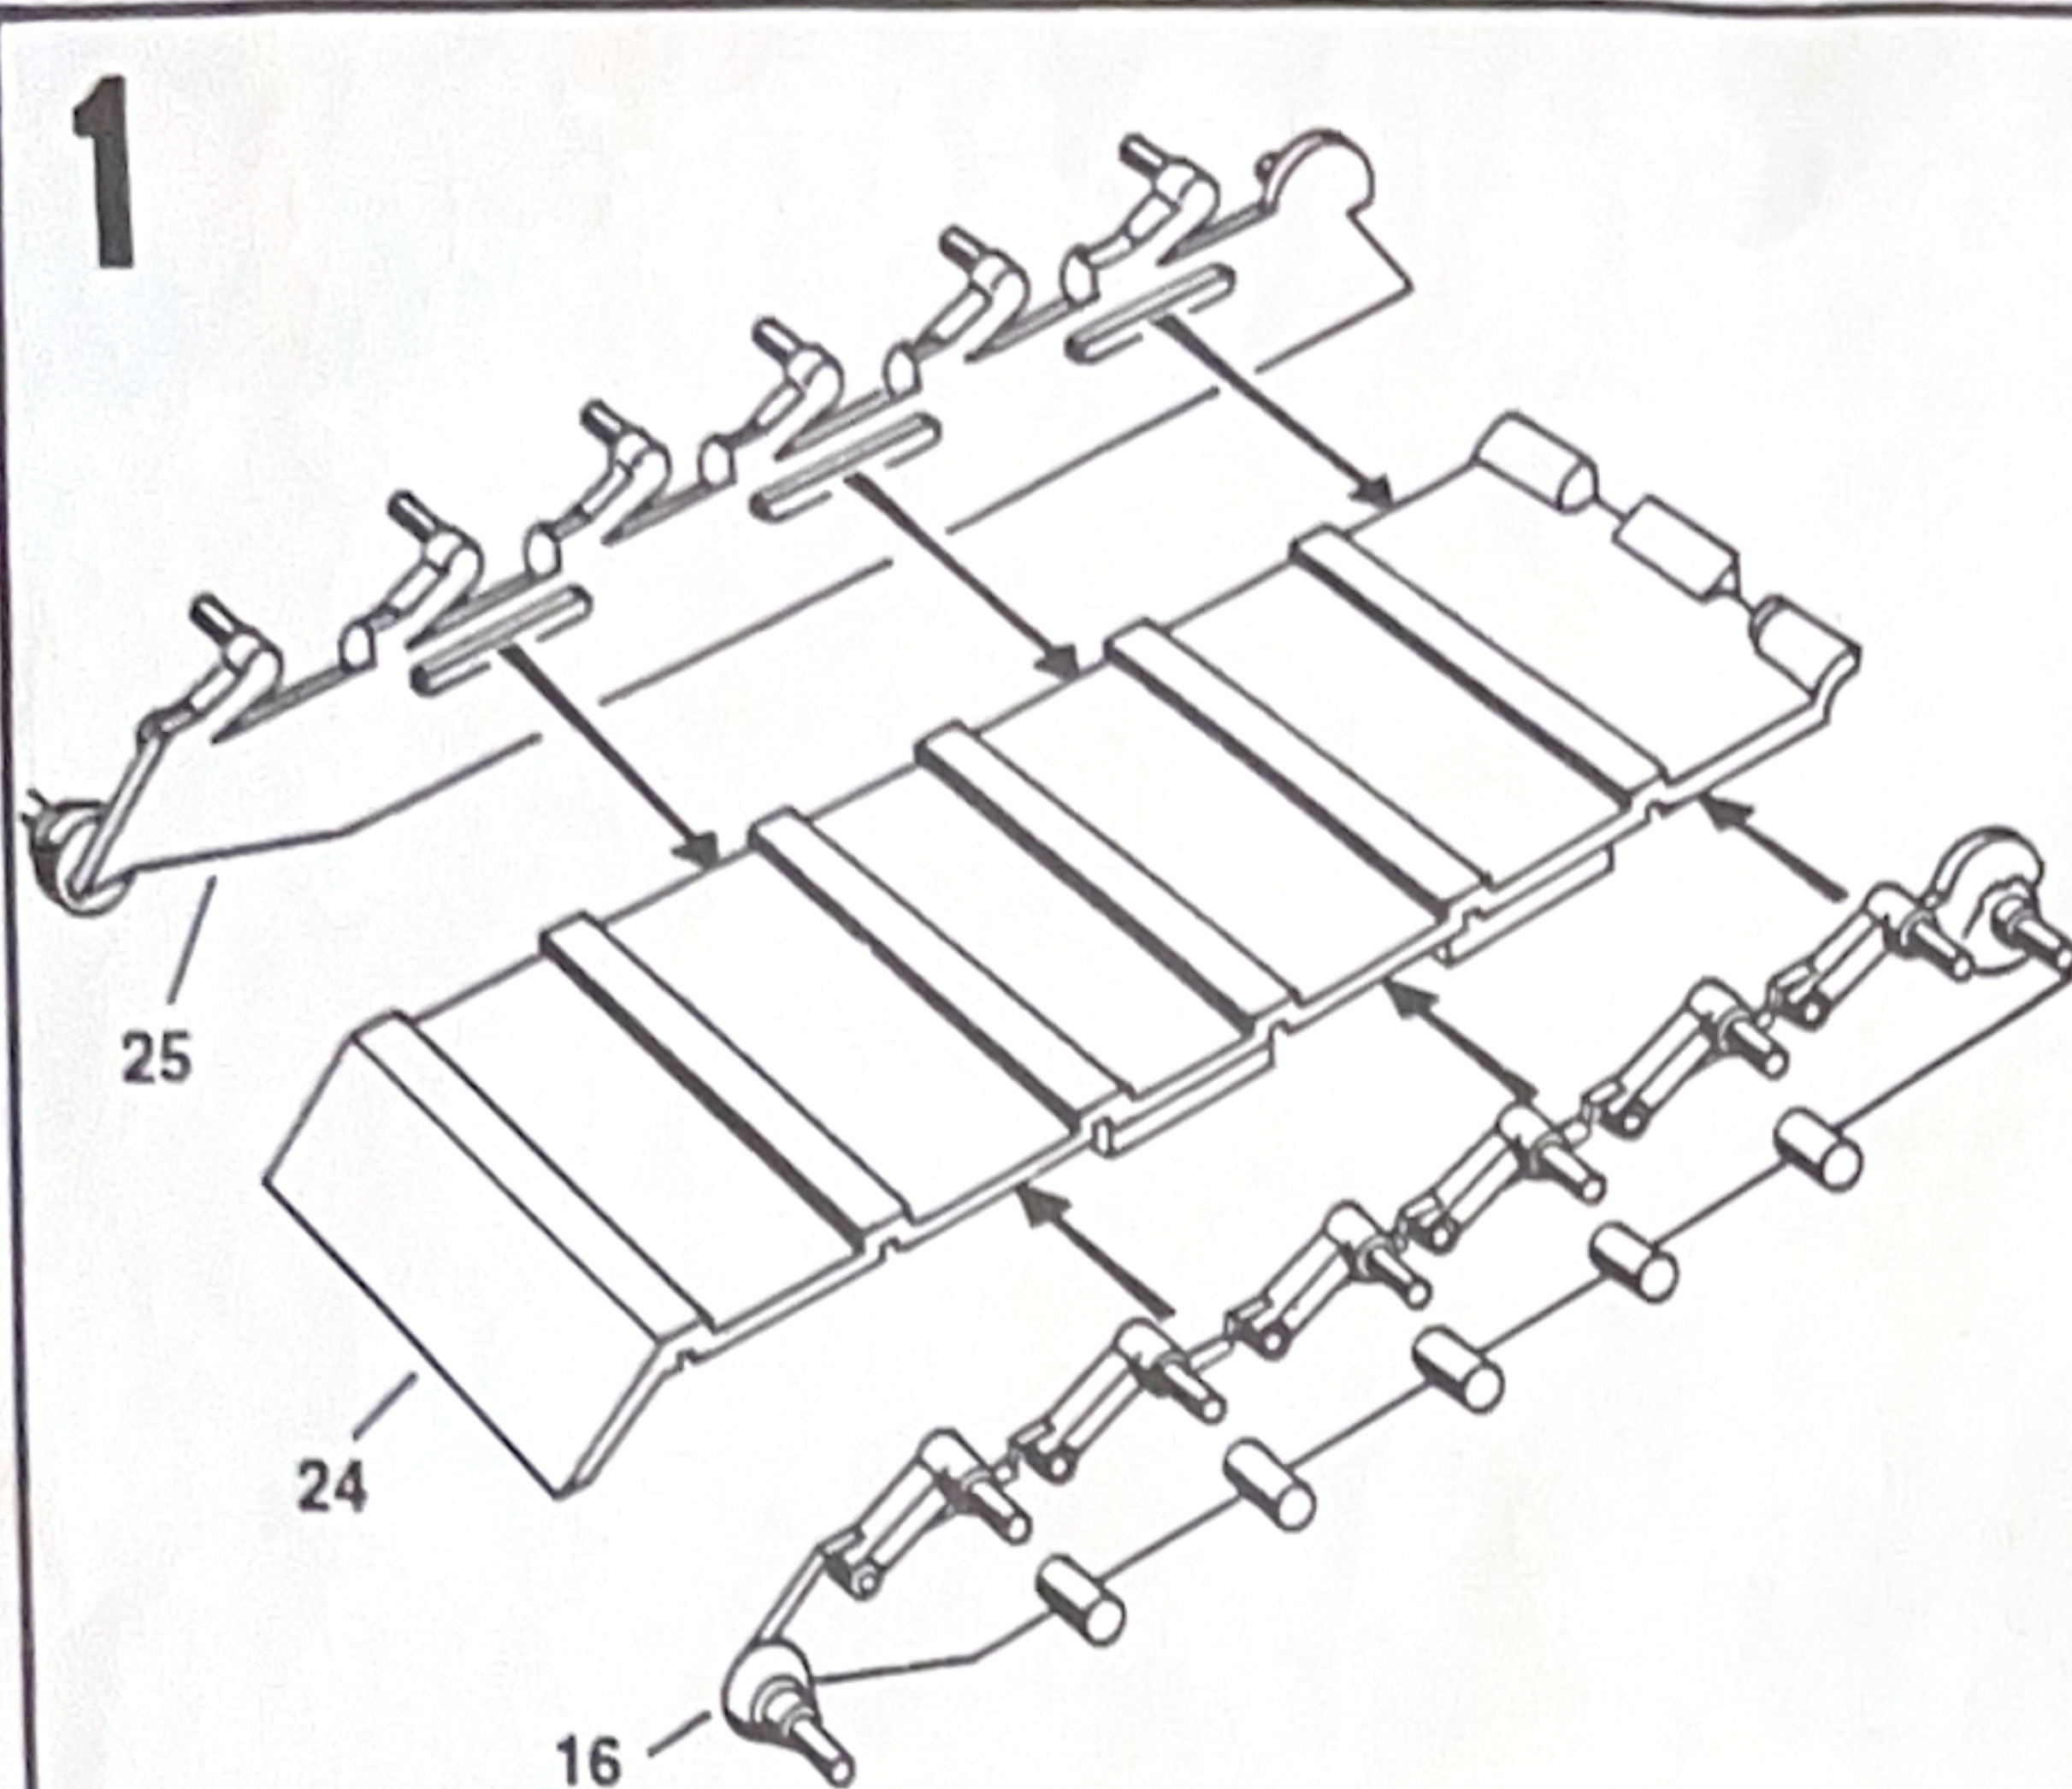


7

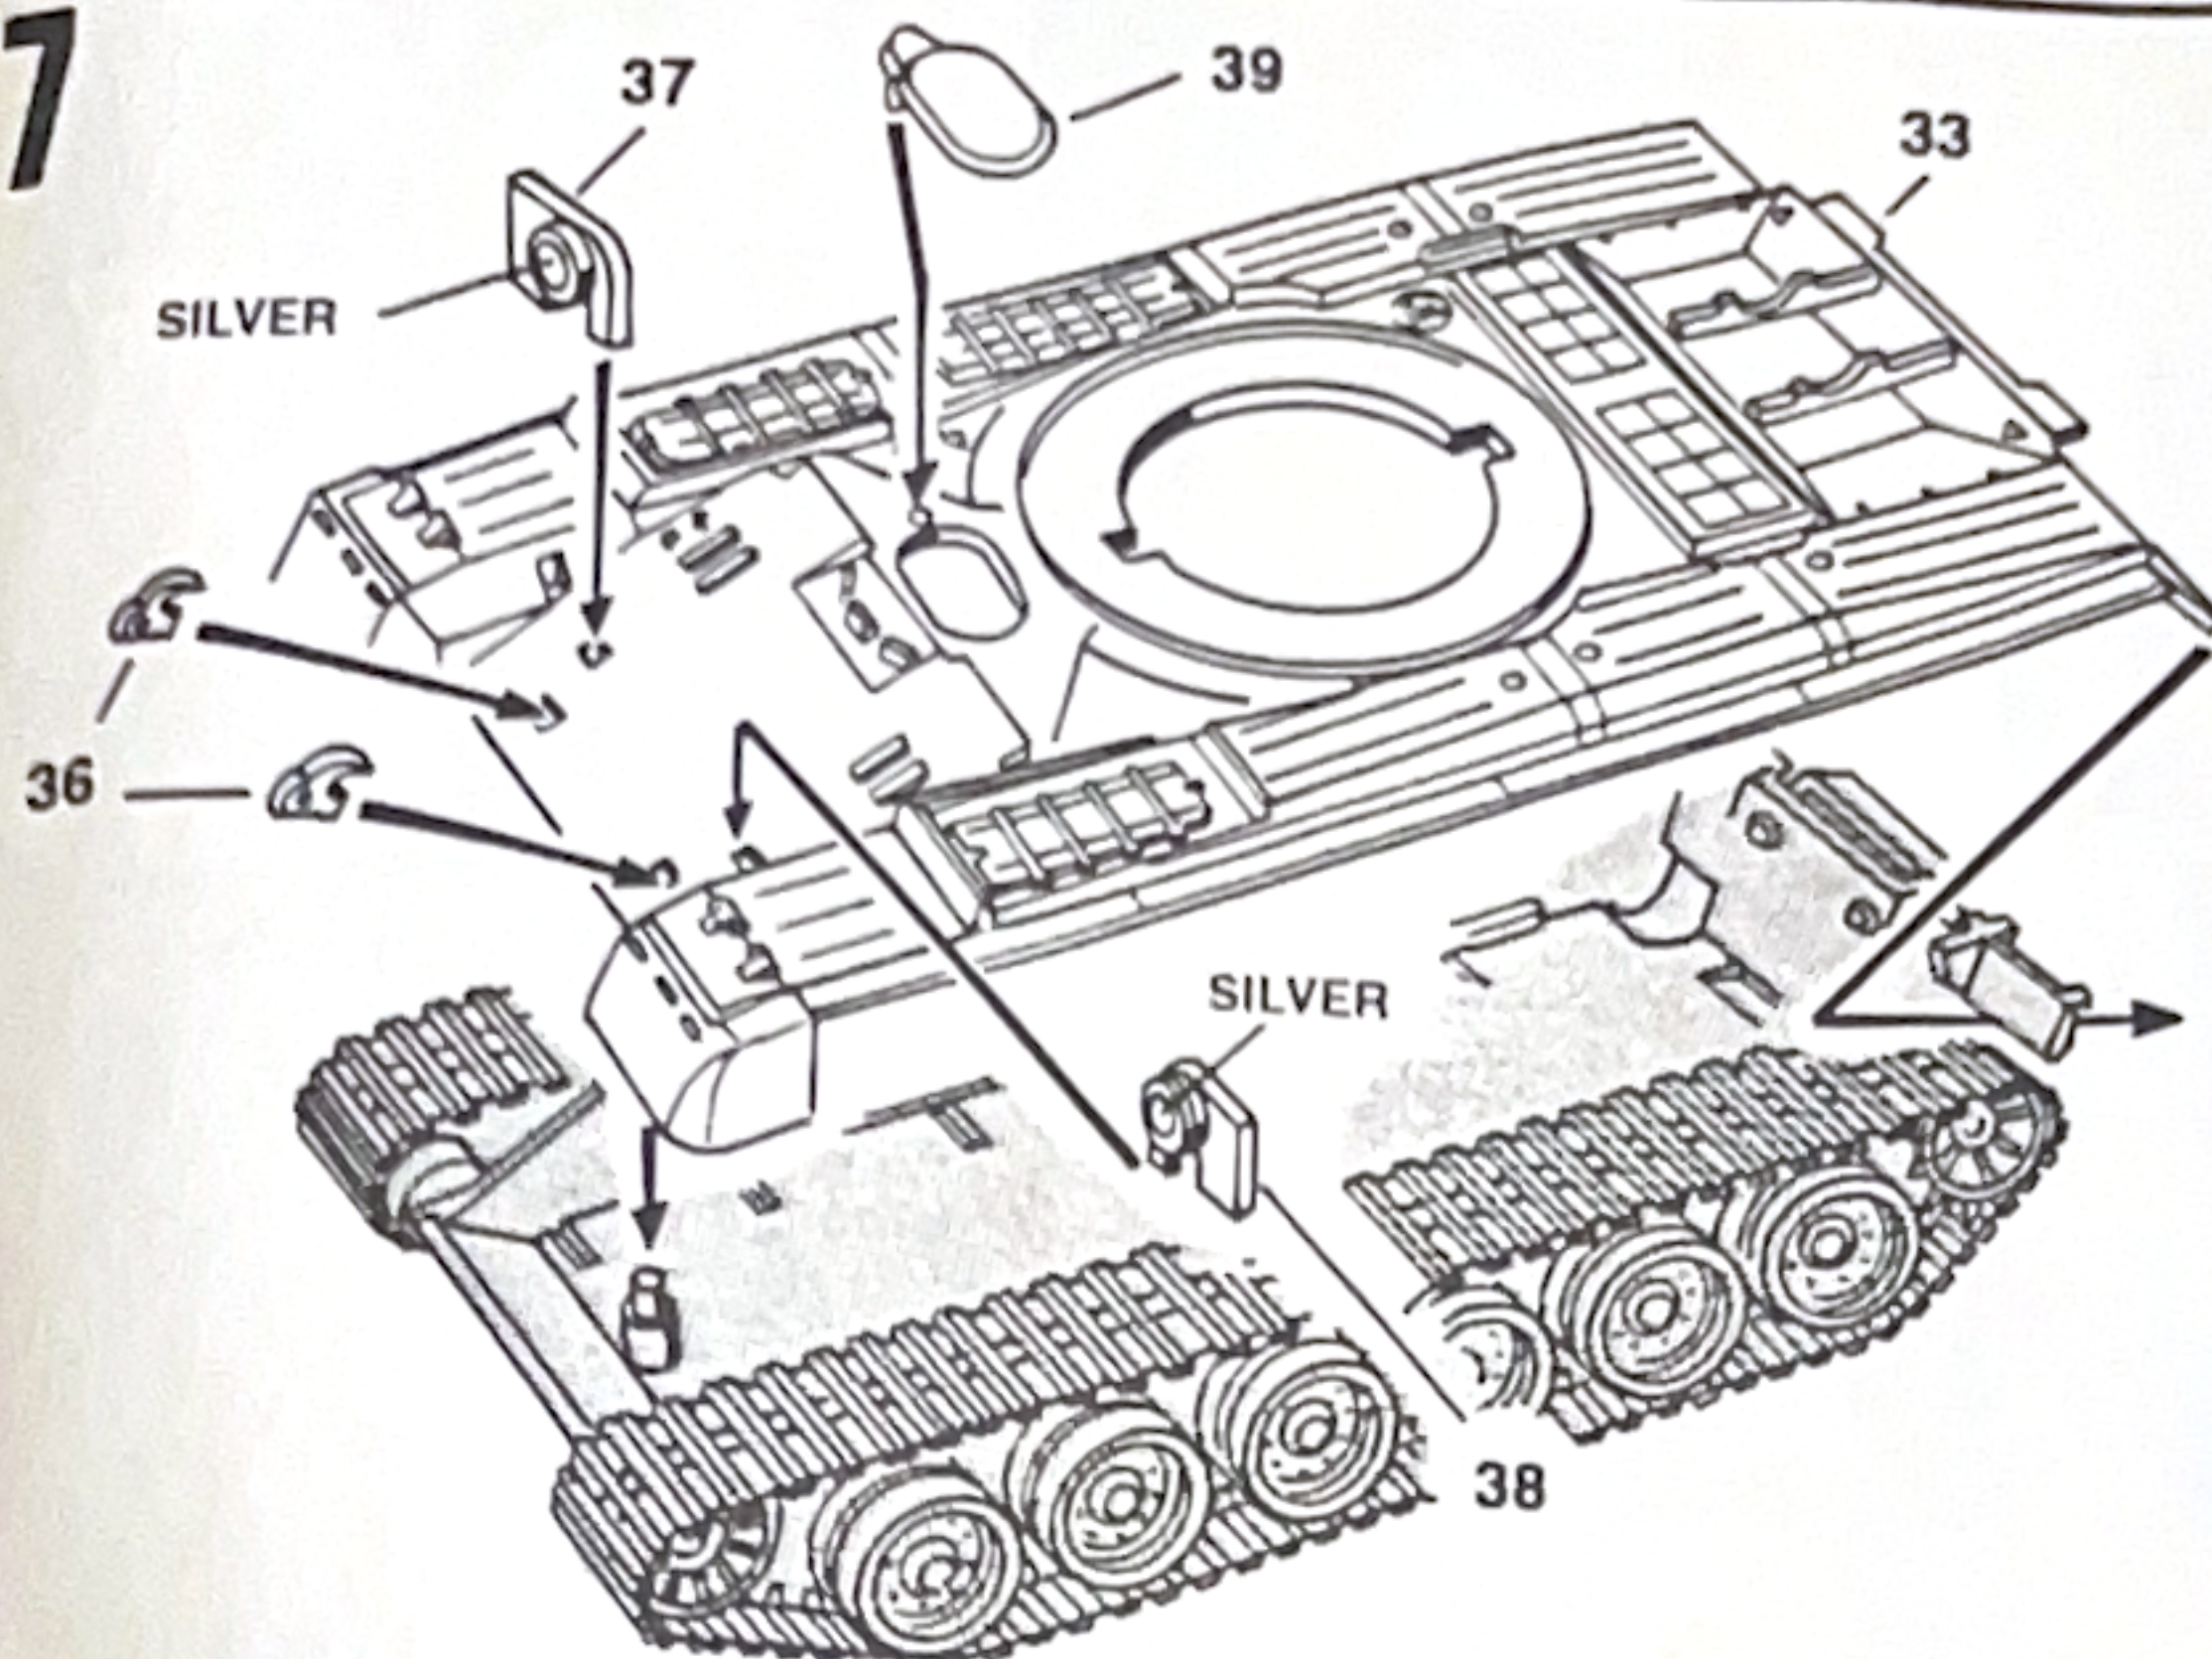


8

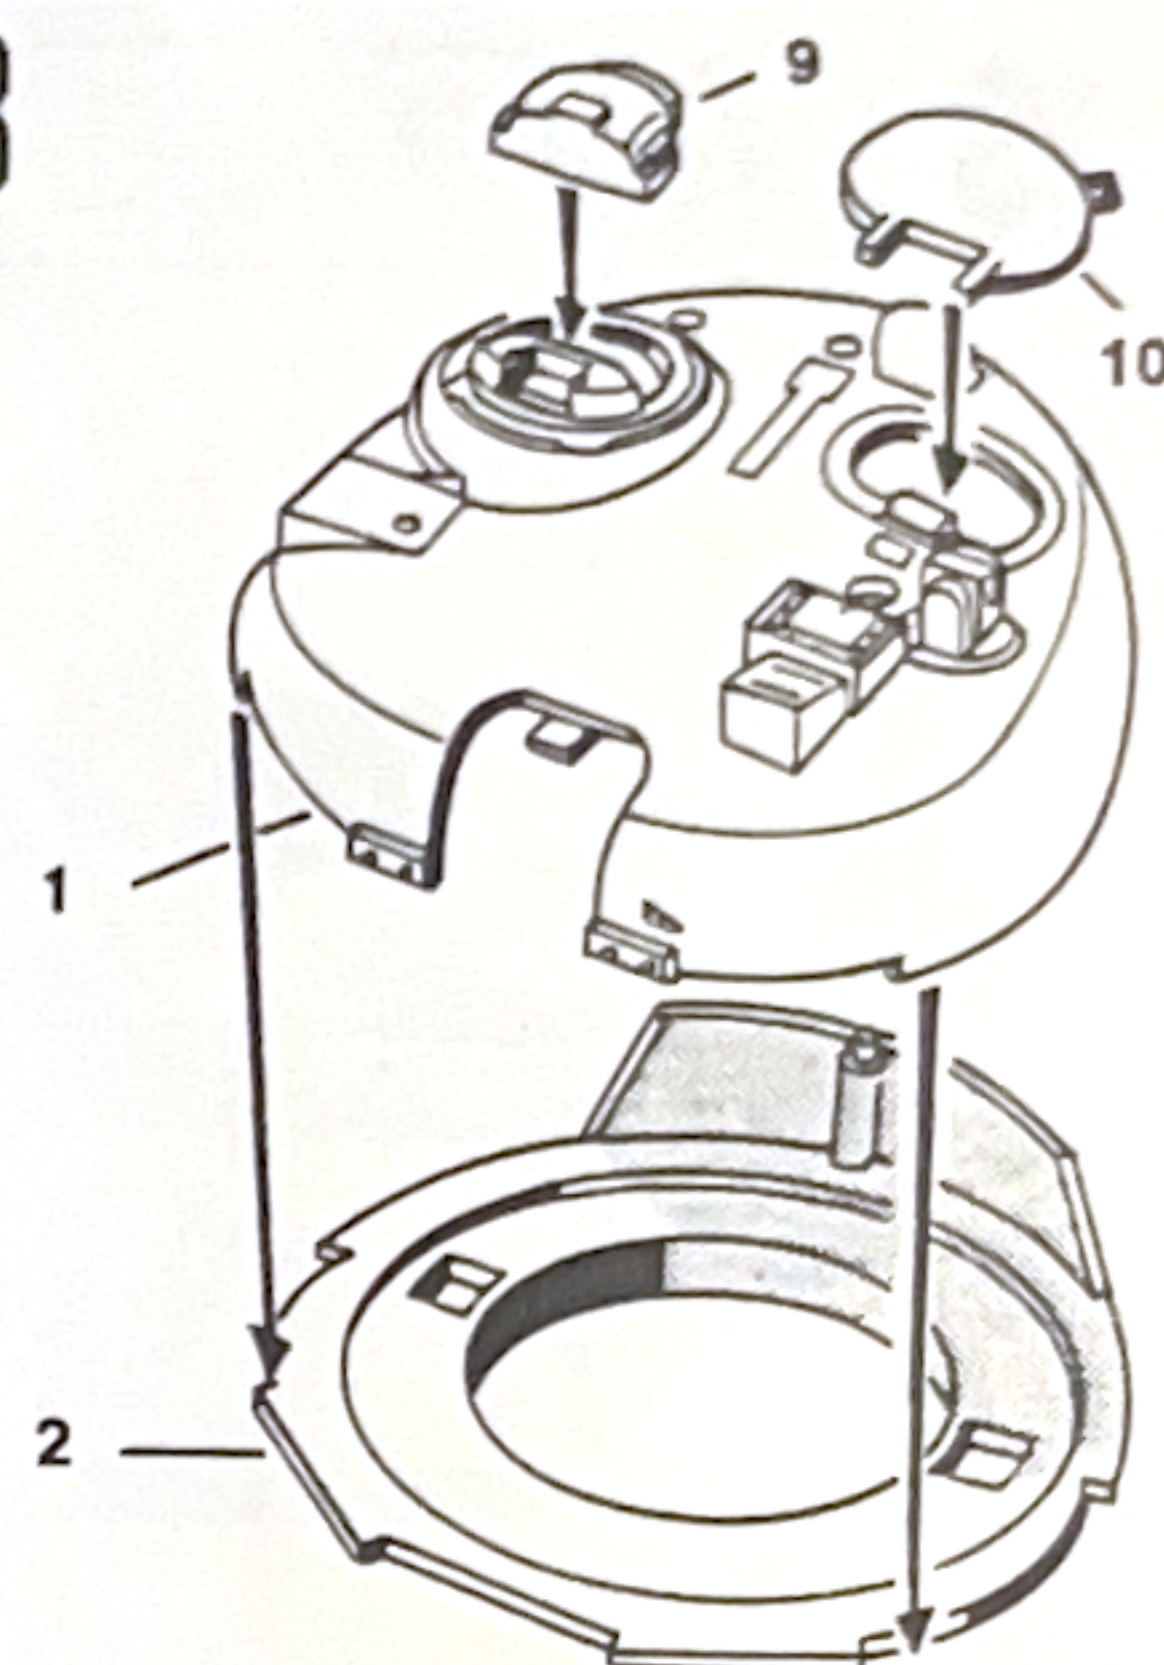

9

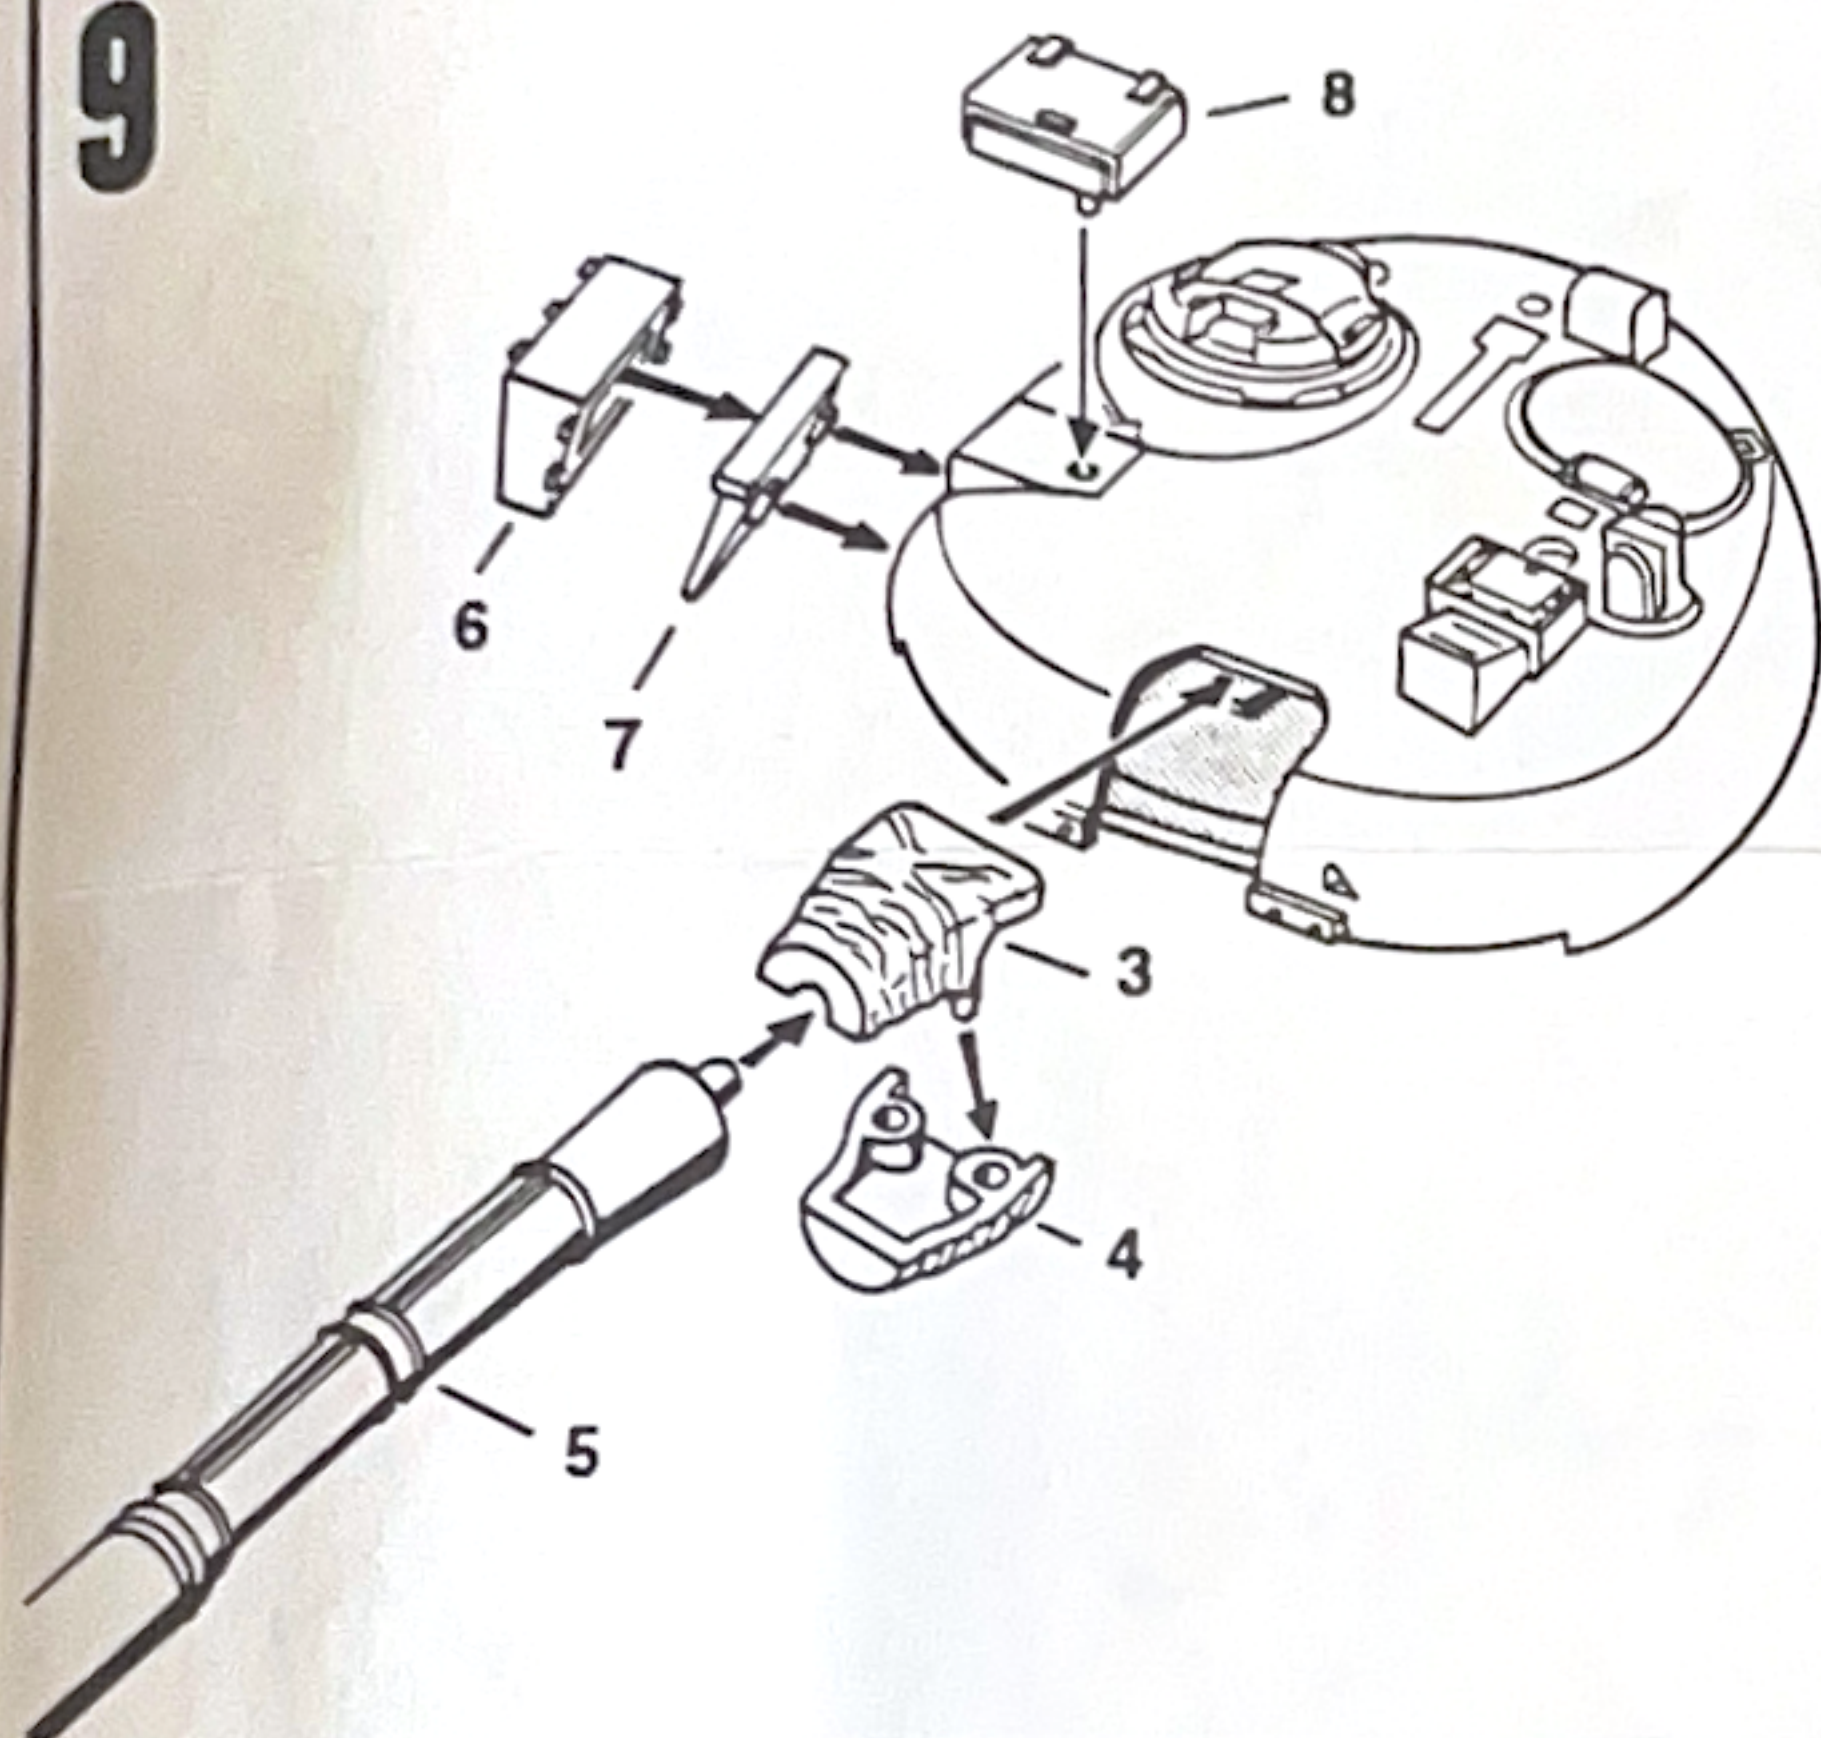


10

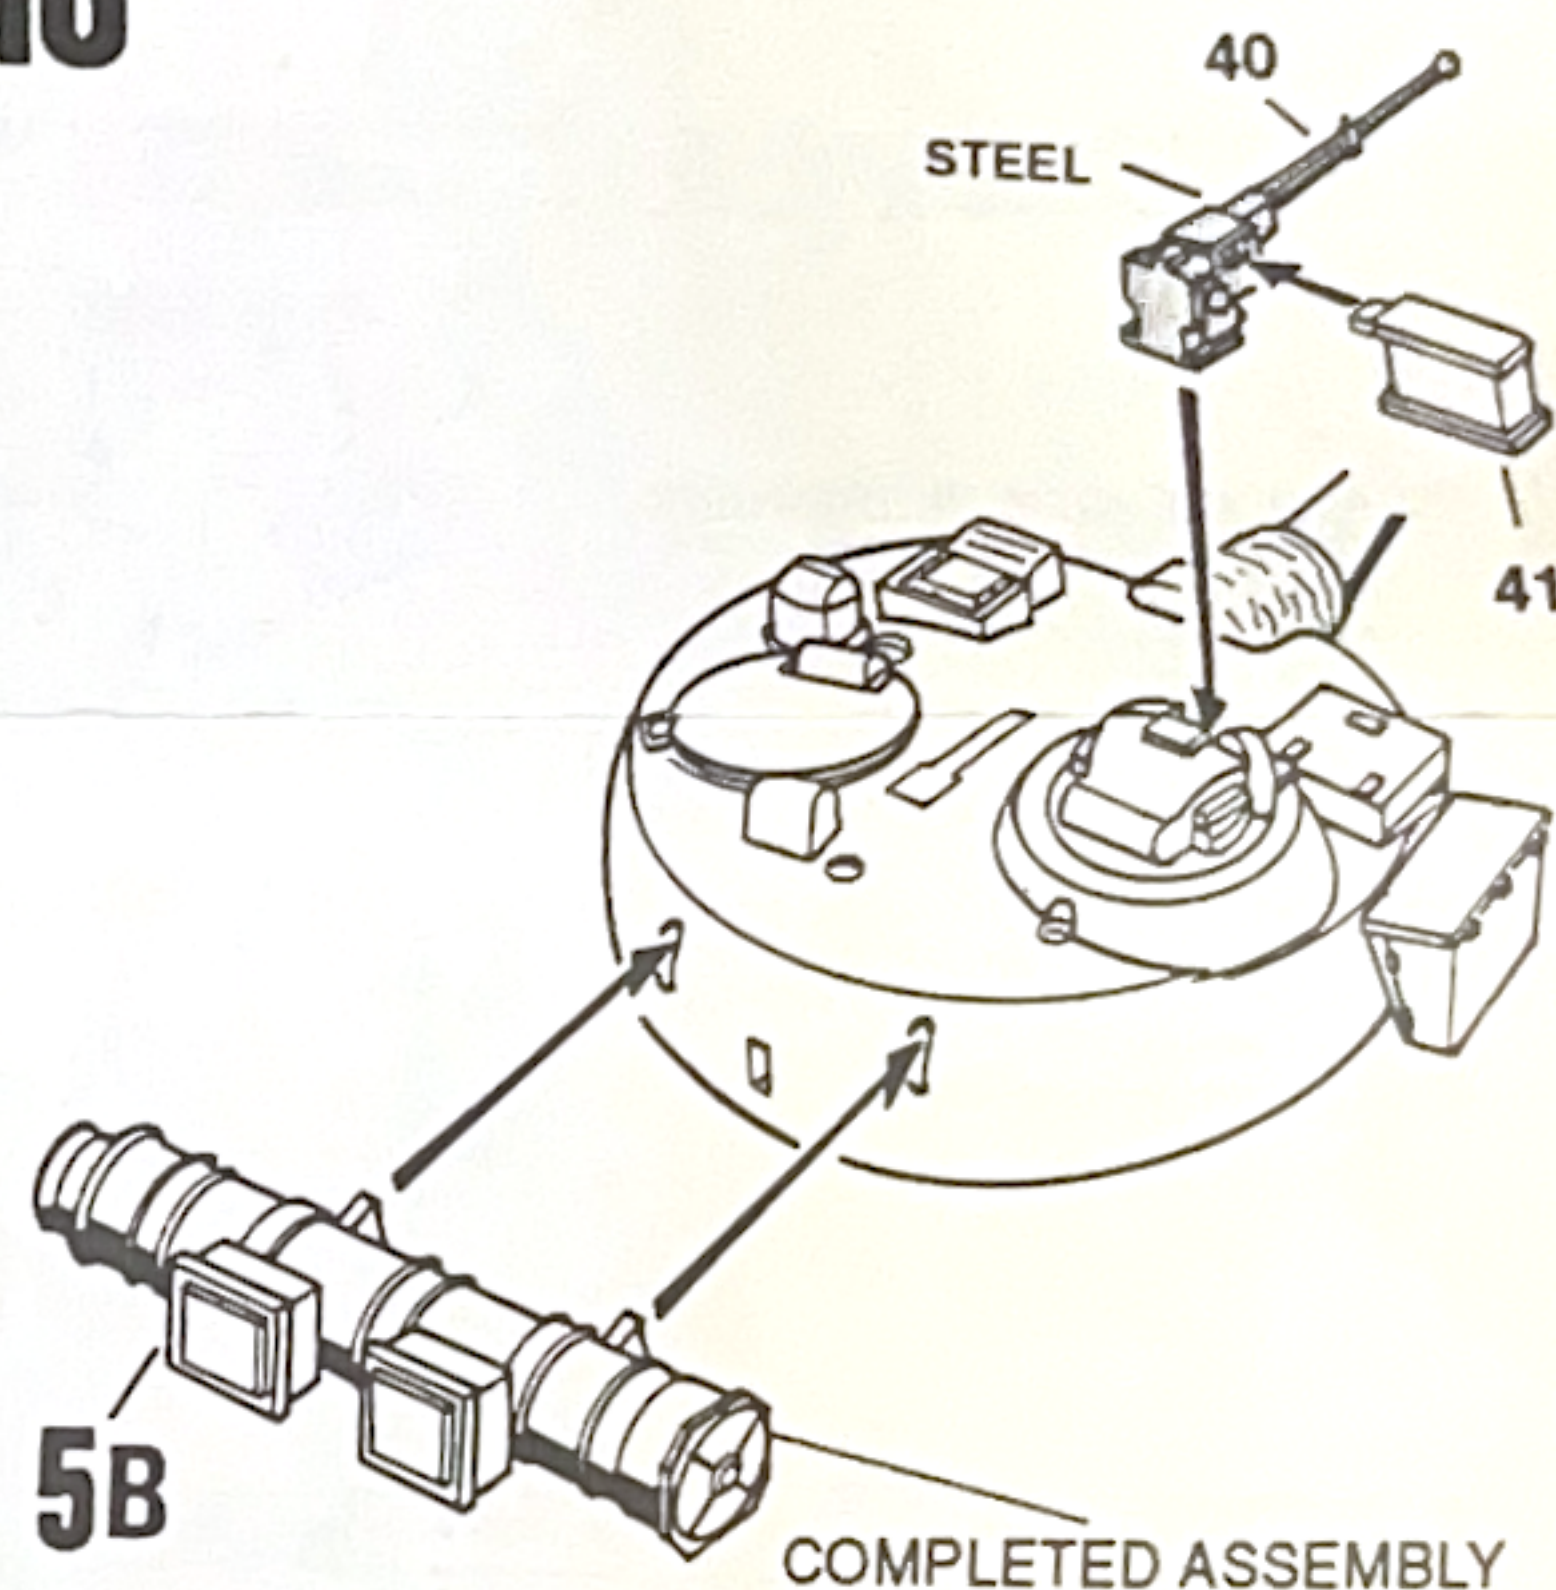


11

COMPLETED ASSEMBLY

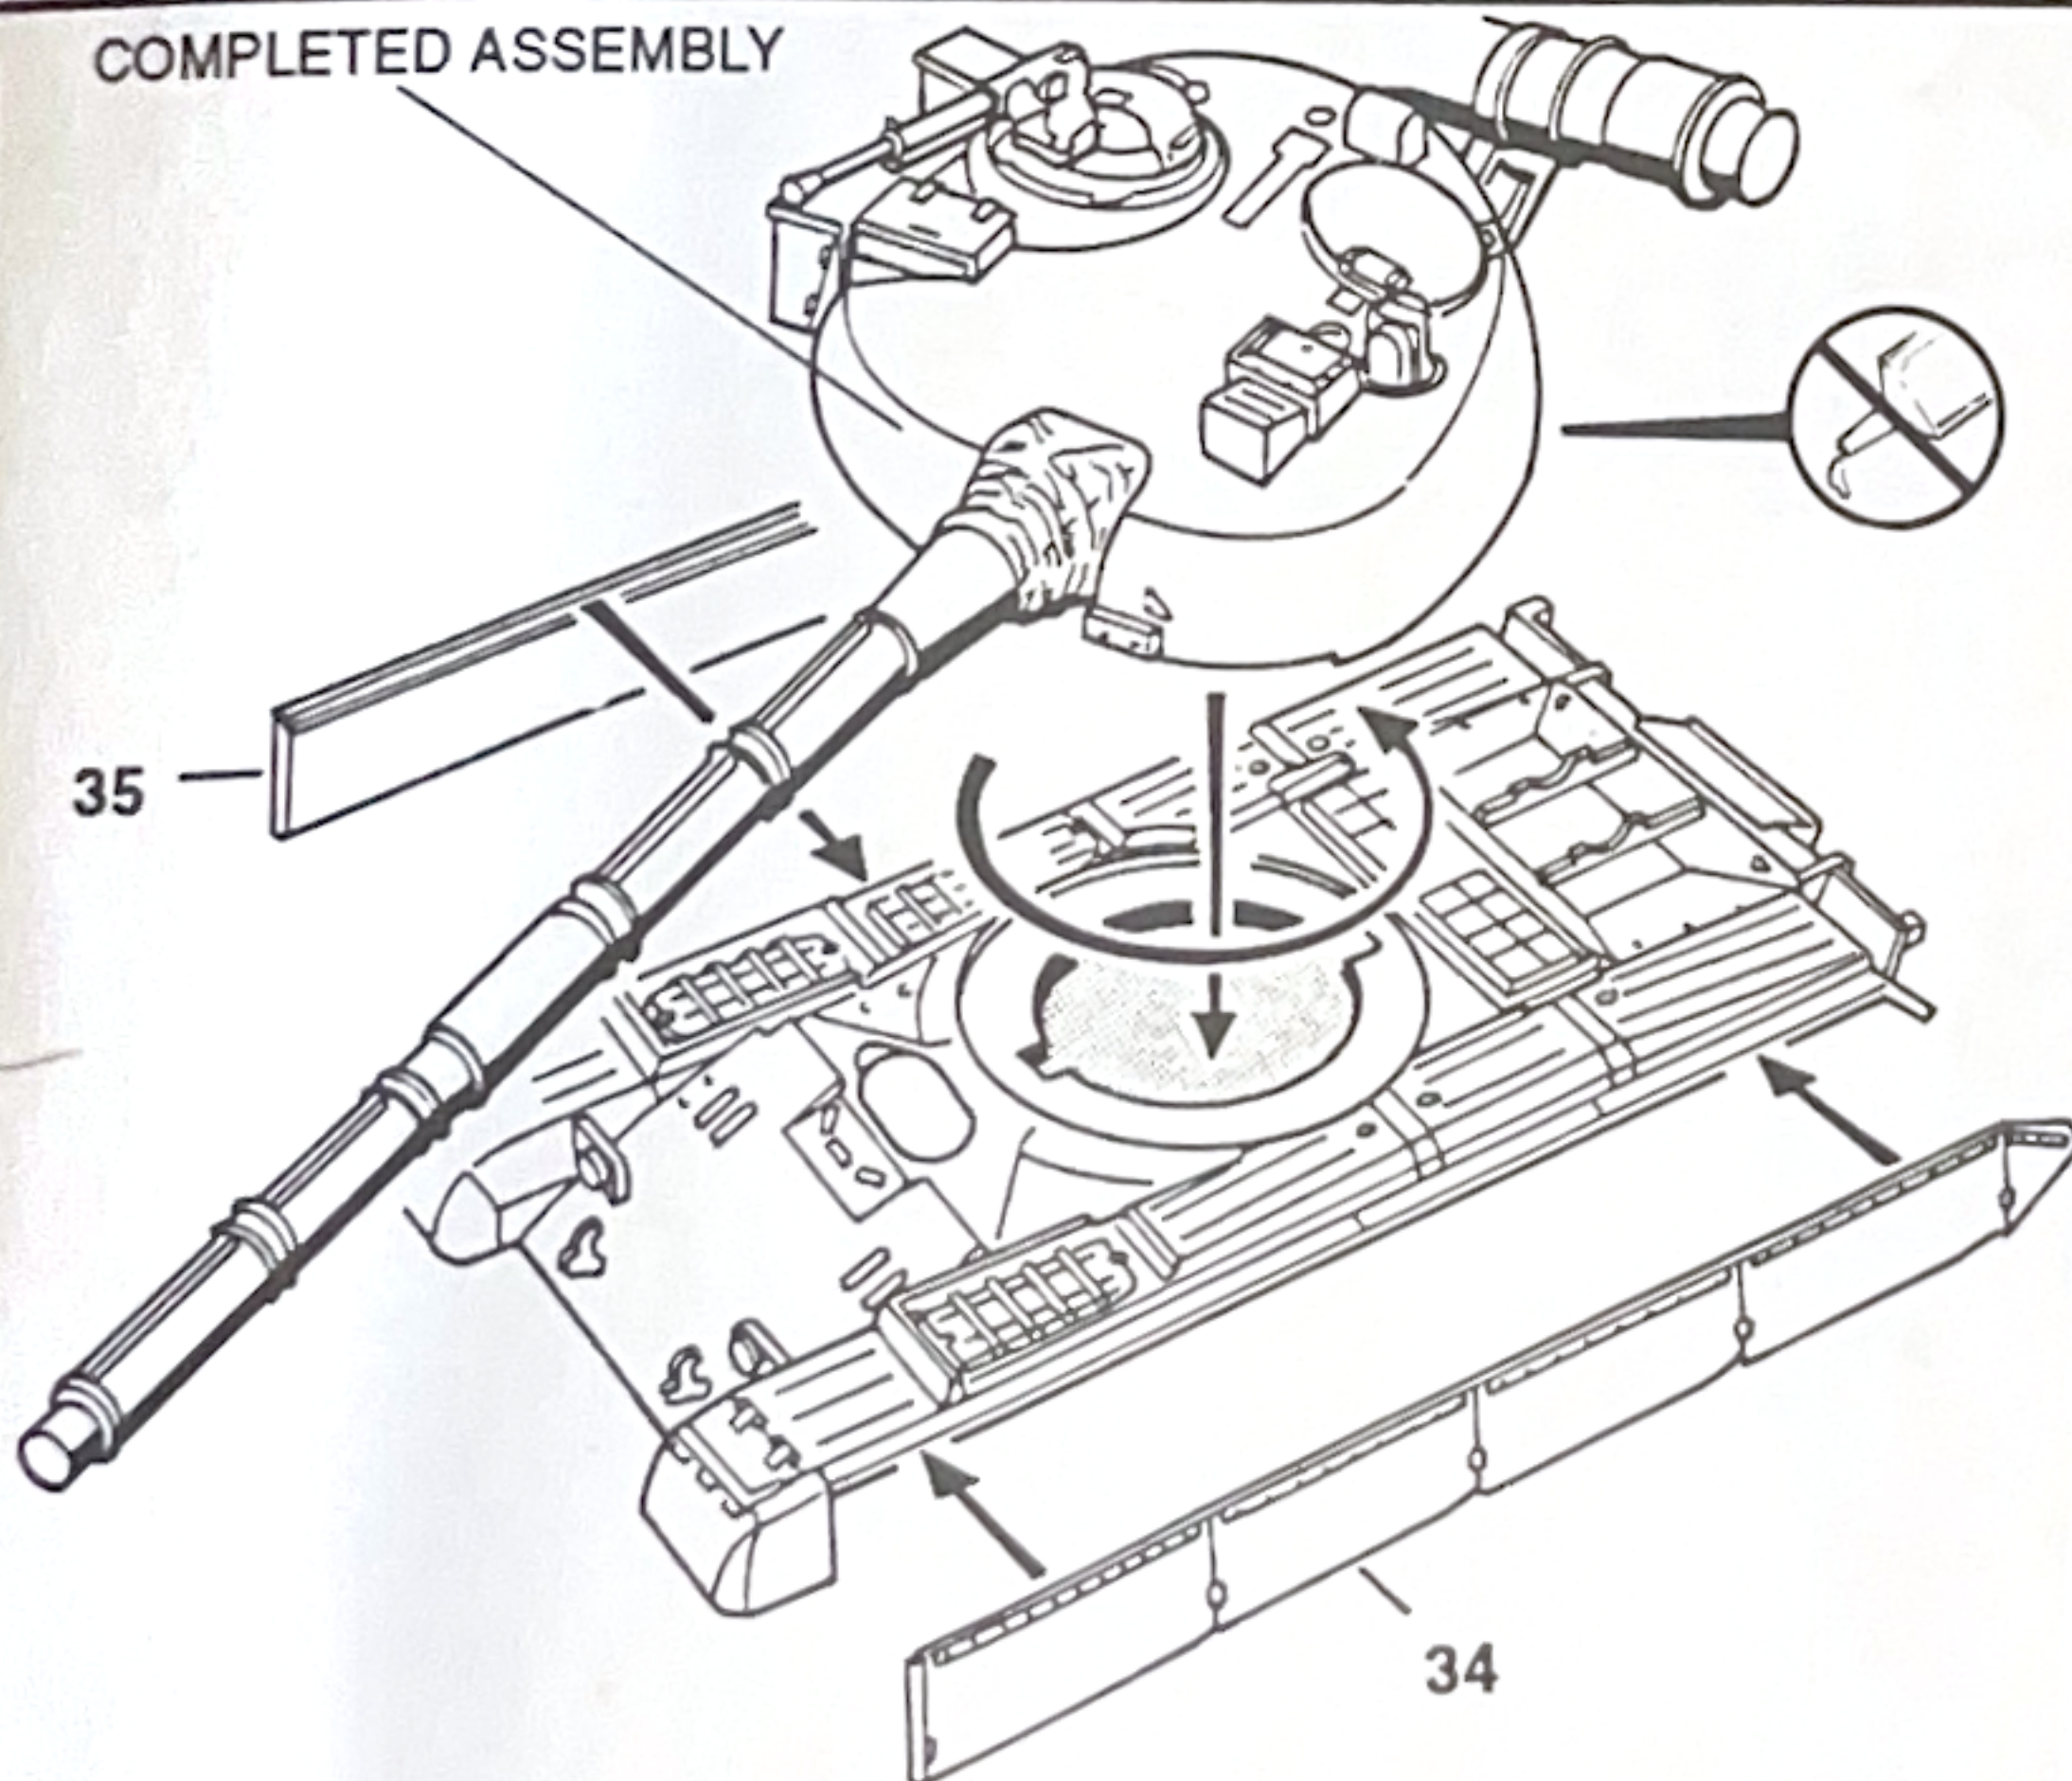

12

COMPLETED ASSEMBLY

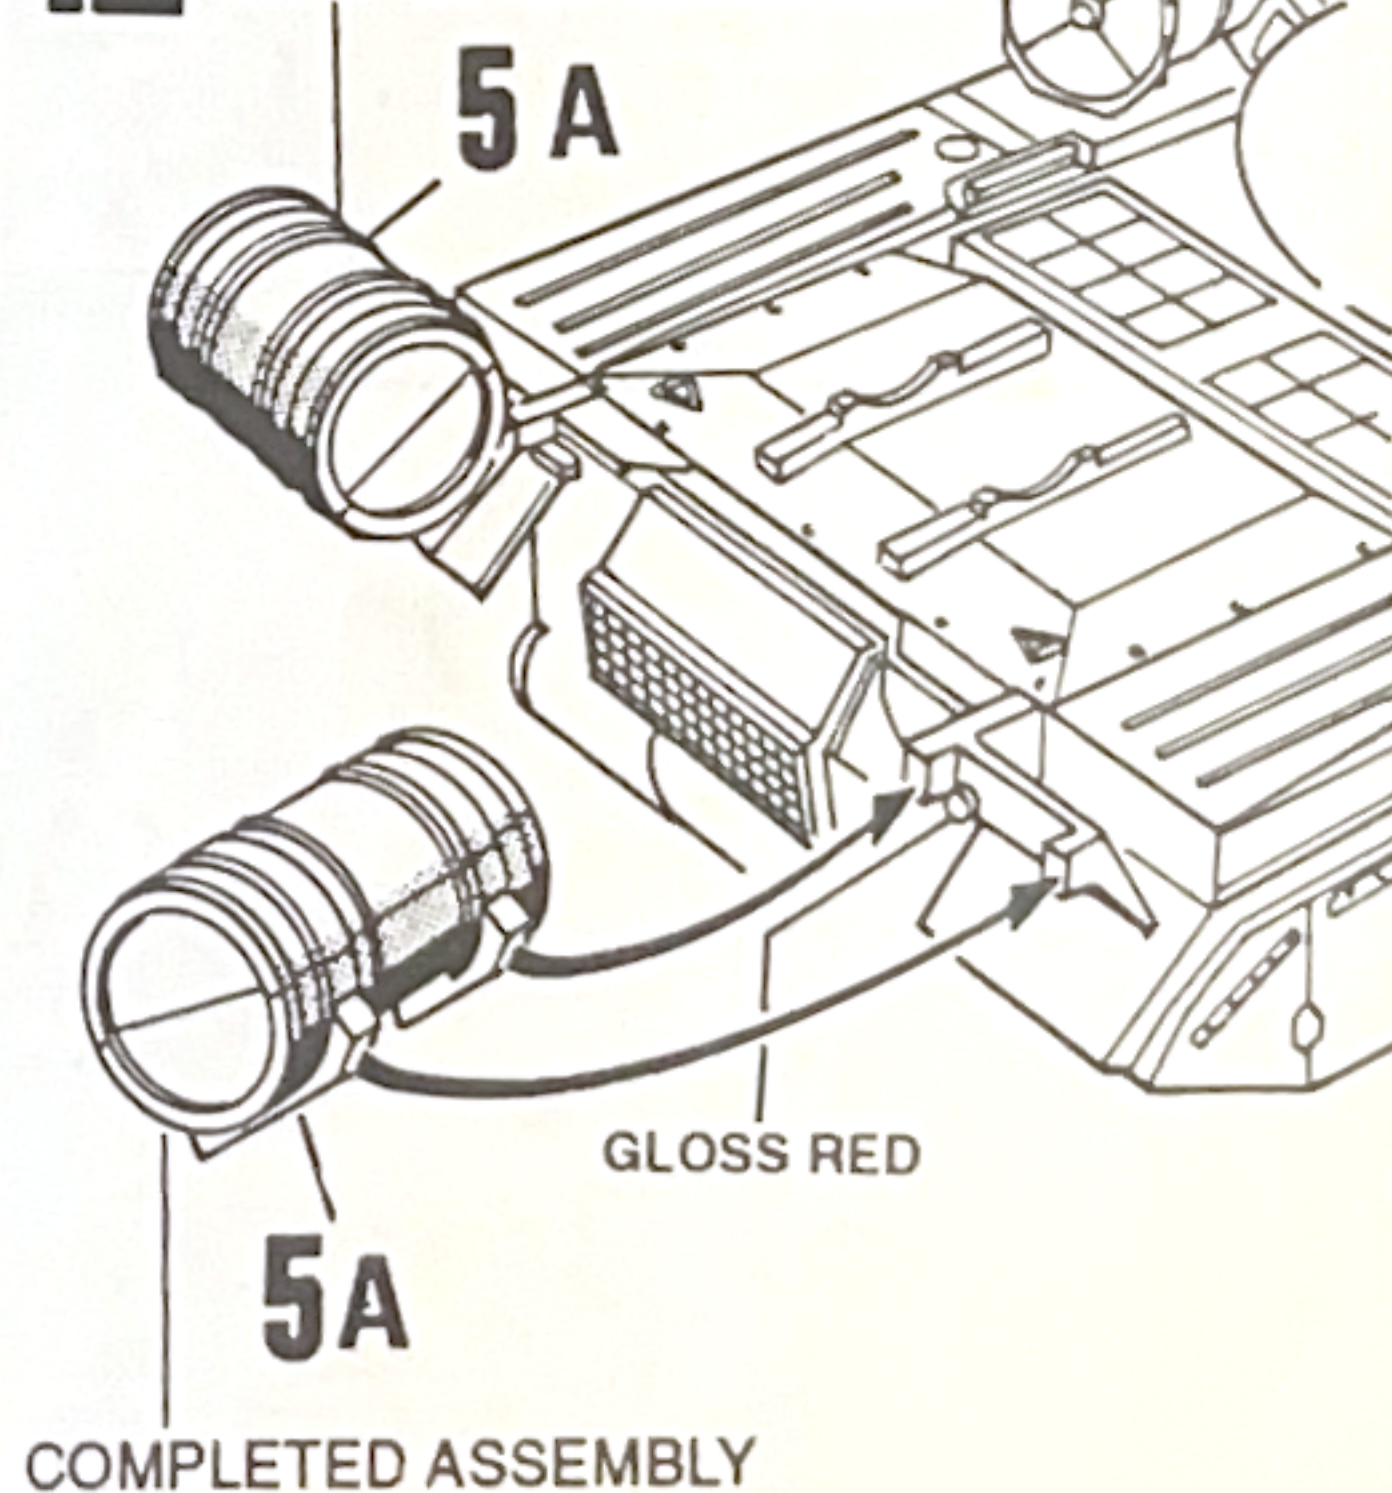



DECAL NOT COMPATIBLE
WITH SETTING SOLUTIONS
OR SOLVENTS





DESERT TAN



OLIVE DRAB




FLAT BLACK

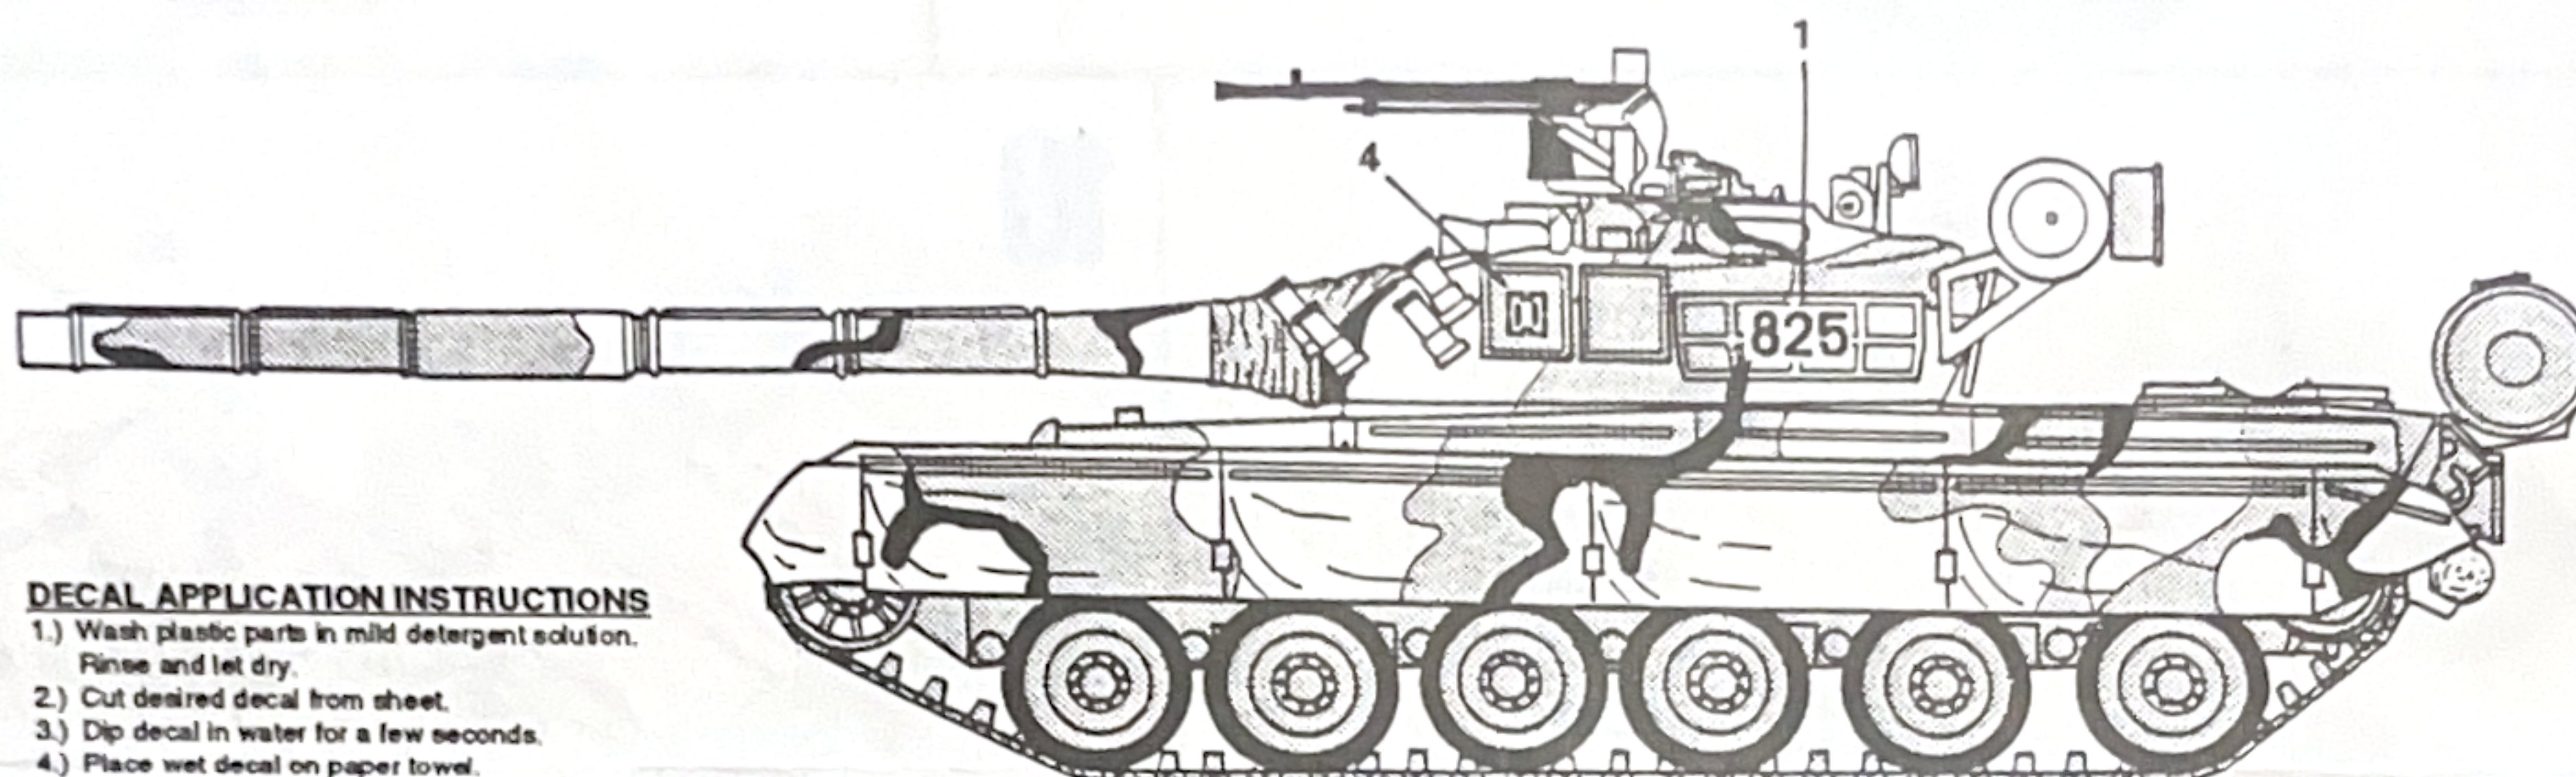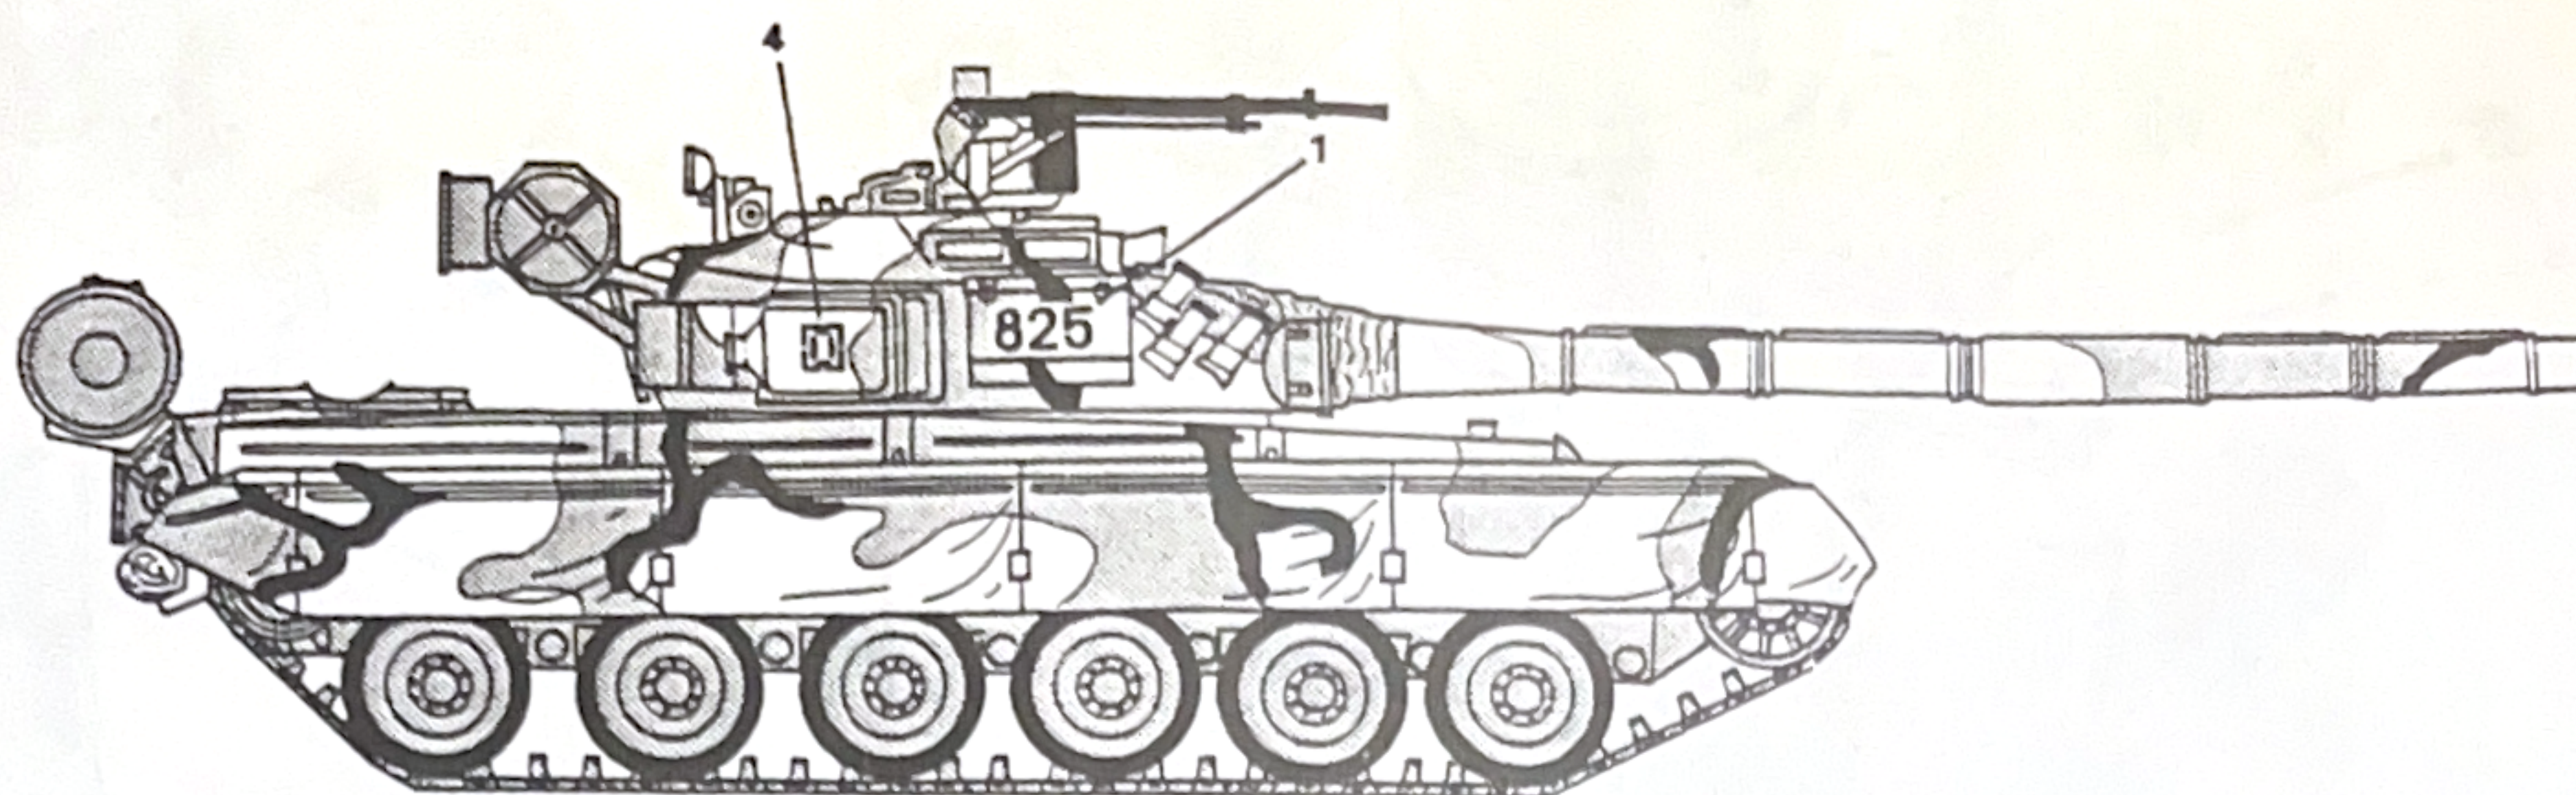

DECAL APPLICATION INSTRUCTIONS

- 1.) Wash plastic parts in mild detergent solution. Rinse and let dry.
- 2.) Cut desired decal from sheet.
- 3.) Dip decal in water for a few seconds.
- 4.) Place wet decal on paper towel.
- 5.) Wait until decal is movable on paper backing.
- 6.) Place decal in position on model, face up and slide backing away.
- 7.) Press out air bubbles with a soft damp cloth.
- 8.) Milkyness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
- 9.) Do not touch decal until fully dry.

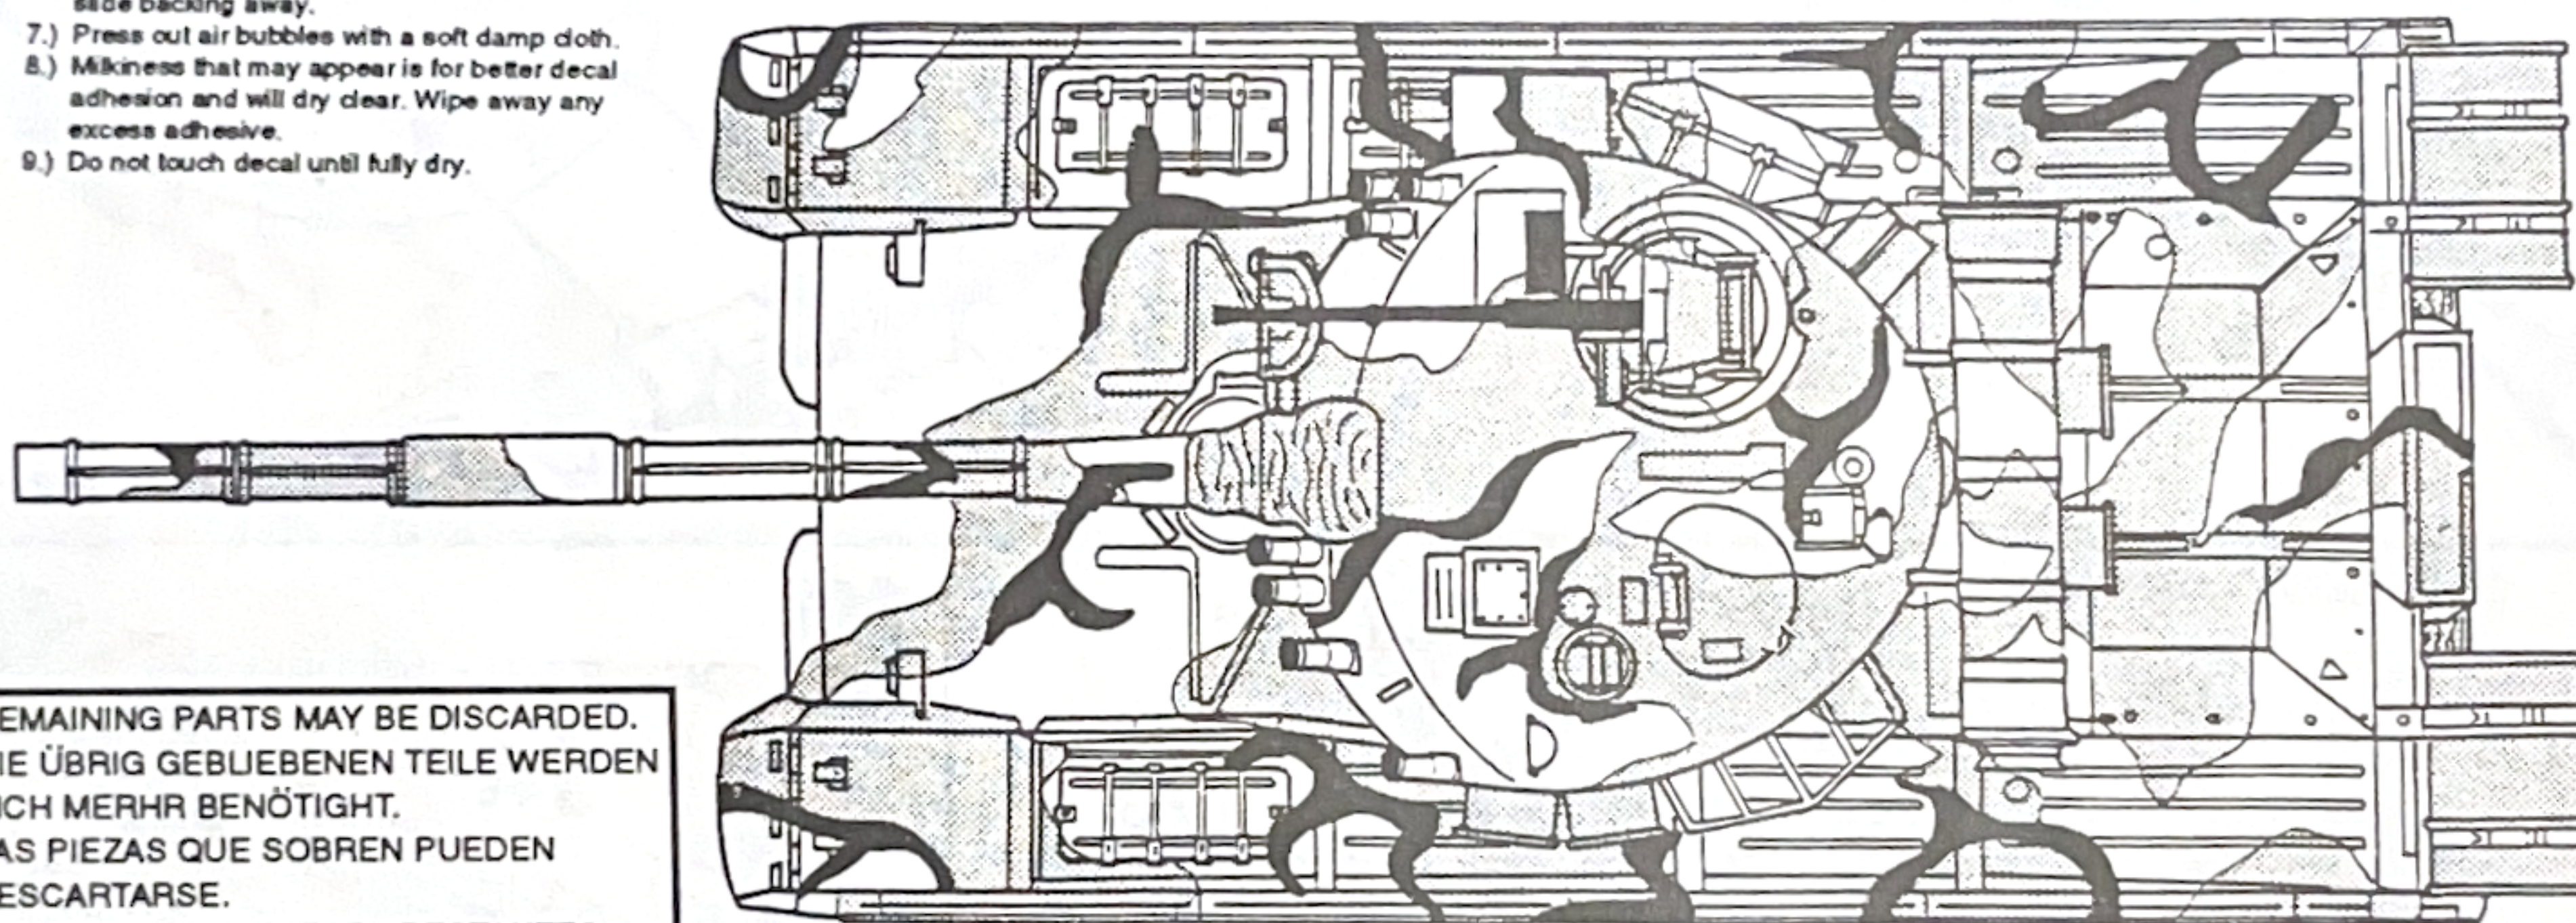

- REMAINING PARTS MAY BE DISCARDED.
- DIE ÜBRIG GEBLIEBENEN TEILE WERDEN NICHT MERHR BENÖTIGT.
- LAS PIEZAS QUE SOBREN PUEDEN DESCARTARSE.
- SE DEFAIRE DES PIÉCES RESTANTES.

