









## F-105 corrected forward fuselage , ventral fin for HB kits

### In order to fit replacement parts perfectly we recommend

- Cut off the nose sections of fuselage halves along the panel lines just behind the gun bay as shown at pic.1 Also to remove the rest of the gun bay rear wall (pic. 1a)
- Slightly to glue fuselage halves together and level the surface with a file (pic.2) Then to divide fuselage into two halves again
- To assemble the nose wheel well and remove small portions of plastic as shown at pic. 3
- To complete fuselage in accordance with the kit instruction and attach the replacement forward fuselage as to be shown at pic. 4

### In order to fit the ventral fin

- Cut off the kit ventral fin (pic.5)
- Process the gap as shown at pic. 6
- Insert the replacement ventral fin into the slot

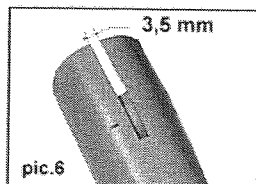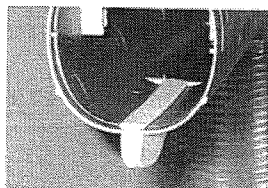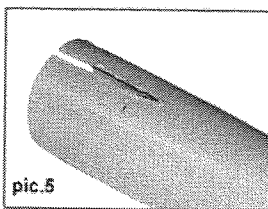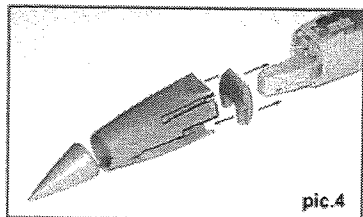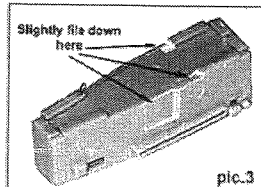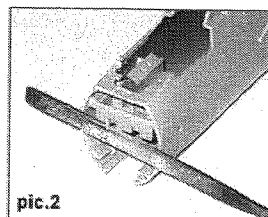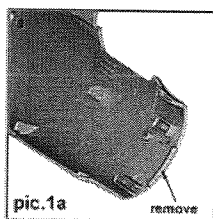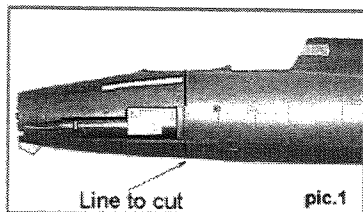

**DM48020**

[www.d mold.ucoz.com](http://www.d mold.ucoz.com)

Copyright © 2009 DMold Modelworks  
All rights reserved.