

1:72 SCALE

Fw190A-6



EASY ASSEMBLY AUTHENTIC KIT



cyanoacrylate glue
强力胶



weight
配重



make hole
钻孔



option
选择



no cement
不涂胶水




decal
贴纸

bend
弯曲

Fw190A-6, 5/JG54, Autumn 1943.

Fw190 A-6 1/JG54, Hauptmann Walter Nowotny, 11.1943.

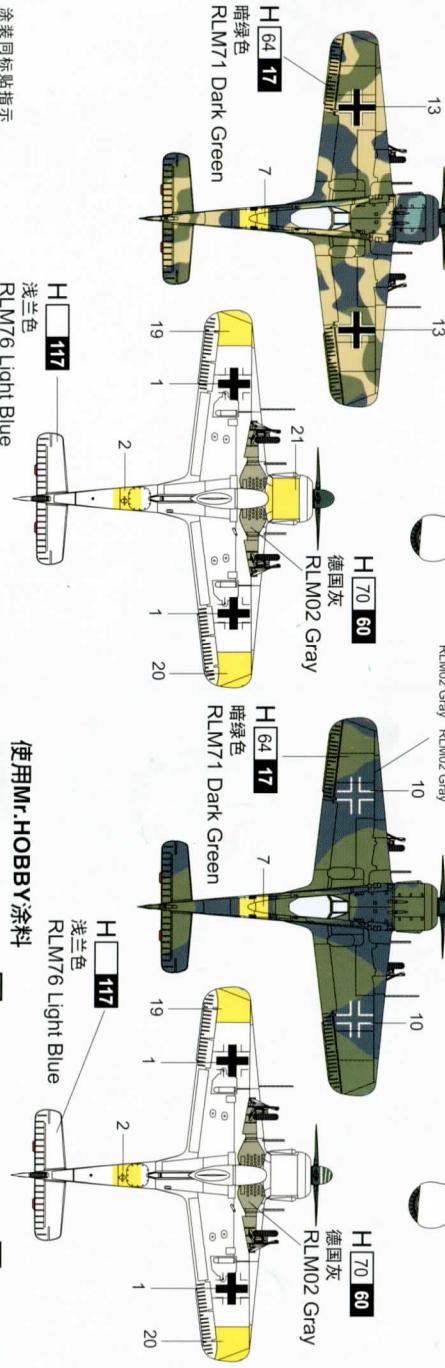

涂装同标贴指示

Painting & Marking guide

使用Mr.HOBBY涂料

Mr. Color used

AQUEOUS HOBBY COLOUR

MR.COLOUR

* Some paints may not be available in your country. Please check your local hobby shop for substitute


How to apply the decals

- Cut off the decal from the decal paper and put it into the warm water 40° for 10 seconds.
- Take the decal from the water and put it on a piece of clean cloth.
- Remove the decal slowly from the paper to the targeted location by a wet finger.
- Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


水贴纸的使用方法:

- 把相关的印花从水贴纸上剪下，放入40℃左右的温水中浸10秒。
- 然后将印花放在干净的布上。
- 拿上印花纸板，手指蘸水将印花移到适当的位置。
- 用软干布轻压印花直至水干，气泡消失。


部品图 Parts

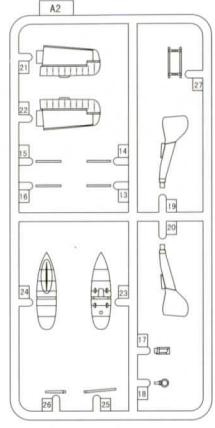

不用的部件: A3 A4
Unused parts

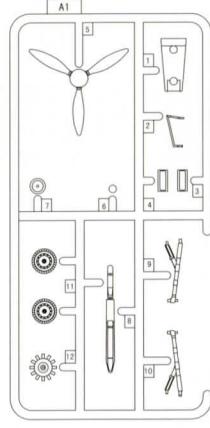

铁轴: ———
Shaft

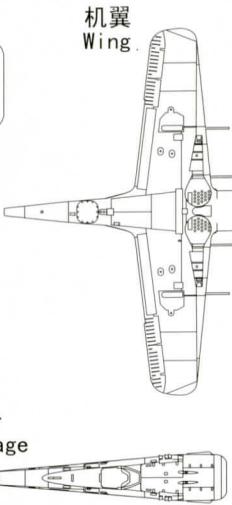


机身
Fuselage

机翼
Wing

2


<<右侧主起落架>>

Right main undercarriage

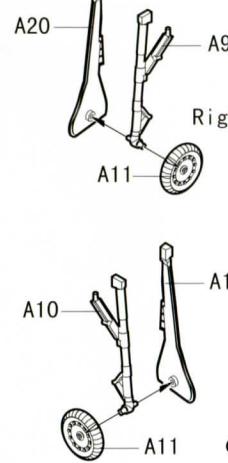

<<右侧主起落架>>

Right main undercarriage

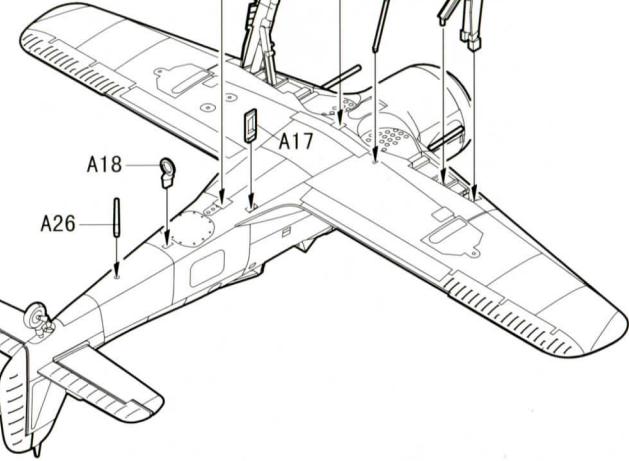


<<左侧主起落架>>

<<左侧主起落架>>

Left main undercarriage


1

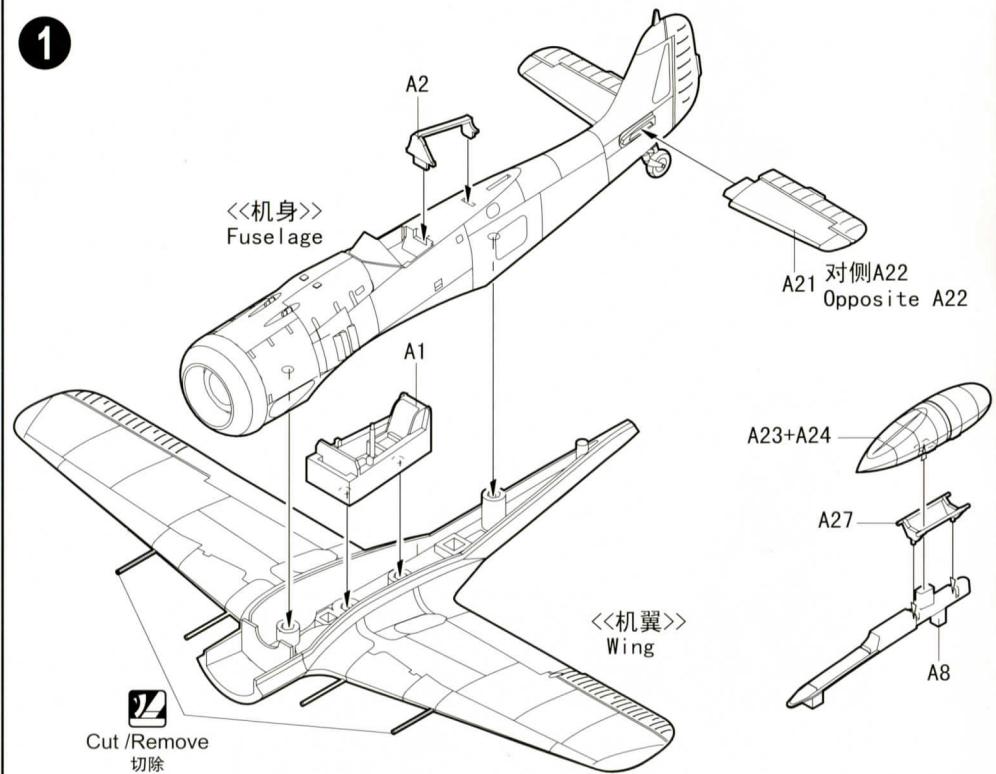

<<机身>>
Fuselage

A1

A21 对侧A22
Opposite A22

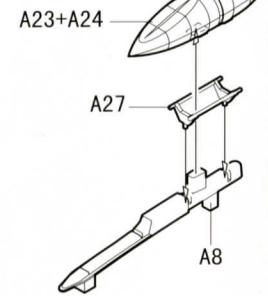

<<机翼>>
Wing

Cut /Remove
切除


3

<<座舱罩>>

Canopy

<<螺旋桨>>

Propeller

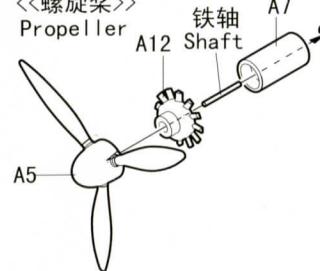

A16

铁轴

Shaft