





DETAIL AFTER REMOVAL FROM SPRUES


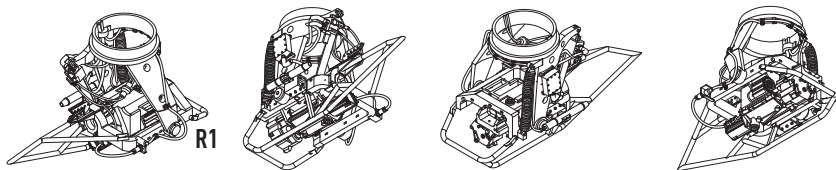


R2






USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS





R3

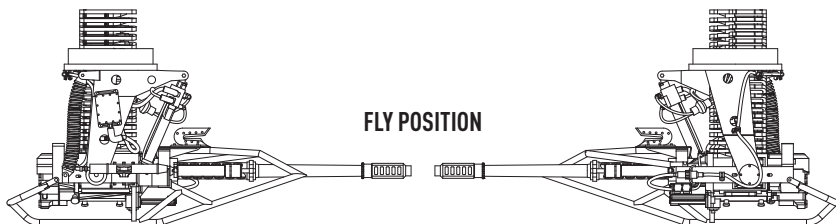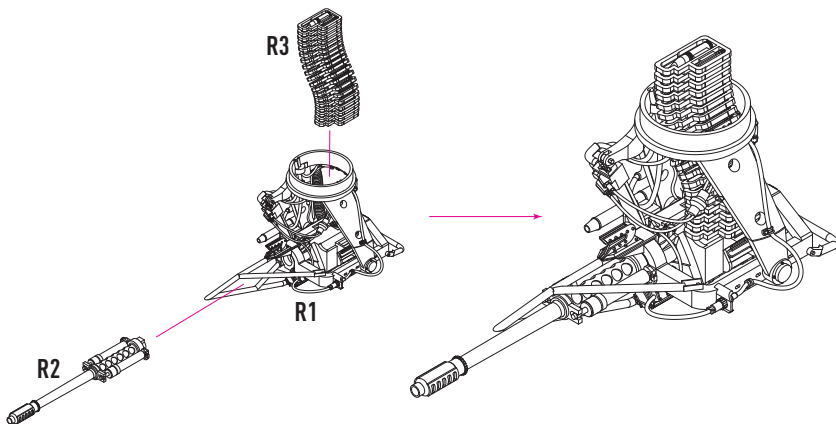

FLY POSITION

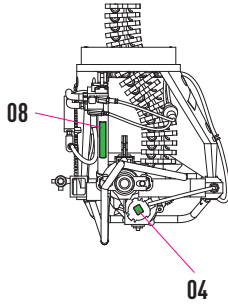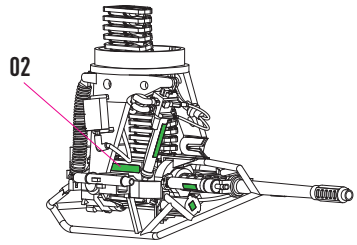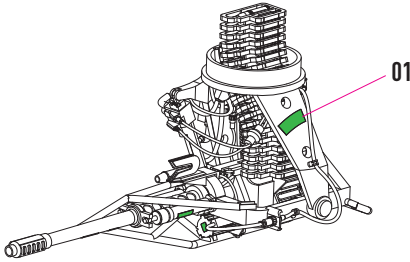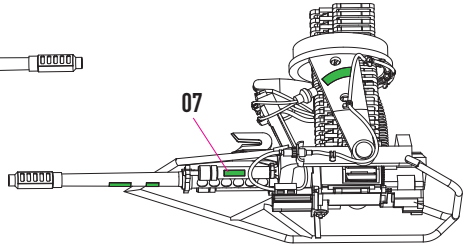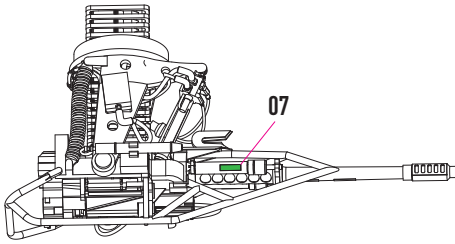

04

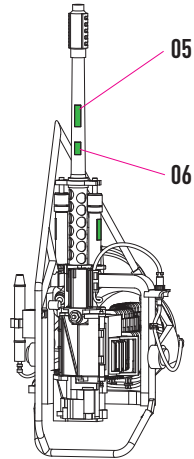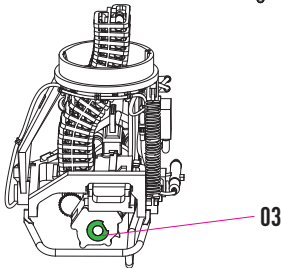

06