



Set 44s-146-6 Qantaslink BAe146s

1/144 Scale



Recommended Kit:

1:144 Revell RJ85 for the BAe146-200,
or Revell RJ70 for the BAe146-100

PLEASE NOTE: ALL decals need to be applied to a smooth and glossy surface!

PLEASE READ THESE INSTRUCTIONS, as these decals may apply a bit differently than you may be used to using.


Next Generation DIGITAL Silk decals are extremely durable and do not easily scratch, and are printed on a continuous, clear film. Each design will need to be cut out individually. **Next Generation** DIGITAL Silk decals do not generally need to be clear coated prior to use. Use care when applying as the decal film is **exceptionally** thin. **Next Generation** DIGITAL Silk decals are tough, durable and exceptionally *flexible*. **DO NOT** float the decal off of the backing paper, as it will curl up and likely become unusable. Rather, soak the decal in warm water for about 5 seconds then remove it and allow it to sit for 30 seconds before trying to slide it off of the backing paper. "Normal" decal setting solutions can be used with these decals but will have little effect. For most applications, NO decal solvent will be needed. If you feel the need, we recommend using Microscale's Micro Set (a wetting agent) and Micro Sol (a SOLvent), but note the decal solvents only effect the clear film and have **LITTLE** effect on the inks. Brush the Micro Set directly on your model before sliding the decal into position. Only slide a small portion of the decal off of the backing paper, place the decal into position then pull out the backing paper allowing the decal to land in place. After you adjust the decal into position and soak up the excess liquid, apply a thin coat of Micro Sol (the **solvent**) to soften the clear carrier. It is important to get the Micro Sol **under** the decal, as the solvent has little effect on the ink, but it will dissolve the clear carrier which allows the decal to dig into the paint. After this coat dries and you are certain the decal is in its final position, apply a second heavier coat of Micro Sol. Note repeated applications of decal solvent will only wash away the glue. After the decals are **completely** dry, clear coating your model after applying these (or any) decals is a must! I repeat this is a **must**. The clear coat will seal your decal and prevent it from becoming damaged. Airbrush lacquers only in very light, misting coats. Another method to clear coat the decal is to use Future acrylic floor polish. Good luck and thank you for using **Next Generation** DIGITAL Silk decals!



Set 44s-146-6 Qantaslink BAe146s

"Civil Decals for the Civilized"

Qantaslink is a regional brand of the Australian airline Qantas. Qantaslink operated the BAe146 prior to its switch to Dash 8s and 717s, and all have been retired from the fleet. We have also provided optional titles for Qantas New Zealand, Southern and Airlink which were once used on the BAe146 fleet prior to the Qantaslink branding in 2002.

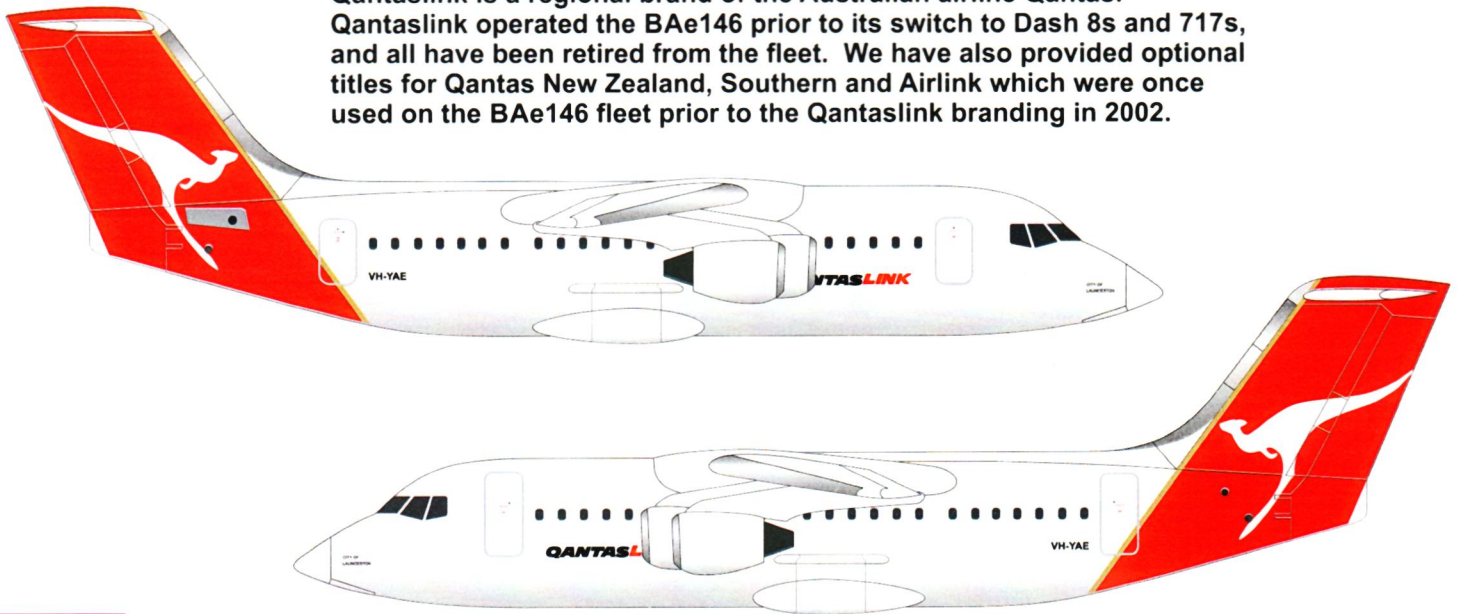


COPYRIGHT © 2020 DRAWDecal.com



DRAW Decal Set 44s-146-6
Qantaslink BAe146s


Paint entire aircraft, wings and engine nacelles gloss white, then paint the tail red. Apply the white kangaroo logo over the red tail. Apply gold stripe between red and white areas. Apply choice of titles according to chart above for the previous Qantas franchise carriers or use the later "QANTASLINK" titles for the final livery.

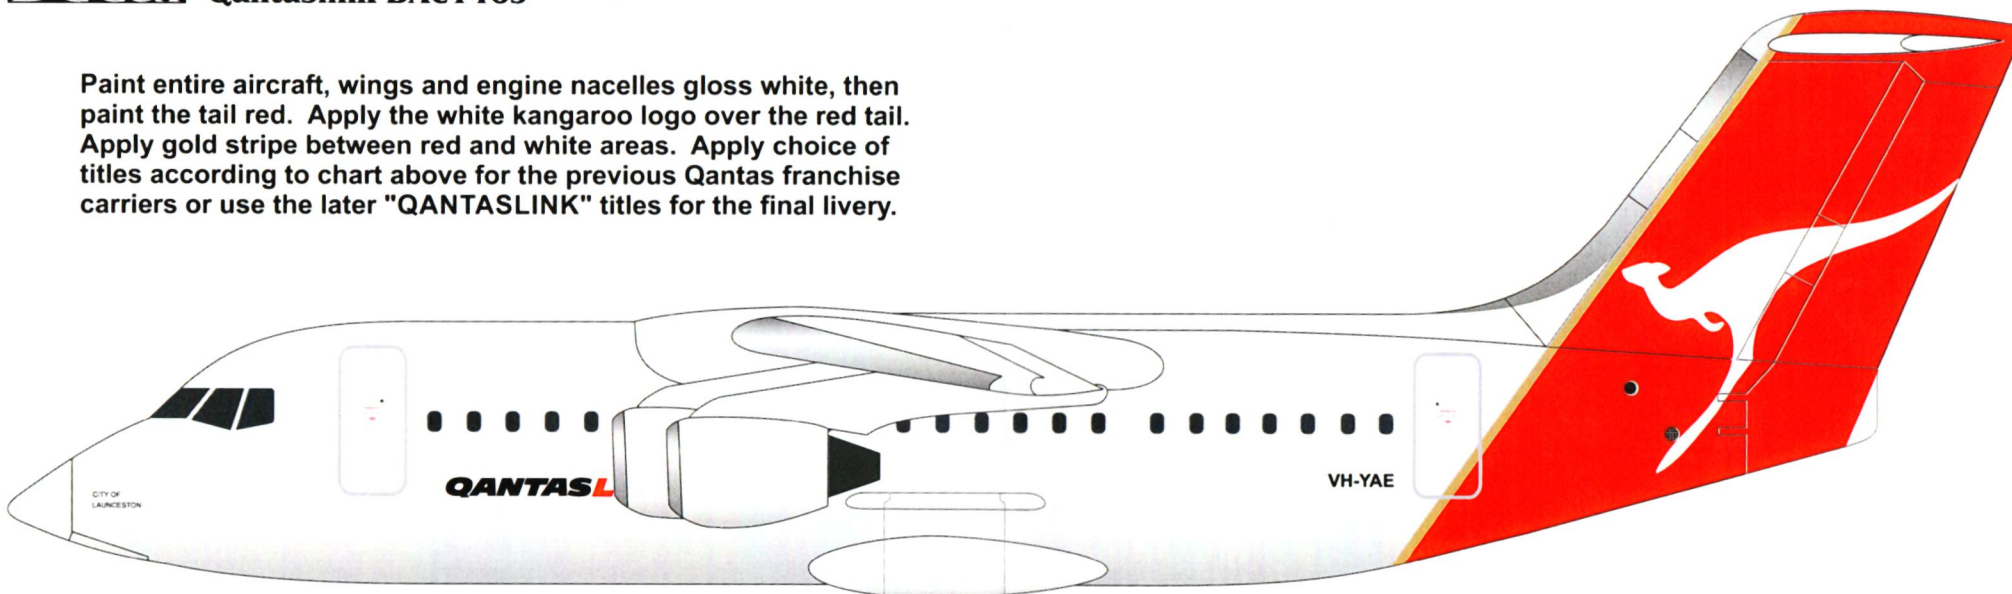


SOUTHERN BAe146-200s VH-YAD "City of Hobart" and VH-YAE "City of Launceston"

**QANTAS
NEW ZEALAND** BAe146-200 ZK-NZC, BAe146-300s ZK-NZF, -NZG, -NZH, -NZI, -NZJ, -NZK, -NZL, -NZM and -NZN

AIRLINK BAe146-100s VH-NJC, -NJE, -NJR, -NJT, -NJZ, BAe146-200s VH-NJG, -NJH, -NJJ, -NJQ and -NJU,
BAe 146-300s VH-NJL and VH-NJN

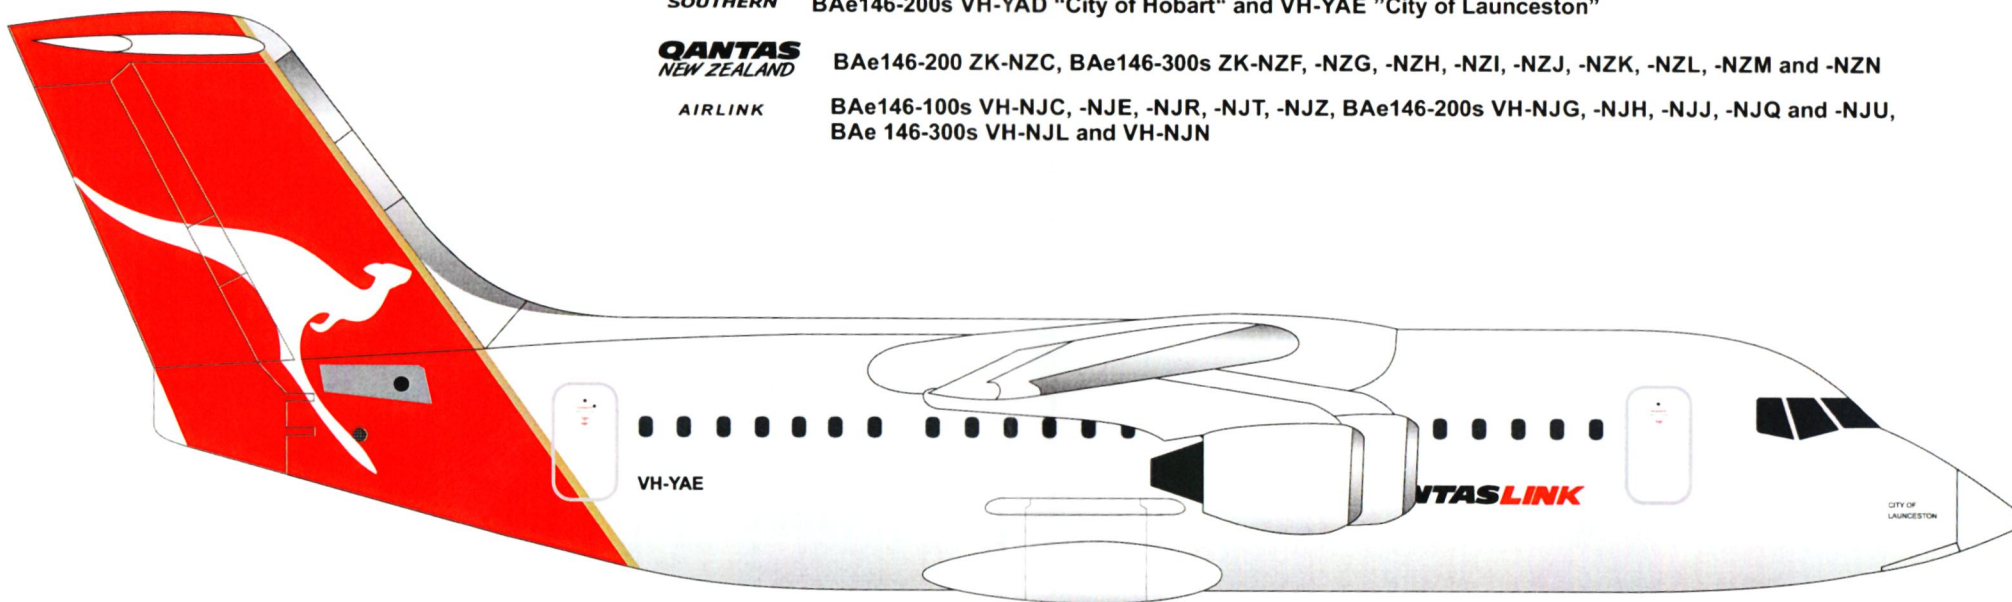

We strongly urge you to fill in the kit's open windows prior to painting. Wings and horizontal stabs have standard bare metal leading edges, always consult prototype photos.

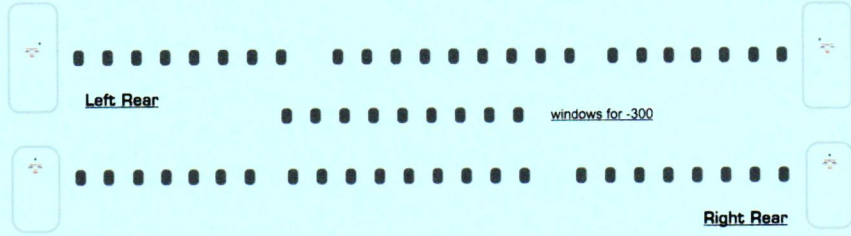

1:144 Scale

CITY OF LAUNCESTON CITY OF HOBART
CITY OF LAUNCESTON CITY OF HOBART



AIRLINK AIRLINK **QANTASLINK** **QANTASLINK**

VH-YAD

QANTAS QANTAS

SOUTHERN C E G H J L N Q R T U Z ZK-NZC -NZF -NZM G H I J K L N C F G H I J K L M N

VH-YAD

NEW ZEALAND NEW ZEALAND

VH-YAE VH-YAE D E D E

SOUTHERN C E G H J L N Q R T U Z ZK-NZC -NZF -NZM G H I J K L N C F G H I J K L M N

VH-NJC -NJG -NJL E H J N Q R T U Z VH-NJC -NJG -NJL E H J N Q R T U Z

ZK-NZC F G H I J K L M N VH-YAD VH-YAE VH-NJC E G H J L N Q R T U Z

DRAWDecal.com



Set 44s-146-6
Qantaslink BAe146s