


MODEL ALLIANCE

LIMITED EDITION DECALS

RAF

Tempest Mk.II/F.2/F.6

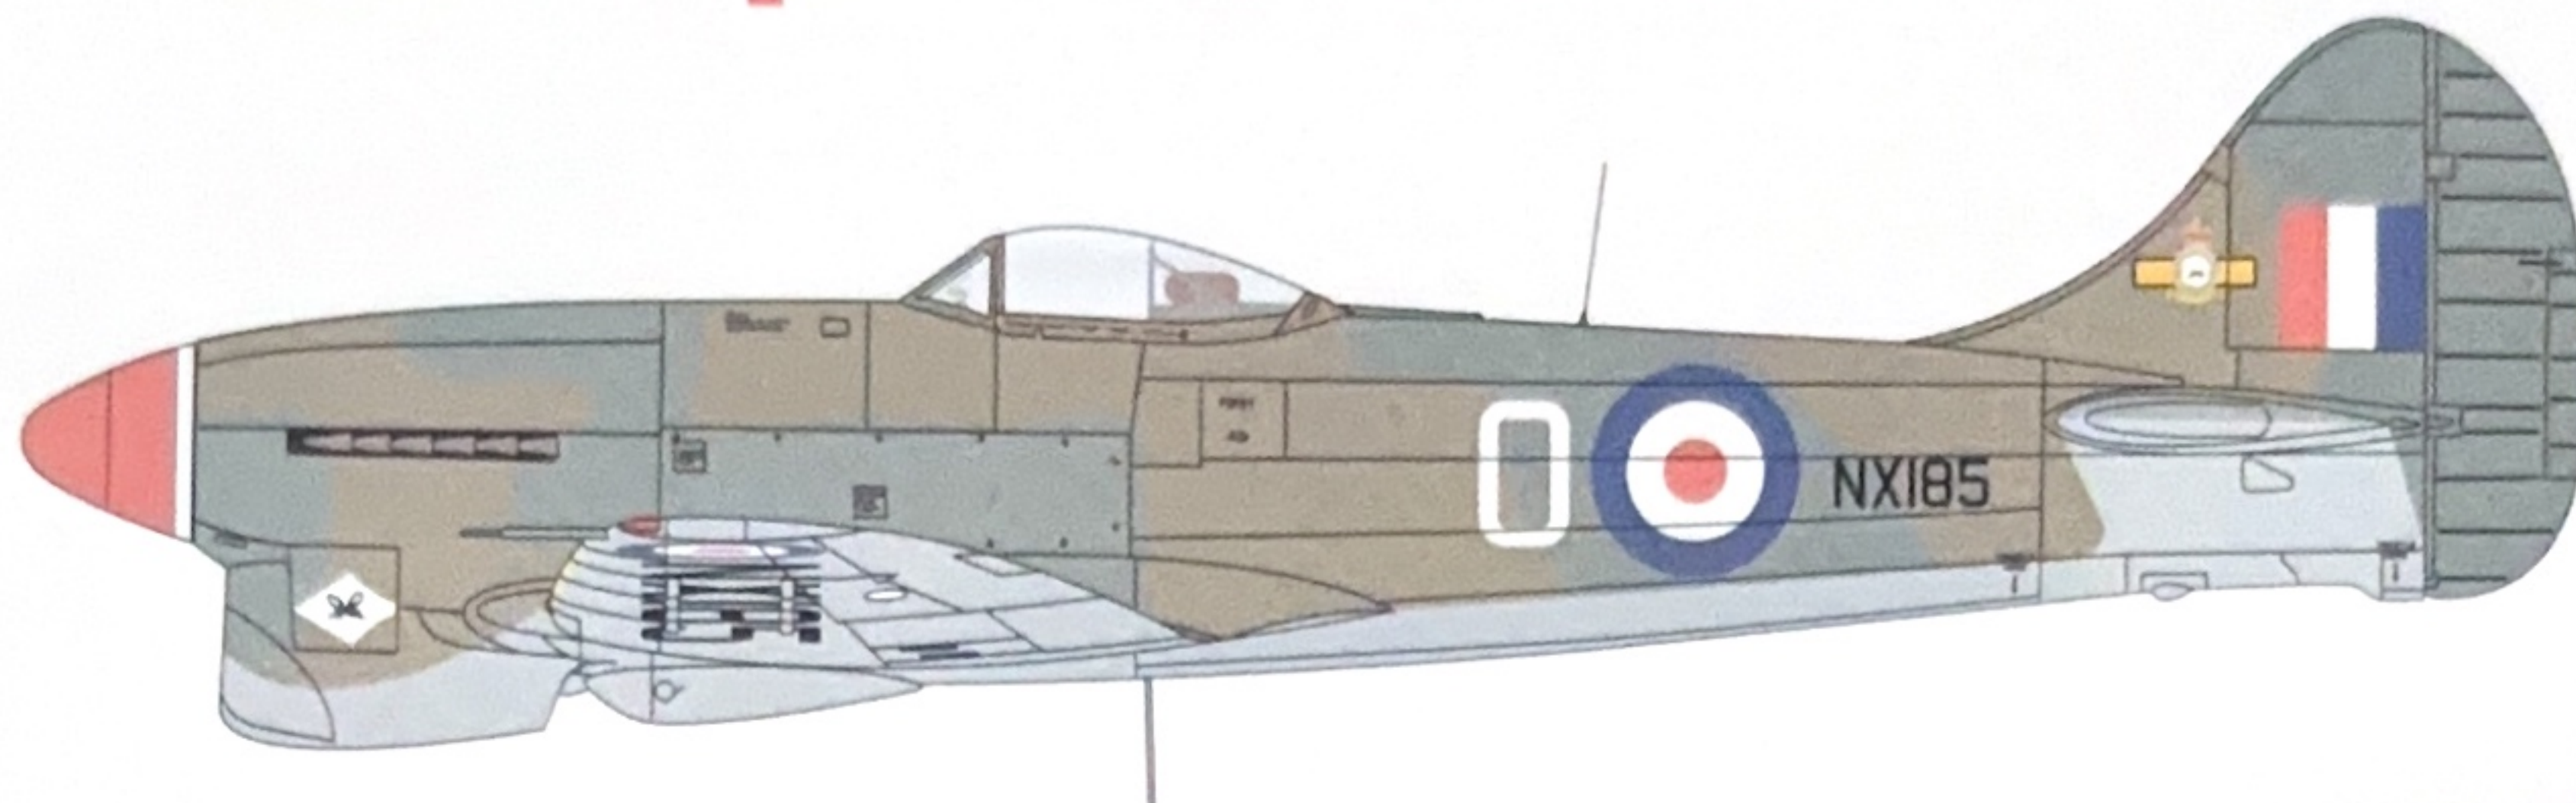

Aviation Workshop
Publications Ltd

MAS-729021
MAS-489021

PREMIER PLUS RANGE




Model Alliance Decals - UK & The Aviation Workshop are trading names of The Aviation Workshop Publications Ltd & Gary Madgwick. The On-Target Publications, AIRframe Journal, Spot-Lights & Conflicts / AirWars are all names registered to The Aviation Workshop Publications Ltd and may not be used without the permission in writing of the The Aviation Workshop Publications Ltd.

Decals Instructions:

These decals are a high quality product produced for The Aviation Workshop by Colourslide -UK. The decals are very thin but very strong and flexible.

1. Before painting the model, clean with Model Alliance 'Model Wipes'. This cleans the grease and any dust from the surface.
2. We recommend that you wear Model Alliance 'Model Gloves' to handle the model whilst preparing it for painting.
3. For best results, spray the model with a Light Grey primer, any defects can then be made good.
4. For demarcation and camouflage lines, we recommend that you use Model Alliance 'Masking Film'.
5. If you wish to use a decal fixing and finishing system, we recommend you use the Microscale System, do not use strong decal solvents such as Solvaset.
6. Once you are happy with the painting of the model, coat it in a clear gloss finish, this can either be over the entire model if the model is finished glossy or spot gloss finish in the area's that have a decal. A good surface finish are clear floor shine's such as Johnson wax - Klear. This is sold under different names around the world. Klear can be either brushed on or sprayed.
7. Cut each decal from the sheet as needed. Do not trim the clear varnish finish to close to the decal. Submerge the decal in warm water for about 10 seconds and remove to a flat surface and wait for the decal to release from the backing sheet. A small amount of washing up liquid in the warm water helps the decal release from the sheet.
8. These decals do not require a decal setting solution to lay flat or to conform to the model contours.
9. With a pair of tweezers to hold the backing sheet, slide the decal in position on the model using a small soft brush. Do not use an old painting brush as bits can get under the decal.
10. Carefully remove any excess water with a soft cloth or tissue once you are happy with the position of the decal. Should you make a mistake, dip a brush in the warm water and ease under the edge of the decal. The decal will then easily move to the correct position and again remove the excess water.
11. When the decals are completely dry, gently wipe off all excess decal adhesive.
12. Leave the model to dry completely, spray or paint over the decals with a further coat of Klear or gloss.
13. Should the decal silver for any reason, this is because small air bubbles are under the decal. If found, prick with a pin and apply a small drop of Micro Sol to the decal and allow to dry for up to 12 hours.
14. Finally, coat the model with the required finish, either gloss, semi gloss or matt.
15. Decals are best stored flat and in a cool, dry place and should not be stored in direct sunlight, hot or humid conditions.
16. Should you have any problems with these decals please contact us at the address below.

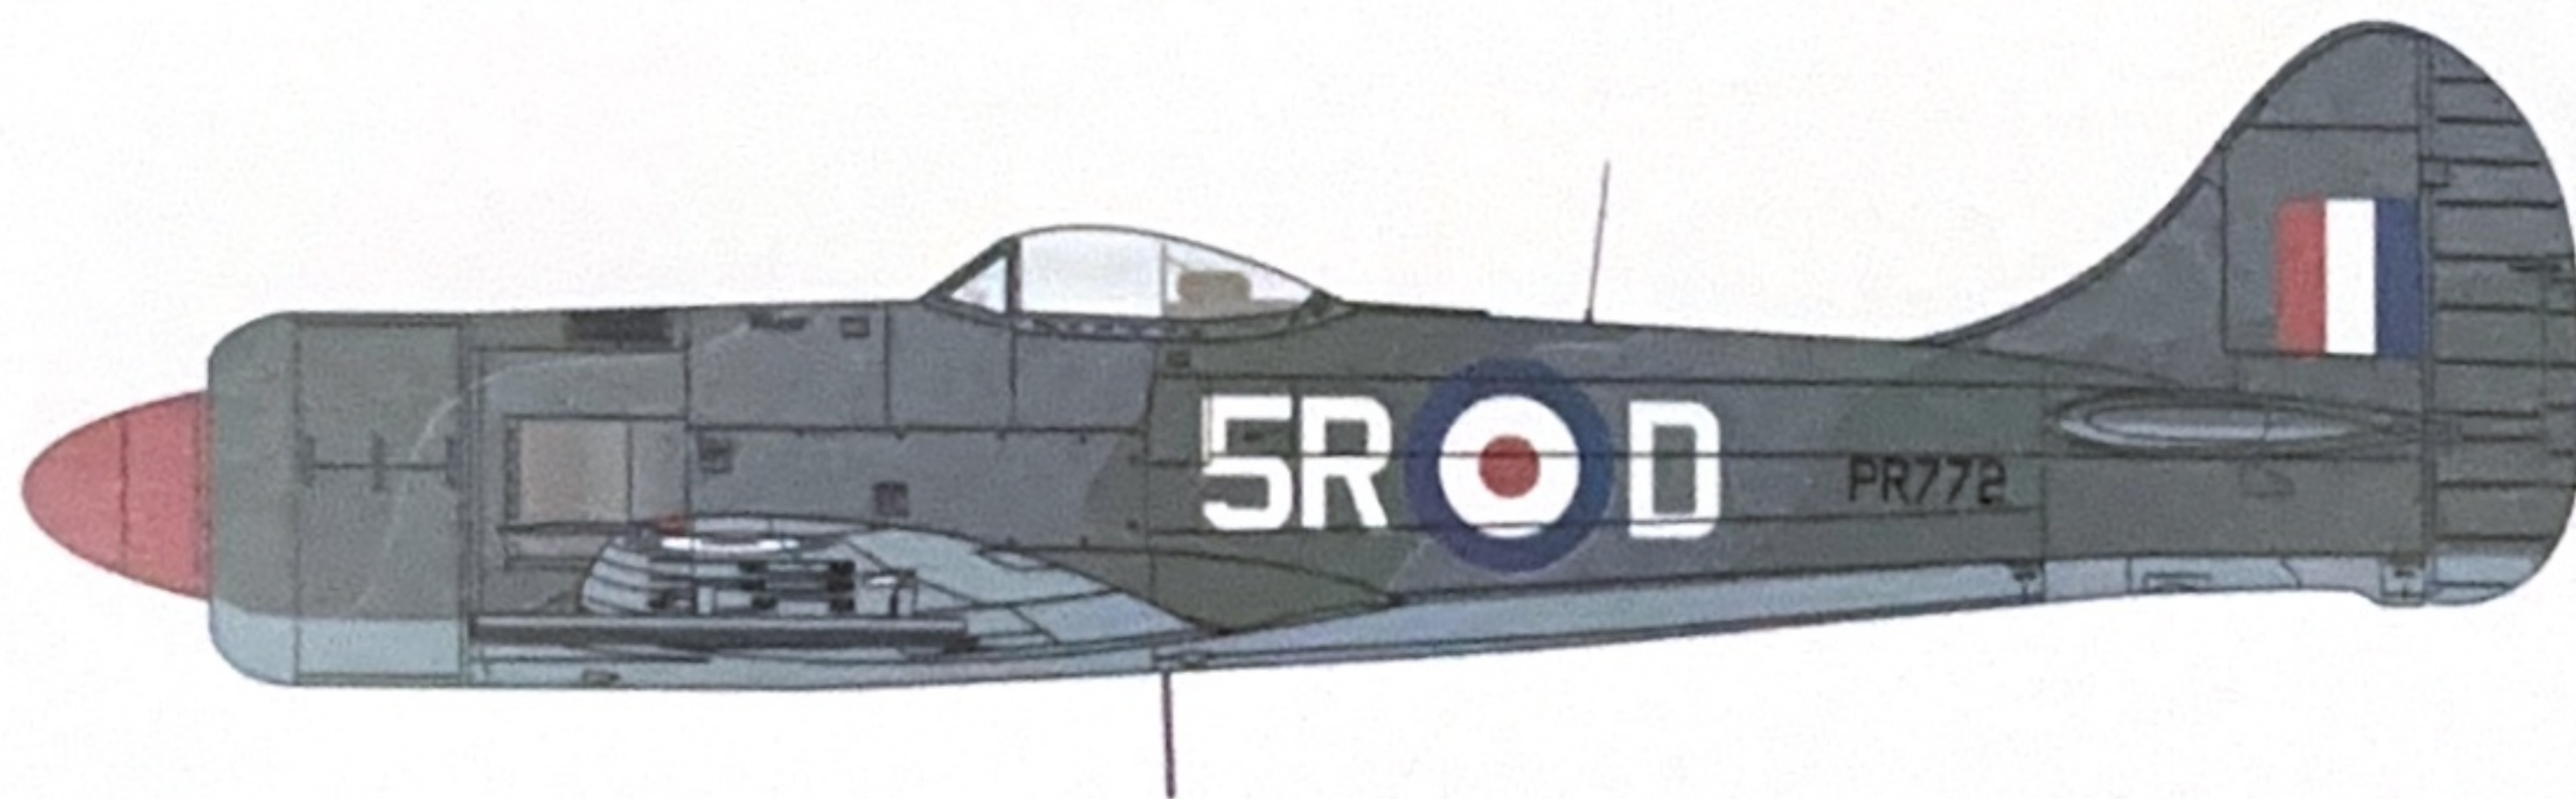

The Aviation Workshop



13 Charlton Road, Wantage,
Oxon, OX12 8EP, UK

www.theaviationworkshop.co.uk

Email: aviation-workshop@btconnect.com

RAF Tempest Mk.II/F.2/F.6

Hawker Tempest F.2, PR772, 'SR.D' of 33 Squadron, RAF, RAF Kuala Lumpur, Malaya, 1951.
Dark Green, Dark Sea Grey upper surfaces over PRU Blue undersides. Red spinner.

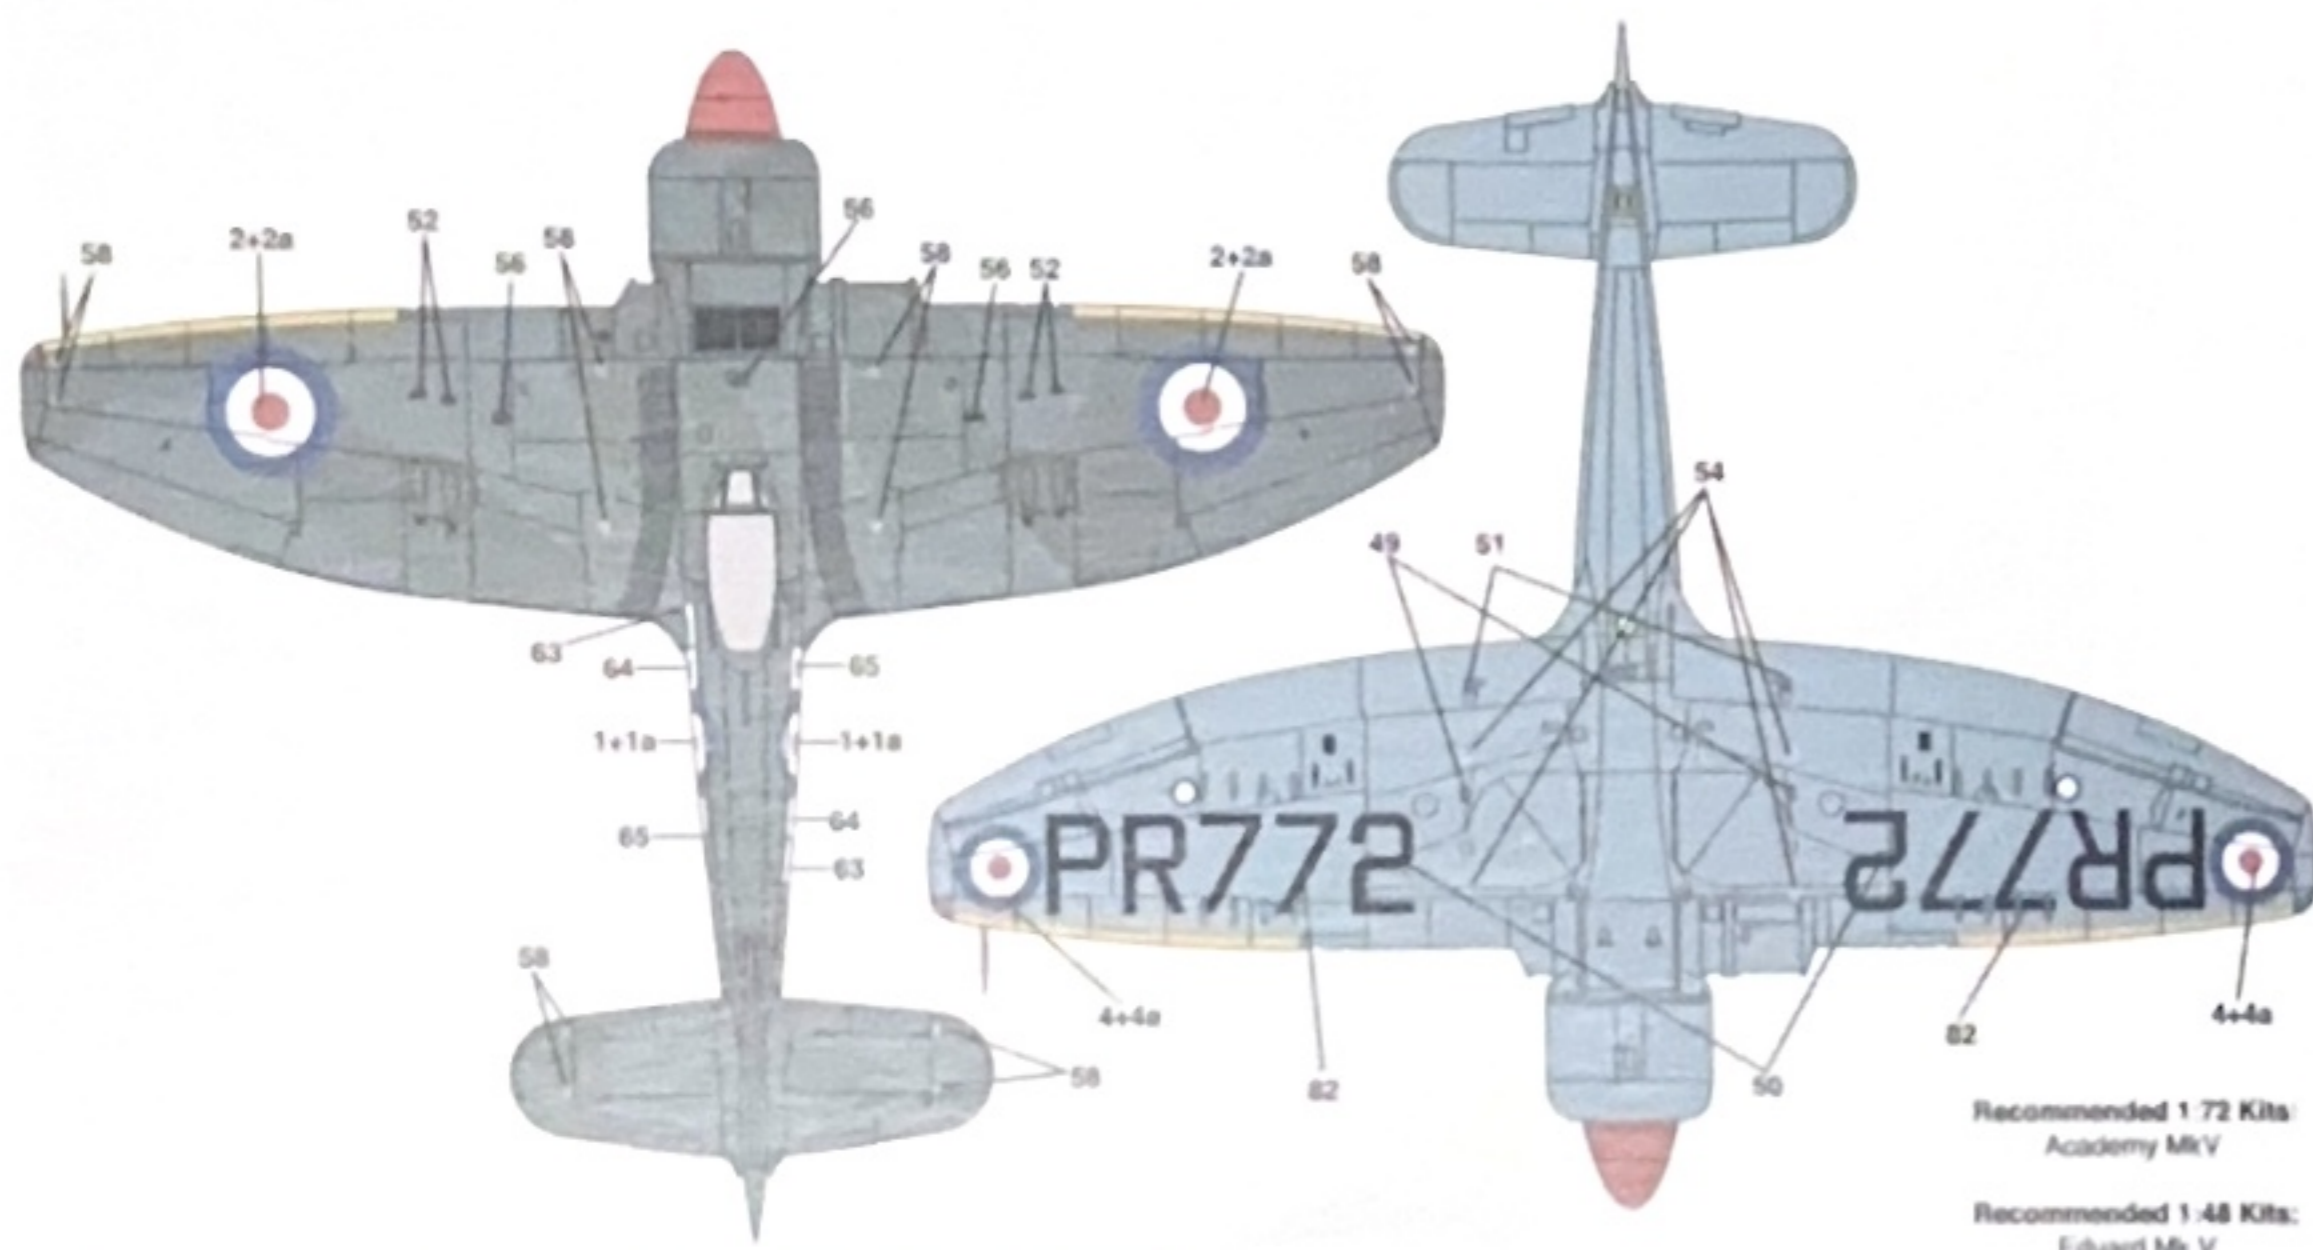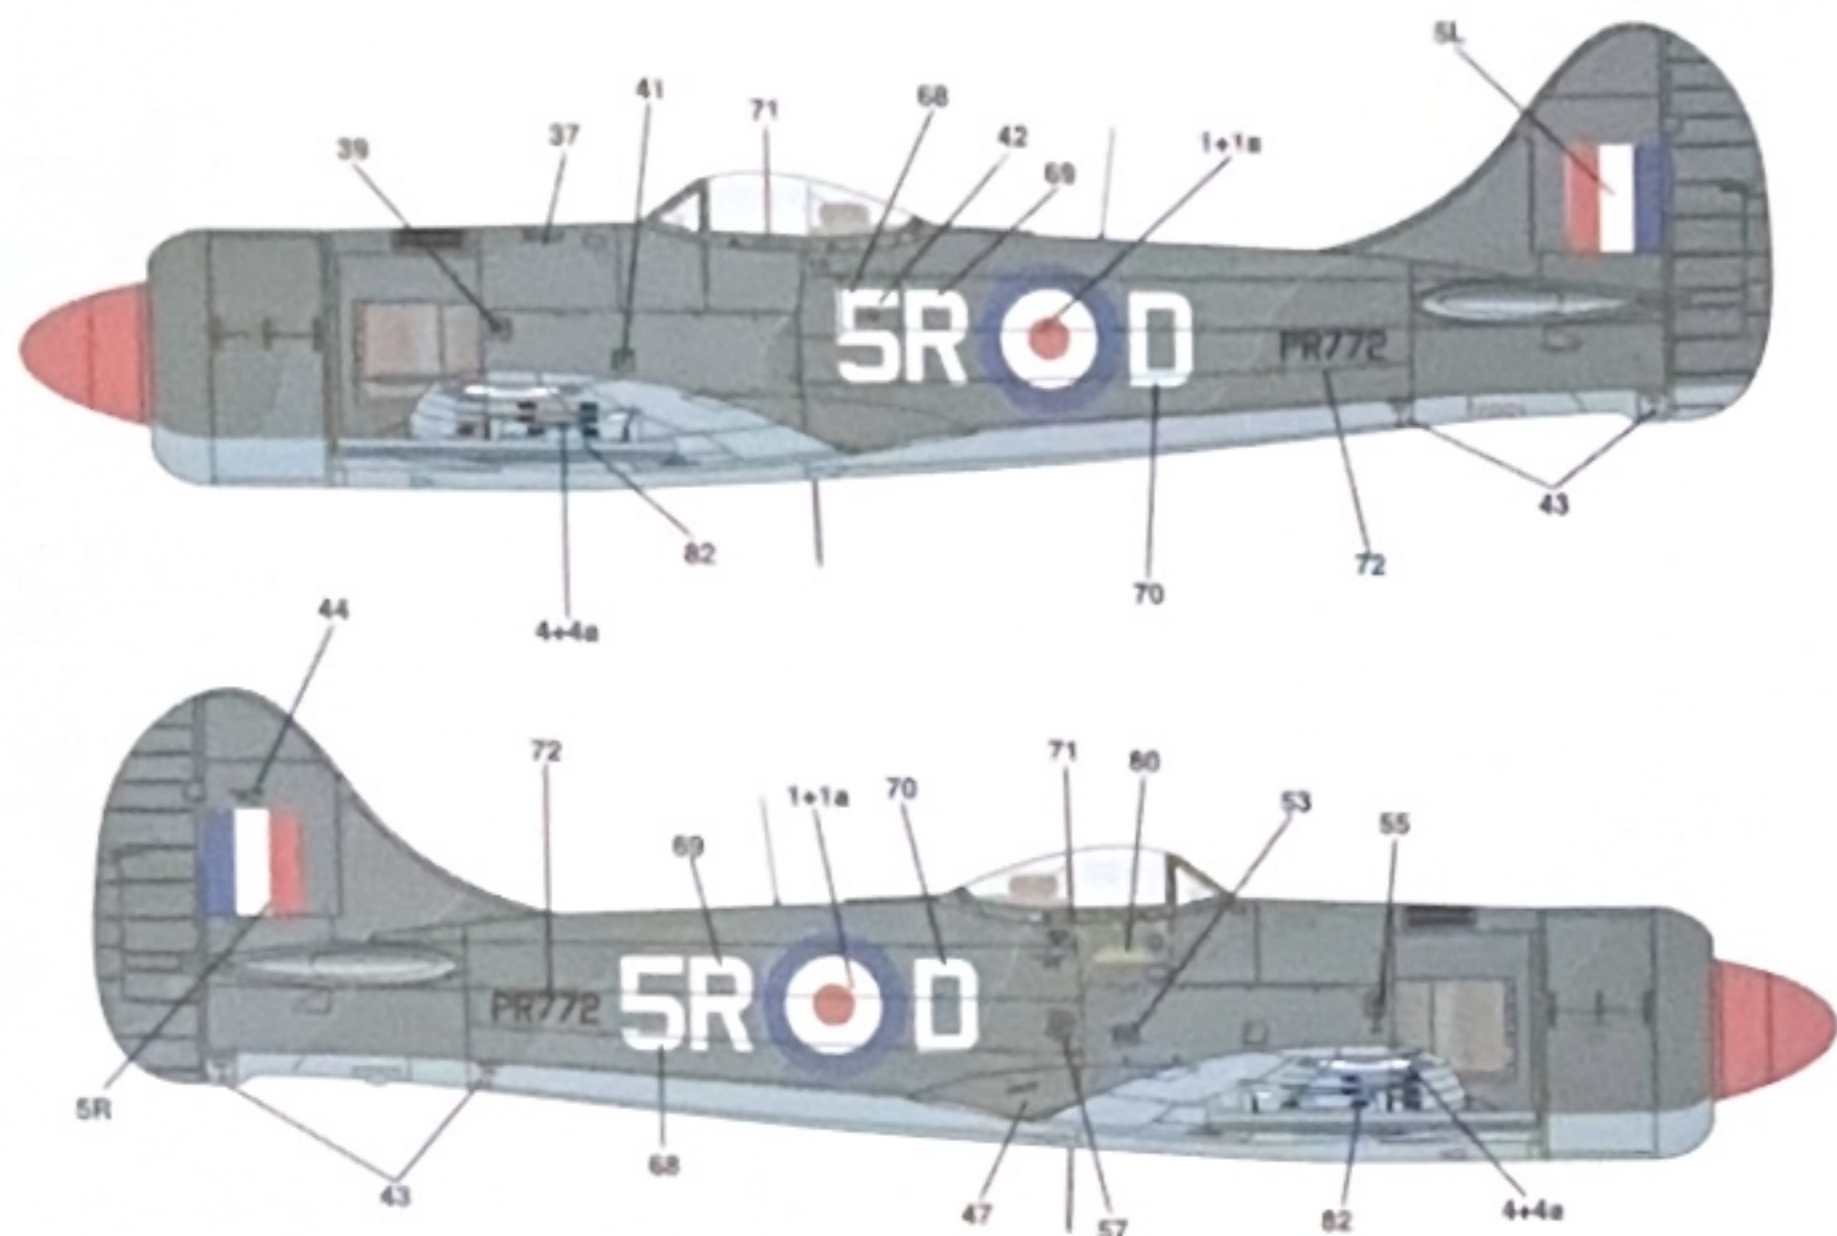



Recommended 1:72 Kits:
Academy MkV
Recommended 1:48 Kits:
Eduard Mk.V

Dark Sea Grey FS36173 Humbrol 27 Xtracolor X003 Lifecolor LA138 Model Master 104	Dark Green FS 34079 Humbrol 116 Xtracolor X007 Lifecolor LA001 Model Master 1710	PRU Blue FS36189 Humbrol 145 Xtracolor X049 Lifecolor LA039 Model Master 1721	Identification Yellow FS17432 Humbrol 24 Xtracolor X011 Lifecolor LA042 Model Master 1560	Red FS20189 Humbrol 80 Xtracolor X027 Lifecolor LC36 Model Master 1393

Recommended 1:72 Conversion Sets:
Aviation Workshop F.2 Conversion Set
Aviation Workshop F.6 Conversion Set
Recommended 1:48 Conversion Sets:
Airwaves F.2 Conversion Set
Airwaves F.6 Conversion Set

RAF Tempest Mk.II/F.2/F.6

Hawker Tempest F.2, PR533, 'SR.V' of 33 Squadron, RAF, RAF Kuala Lumpur, Malaya, 1949-50.
Overall Painted Aluminium. Blue spinner with White backplate. Night Anti-Glare panel.

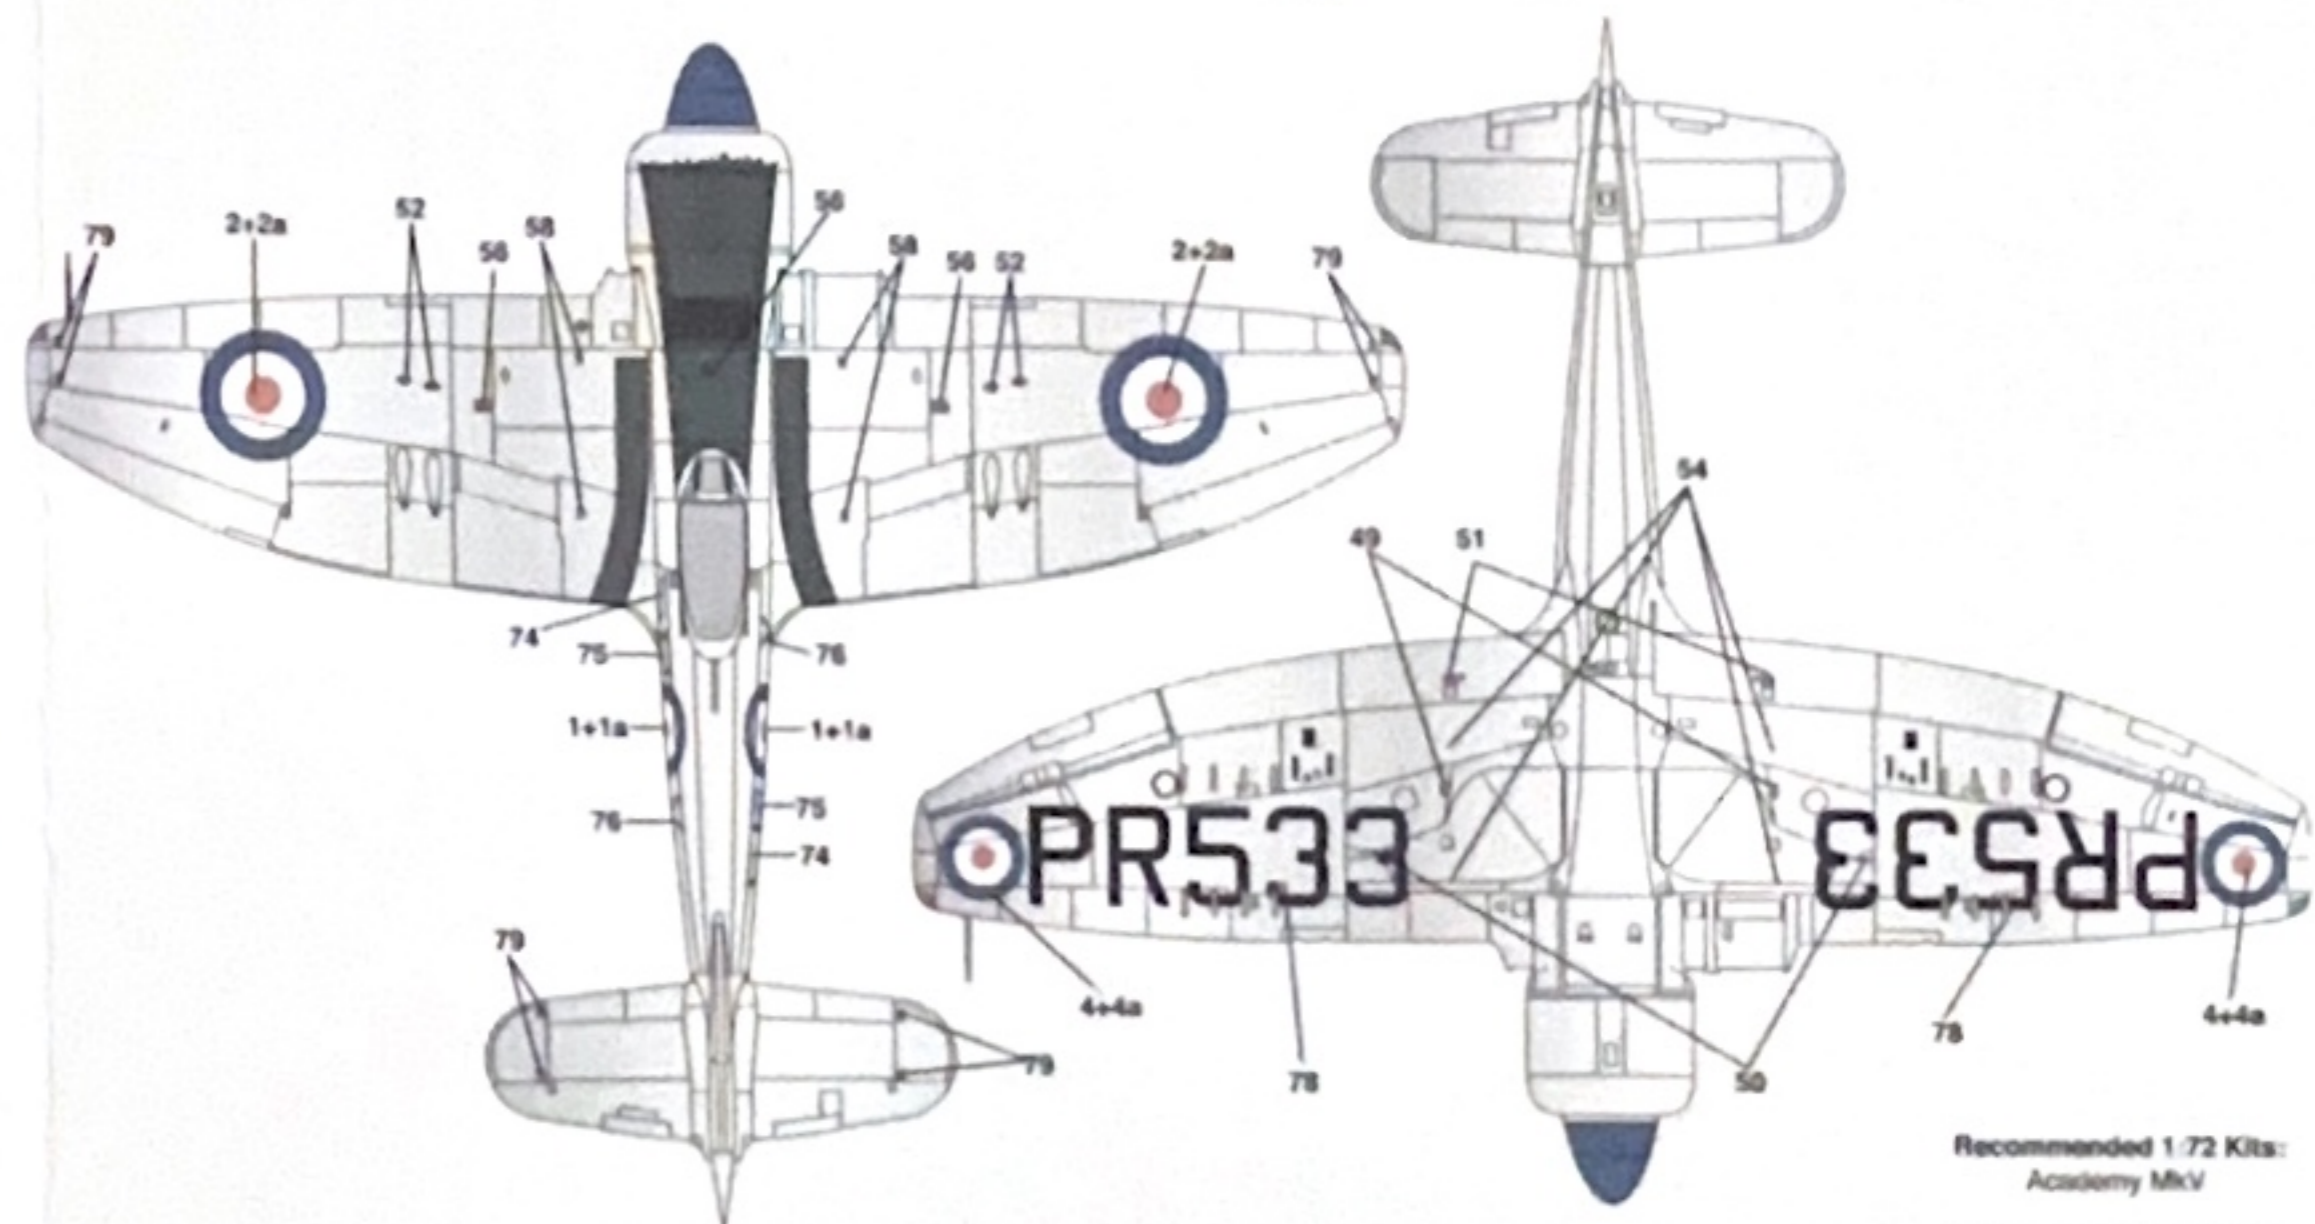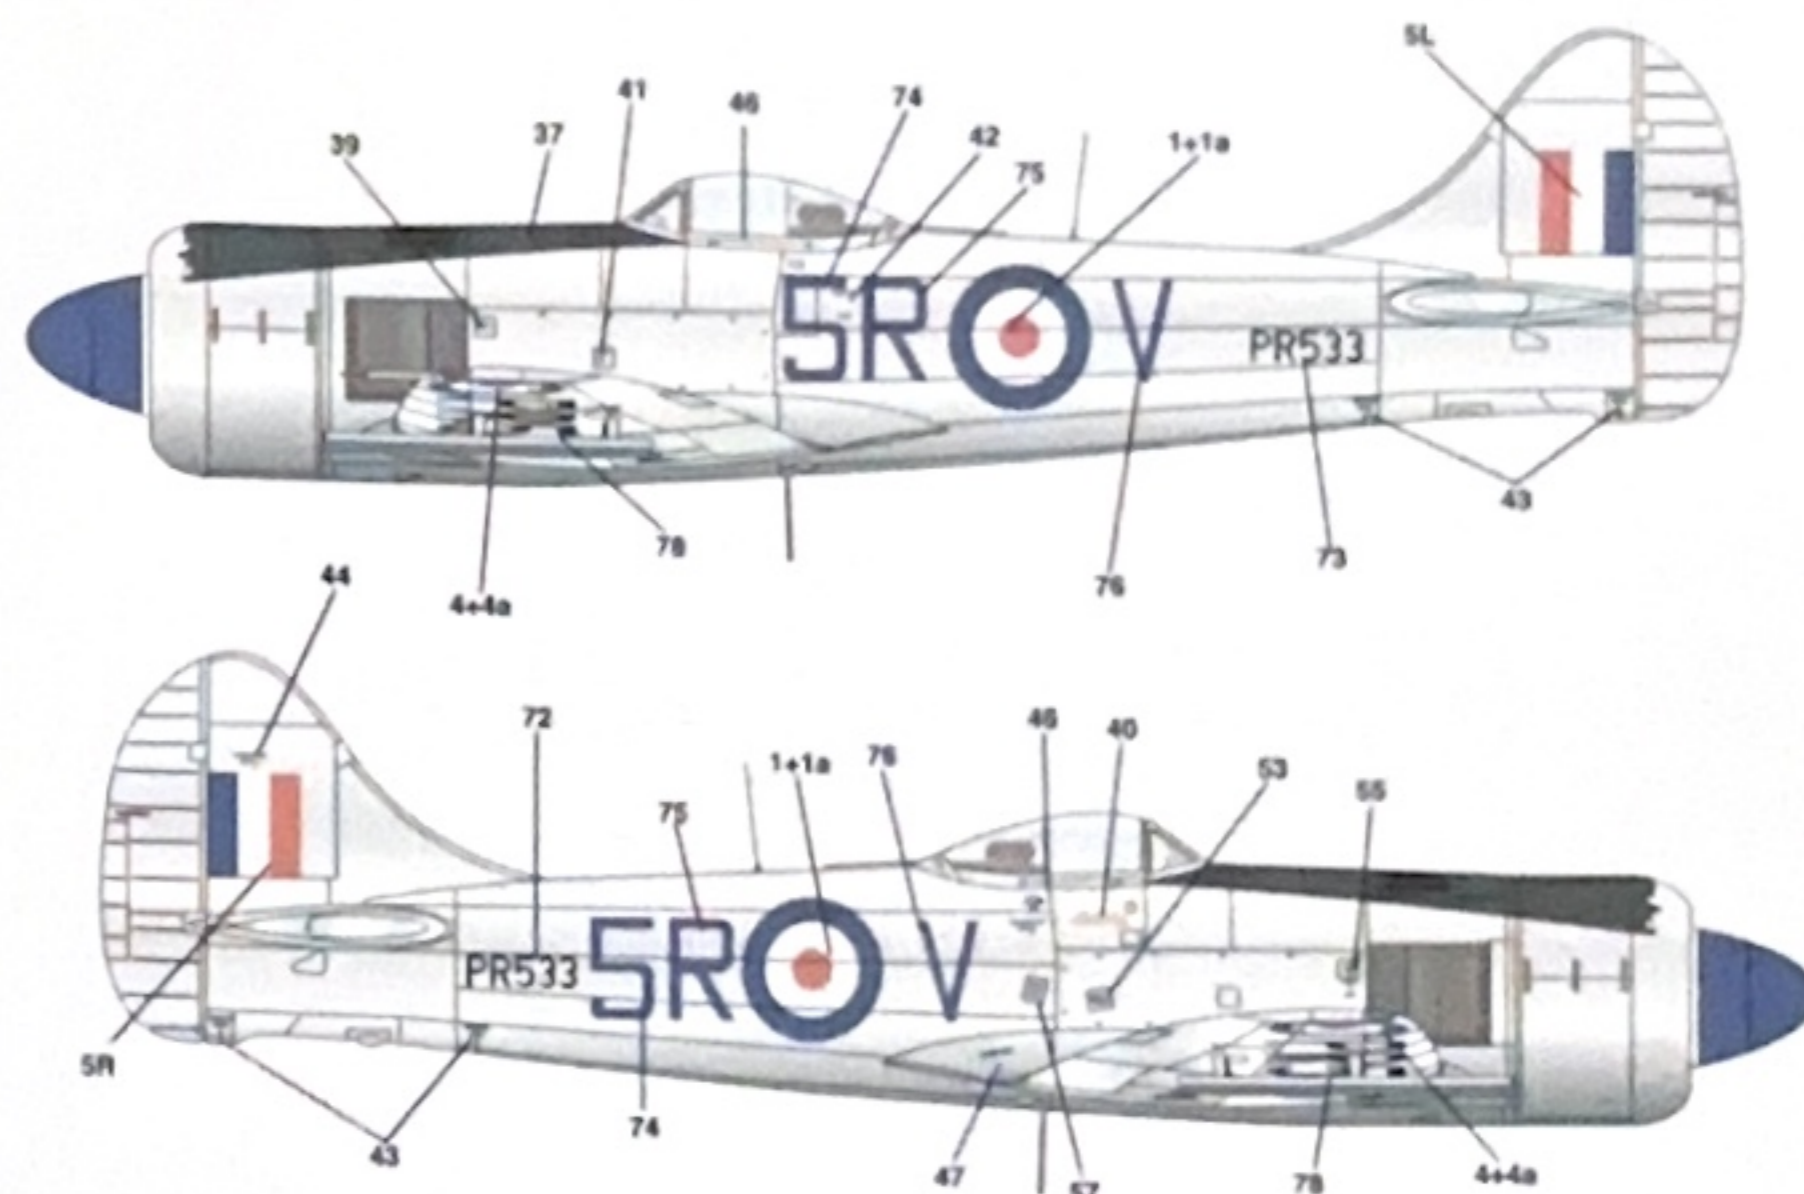


Recommended 1:72 Kits:
Academy MkV
Recommended 1:48 Kits:
Eduard Mk.V

Painted Aluminium FS17178 Humbrol 11 Xtracolor X001 Lifecolor LC74 Model Master 1546	Roundel Blue FS19056 Humbrol 25 Xtracolor X020 Lifecolor LC10 Model Master 1510	White FS30109 Humbrol 22 Xtracolor X409 Lifecolor LC01 Model Master 2720

Recommended 1:72 Conversion Sets:
Aviation Workshop F.2 Conversion Set
Aviation Workshop F.6 Conversion Set
Recommended 1:48 Conversion Sets:
Airwaves F.2 Conversion Set
Airwaves F.6 Conversion Set

RAF Tempest Mk.II/F.2/F.6

Hawker Tempest F.6, NX185, 'O' of 213 Squadron, RAF, Deversoir, Egypt, August 1949.
Dark Earth, Light Slate Grey uppersurfaces over Medium Sea Grey undersides. Red spinner with White backplate.

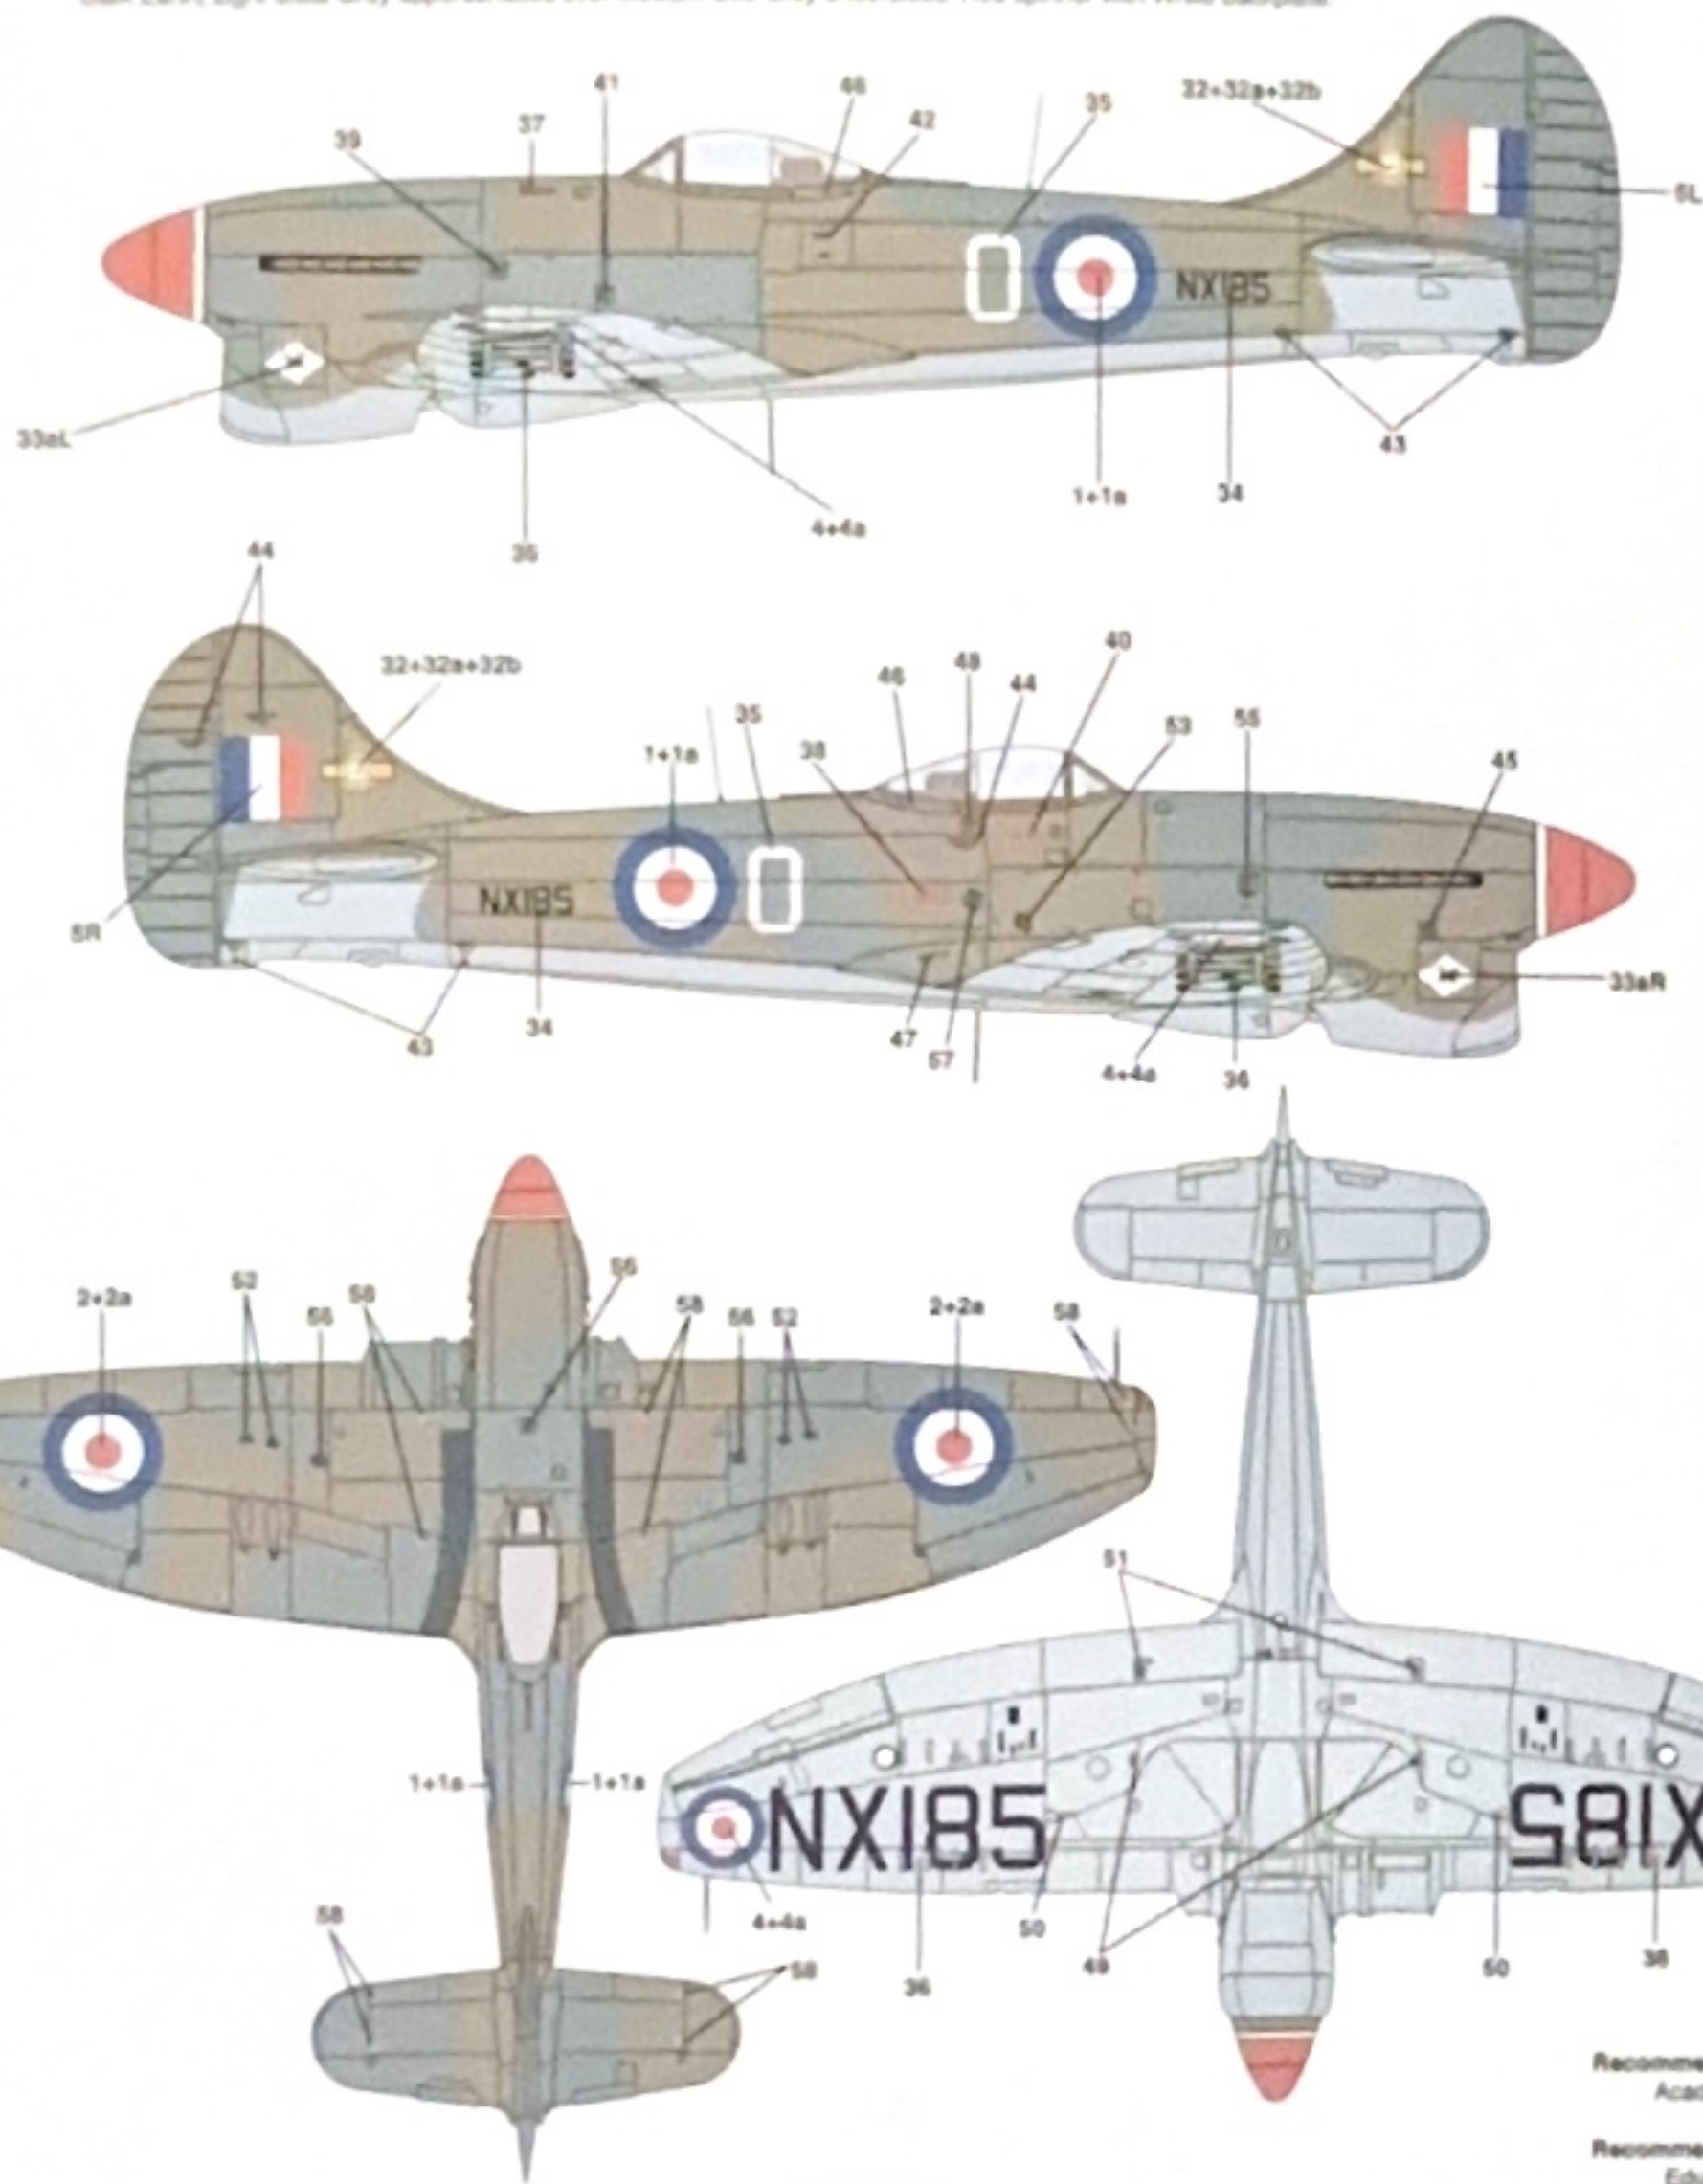

Recommended 1:72 Kits:
Academy Mk.V

Recommended 1:48 Kits:
Eduard Mk.V


Recommended 1:72 Conversion Sets:
Aviation Workshop F.2 Conversion Set
Aviation Workshop F.6 Conversion Set

Recommended 1:48 Conversion Sets:
Airwaves F.2 Conversion Set
Airwaves F.6 Conversion Set



RAF Tempest Mk.II/F.2/F.6

Hawker Tempest Mk.II, PR790, 'EG.D' of 18 Squadron, RAF, RAF Fassberg, Germany, Winter 1946-47.
Dark Green, Ocean Grey uppersurfaces over Medium Sea Grey undersides. Red spinner.

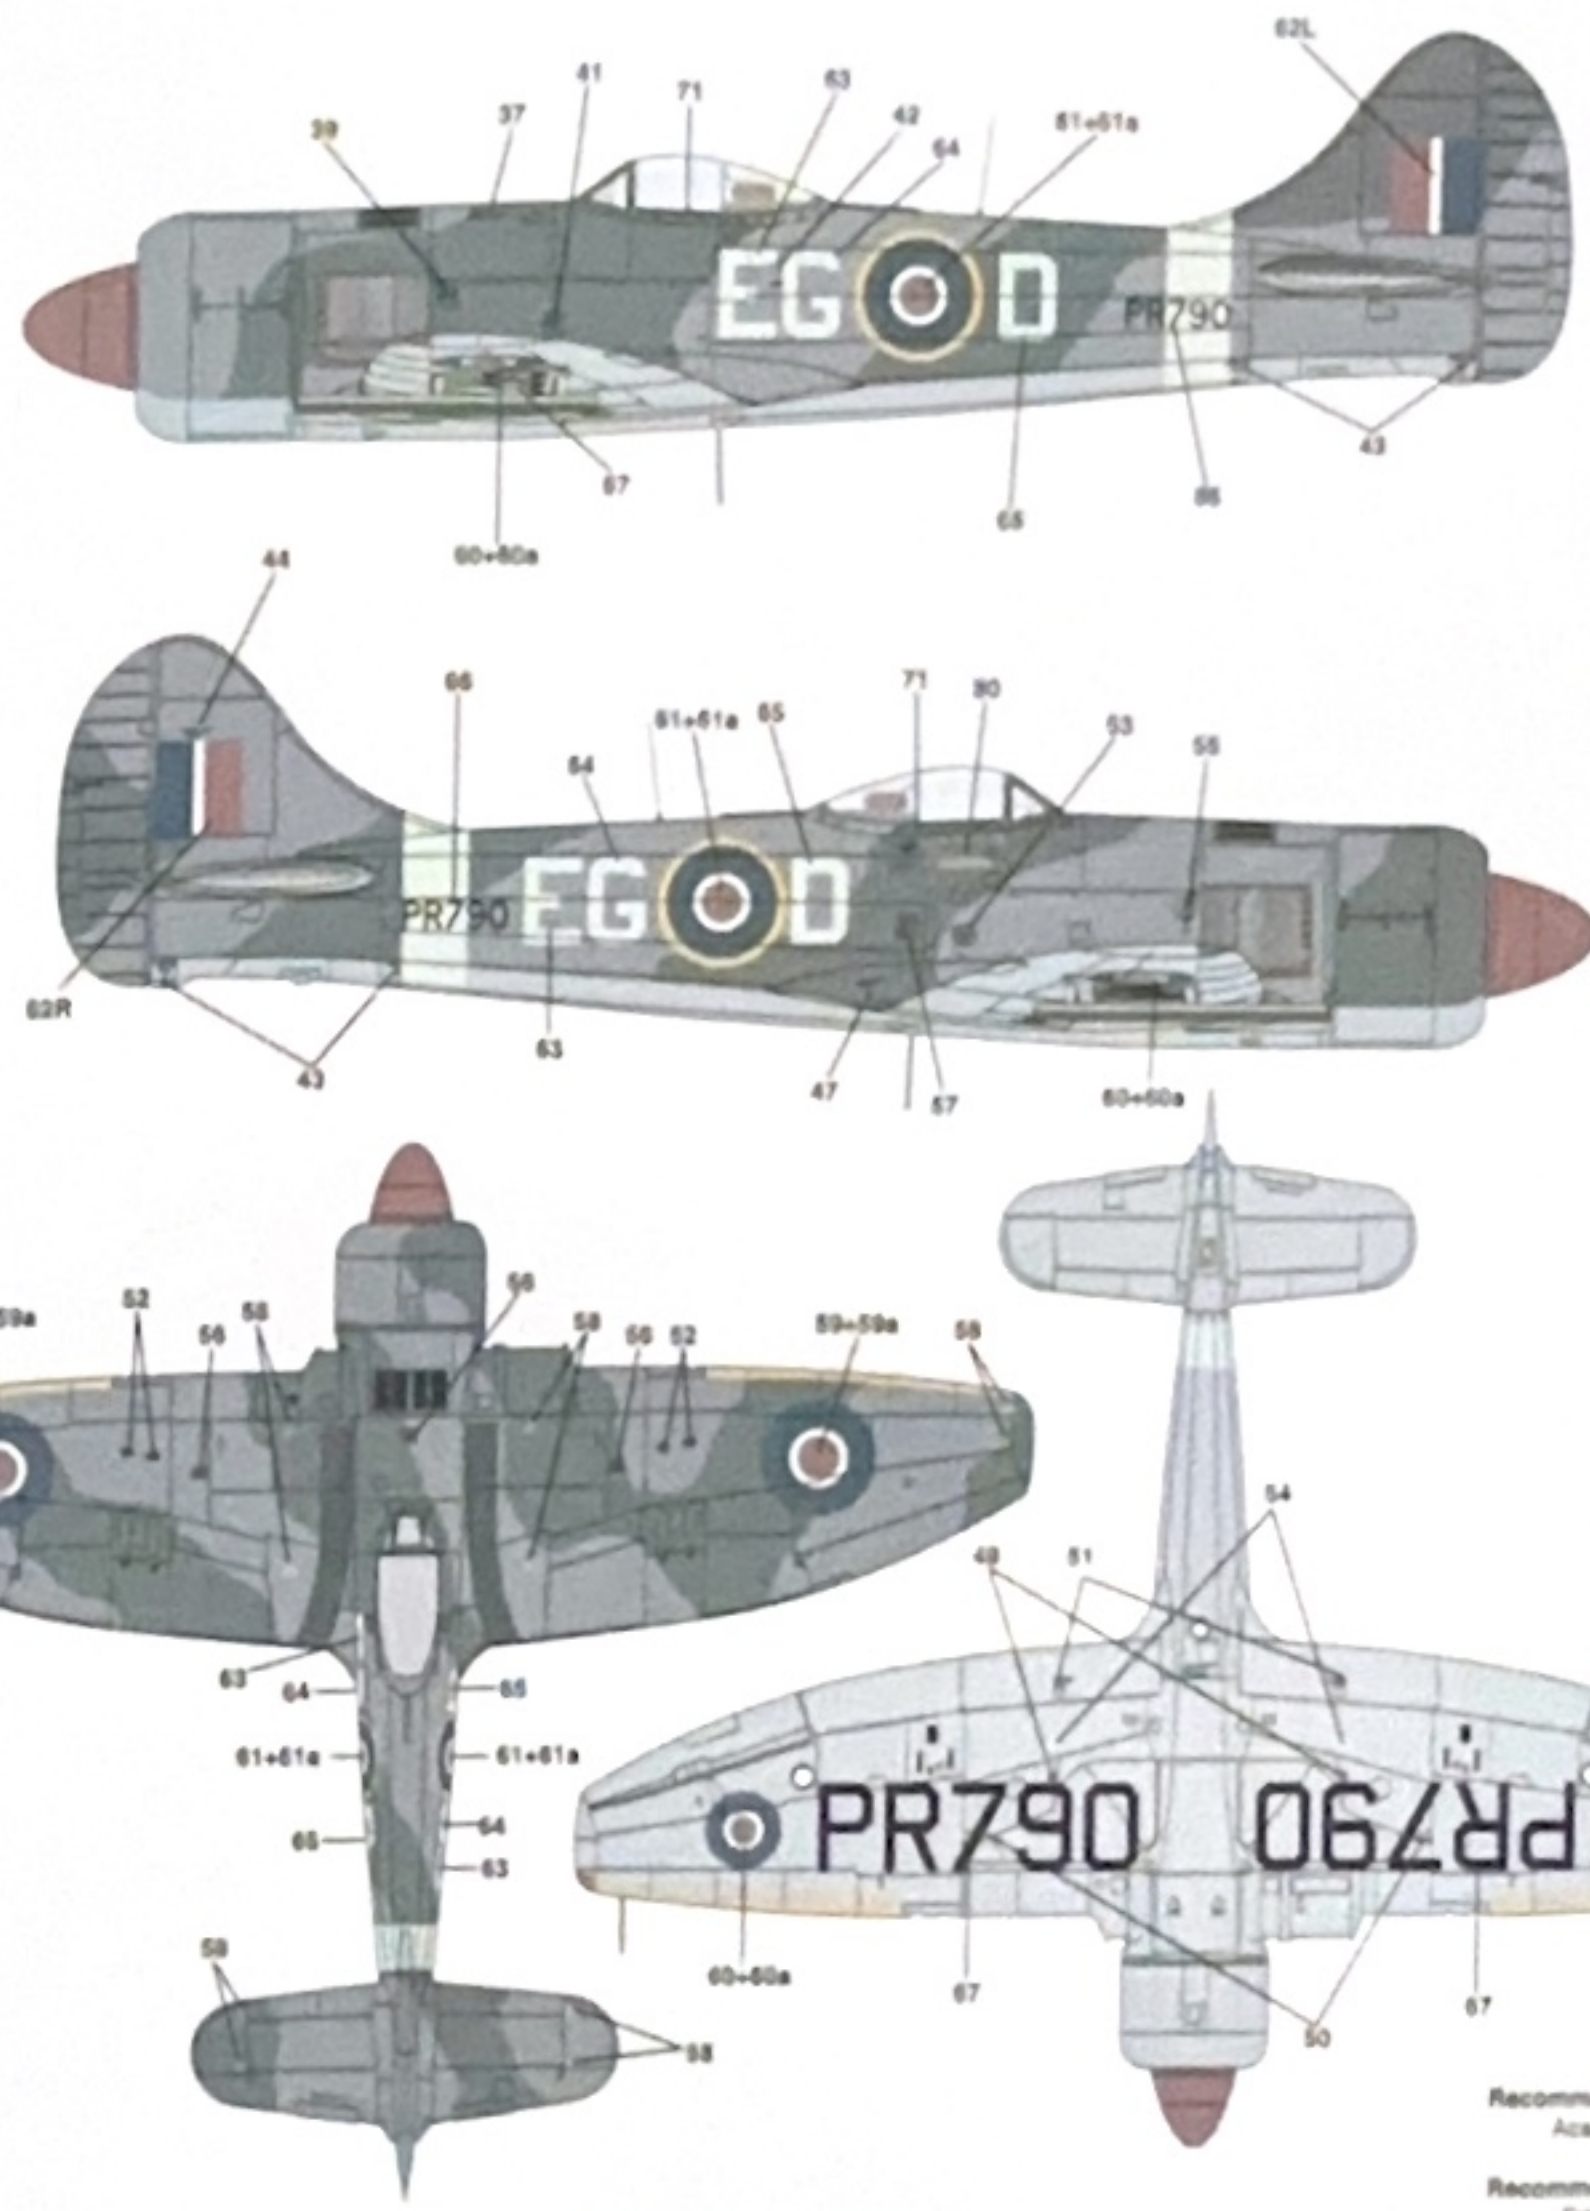


Recommended 1:72 Kits:
Academy Mk.V

Recommended 1:48 Kits:
Eduard Mk.V

Recommended 1:72 Conversion Sets:
Aviation Workshop F.2 Conversion Set
Aviation Workshop F.6 Conversion Set

Recommended 1:48 Conversion Sets:
Airwaves F.2 Conversion Set
Airwaves F.6 Conversion Set




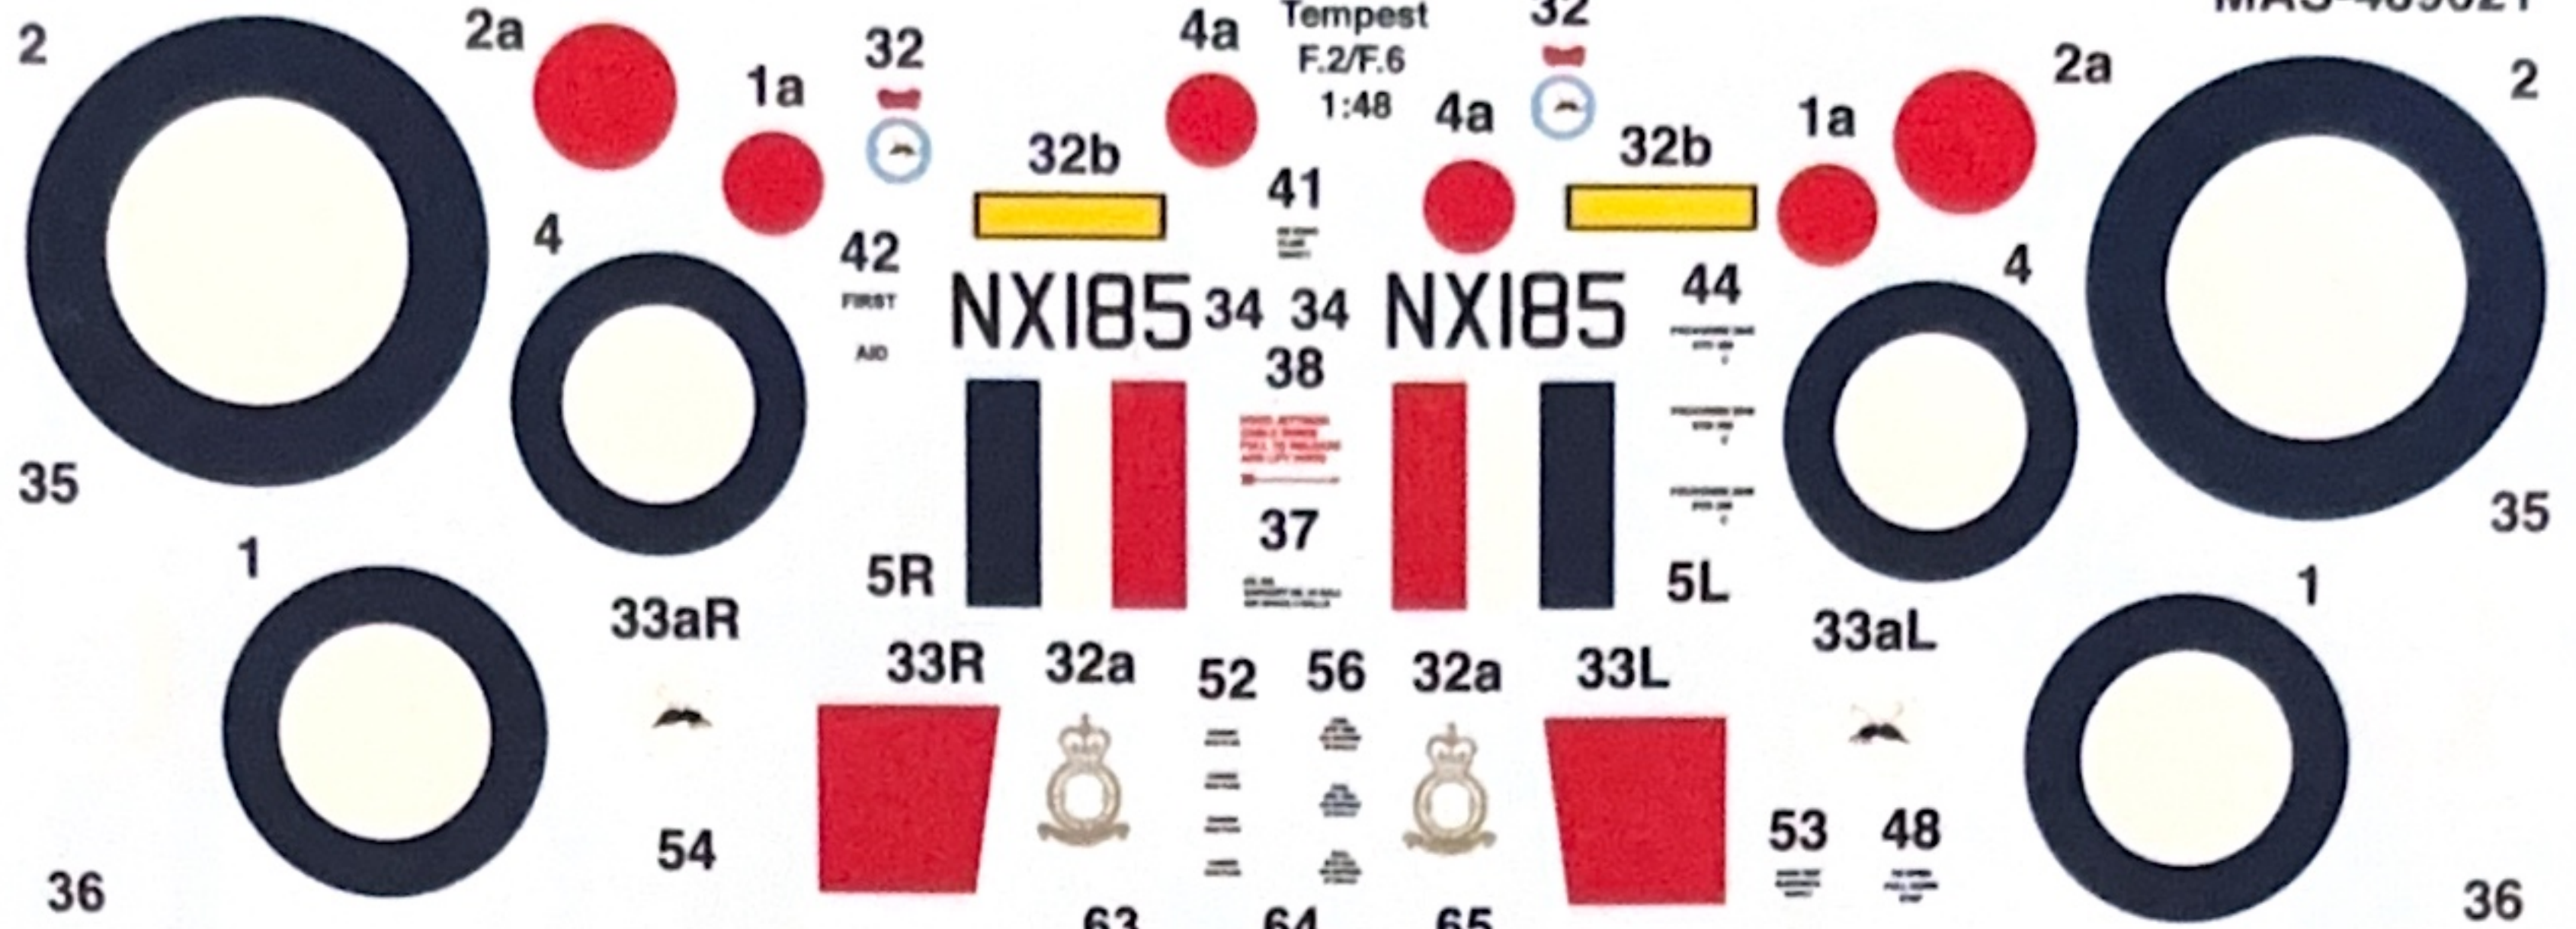

NX185 EGD NX185



PR790 EGD PR790

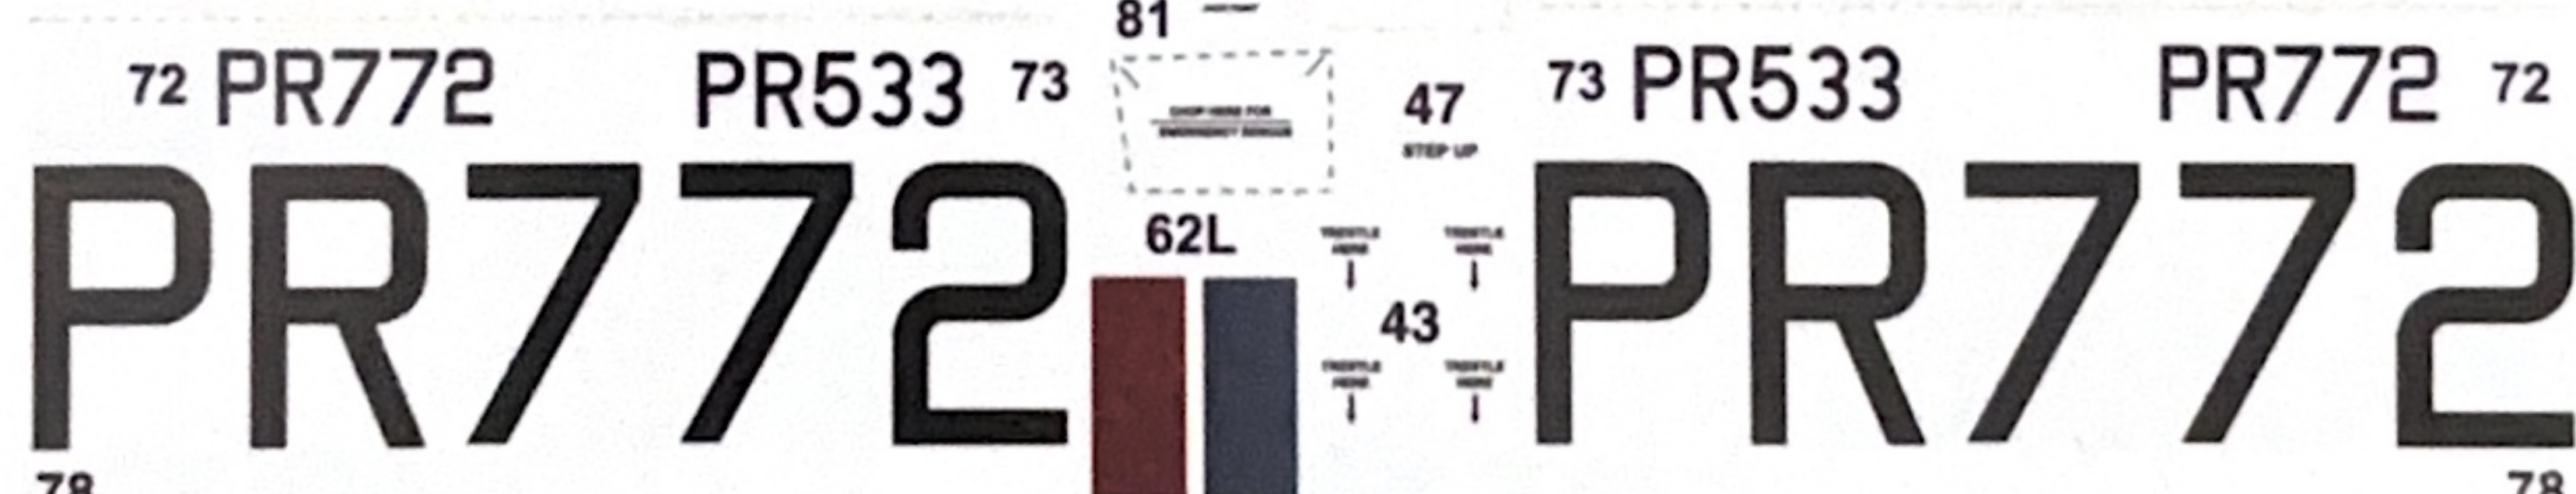

PR772 PR533 PR772 PR533

SRV SRV