

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

Modern German Gepard A1 SPAAG Basic

现代德军猎豹自行防空炮A1型基本改造件

[For TAKOM 2044]

■ 推荐使用工具 RECOMMENDED TOOLS



快干胶
Super glu

尖嘴钳
needle nose pliers

镊子
Tweezers

美工刀
Craft knife

笔钻
pin vice

↑
安装
install


 折叠
bend

A1
改造件零件编号
PE/resin part number

B12
原零件编号
kit part number

C22
被替换的原零件编号
replaced kit part number



另一側相同制作
repeat on opposite side

 打磨
grind off


弧度卷曲
radial bending

x2
制作若干组
multiple assembly



选择安装
alternative




钻孔
drill

 用胶棒制作
make from plastic rod



用尖端在凹槽处冲压
use penpoint to press on the dent

蚀刻片零件内側面向上
Put the part upside down


用笔尖在凹槽处刮
Use penpoint to press on the dent

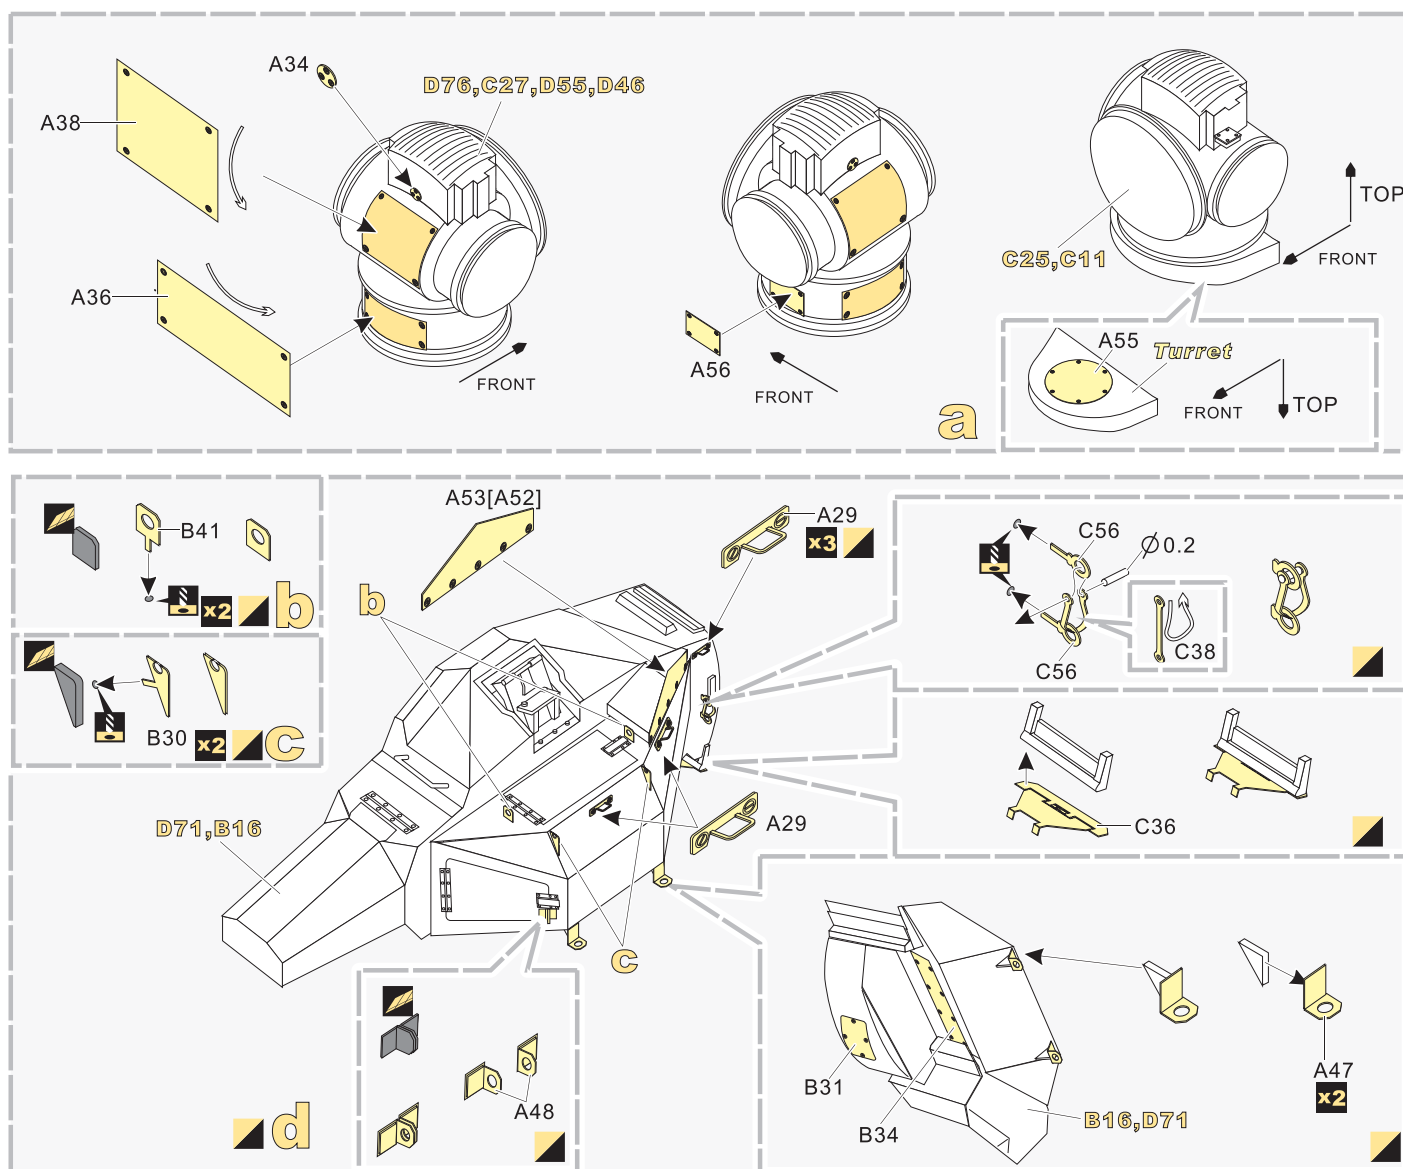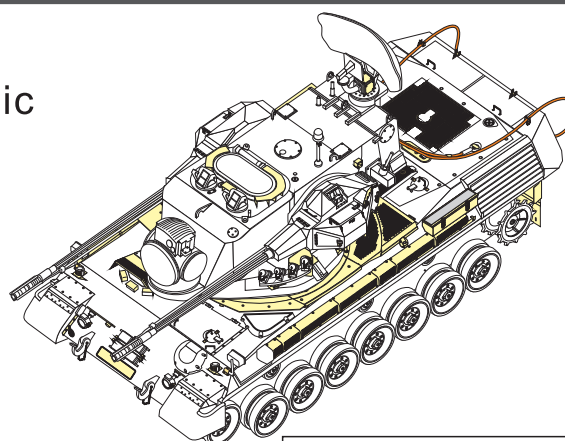


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

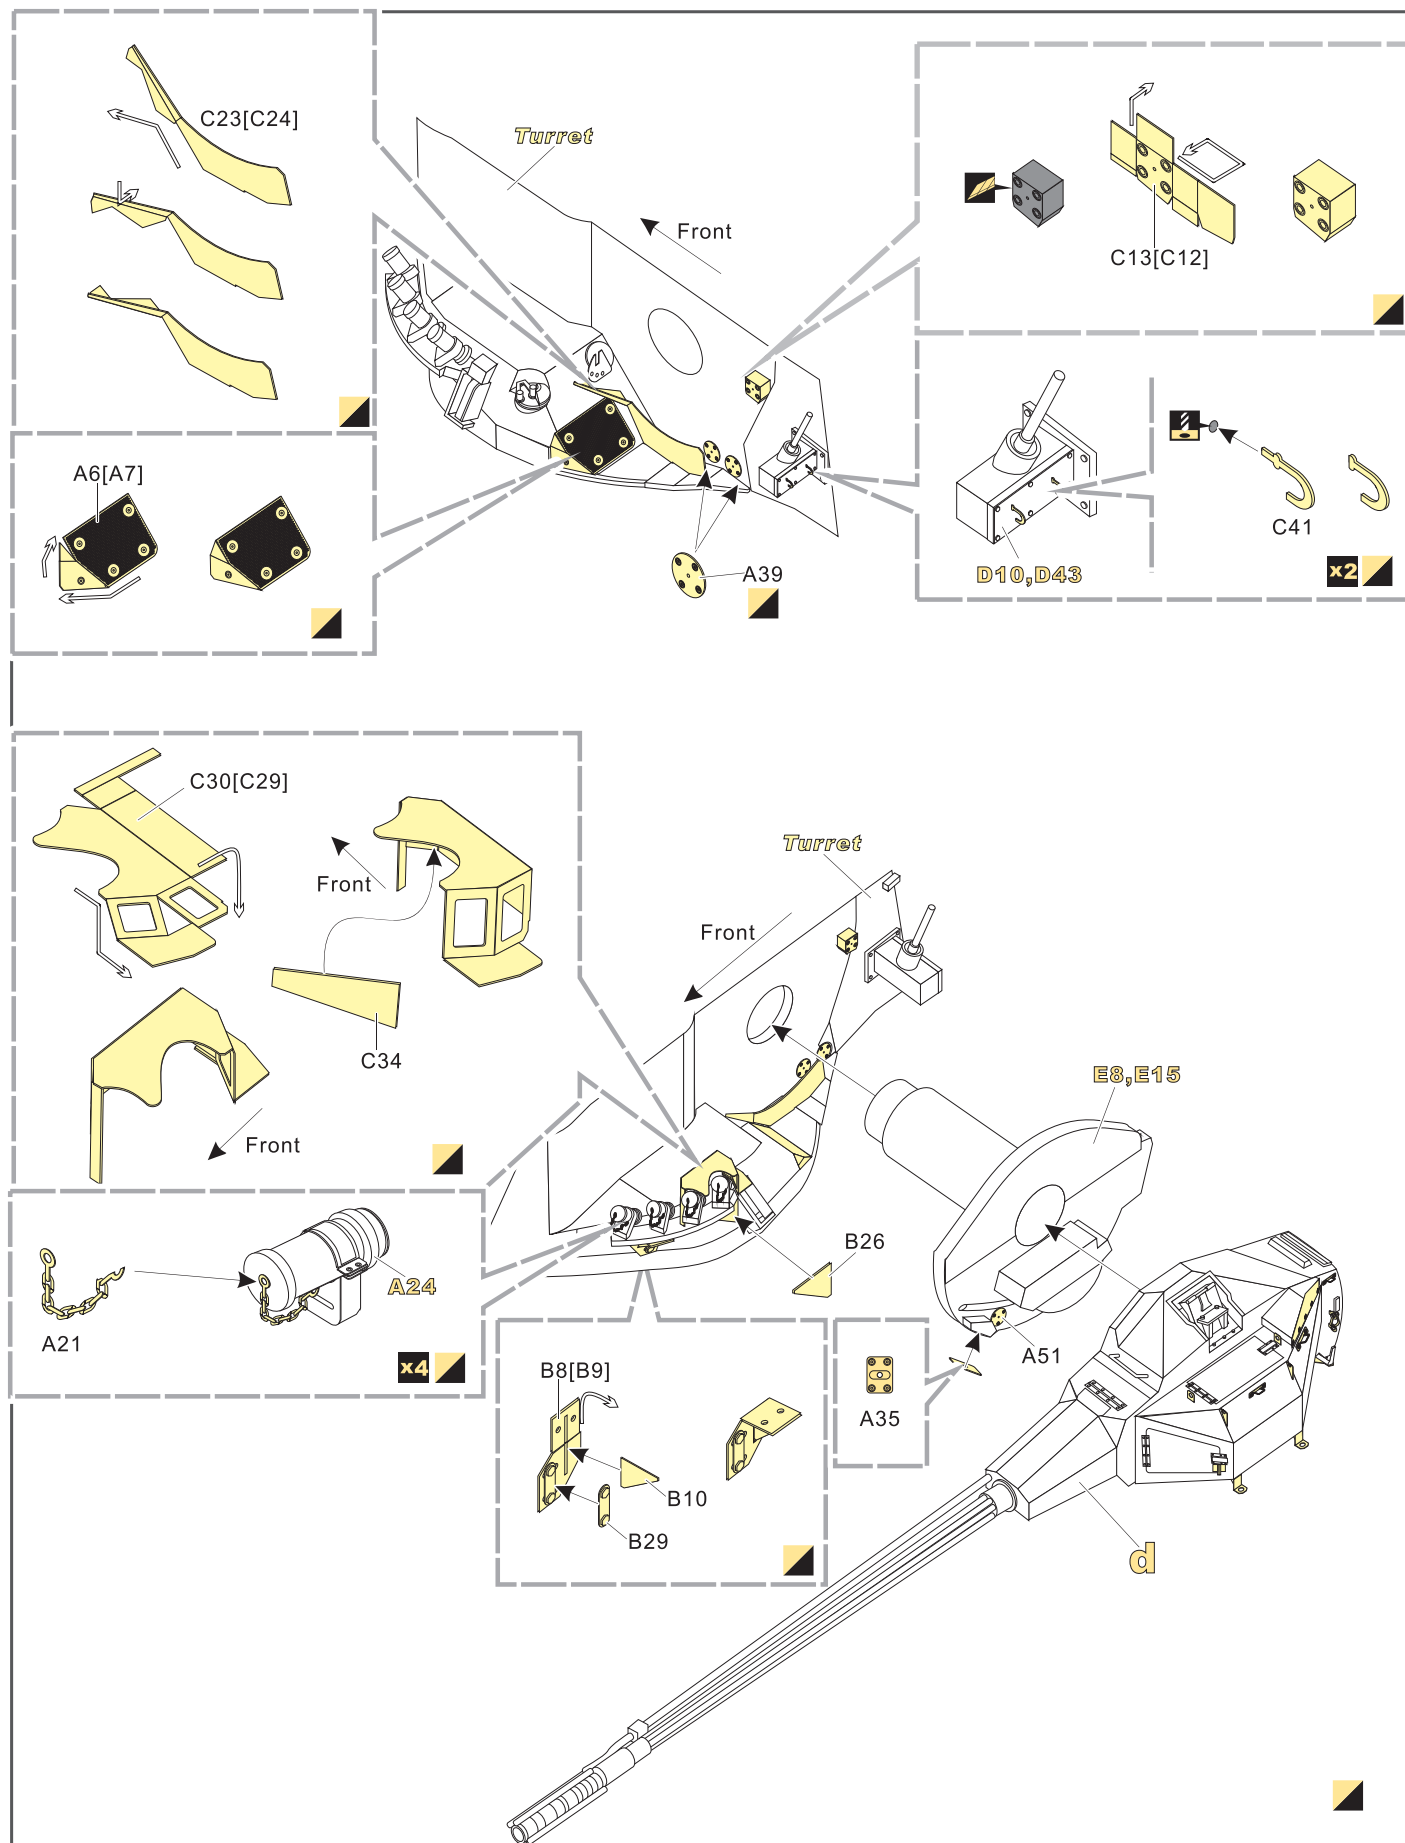


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

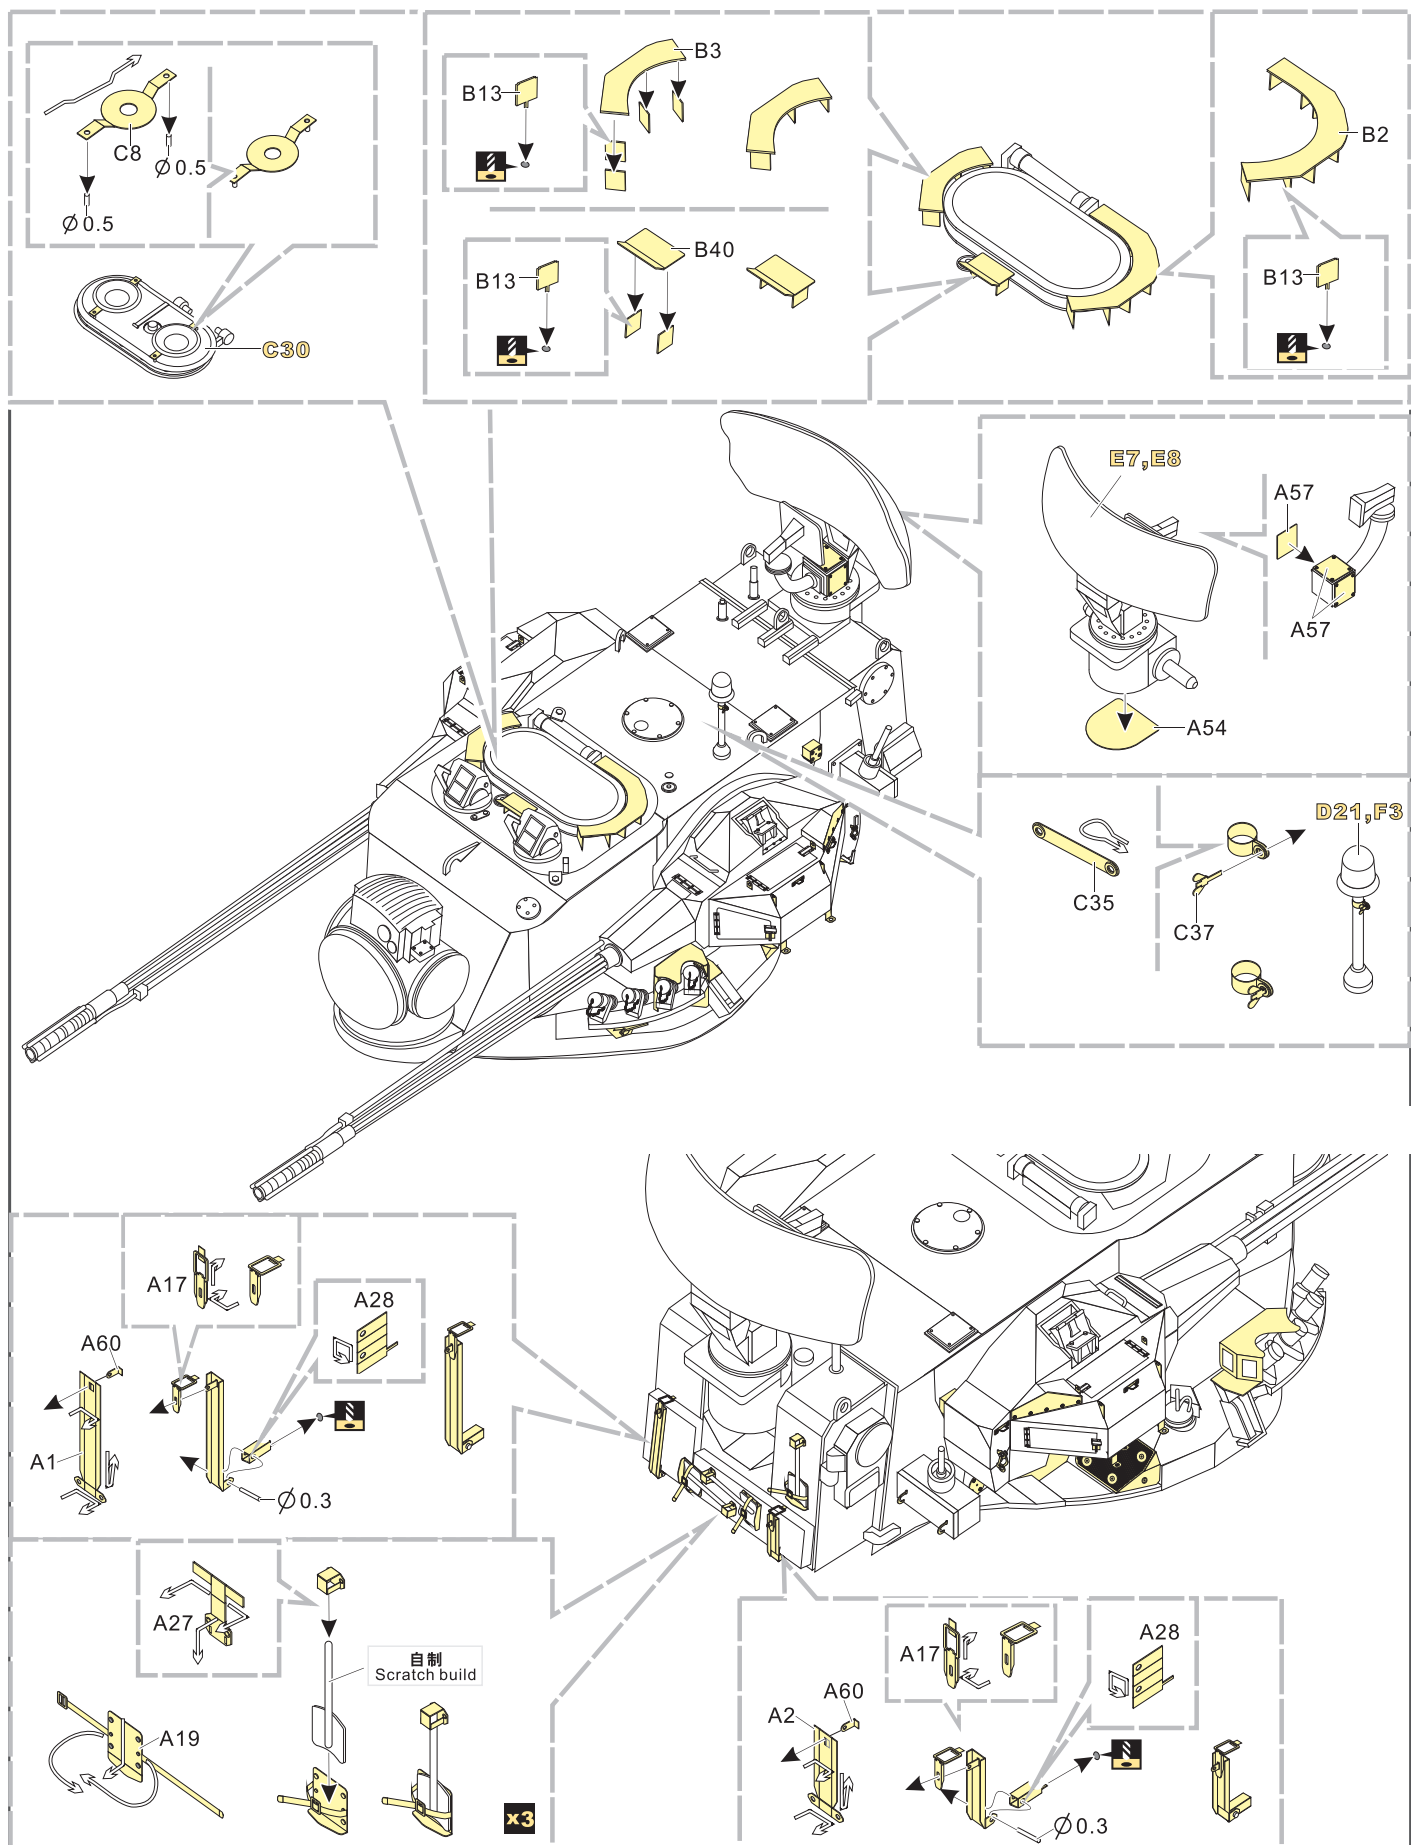


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

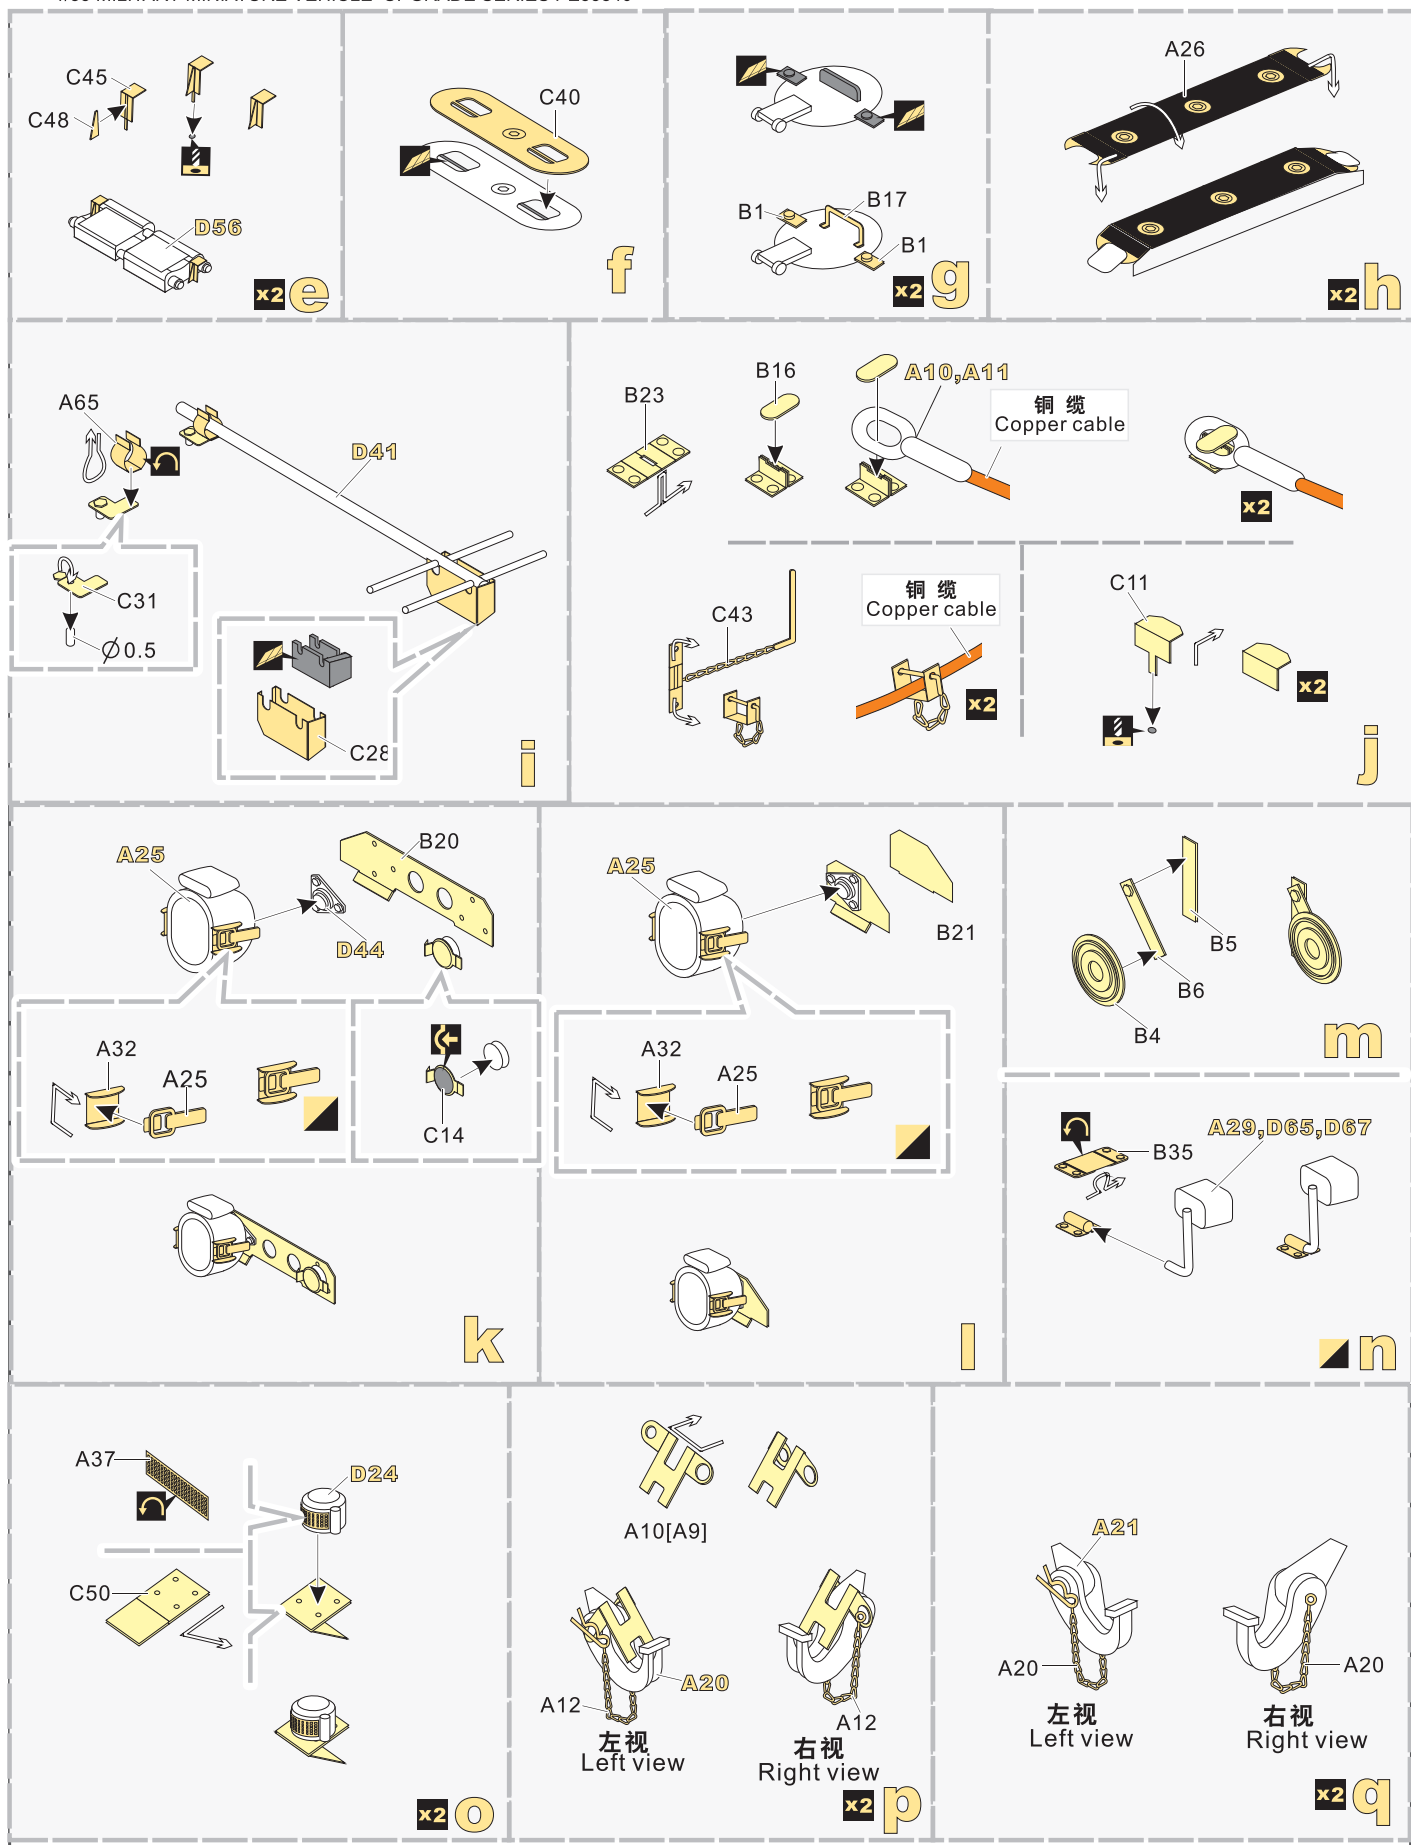


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

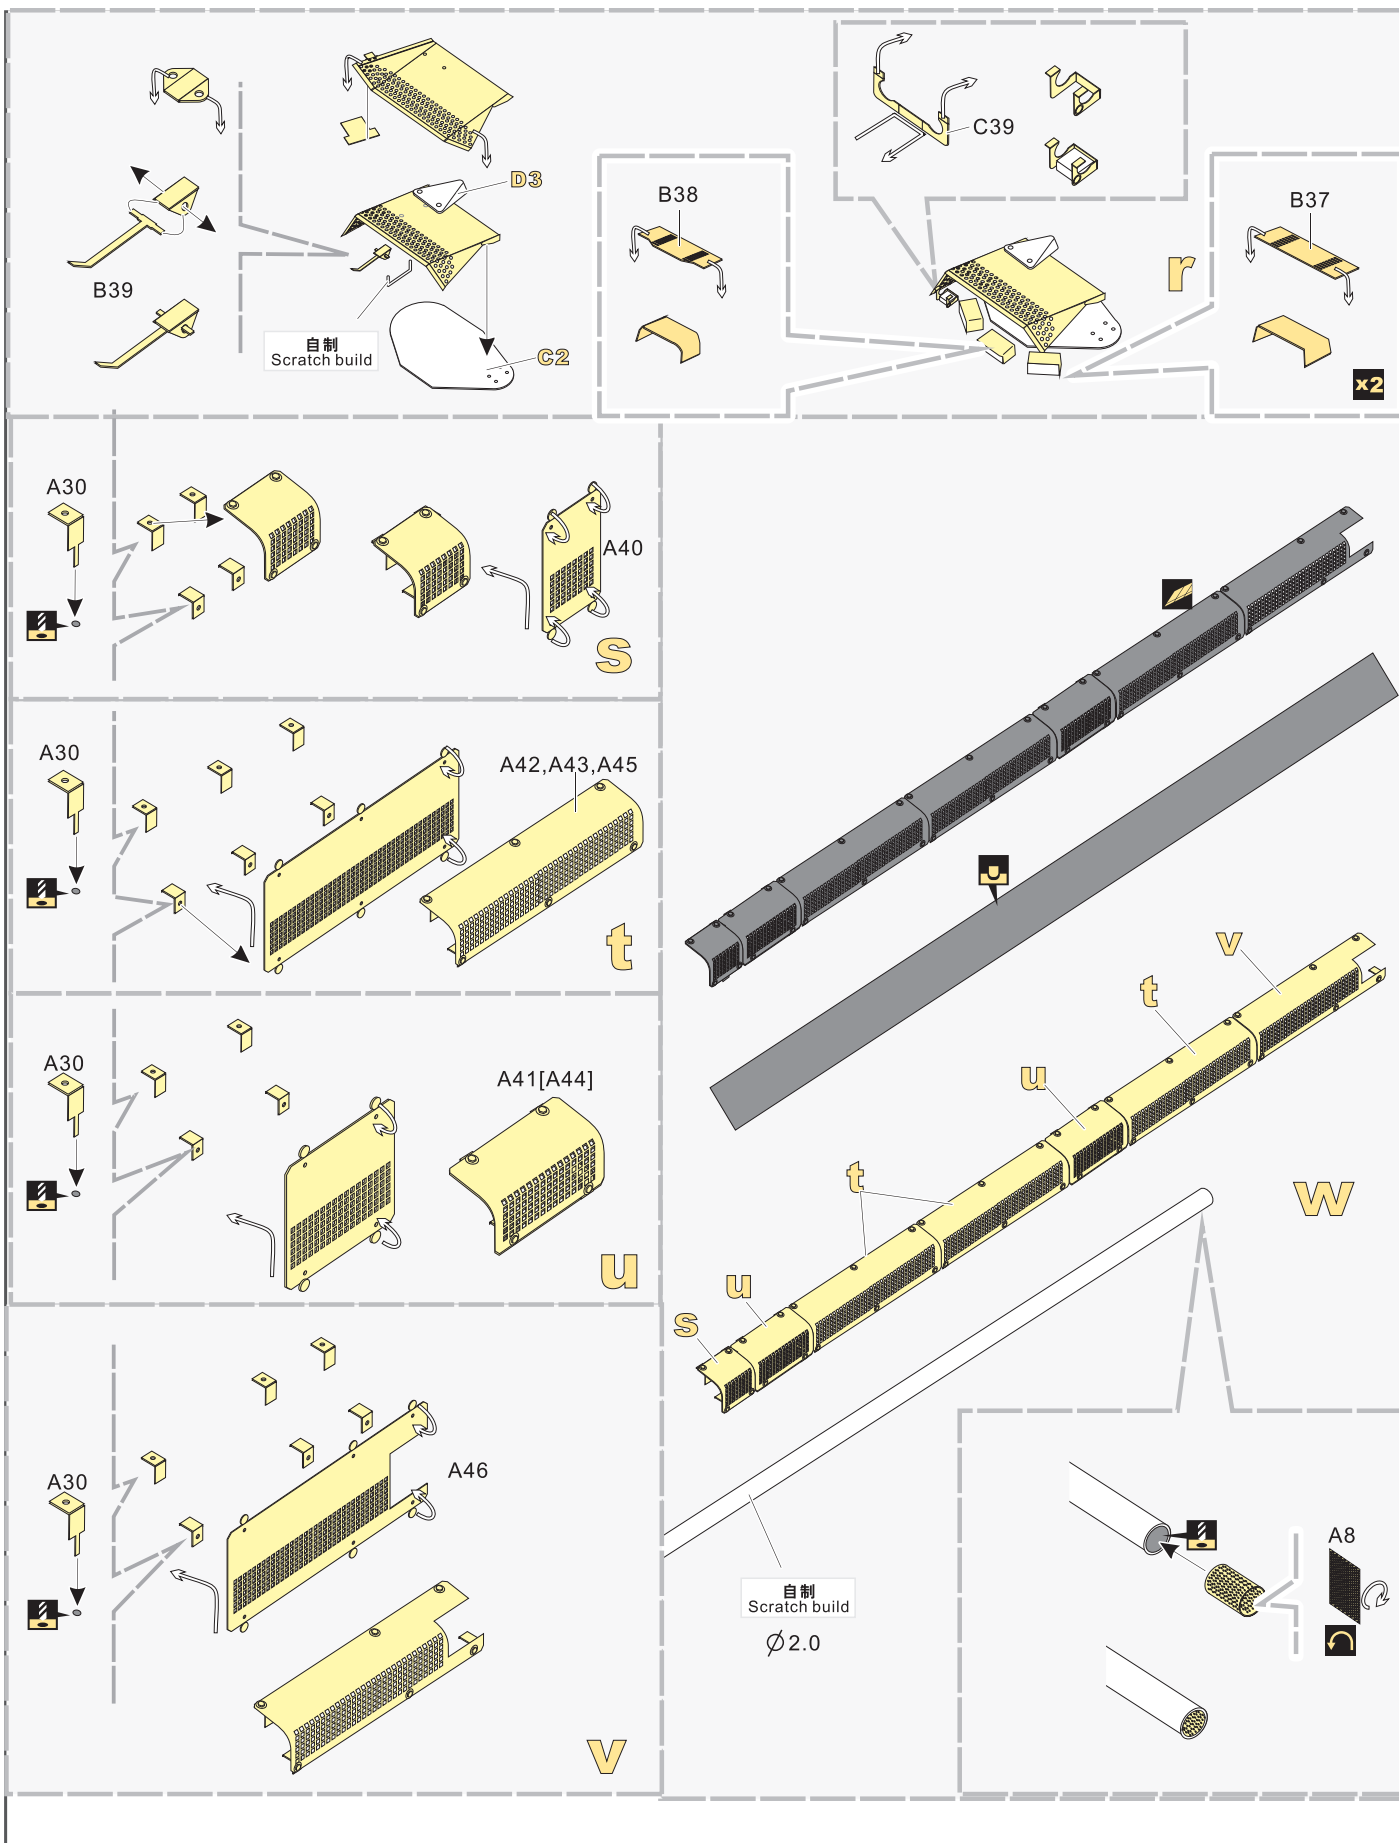


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

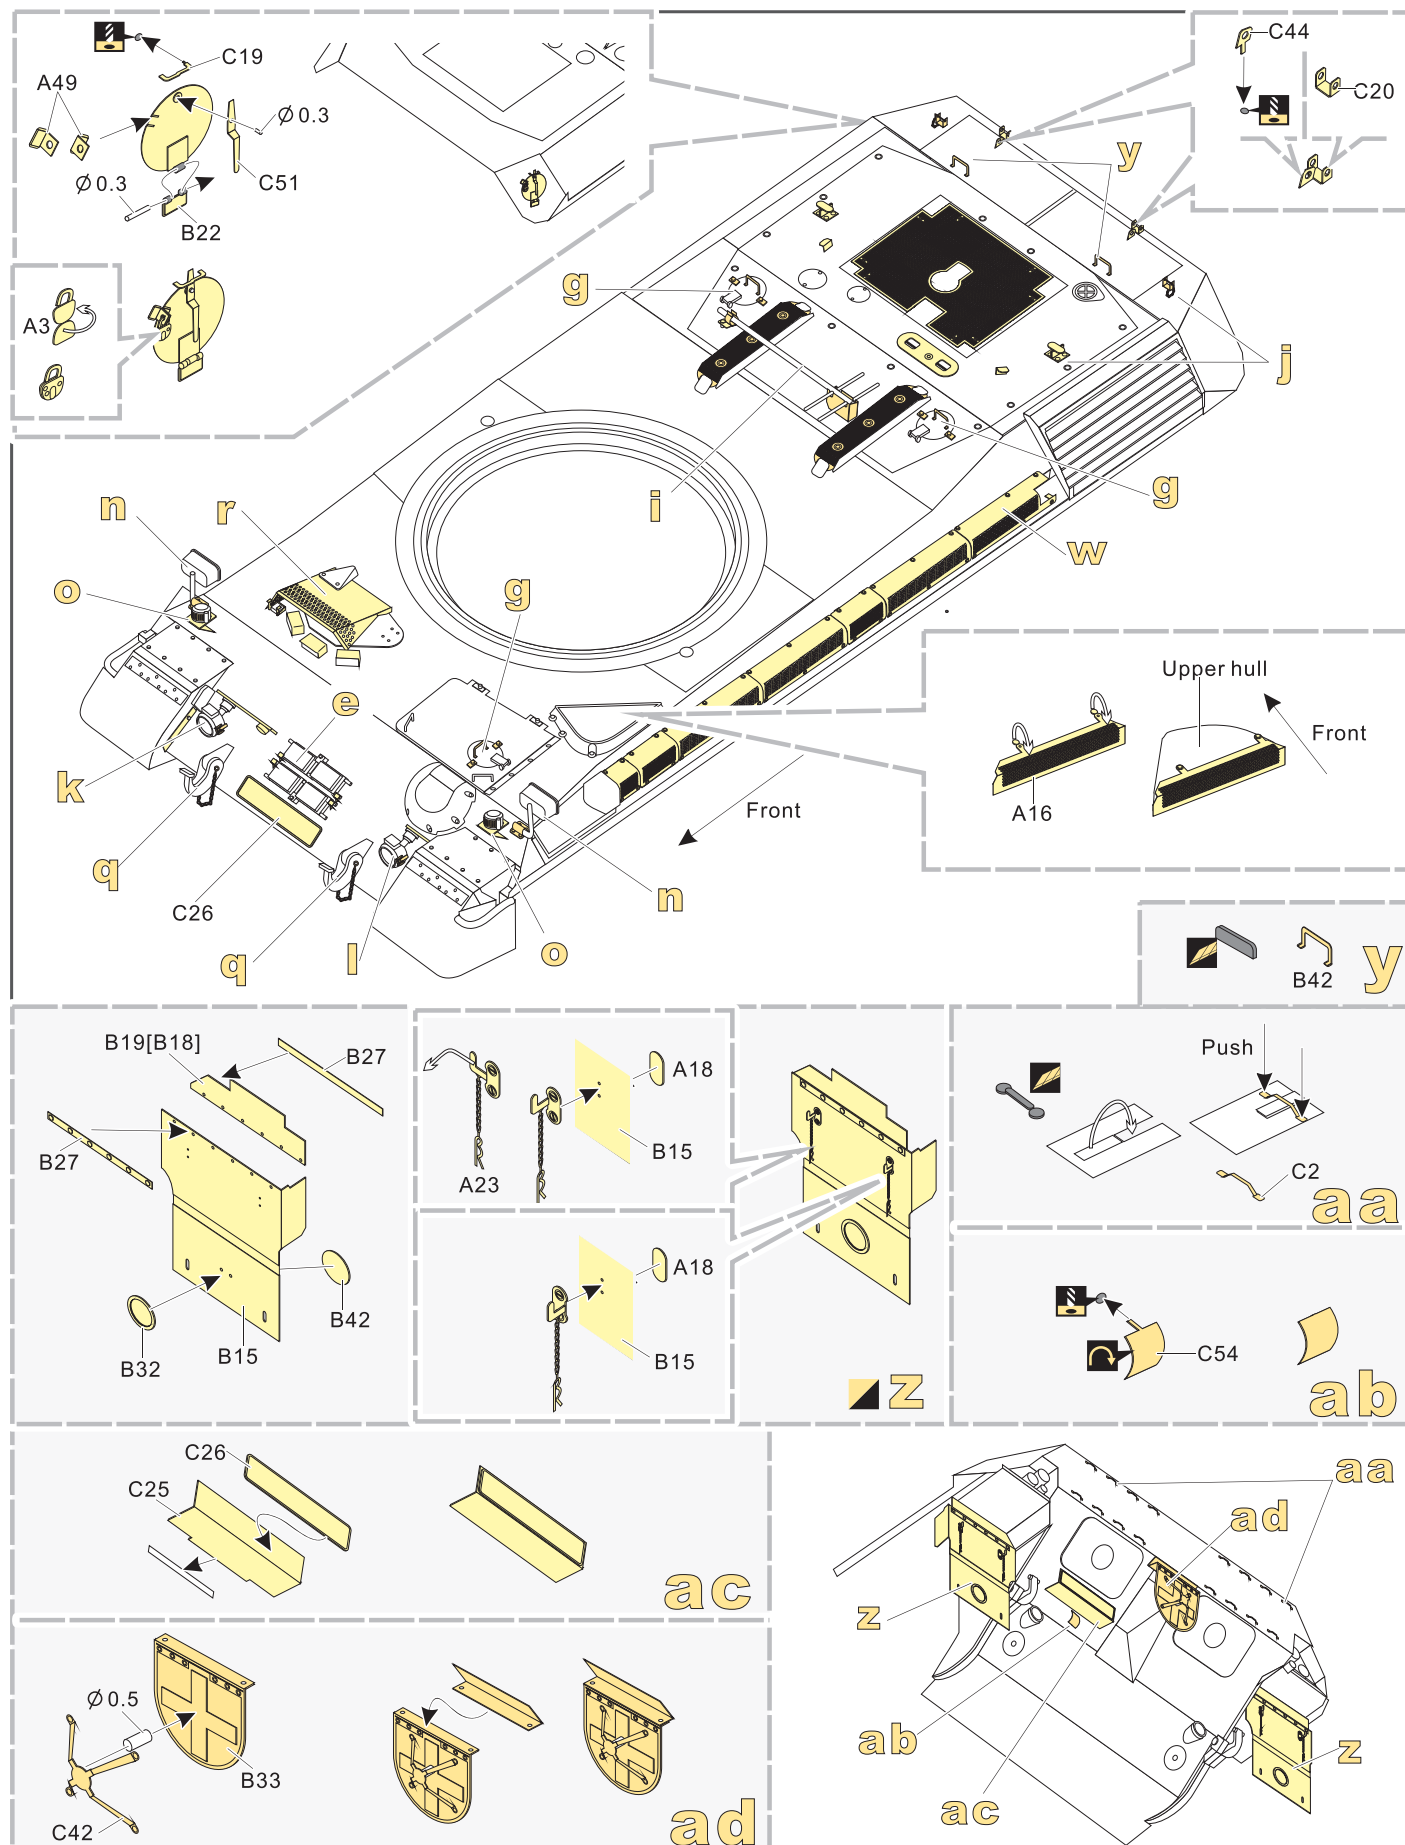


1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

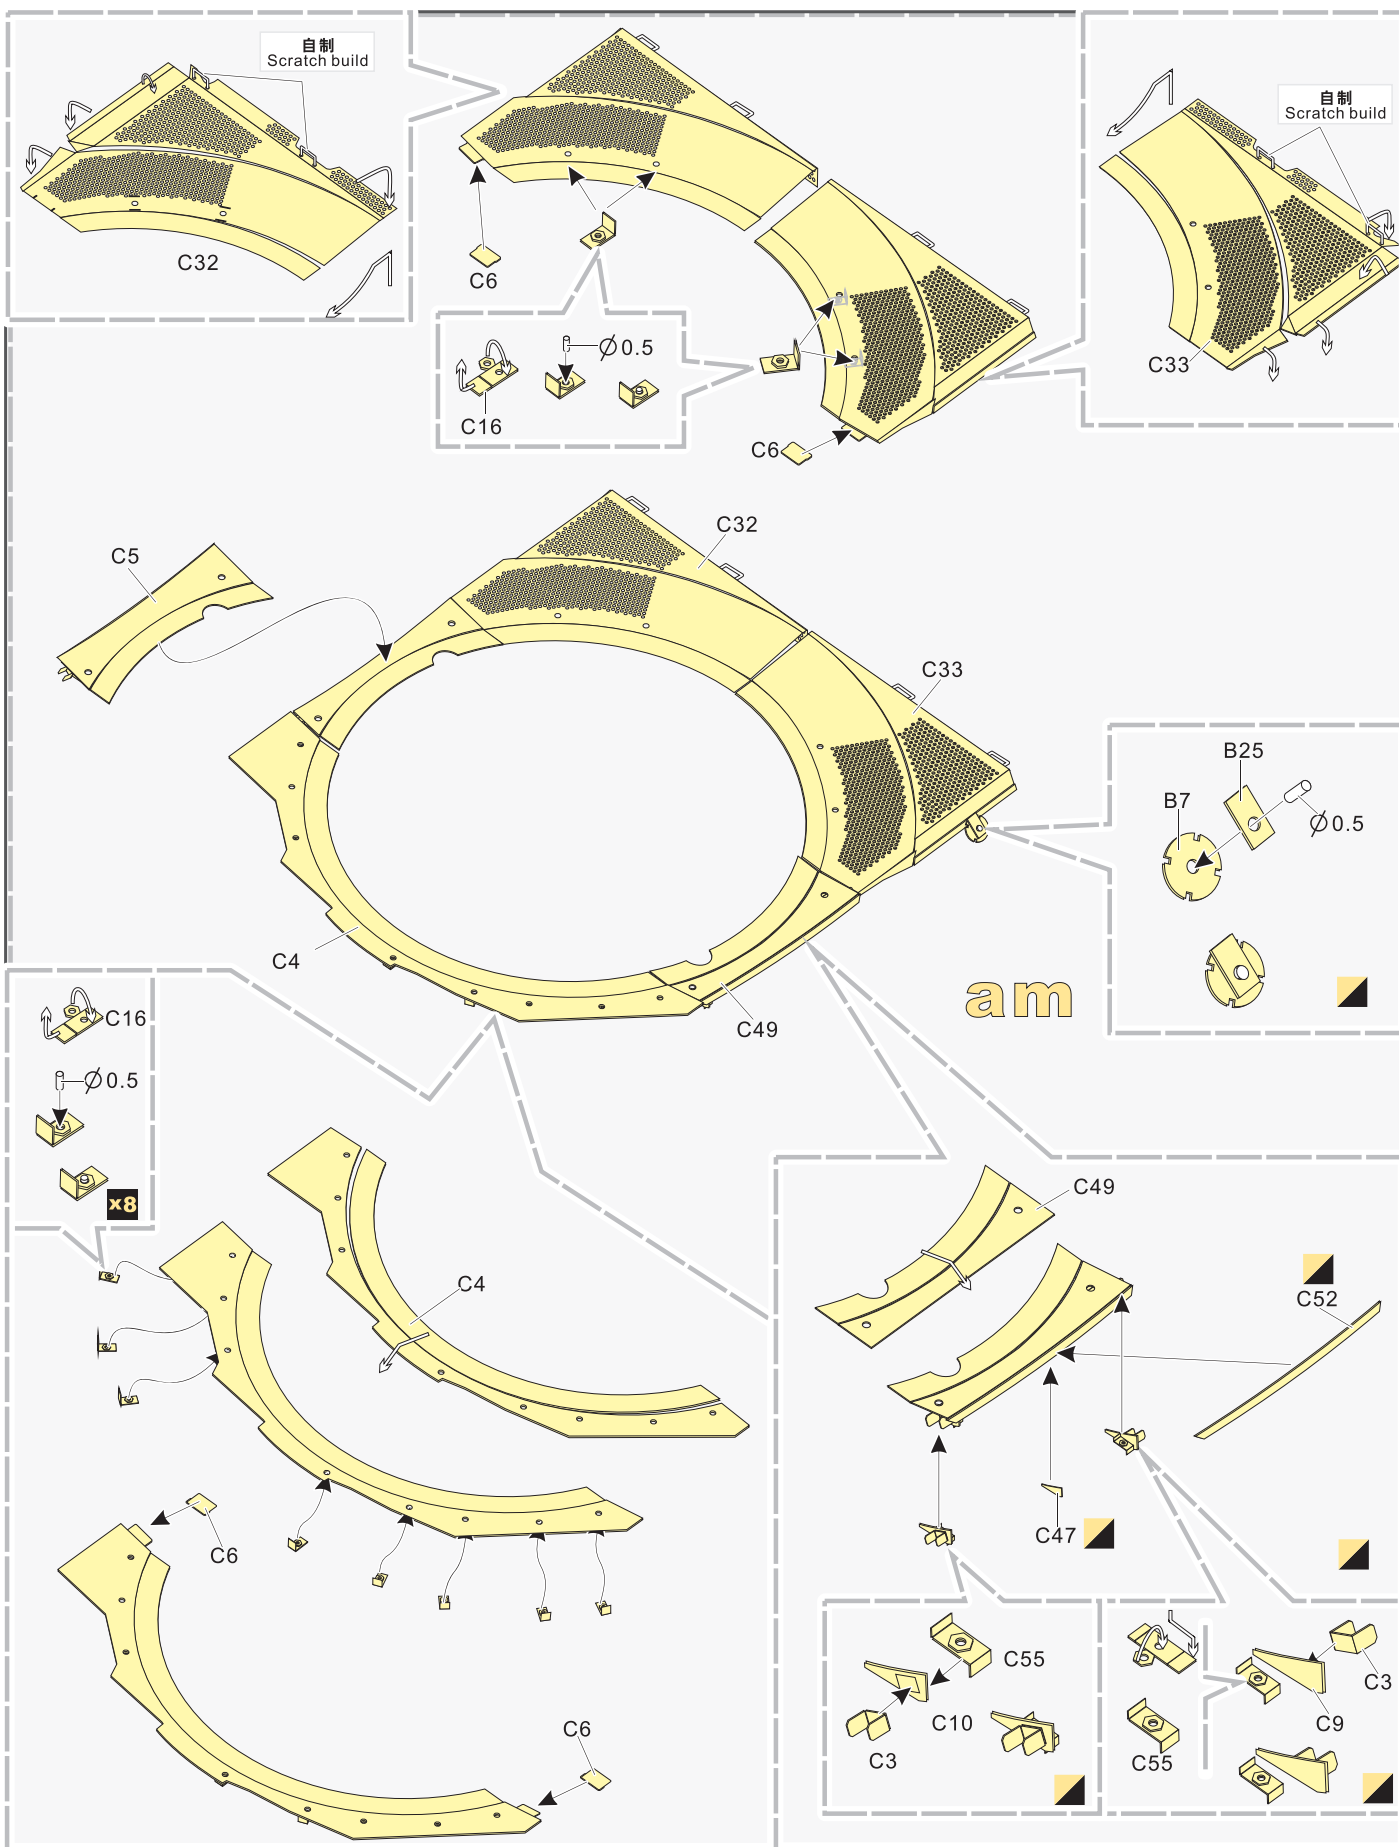

1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

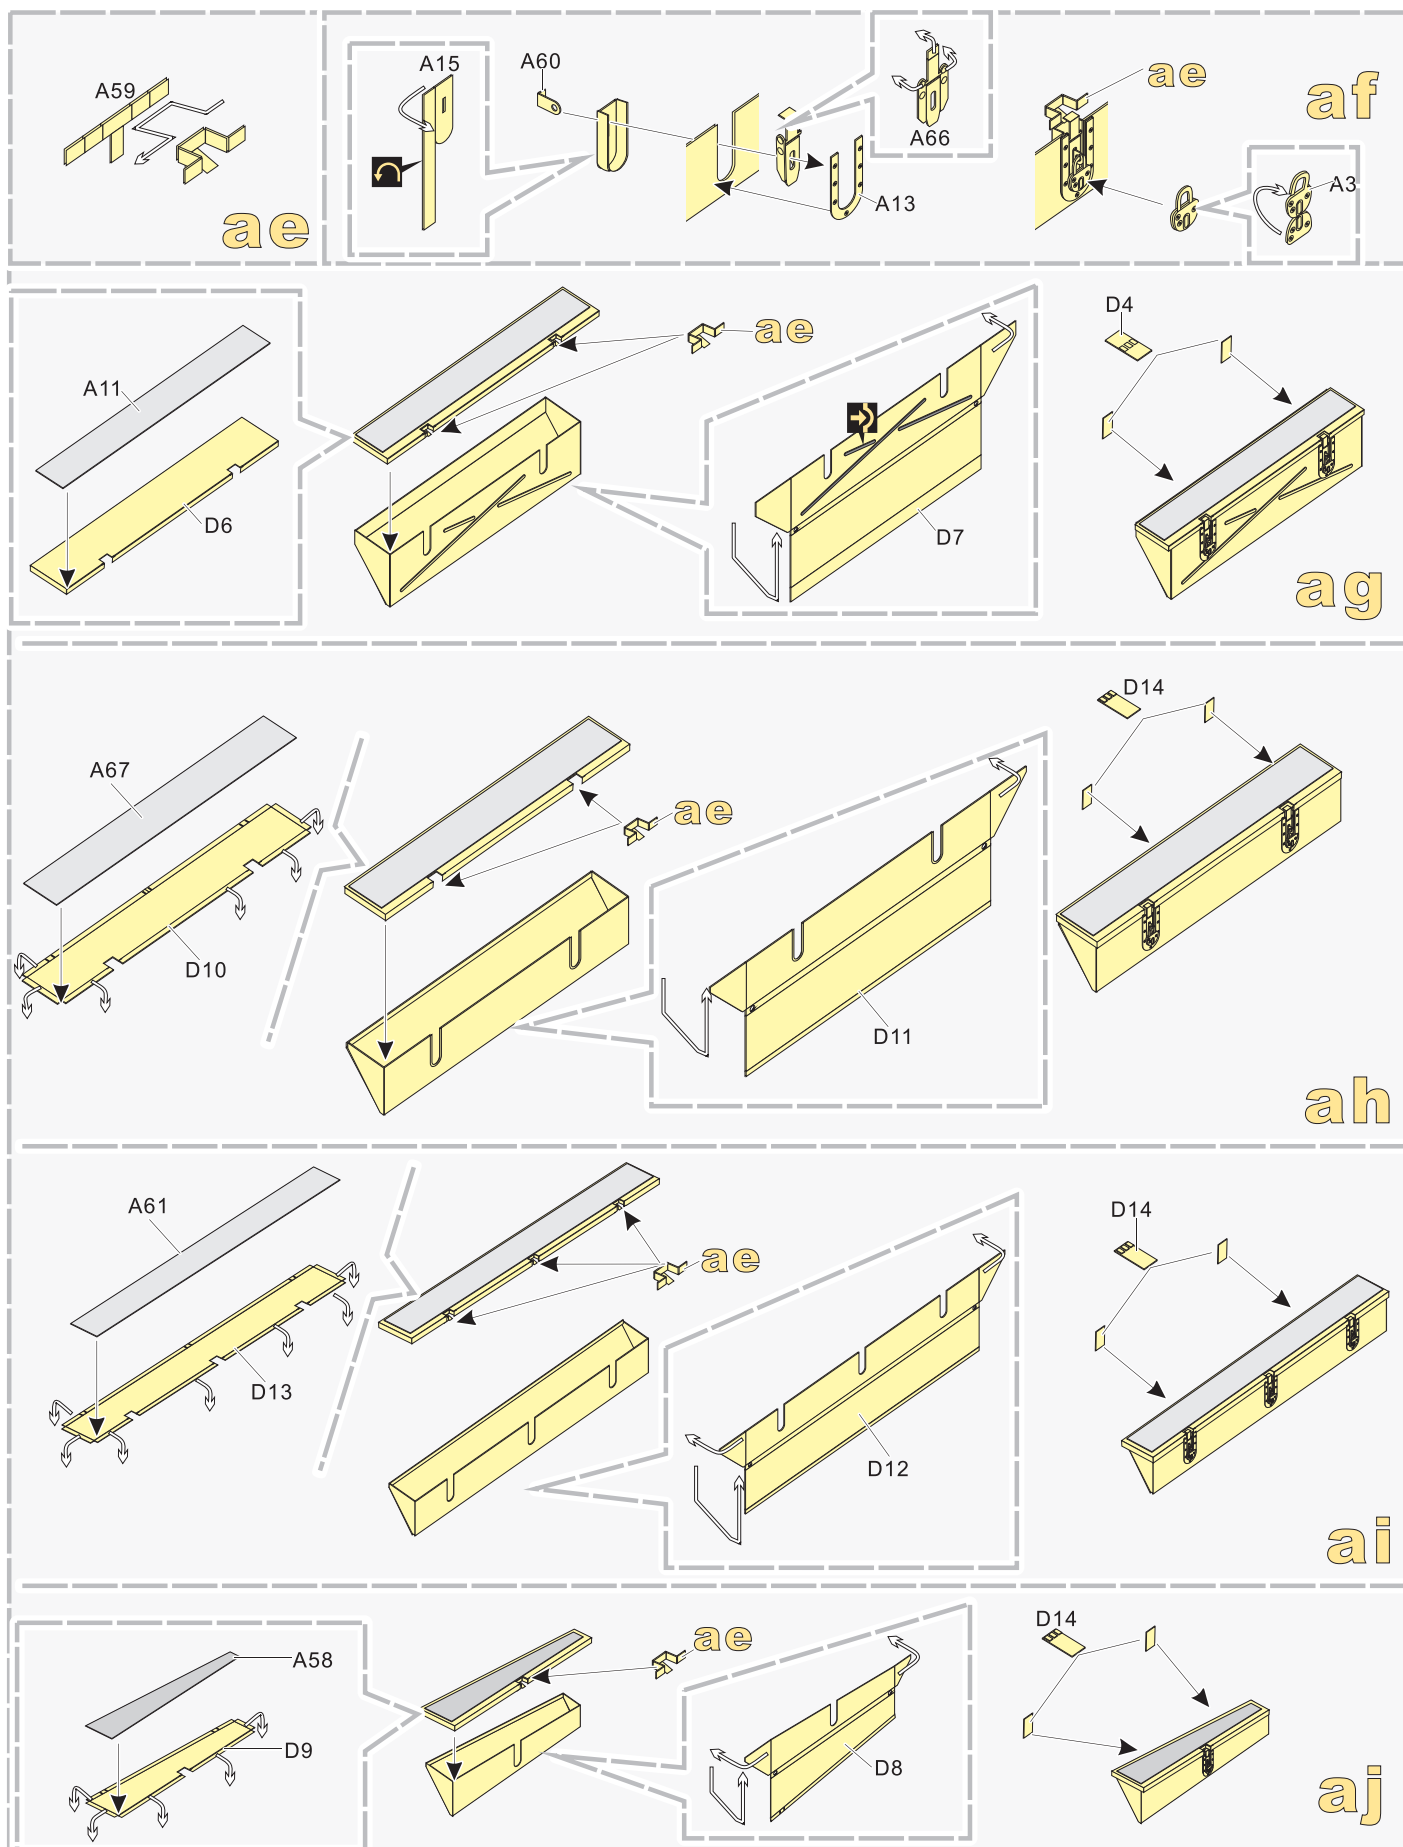



1/35 MILITARY MINIATURE VEHICLE UPGRADE SERIES PE35840

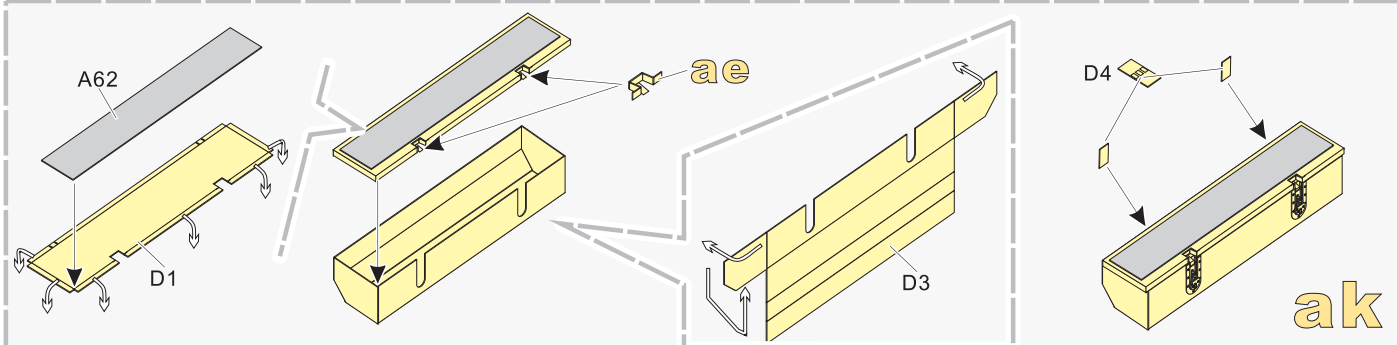


**VOYAGER
MODEL**



更多PE35840样品照片参考请扫一扫
MORE PICTUER OF PE 35840
REFERENCE SCAN HERE

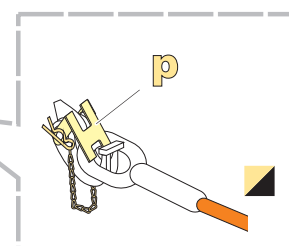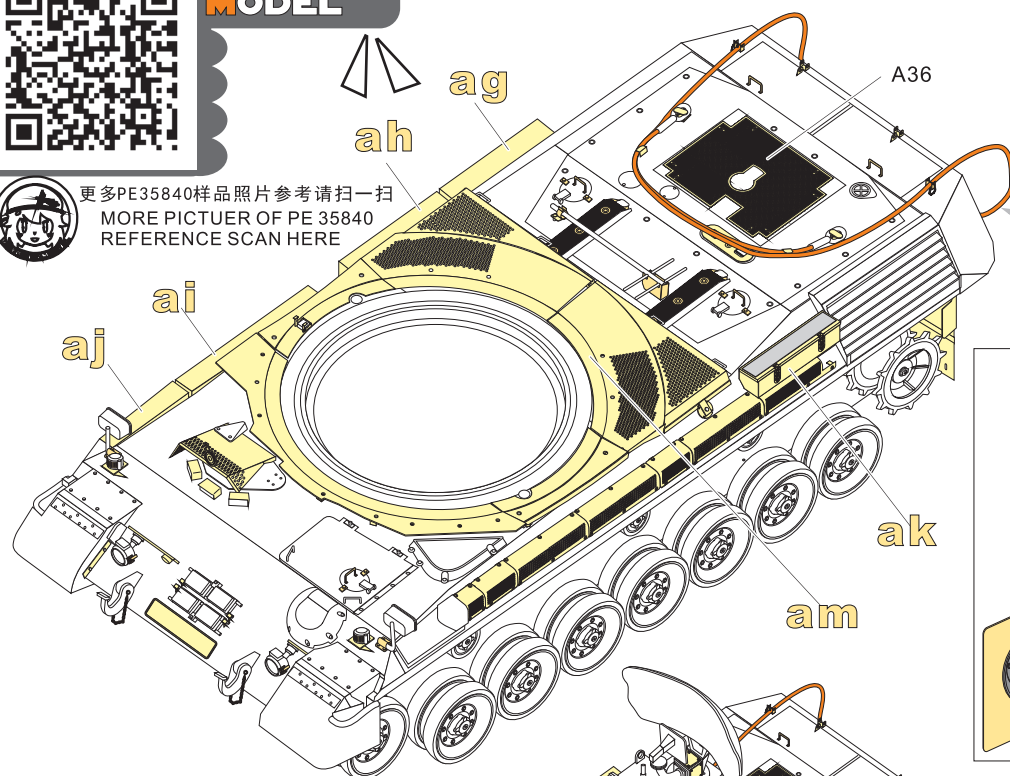

漏喷板使用说明:
Instruction:

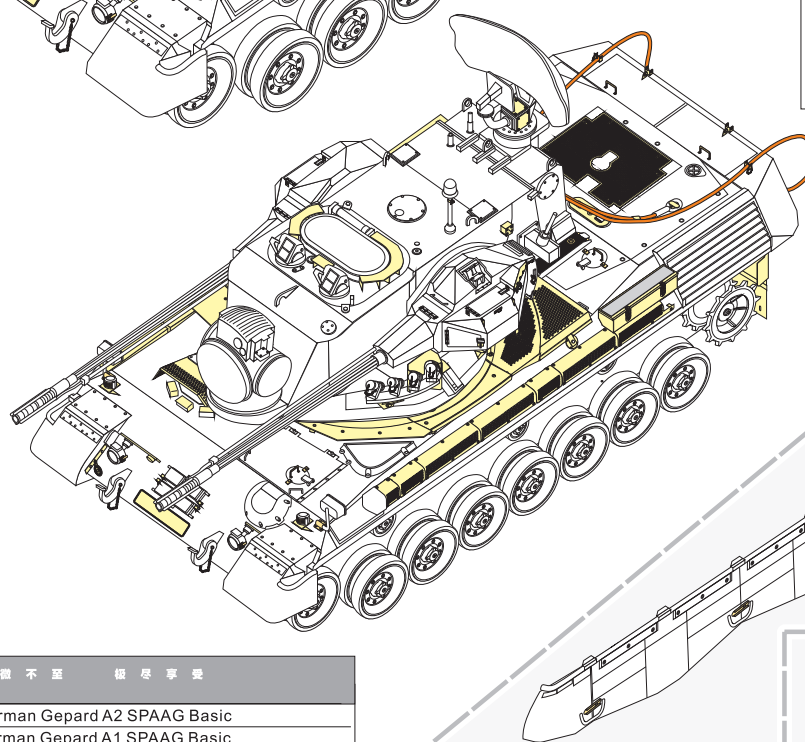

VOYAGERMODEL® 无微不至 极尽享受

Recommended item

PE 35841 Modern German Gepard A2 SPAAG Basic

PE 35852 Modern German Gepard A1 SPAAG Basic

PE 35853 WWII German Tiger I