


The MICRO SCALE DECAL is the thinnest, most versatile decal made. It will conform to the irregular surfaces found on models because of its strength and flexibility. These characteristics are not found on any other decal made. When used with the MICRO SCALE SYSTEM the MICRO SCALE DECAL will help produce the most realistic model you can make.

The MICRO SCALE SYSTEM is simple to use but each step must be followed as described to assure perfect results. The elimination of any step may cause blushing (silvering of the decal film) or an uneven finish on the completed model.

THE MICRO SCALE DECAL SYSTEM

1. Surface to be decalced must have a smooth, glossy, painted finish. (Do not apply decals to unpainted surfaces or they will not adhere.) To obtain this surface either paint the model with glossy paints or spray MICRO GLOSS over matte-finish paint. IMPORTANT: Spray MICRO GLOSS over entire model or uneven patches will appear when the flat finish is added later. Allow paint to dry thoroughly.
2. For best results, surface to be decalced should be horizontal. A small vise is helpful here, or a box can be made into a jig to allow the model to lay on its side.
3. Cut each decal subject from the sheet only as needed. DO NOT cut clear film away from design. Using tweezers, dip decal completely into water then remove and allow decal adhesive to soften. About one minute should be sufficient.
4. While adhesive is softening use a soft, medium-size brush, a No. 7 red sable water color brush is ideal, and wet the area to be decalced with a few drops of MICRO SET (Blue label). This contains a wetting agent and helps eliminate tiny air bubbles.
5. Holding the decal paper with tweezers, use the brush to slide the loosened decal into the MICRO SET on the model.
6. Now place a few drops of MICRO SOL (Red label) directly onto the decal and position the decal exactly where it is to remain.
7. The MICRO SOL will soften the decal and allow it to conform exactly to the surface beneath. DURING THIS PROCESS THE DECAL WILL WRINKLE AND DISTORT. DO NOT TOUCH IT! THIS IS NATURAL AND AN IMPORTANT PART OF THE SYSTEM! As the decal dries it will flatten-out and lay down. When finally dry there will be no distortion and the decal will be permanently bonded to the paint beneath. Actual drying time will vary according to temperature and humidity.
8. When decal is dry, examine it for any air bubbles. If any are found, puncture them with a sharp needle and put a drop of MICRO SOL over the bubble and allow to dry.
9. Carefully examine the clear film to be sure no silvering has appeared. If any is present, puncture the film several times with a sharp needle and apply MICRO SOL. The silvering should vanish as the SOL touches it.
10. After the decals have dried for several hours, carefully wash the decal adhesive from the entire model.
11. After the decals have dried for at least 12 hours, complete the model by spraying with either MICRO FLAT or MICRO GLOSS, depending on the sheen desired on the finished model.

RECOMMENDED KIT: HELLER F-84G

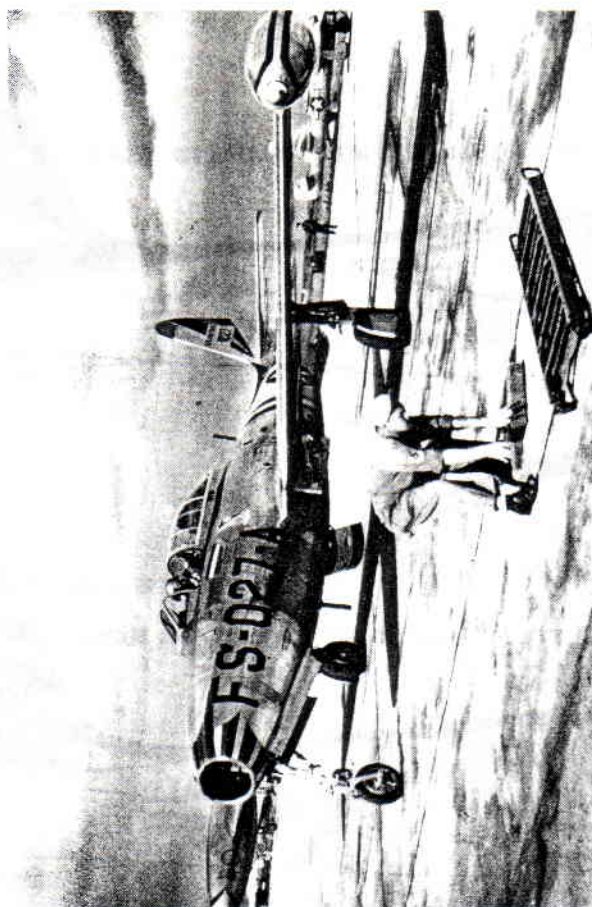

USAF PHOTO

F-84G OF THE 27th FEG WITH COL. D. J. M. BLAKESLEE IN THE COCKPIT. GUN PORTS HAVE BEEN TAPED OVER. MISAWA, JAPAN. OCTOBER 1952

WE WISH TO THANK
MR. NORM TAYLOR
AND
MR. DAVE MENARD
FOR THEIR ASSISTANCE

NATIONAL INSIGNIA SIZES:
WING 40inch
FUSELEGE 30inch
USAF ON WING 40inch HT.


STANDARD USAF FINISH ON F-84G AIRCRAFT

NATURAL METAL = ENTIRE AIRCRAFT OVERALL
OLIVE DRAB = ANTI GLARE ON NOSE AND SPINE
LT. GRAY = FIN TIP

F-84G 8th FBS, 49th FBG
Standard Finish

YELLOW NOSE

ATTACH STABILIZERS AFTER APPLYING FIN DECALS

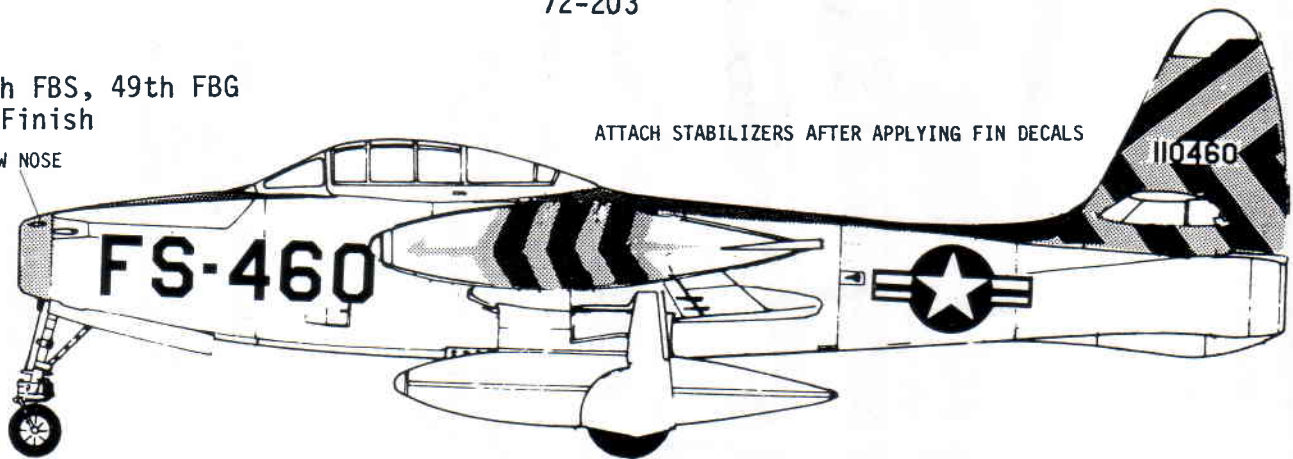


F-84G 53rd FBS, 36th FBW
Flown by Lt. Col. S. McKee
Standard Finish

RED

OTHER SIDE

FIN AND STABILIZERS - WHITE

ATTACH STABILIZERS AFTER APPLYING FIN DECALS

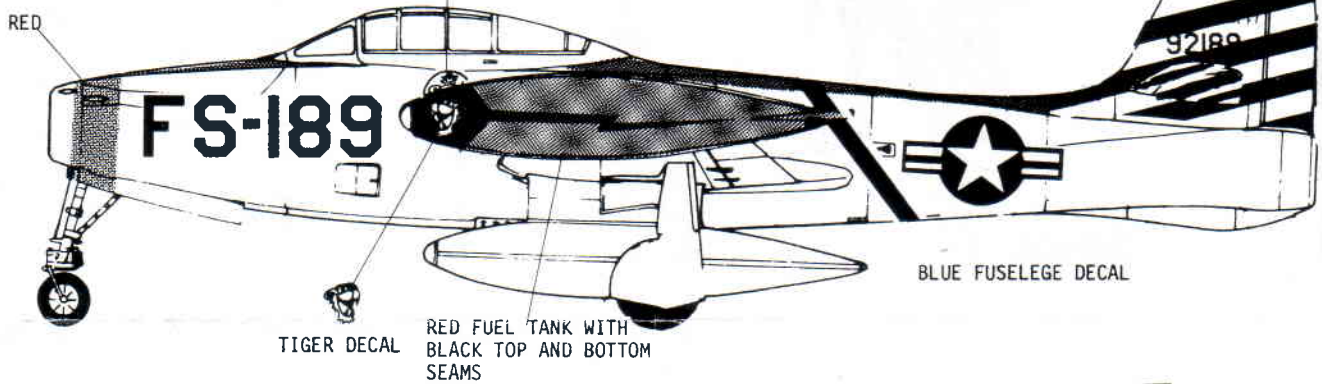

TIGER DECAL


RED FUEL TANK WITH
BLACK TOP AND BOTTOM
SEAMS

BLUE FUSELEGE DECAL

F-84G 508th SFW
Personal
Flown by Col. Cy Willson

508th SFW BADGE BOTH SIDES OF FIN


SAC BADGE BOTH SIDES OF FUSELEGE

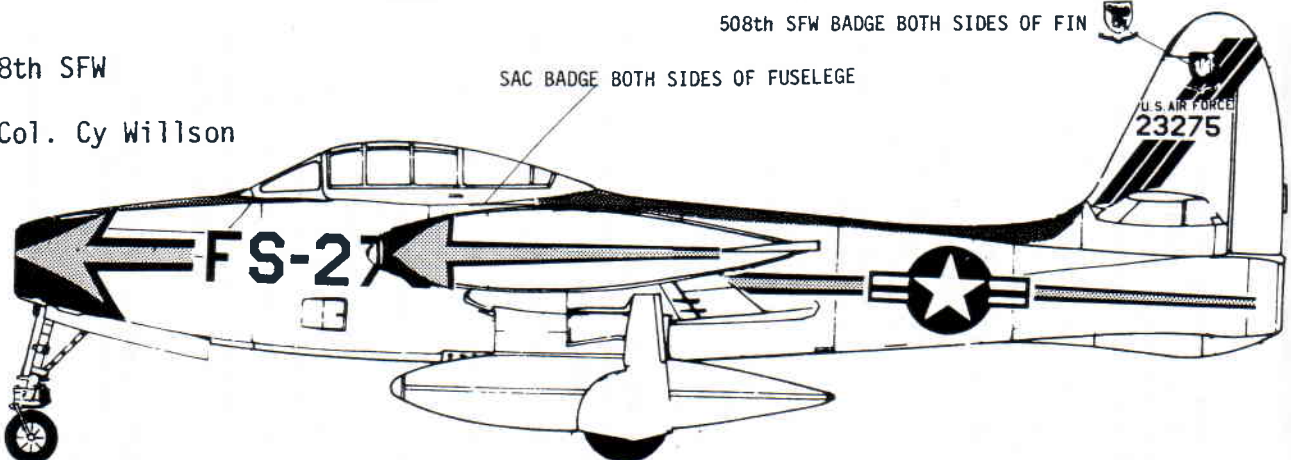

U.S. AIR FORCE
23275

F-84G 27th FEG
Flown by Col. D. J. M. Blakeslee
Standard Finish

BADGE BOTH SIDES

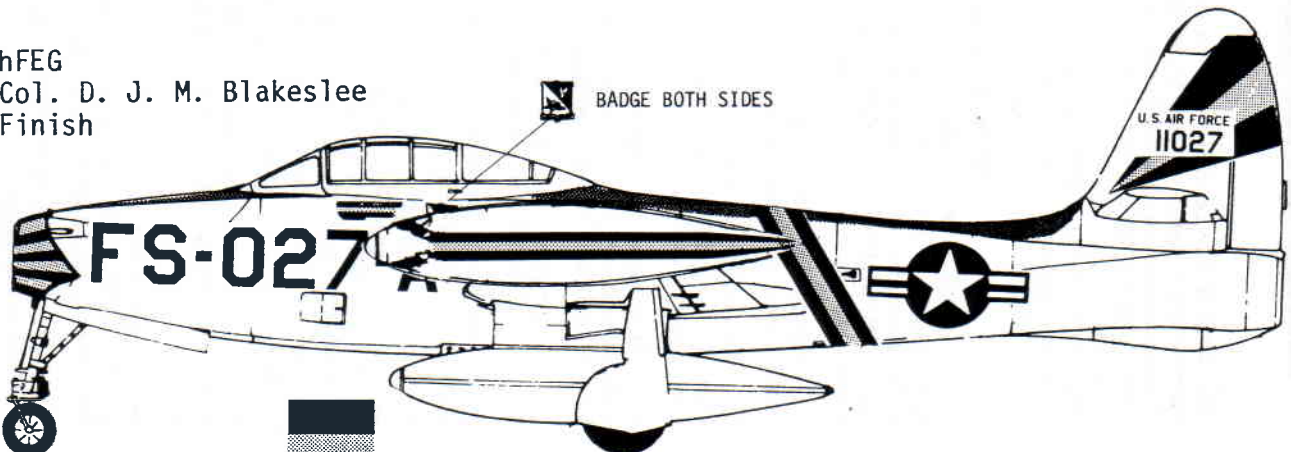

SPEED BRAKE DECAL - BLUE FWD.

