
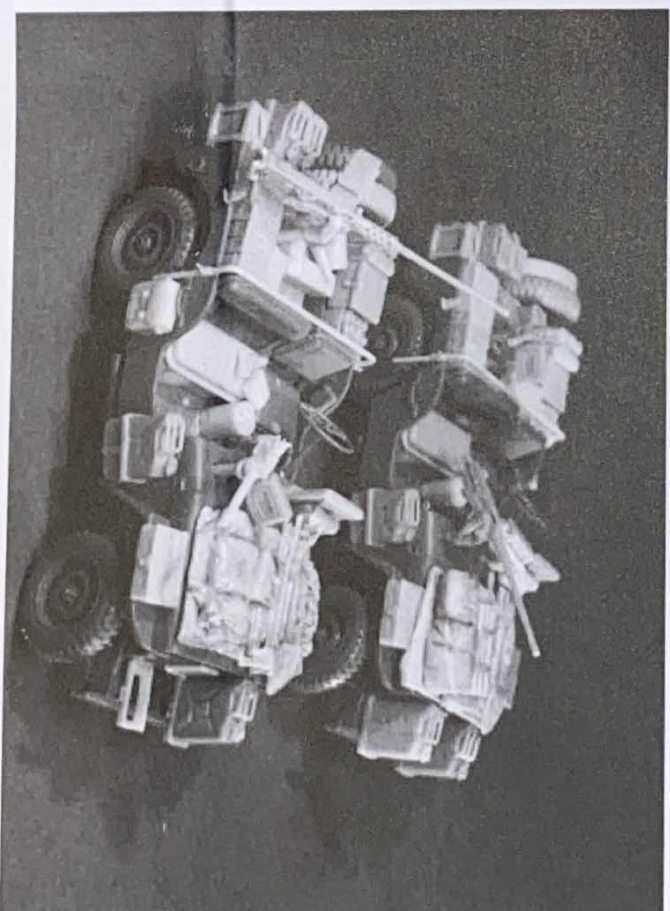
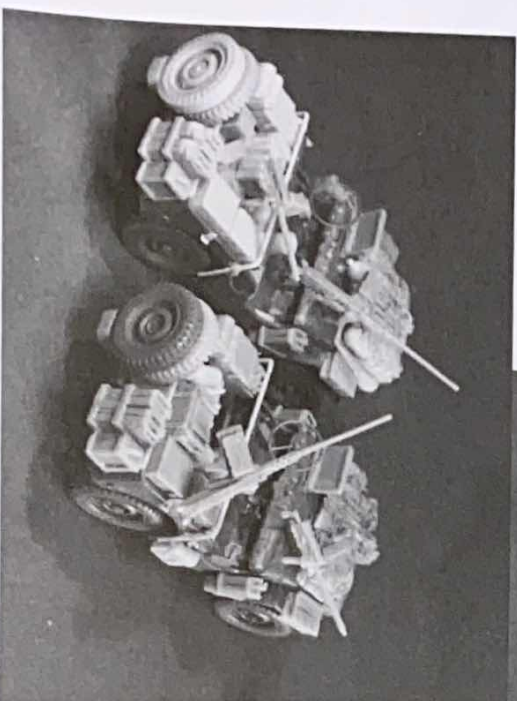
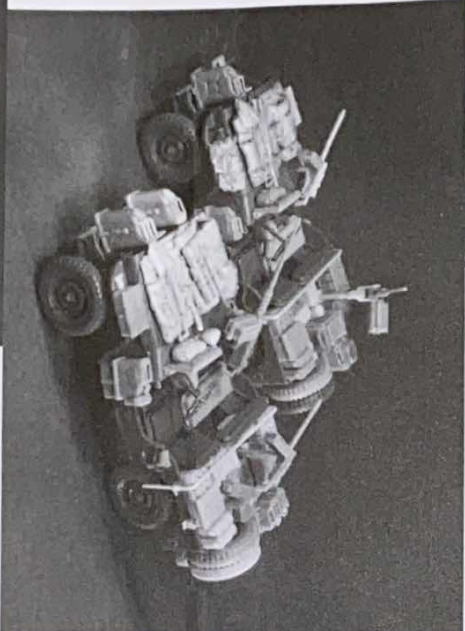


351271

Popski's Private Army « Jeep conversion »

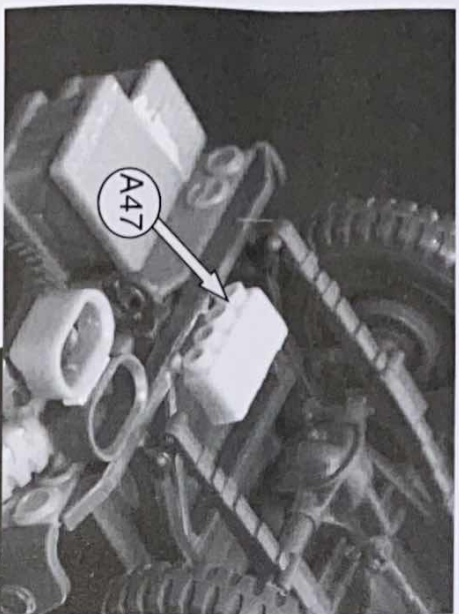

For more information about PPA visit <http://www.popski.org>

About the stowage & armament.

All vehicles had the same major stowage arrangement.

This could however vary in detail.

All vehicles carried a .30 & .50 but these could be interchanged front and rear.

Only Popski's own Jeep carried two .50's


It appears that only one Jeep carried the double front .30's

Master by Graham SELLAR

October 2017


Special thanks to Brian Murdoch for his help.

A01	Rear plate	X1
A02	Rear bumper	X1
A03	Dashboard	X1
A04	Spare wheel	X1
A05	Spare wheel (civilian pattern)	X1 optional
A06	Rear jerry cans	X1
A07	POW rear	X1
A08	Grenade box	X2
A09	Gunner's seat	X1
A10	Rear main stowage box	X1
A11	.50 ammo box	X1
A12	Front jerry can support	X2 optional
A13	Food box	X1
A14	.30 ammo box	X1
A15	Bags	X1
A16	First aid box	X1
A17	Hawkins mines	X1
A18	Water can	X1
A19	Front jerry cans	X2
A20	Side jerry cans	X2
A21	Jerry can handle	X9
A22	PPA plate	X1
A23	Bren box	1+1
A24	Camouflage net	X1
A25	Gun floor plate	X1
A26	Side bracket	X2
A27	Wing nuts	X2+2
A28	Map case	X1
A29	Medical bag	X1
A30	Bonnet stowage a	X1
A31	Bonnet stowage b	X1
A32	.30 gun support	X1
A33	.30 gun	X1
A34	.30 ammo box	X1
A35	.50 support	X1
A36	.50 gun	X1
A37	.50 barrel	X1
A38	.50 handle	X1
A39	.50 ammo box	X1
A40	.50 gun pintle	X1
A41	Bonnet clamps	X4
A42	Double .30 gun	X2
A43	Double .30 gun support	X1
A44	Double .30 gun mount	X1
A45	Cross bar for canvas	X1
A46	Rear gun support bracket	X1
A47	Smoke generator	X1
ACC	Various accessories	
RM	Rings	X2+3

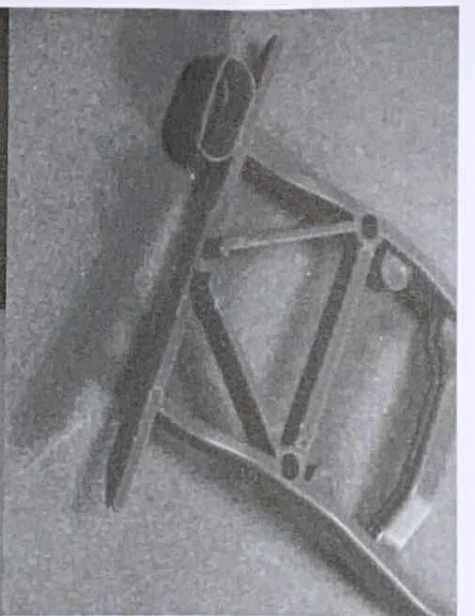





Remove rear right bumper.

Fill in holes on floor for passenger seat.


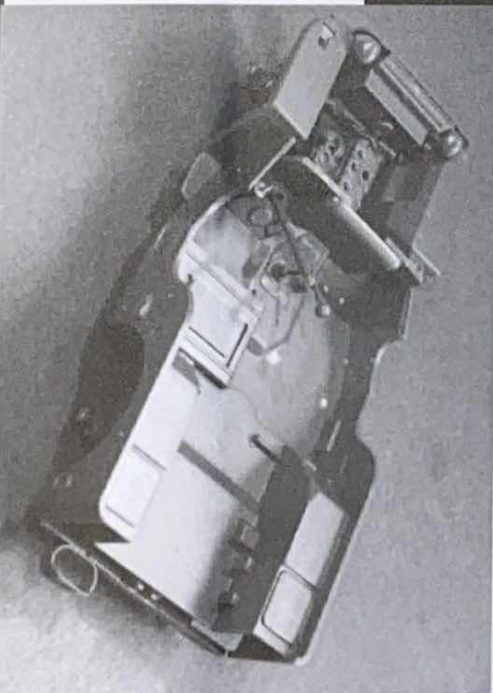





Position of rear gun support bracket.

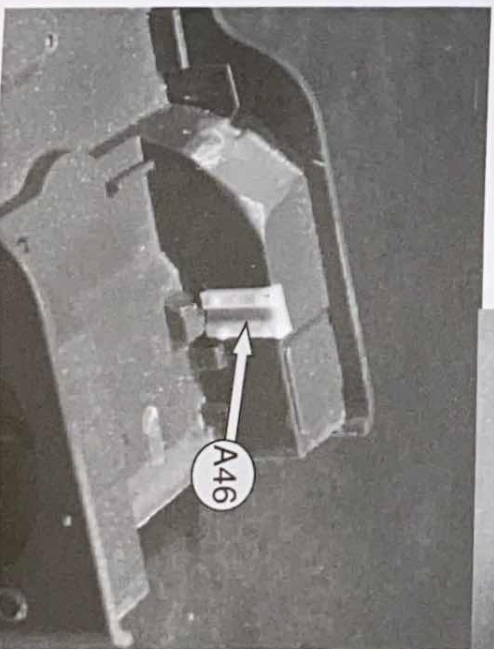




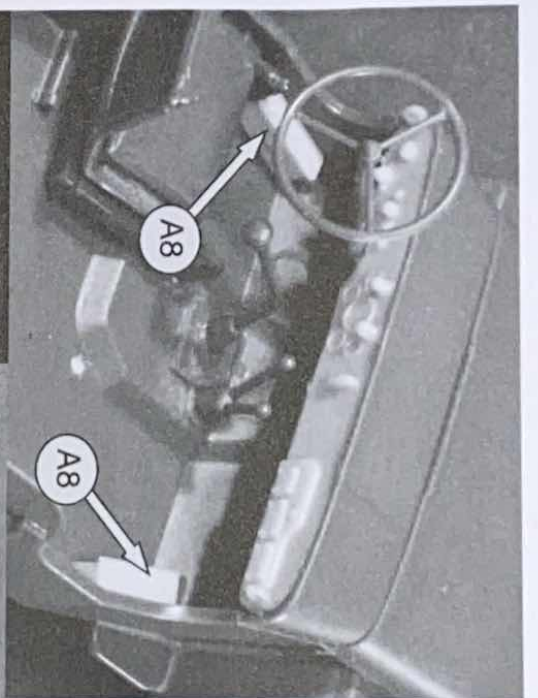
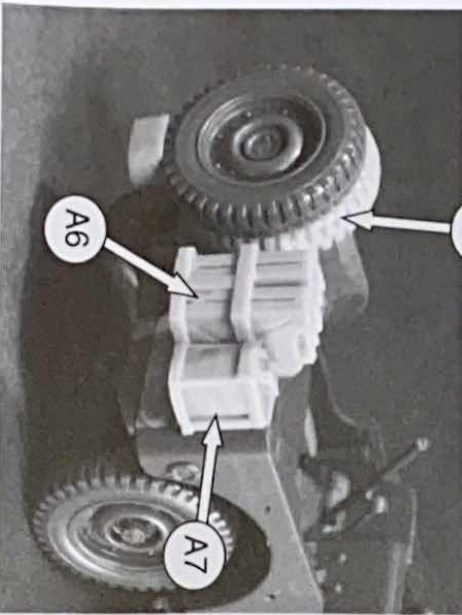
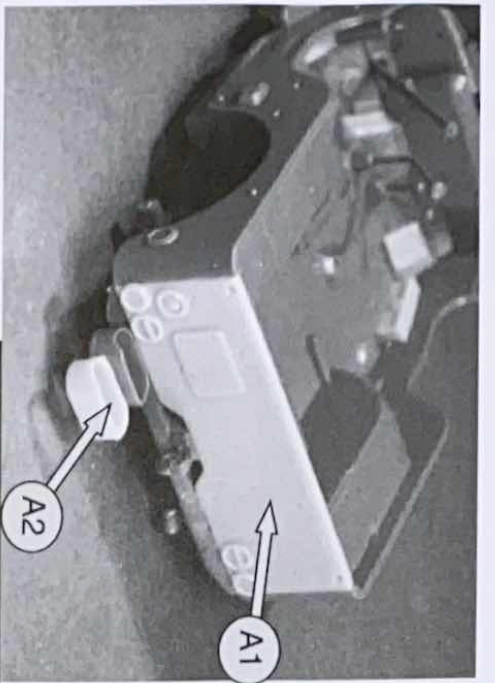


Remove lower section from
Tamiya back rest.

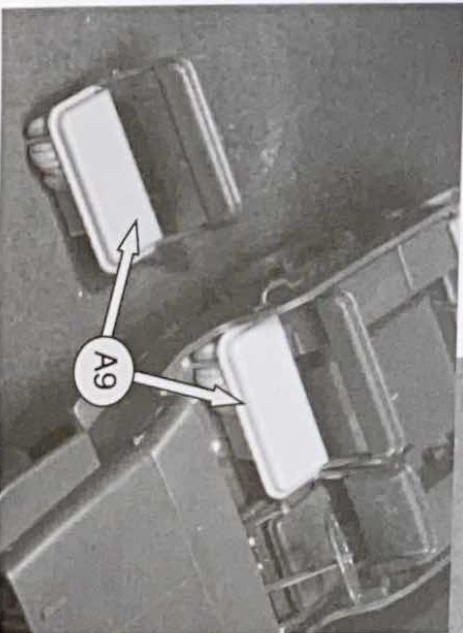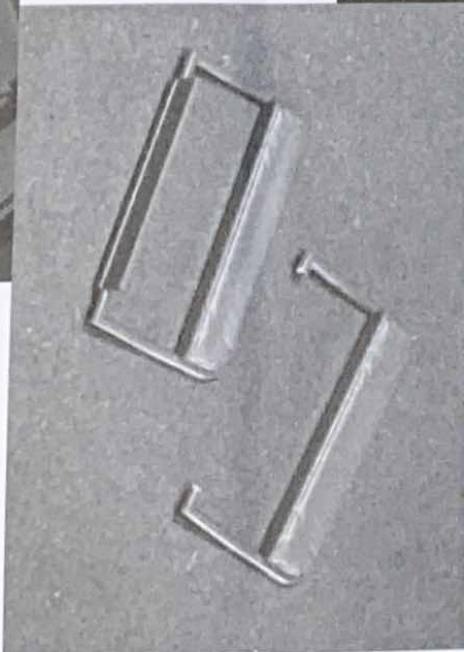

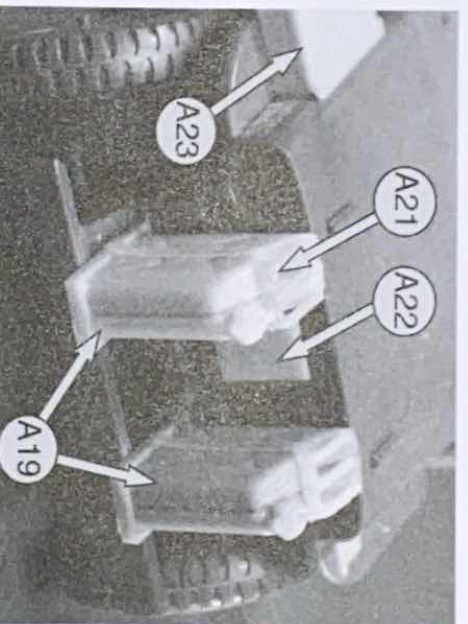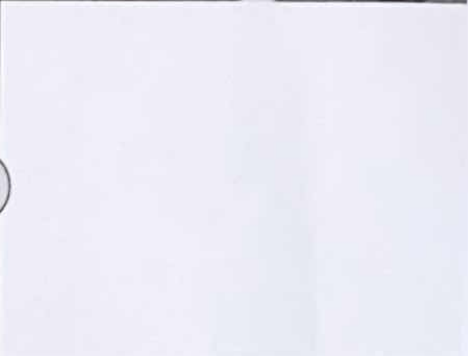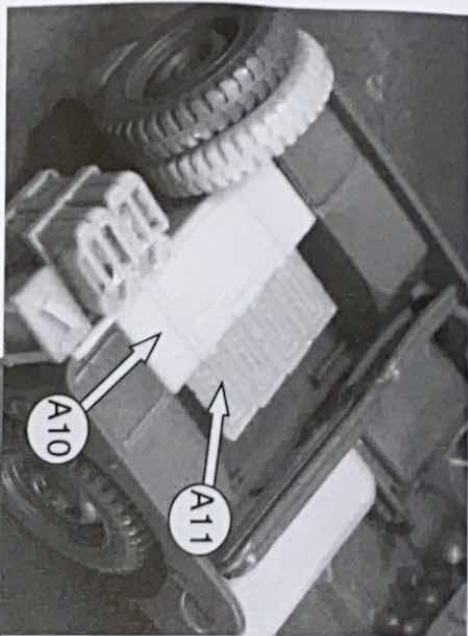




Use A12 if jerrycan is not placed.
Attach handles A21 to all jerrycans.

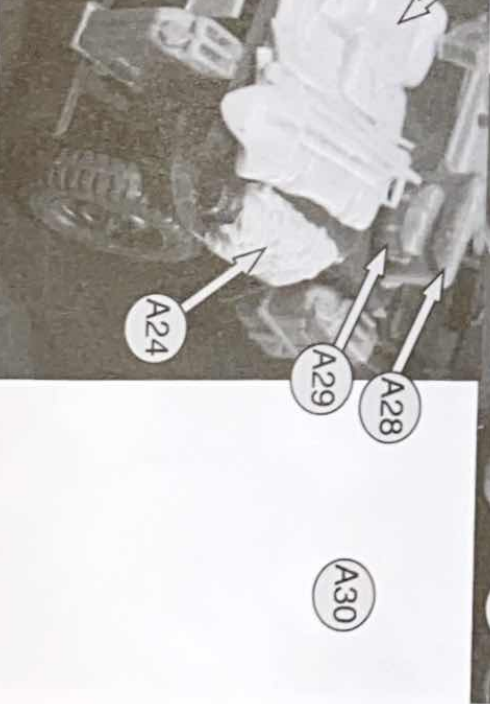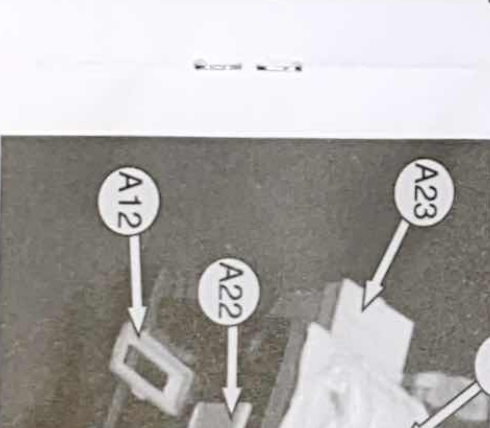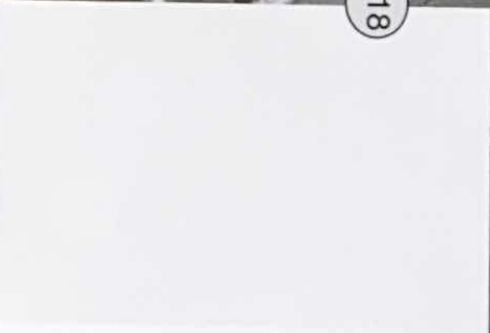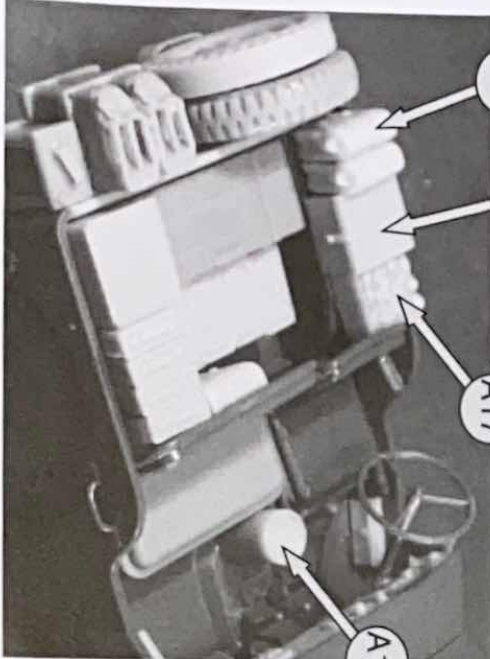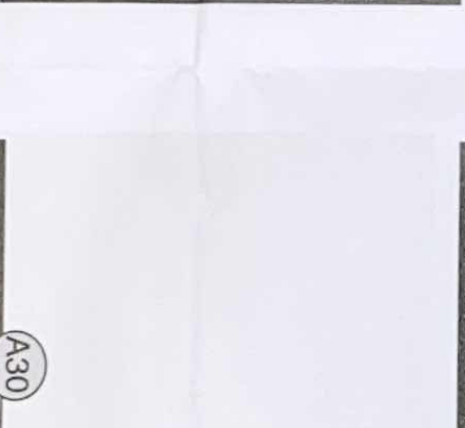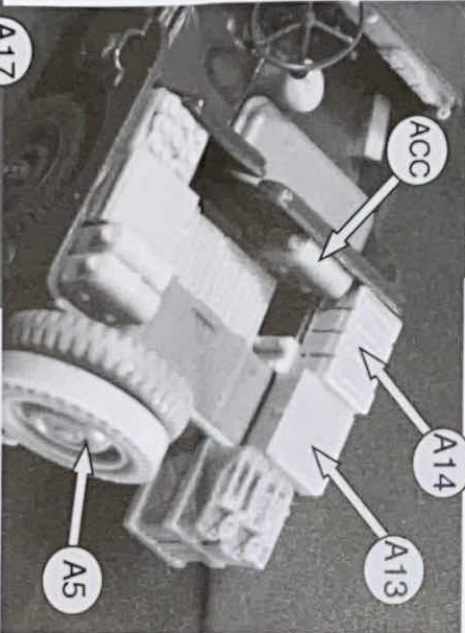




Reduce rear support A32
for .30 to 18mm

.30 at rear

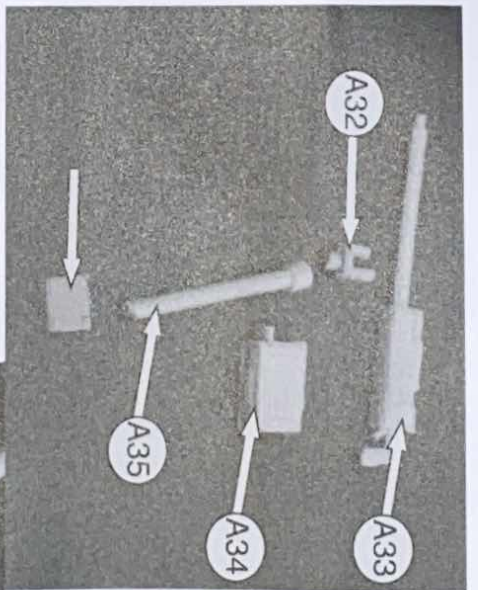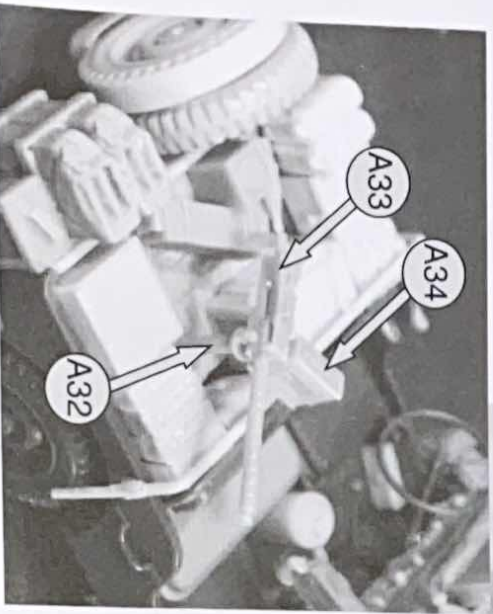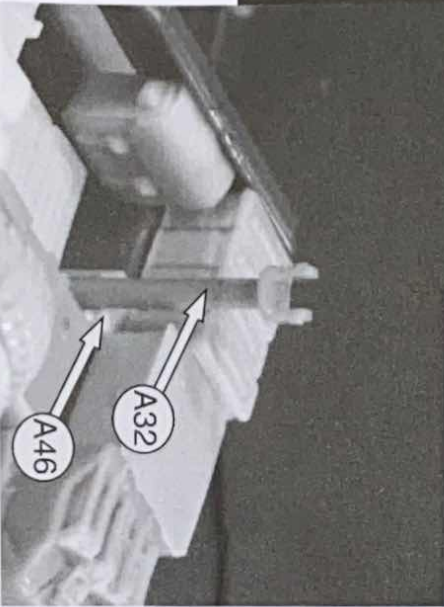


Reduce front support A33
to 18mm
Cut down A32 and attach to
top of A35


.30 at front

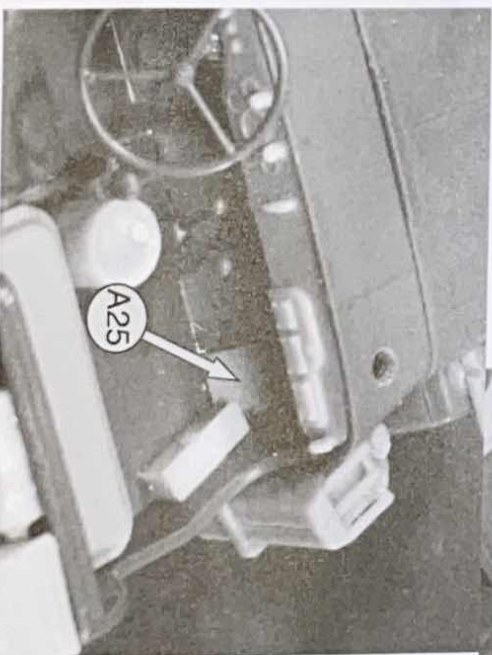

.50 at front
 Drill out a 18mm hole 6mm
 from side.
 Reduce support rod A39 to
 18mm

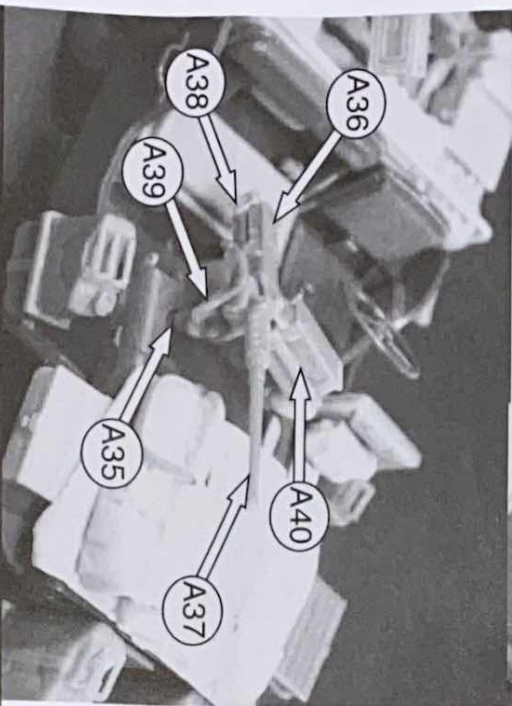

.50 at rear.
 Reduce support A39 to 18mm

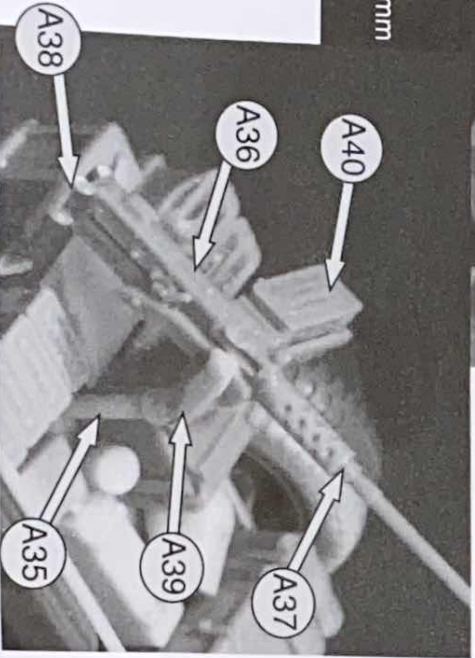

Double .30 at front
 Use same support A35 as
 for .50 and insert a very small
 length of A43

