


Are you ready for realistic models?



For Tamiya (61118) 1/48 Kits



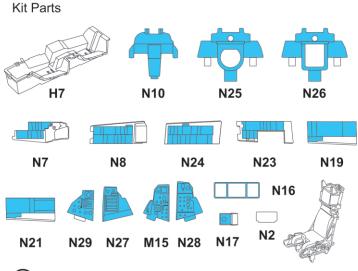

- 1) Prepare parts: Please sand all blue surfaces and delete all details
- 2 Paint all of the parts and cockpit.
- (3) Apply clear coat all of the surfaces that will applied 3D-Decals.
- Cut the sticker with a scissor and seperate the 3D-Decal part in warm water.
- **5** Remove any water with an earstick or a tissue.
- 6 You can apply CA glue to invisible spots if needed.

