


Aussie Decals

P.O. Box 94
Redbank,
QLD. 4301, Australia



1/72 Scale
No.A72032
1/48 Scale
No.A48023

F-111G A8-274 6 Sqn. 60th Anniversary of 6 Sqn. July 1999.

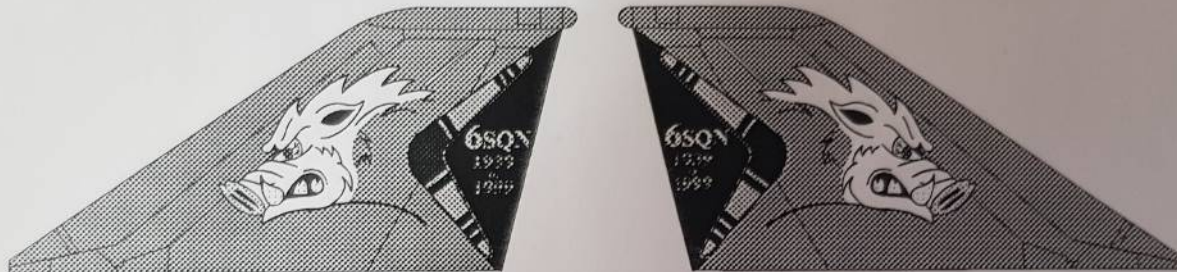

Modellers Note.


Position of 'A' number in relation to Formation Light as illustrated.
On the actual aircraft, the 'A' number is 1 cm below the panel line,
and 2 cm above the formation light.

Decal Application

1. Cut around the required design.
2. Soak in lukewarm water for 10 seconds.
3. Stand the decal on facial tissue.
4. Moisten the application area with plenty of water.
5. Apply decal by carefully sliding off the backing paper using a small brush and tweezers.
6. Use decal setting agent to nestle decal around body detail.
7. Paint model with clear lacquer to hide decal film.

NB: Decals adhere best to gloss surfaces. This decal film is very thin and will need extra care in application. Whenever you move a decal use water on your brush.

Starboard Side 'A' number position.

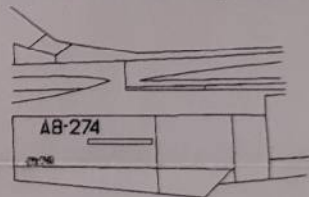

Port Side 'A' number position.

