


DECAL PLACEMENT

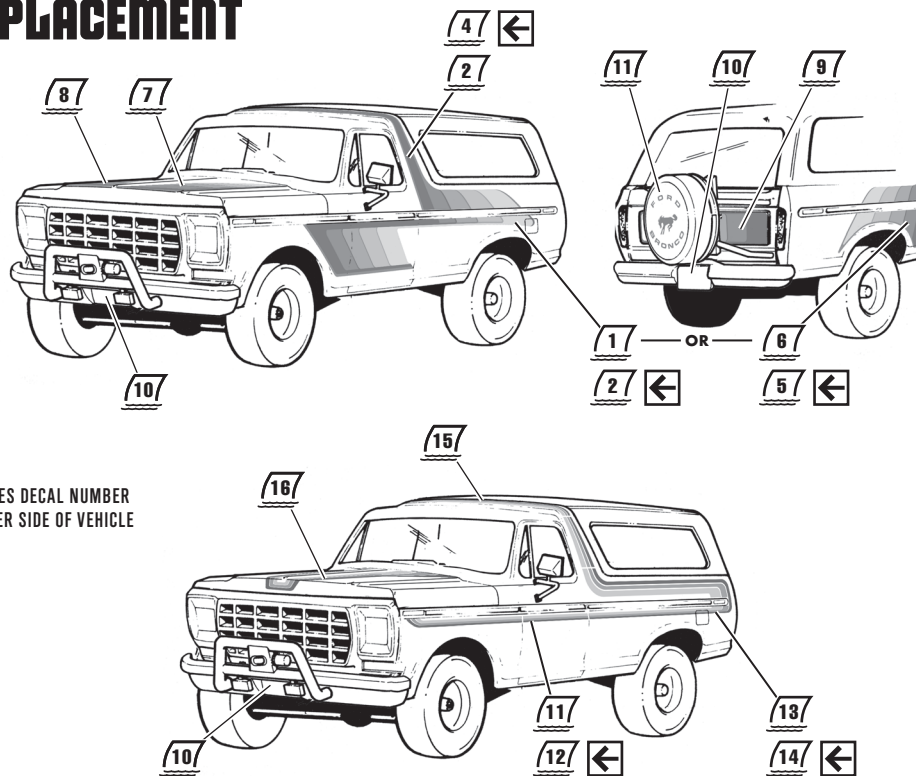

amt
A1304-200

Wild Hoss

FORD BRONCO

INSTRUCTION SHEET



IMPORTANT! READ THESE POINTS BEFORE YOU BEGIN


- 1** "TEST FIT" all parts before cementing. Trim excess plastic from parts before joining.
- 2** **Cement parts.** Use cement made for styrene plastic only.
- 3** **Do not cement together.**
- 4** **?** **Optional location of parts.**
- 5** Follow all of the numbers on the instruction sheet.
- 1** **1** **White numbers in a star indicate an assembly.**
- 1** **1** **Black numbers in a star indicate a completed assembly.**
- 1** **1** **Black numbers in a circle indicate part numbers.**
- 1** **1** **Indicates decal number.**
- 6** **!** **This kit may be built more than one way. Decide on which version you wish to build.**

MODELING HINTS:


IMPORTANT NOTE: Do not remove parts from runners until ready to use.




TWEEZERS TO PLACE, PICK UP AND HOLD SMALL PARTS.

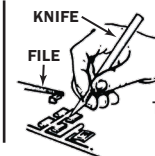

KNIFE TO REMOVE AND TRIM PARTS.
FILE TO REMOVE EXCESS PLASTIC

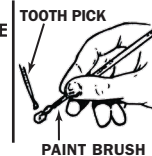

TOOTH PICK
CEMENT USE TOOTH PICK PAINT BRUSH OR PIN TO APPLY IT

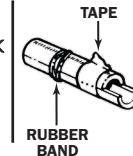

TAPE, RUBBER BAND AND CLOTHES PINS TO CLAMP AND HOLD PARTS UNTIL THEY ARE DRY.

1

NOTE: Shown for location only; locate parts in assembly No. 10.

