


1 : 72 SCALE VACUUM-FORMED MODEL AIRPLANE CONVERSION PACK

# RAREBITS

## F7F-3N Tigercat

TO CONVERT MONOGRAM GRUMMAN F7F-3 TIGERCAT

RP0004

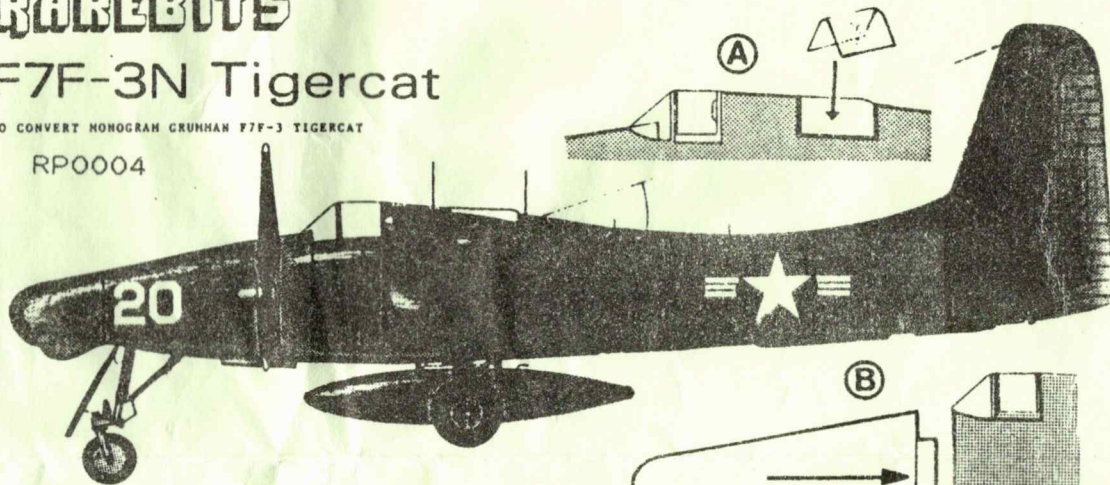

Score round moulded nose halves and snap off excess plastic carrier sheet. Sand cut edges to form a good centreline join. Cement the parts together and sand joint line smooth. Pack heavy weights into nose for balance.

Make up Monogram F7F-3 fuselage and make a cut-out at rear of pilots cockpit as shown in drawing A. Now saw off nose as drawing B. Trim the vacuformed rear canopy to fit cut-out and glue in place.

Insert vacuformed radar nose into front fuselage and glue in place. Add kit nose/heel assembly to the underside of nose.

Side profile shows Grumman F7F-3N of VMF (N) 531 U.S Marines based at Suwon, Korea circa 1951. Colour all Flat Black with Yellow number 20 on nose. Usual US star markings on fuselage, above port and below starboard wings.



\*\*\*\*\*  
\* PRODUCED AND DISTRIBUTED BY:- \*  
\* H. B. HANNANT LTD, \*  
\* TRAFALGAR HOUSE, \*  
\* 29-31 TRAFALGAR HOUSE, \*  
\* LOWESTOFT, SUFFOLK, ENGLAND. \*  
\*\*\*\*\*