**72nd Scale** NO.

72-116


## THE MICRO SCALE DECAL

MANUFACTURED BY KRASEL INDUSTRIES, INC., SANTA ANA, CA. 92705

**AIRCRAFT** 

1.75


...........

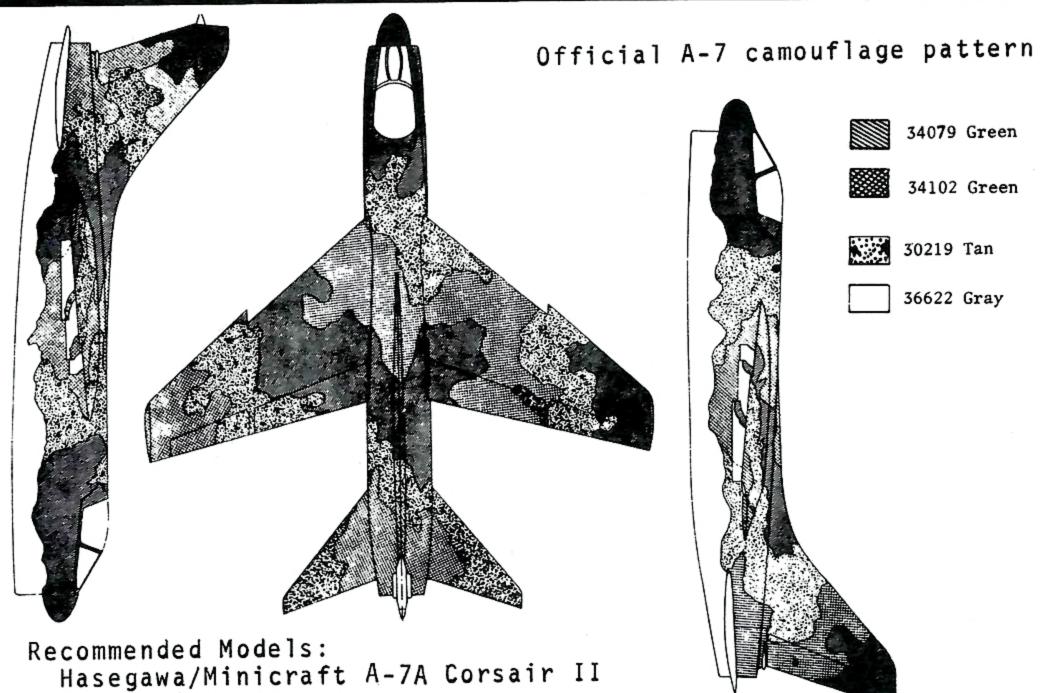

Revell A-7D Airfix A-7E

Note: Neither of the recommended kits includes the refueling recepticle on top of the fuselage. This must be scratch built. Be sure to remove the refueling probe from the right side of the nose, and fill the locating holes.

MICRO SCALE DECAL RIVETS can be used to reproduce a realistic rivet pattern on your models. You will be amazed at the realism these decal rivets will give a model. Refer to photos for typical placement on a particular model.

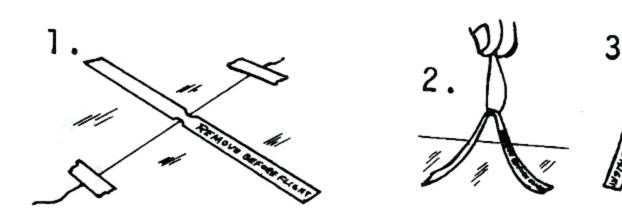

"REMOVE BEFORE FLIGHT" Ribbons:

1. Tape a 1 1/2" length of fine thread to a piece of glass or other smooth surface as shown. Cut ribbon from decal sheet and trim clear film from edges. Wet decal as usual and slide onto glass over thread as shown.

2. Remove tape and lift thread straight up, allowing ribbon to

fold back on itself.

3. Tie thread in a knot and hang to allow ribbon to dry.

4. When ribbon is dry, use a drop of white glue to secure the thread to the model in the desired position.

