

72nd S  
NO.  
72-225

EA-6B

#1



**MICROSCALE DECAL**  
BY KRASEL INDUSTRIES, INC., SANTA ANA, CA. 92705

AIRCRAFT

72nd S  
NO.  
72-225

EA-6B

#1



**MICROSCALE DECAL**  
BY KRASEL INDUSTRIES, INC., SANTA ANA, CA. 92705

AIRCRAFT

The MICRO SCALE DECAL is the thinnest, most versatile decal made. It will conform to the irregular surfaces found on models because of its strength and flexibility. These characteristics are not found on any other decal made. When used with the MICRO SCALE SYSTEM the MICRO SCALE DECAL will help produce the most realistic model you can make.

The MICRO SCALE SYSTEM is simple to use but each step must be followed as described to assure perfect results. The elimination of any step may cause blushing (silvering of the decal film) or an uneven finish on the completed model.

### The MICRO SCALE DECAL SYSTEM

1. Surface to be decalced must have a smooth, glossy, painted finish. (Do not apply decals to unpainted surfaces or they will not adhere.) To obtain this surface either paint the model with glossy paints or spray MICRO GLOSS over matte-finish paint. **IMPORTANT:** Spray MICRO GLOSS over entire model or uneven patches will appear when the flat finish is added later. Allow paint to dry thoroughly.
2. For best results, surface to be decalced should be horizontal. A small vise is helpful here, or a box can be made into a jig to allow the model to lay on its side.
3. Cut each decal subject from the sheet only as needed. **DO NOT** cut clear film away from design. Using tweezers, dip decal completely into water then remove and allow decal adhesive to soften. About one minute should be sufficient.
4. While adhesive is softening use a soft, medium-size brush, a No. 7 red sable water color brush is ideal, and wet the area to be decalced with a few drops of MICRO SET (Blue label). This contains a wetting agent and helps eliminate tiny air bubbles.
5. Holding the decal paper with tweezers, use the brush to slide the loosened decal into the MICRO SET on the model.
6. Now place a few drops of MICRO SOL (Red label) directly onto the decal and position the decal exactly where it is to remain.
7. The MICRO SOL will soften the decal and allow it to conform exactly to the surface beneath. **DURING THIS PROCESS THE DECAL WILL WRINKLE AND DISTORT. DO NOT TOUCH IT! THIS IS NATURAL AND AN IMPORTANT PART OF THE SYSTEM!** As the decal dries it will flatten-out and lay down. When finally dry there will be no distortion and the decal will be permanently bonded to the paint beneath. Actual drying time will vary according to temperature and humidity.
8. When decal is dry, examine it for any air bubbles. If any are found, puncture them with a sharp needle and put a drop of MICRO SOL over the bubble and allow to dry.
9. Carefully examine the clear film to be sure no silvering has appeared. If any is present, puncture the film several times with a sharp needle and apply MICRO SOL. The silvering should vanish as the SOL touches it.
10. After the decals have dried for several hours, carefully wash the decal adhesive from the entire model.
11. After the decals have dried for at least 12 hours, complete the model by spraying with either MICRO FLAT or MICRO GLOSS, depending on the sheen desired on the finished model.

RECOMMENDED KIT: MINICRAFT EA-6B PROWLER

BLACK FS#37038  
LT. GULL GREY FS#16440 OR OFF OUR DECAL STRIP #TF11



HORIZONTAL STABILIZER WALK WAY

PLANES 15804 AND 159584 LEAVE WHITE  
PLANE 158650 PAINT GUNSHIP GREY  
PLANE 158810 PAINT BLACK

USE NUMBERS WHICH RELATE TO AIRCRAFT  
USE LETTERS WHICH RELATE TO AIRCRAFT  
OFF OUR STOCK SHEETS

WING WALKS WAYS

PLANES 159584 AND 158810 PAINT BLACK  
PLANE 158650 PAINT GUNSHIP GREY  
PLANE 158040 LEAVE WHITE

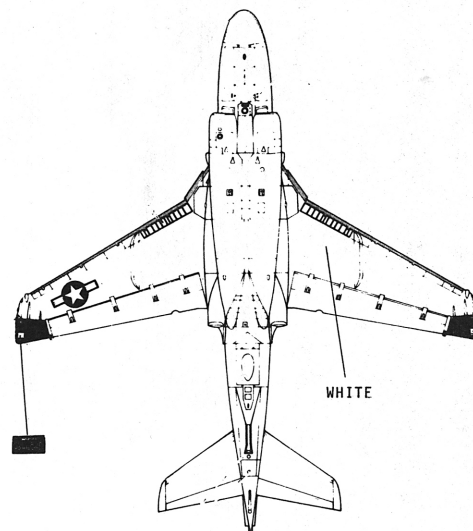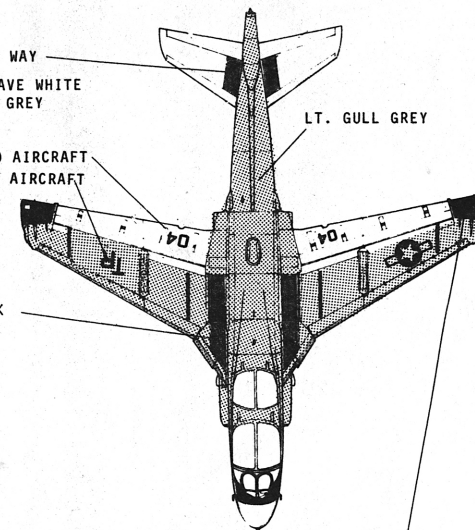

PLANE 158810 USE CHECKER PATTERN  
OTHER 3 PLANES LEAVE WHITE





RESEARCH BY  
DON GARRETT AND MICHAEL HENNING

We recommend Repli-Color and Polly S paints for matching federal standard colors.

The International Plastic Modelers Society is an organization devoted to developing the plastic modeling art. It was formed "By Modelers - For Modelers". If you wish to expand your modeling talents, write for further information to: IPMS/USA, New Member Information, P.O. Box 2555, Long Beach, Ca., 90801;

ALL PLANES  
 OVERALL UPPER SURFACES LT GULL GREY  
 OVERALL LOWER SURFACES WHITE  
 (EXCEPTIONS)  
 UPPER AND LOWER FLAPS WHITE  
 UPPER AND LOWER HORIZONTAL STABILIZER  
 WHITE

LOWER SURFACE OF WING WHITE UP TO  
 LEADING EDGE  
 USE 16" HIGH NAVY ON FUSELAGE SHEET  
 #72-20

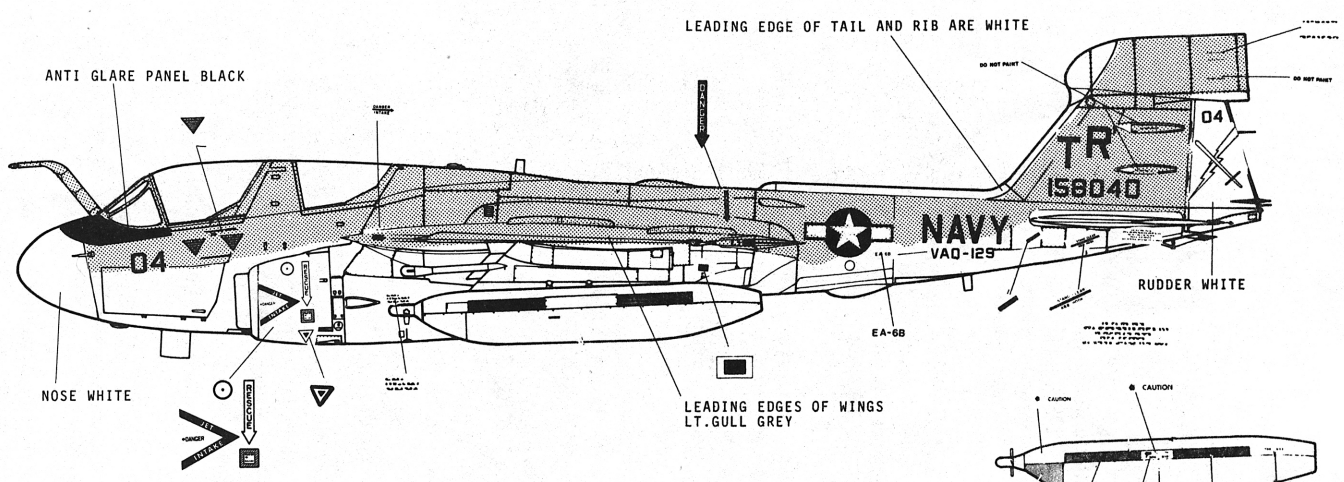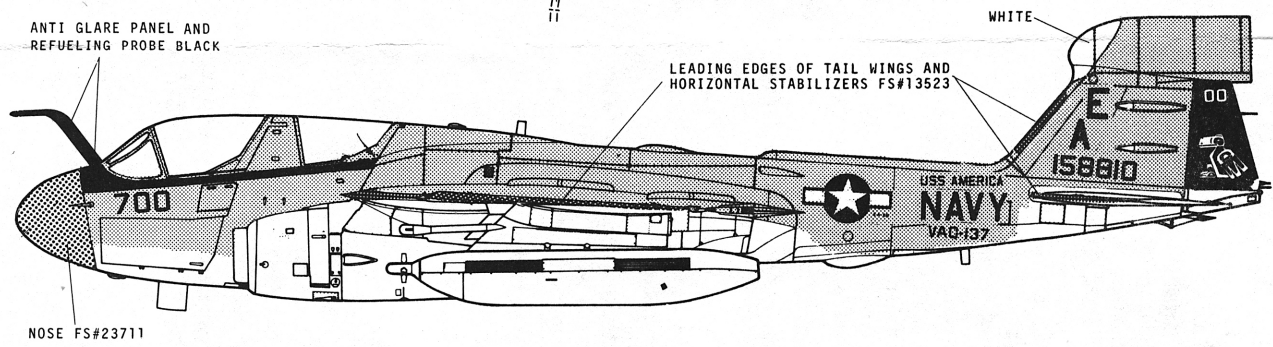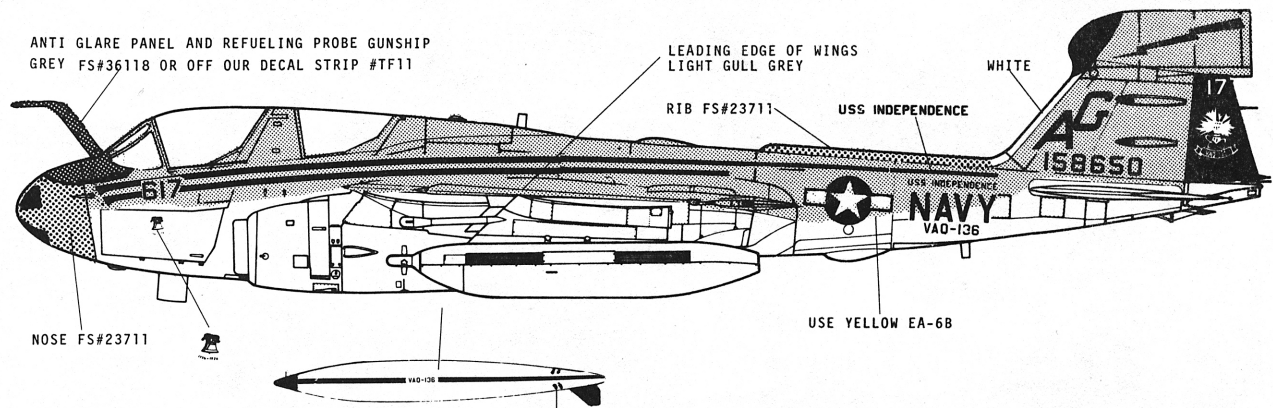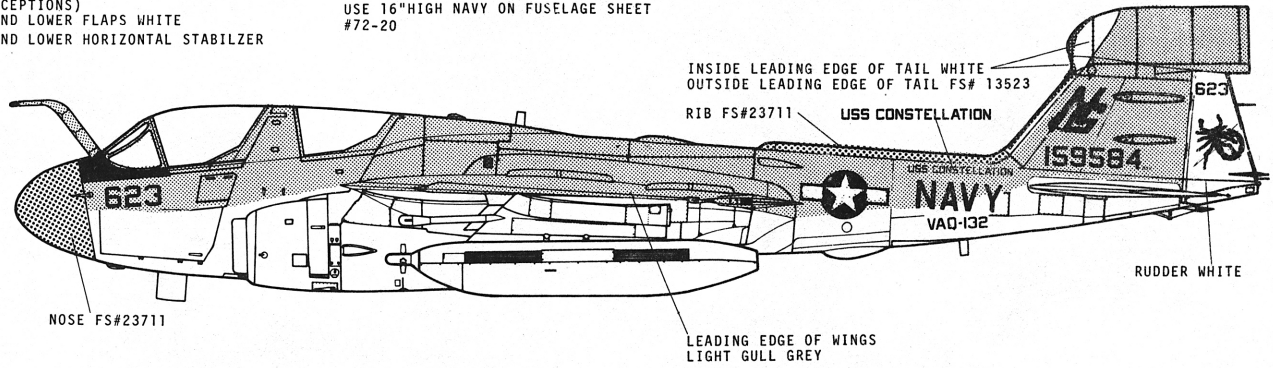

DATA COMMON TO ALL EA-6Bs

DDS 012      DDS 013  
 DDS 010      DDS 022  
 DO NOT PAINT