

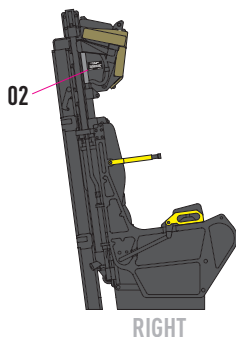


USE R6 AND R7 ONLY WITH OPEN COCKPIT

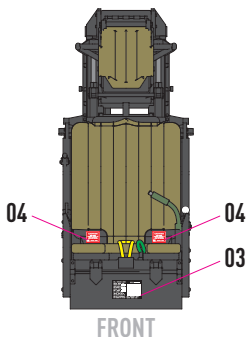

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

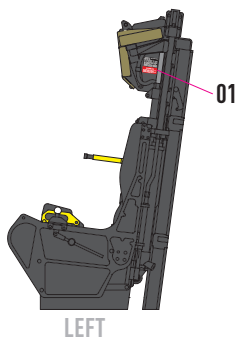

PAINT INSTRUCTION

COLORS	GUNZE / AGEUS	GUNZE / MR.COLOR
SEMI GLOSS BLACK		C92
KHAKI	H81	C55
FLESH	H22	C22

COLORS	GUNZE / AGEUS	GUNZE / MR.COLOR
DARK GREEN	H330	C330
KHAKI GREEN		C54