

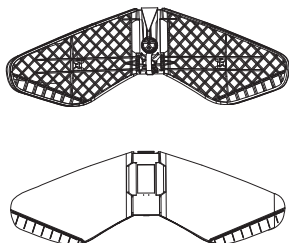


DETAIL AFTER REMOVAL FROM SPRUES

USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS

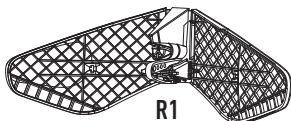

1 1-2 PARTS FROM THE KIT

