



SH-60F Oceanhawk

SH-60F オーシャンホーク SH-60F"大洋鷹"反潜直升机

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- * 推荐使用的模型工具(请自备):
专用模型胶水, 专用模型油漆, 水口剪刀, 长咀钳, 刀片, 锉刀, 镊子钳, 钻, 剪刀, 软布, 砂纸, 瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- * 用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴水上贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍而引起意外。



cyanoacrylate glue
强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲



repair
填补






The method to apply the decals

1. Cut off the decal from the decal paper and put it into the warm water 40°C for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.

水贴纸的使用方法:


- 一. 把相关的印花从水贴上剪下, 放入40°C左右的温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 拿上印花纸, 手指蘸水将印花移到适当的位置。
- 四. 用软干布轻压印花直至水干, 气泡消失。


部品图 Parts

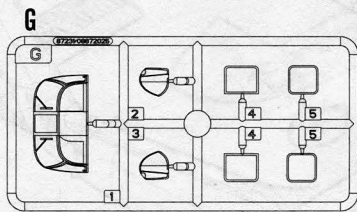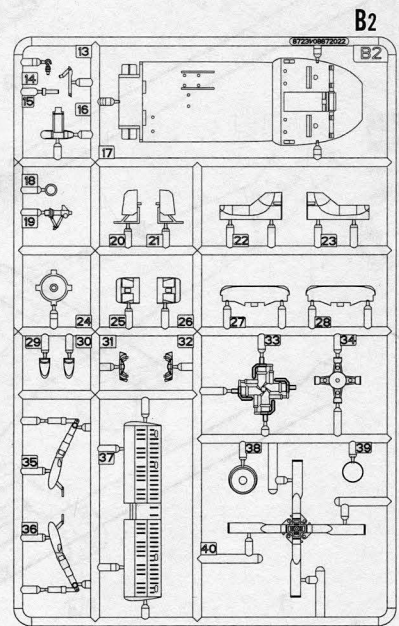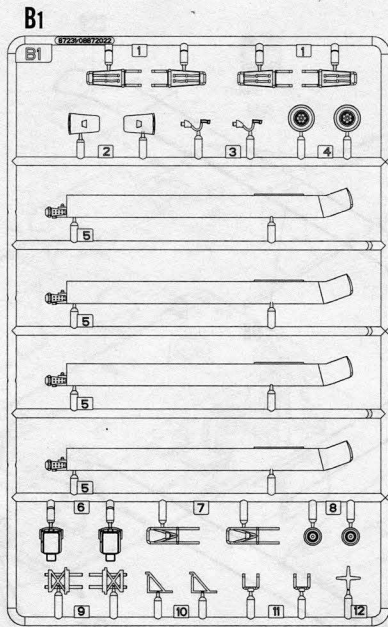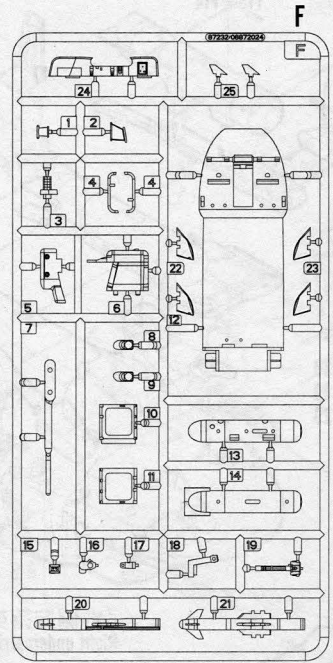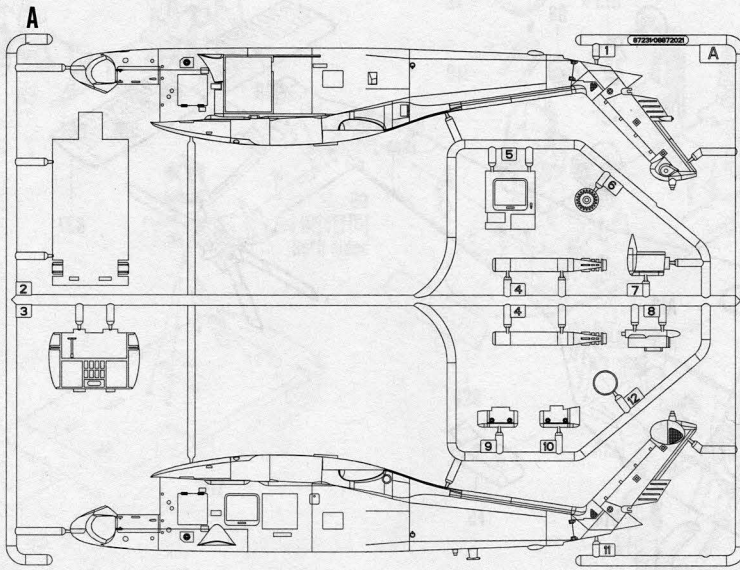

不用的部件: A4 A6 A7 A8 A9 A10 B27 F2 F3 F10 F11 F12 F15
 Unused parts: F16 F17 F18 F19 F20 F21 F22 F23 F24 F25 G5

《水贴》 Decal

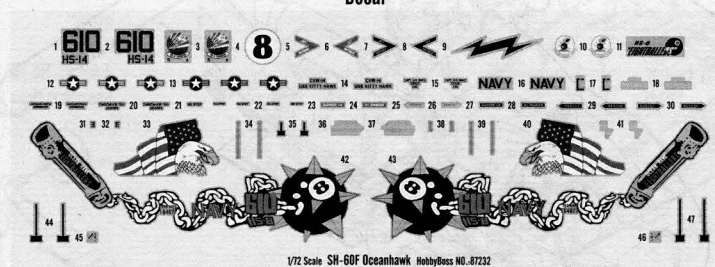



《右侧座椅》
Right seat

《左侧座椅》
Left seat

B21 B9 B9 B20
B6 B10 B10 B6

make holes
钻孔

B23

make hole
钻孔

B25 B32

G2 对侧G3
Opposite G3

《左侧起落架》
Left undercarriage

《右侧起落架》
Right undercarriage

B4 B4
B35 B36

制作两组
Make Two

《右侧座椅》
Right seat

《左侧座椅》
Left seat

B3 对侧相同
Both sides

B12 B40 B15

B13

make hole
钻孔

B22 B31 B26

G1 G4

对侧相同
Both sides

F4

A2 A3

make holes
钻孔

A11

F1

A5

对侧相同
Both sides

F4

F13+F14 F7

《左侧起落架》
Left undercarriage

B30 对侧B29
Opposite B29

F8 对侧F9
Opposite F9

《右侧起落架》
Right undercarriage

B14 F5


B16

B39 B34 B33 B5 B5

B24 B38 B18


B37

I Navy HS-8 "Eight Ballers".

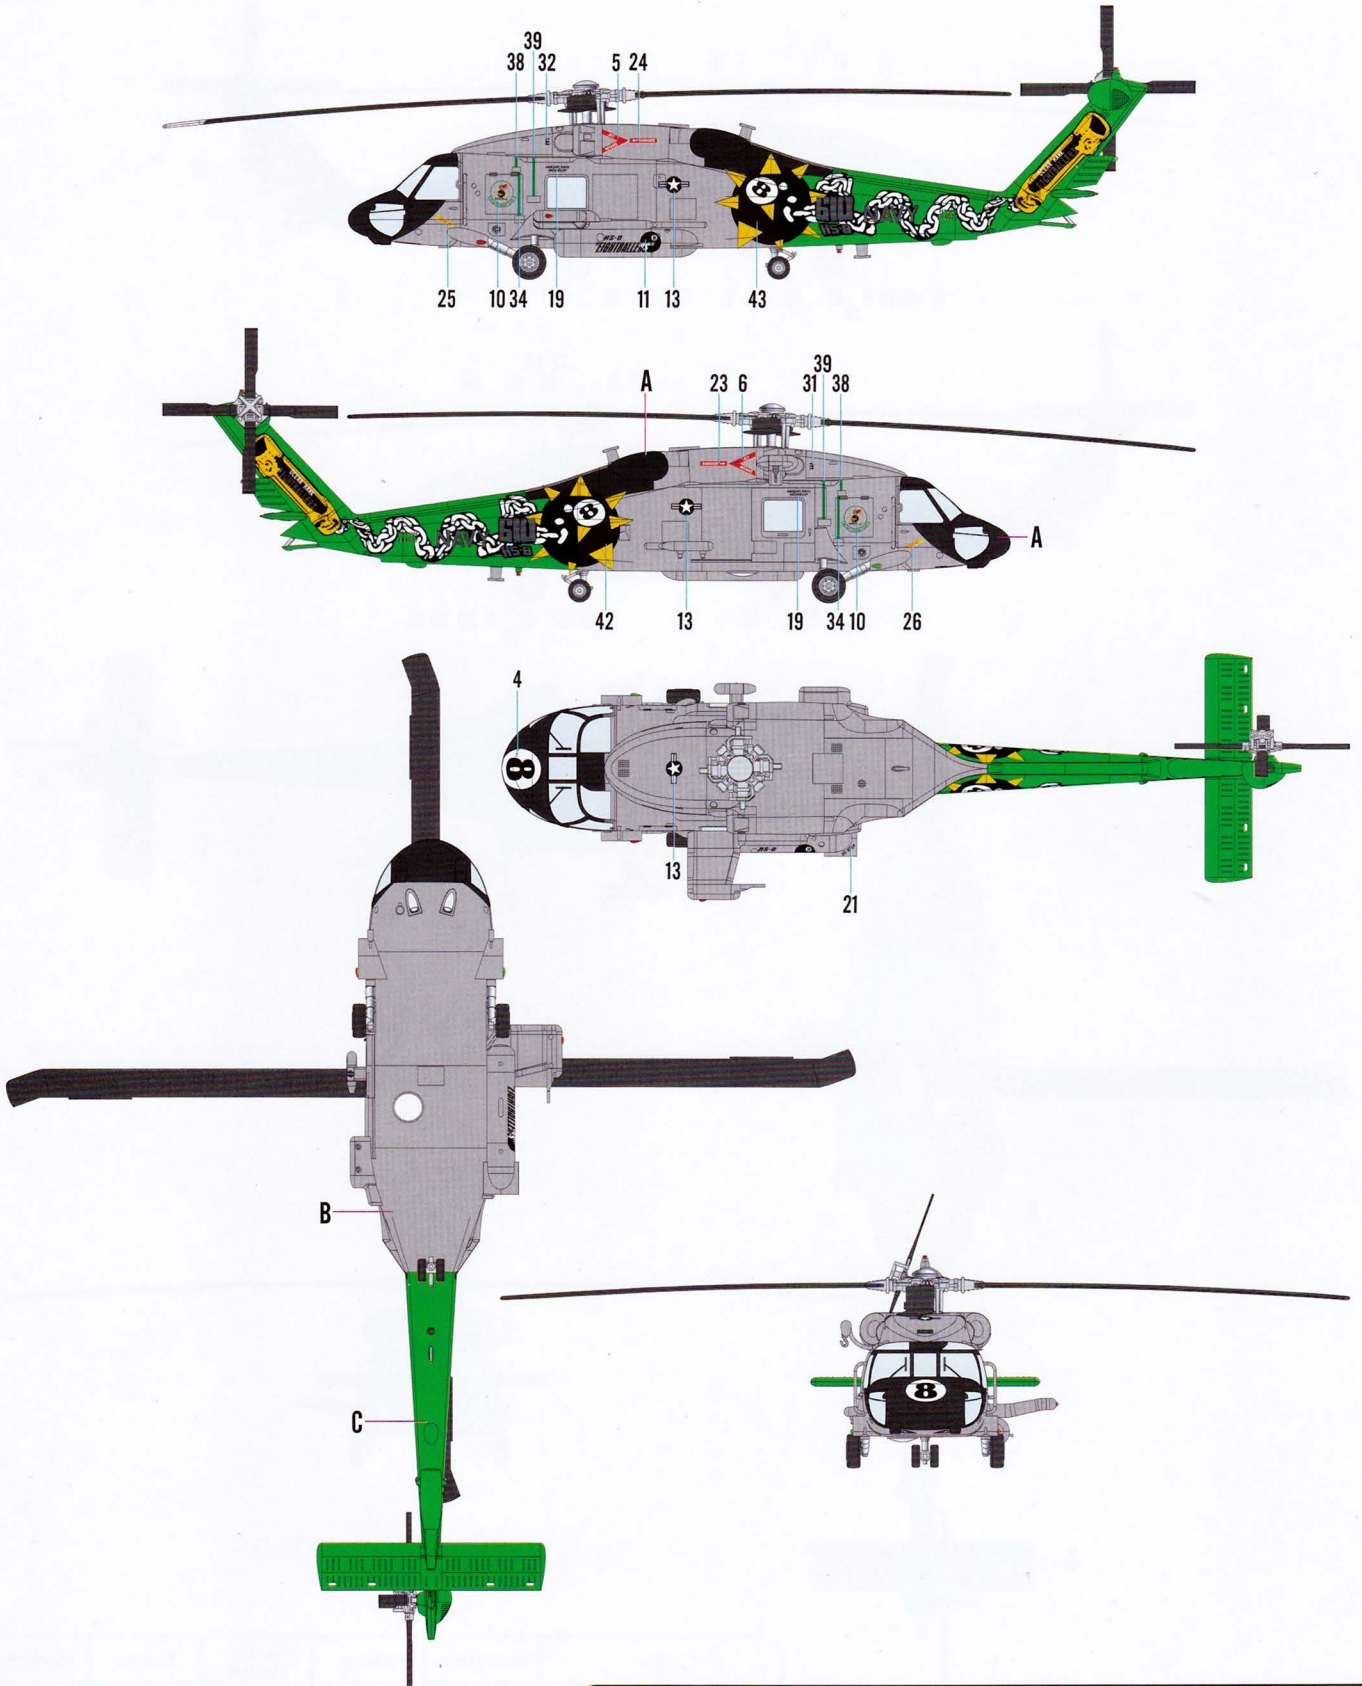

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
A 黑色 Black	H 2 2	861	1747	X1	21
B 灰色 Gray	H 308 308	990	1728	XF19	127

II Navy HS-14 "Chargers".

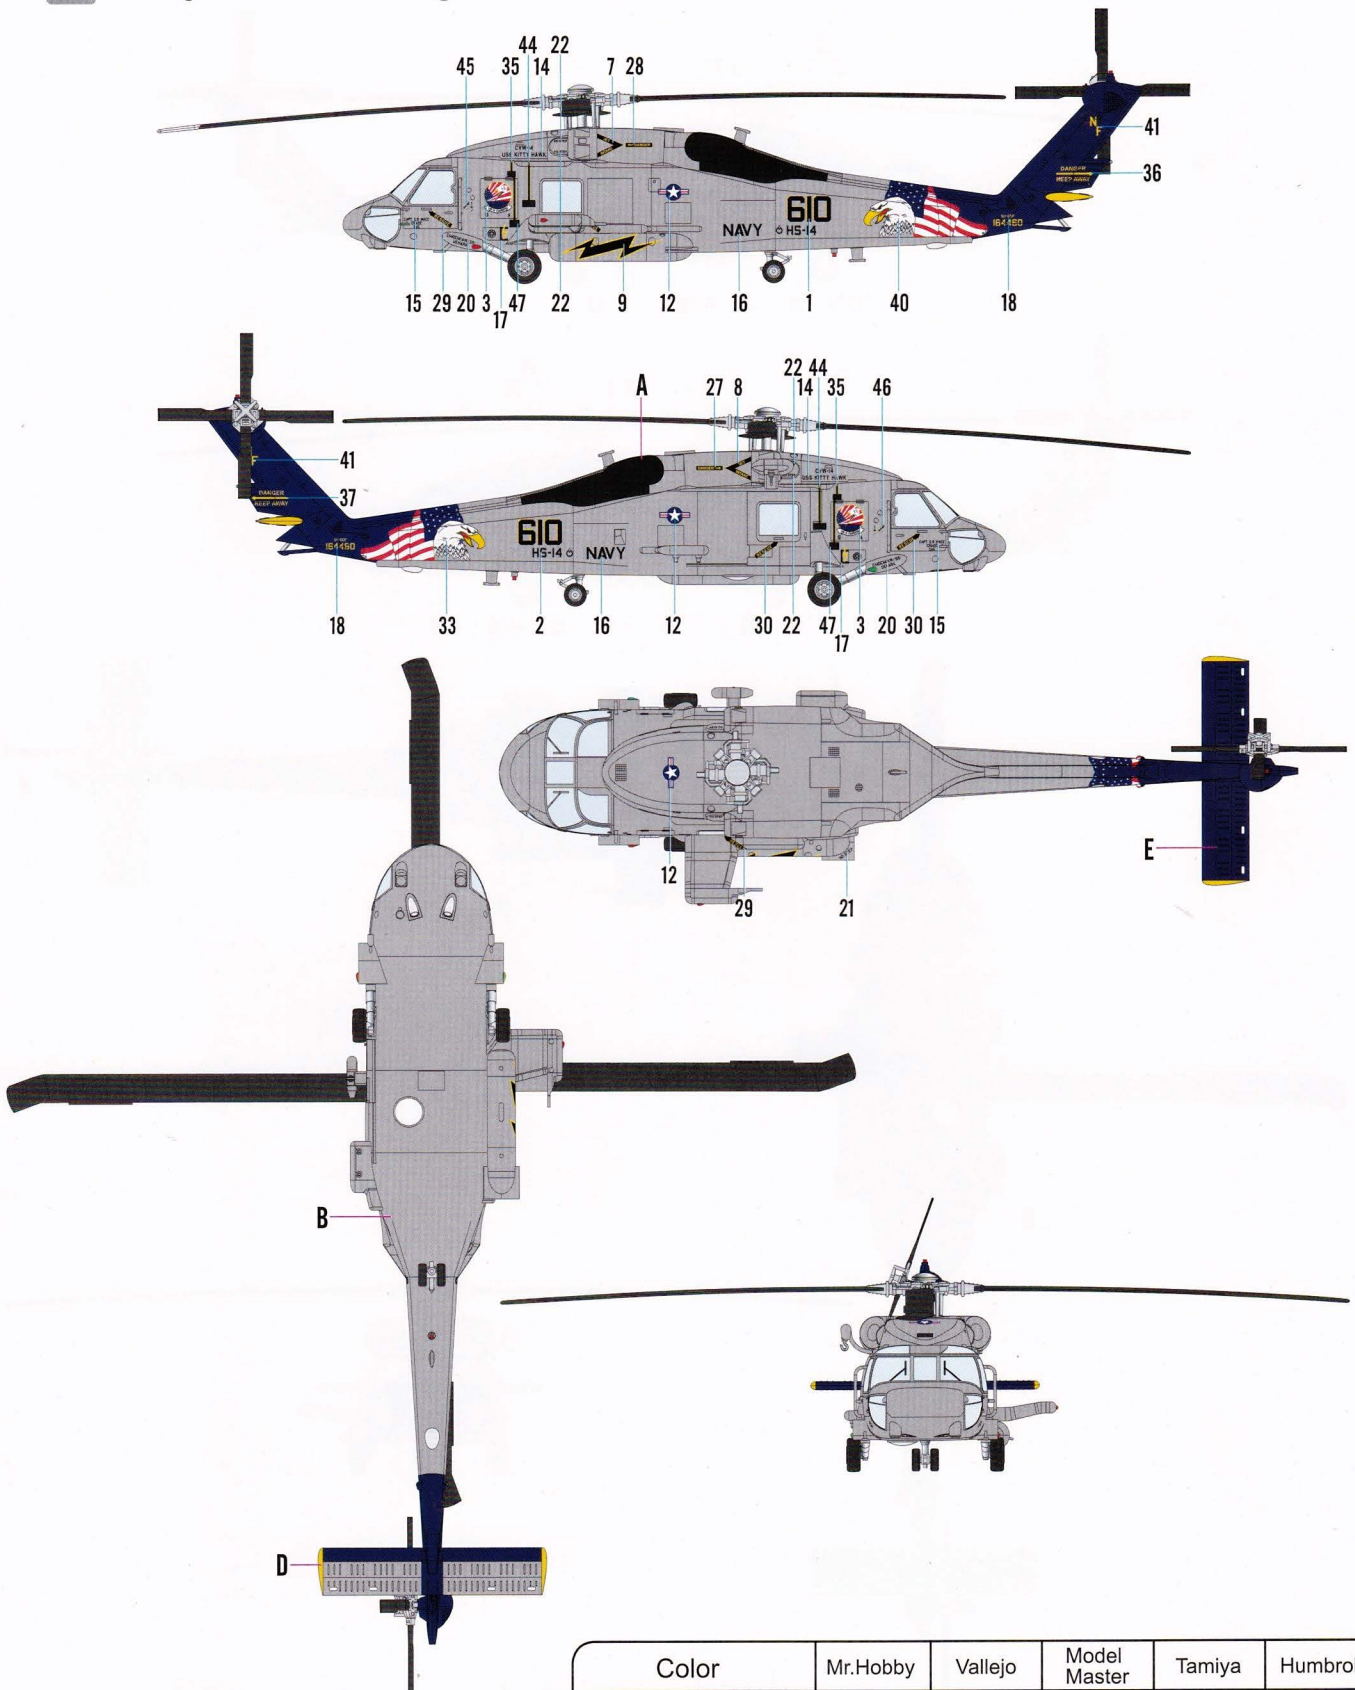

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
C 绿色 Green	H 6 6	969	2716	X5	3
D 黄色 Yellow	H 4 4	953	1514	X8	69
E 浅灰蓝 Gray Blue	H 337 337	--	1721	XF20	145