



LAV-150 Commando AFV w/ Cockerill 90mm Gun

LAV-150 コマンドウ コッカリル 90mm砲搭載型

LAV-150轻型装甲车考克瑞90mm火炮型

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- * 推荐使用的模型工具(请自备):
专用模型胶水, 专用模型油漆, 水口剪刀, 长咀钳, 刀片, 锉刀, 镊子钳, 钻, 剪刀, 软布, 砂纸, 瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- * 用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴上水贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍而引起意外。



cyanoacrylate glue
强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲



repair
填补


The method to apply the decals

1. Cut off the decal from the decal paper and put it into the warm water 40°C for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.

水贴纸的使用方法:


- 一. 把相关的印花从水贴上剪下, 放入40°C左右的温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 拿上印花纸板, 手指蘸水将印花移到适当的位置。
- 四. 用软干布轻压印花直至水干, 气泡消失。

1
STEP

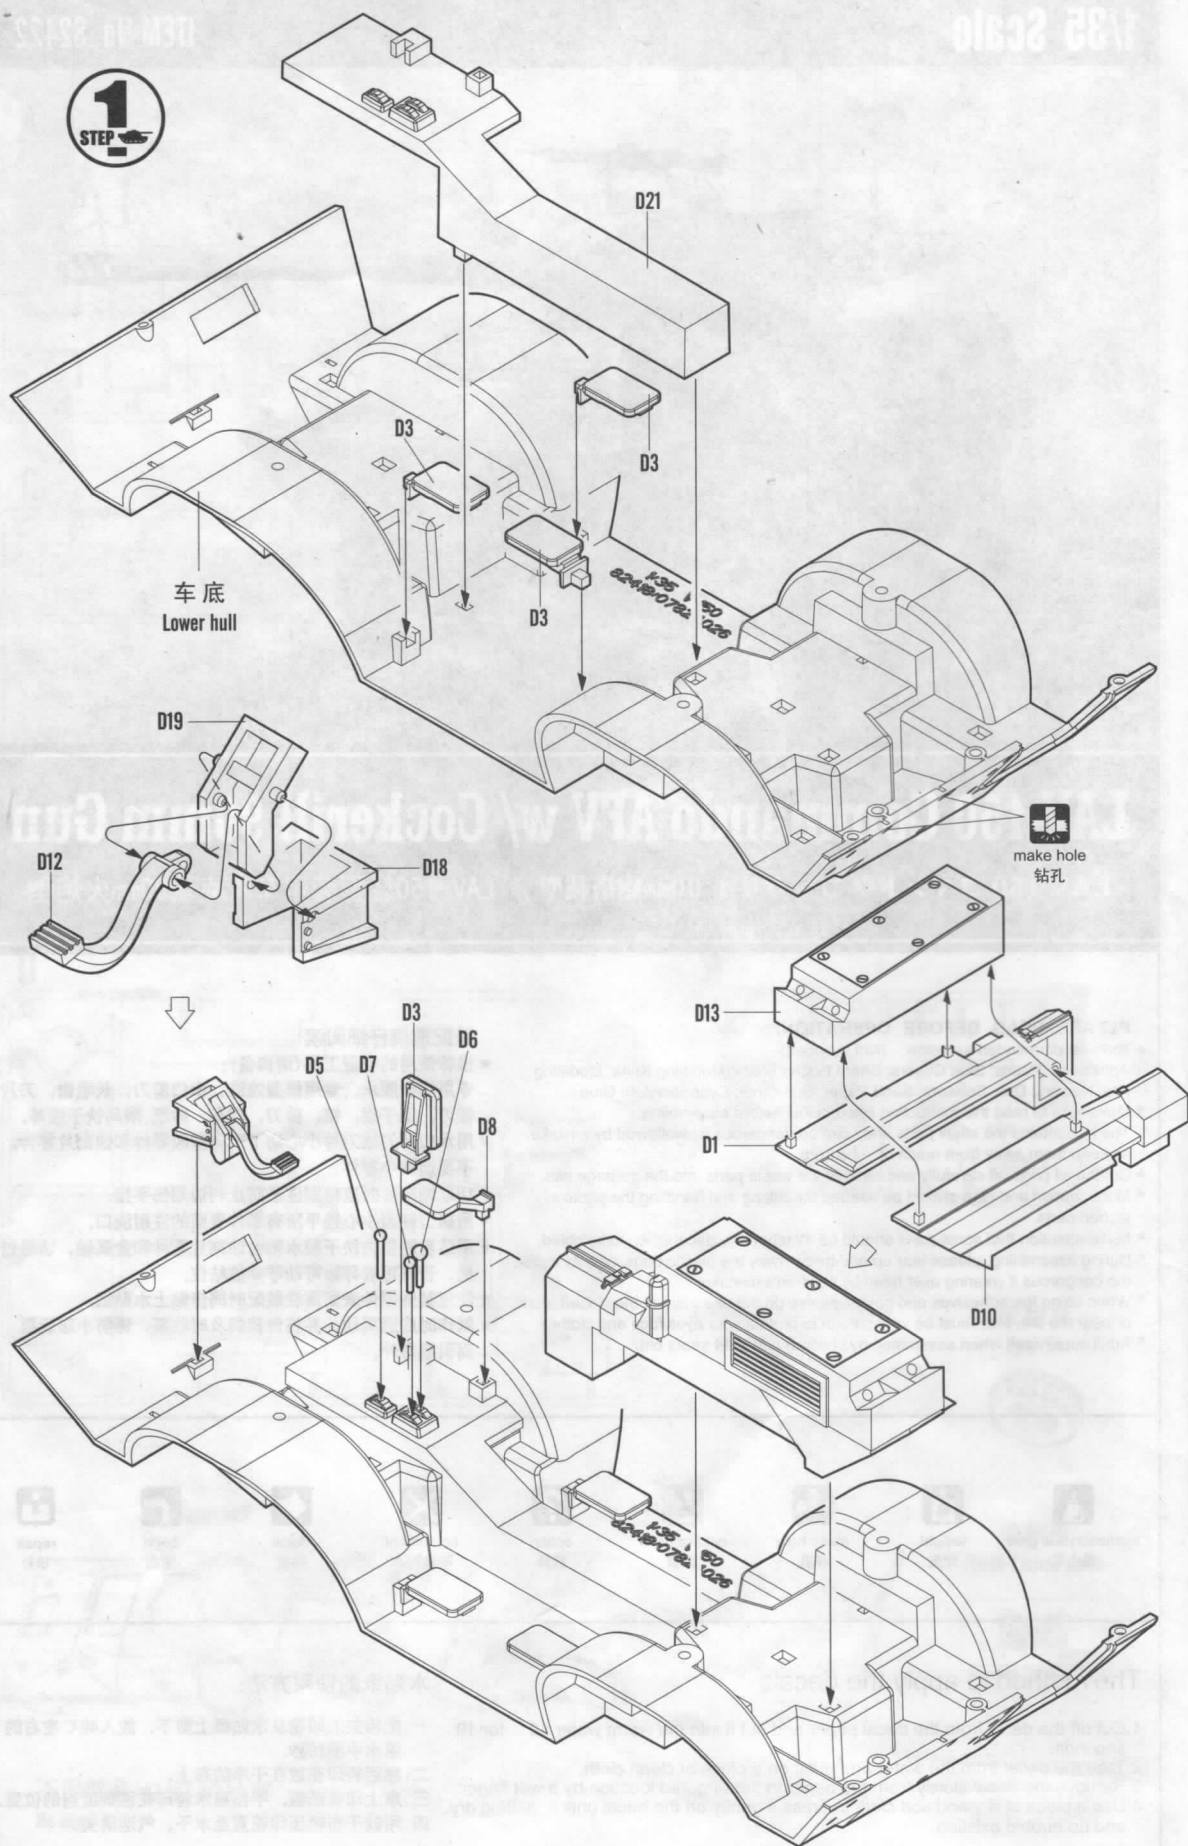


1/35 Scale

2
STEP

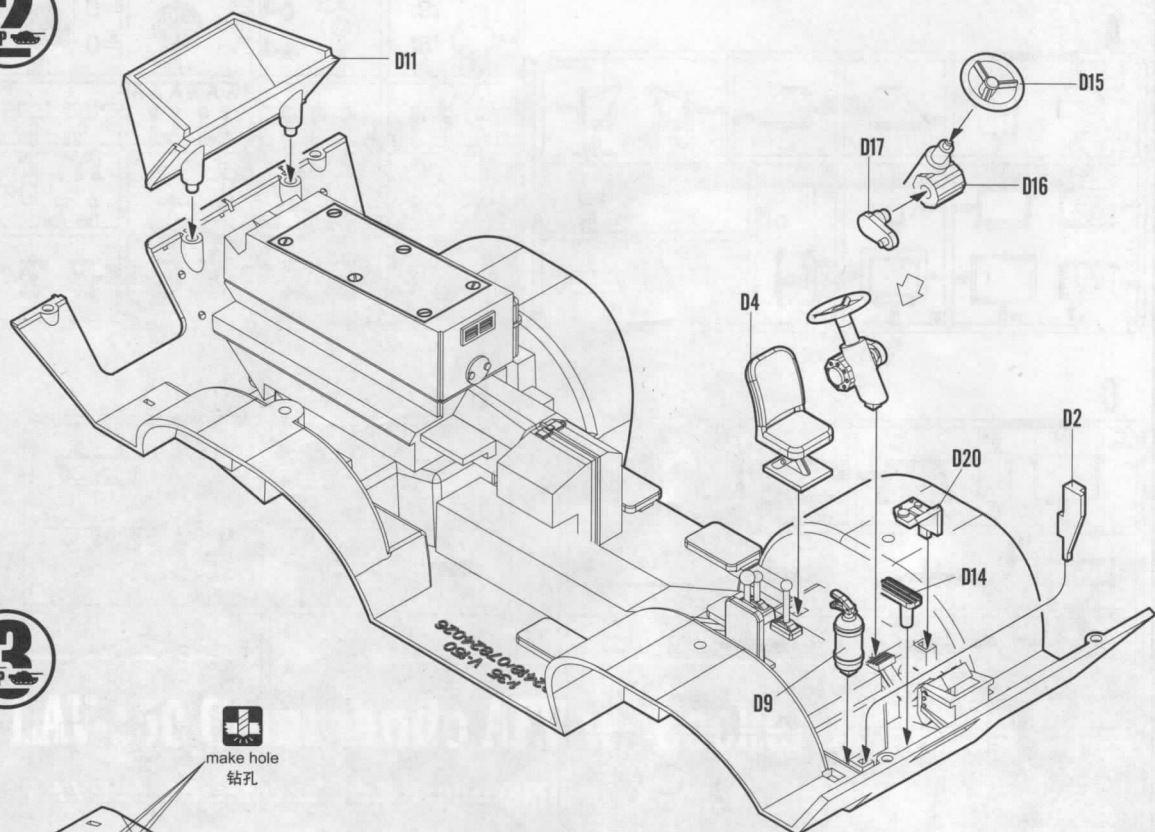


3
STEP

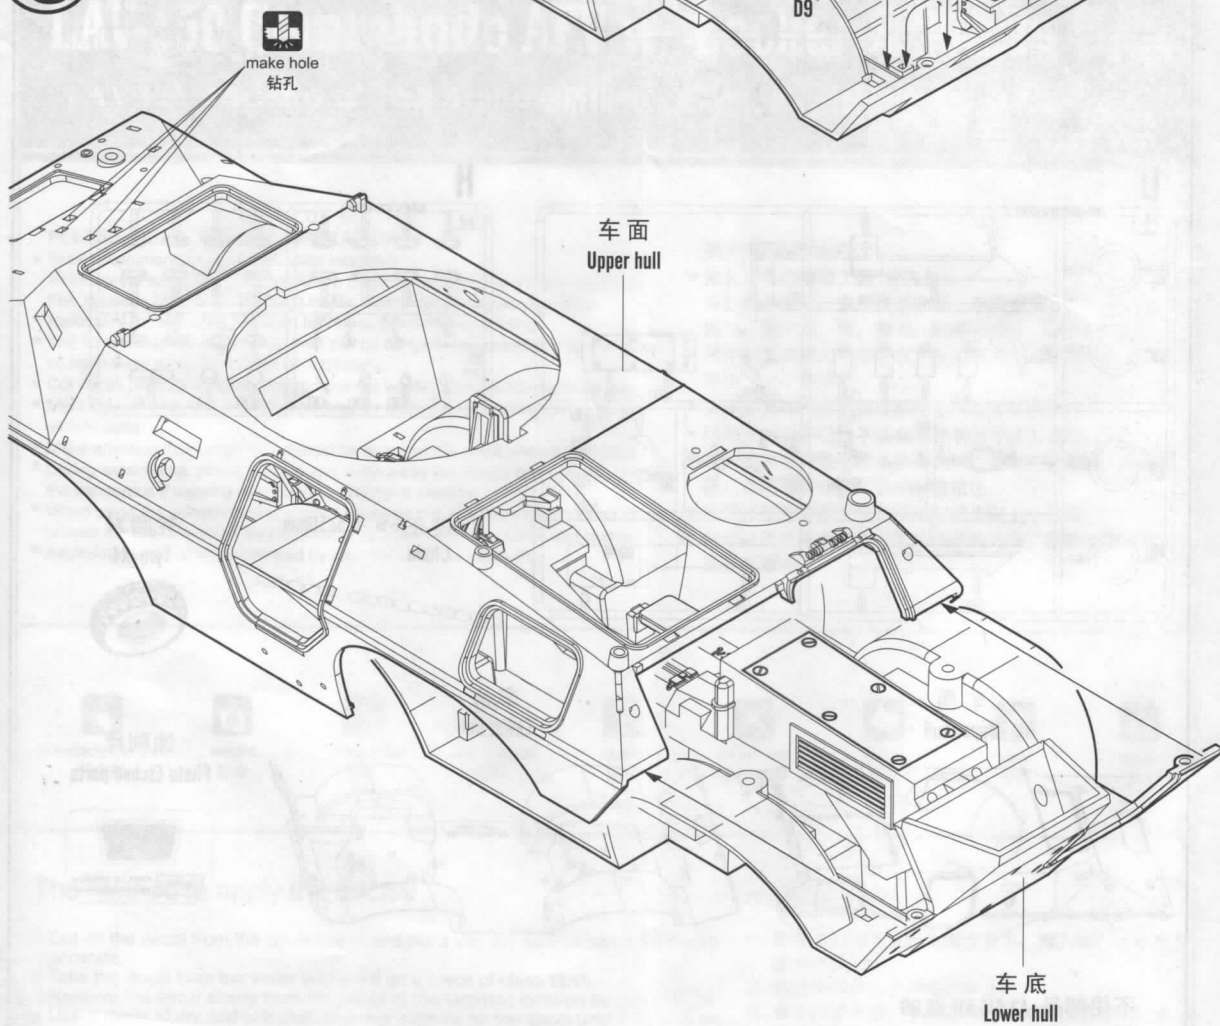




<<A>>

对侧相同
Both side

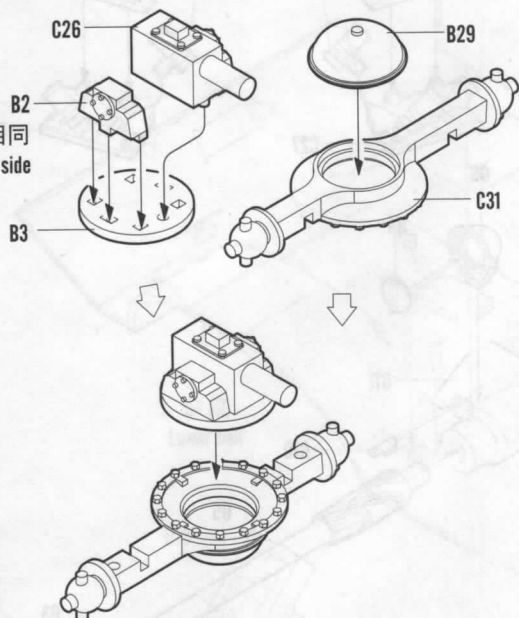

<>

对侧相同
Both side

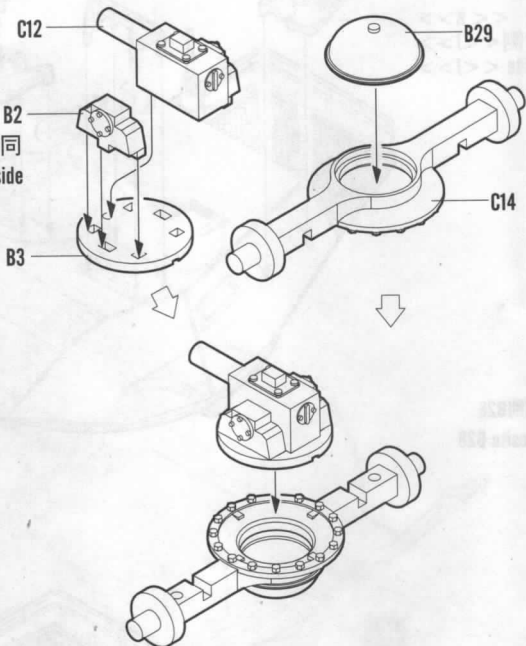

对侧相同
Both side
B20

对侧相同
Both side
B13


C24
对侧C22
Opposite C22

对侧C8
Opposite C8
C6

对侧相同
Both side
B13



B20
对侧相同
Both side

? B21
option
选择

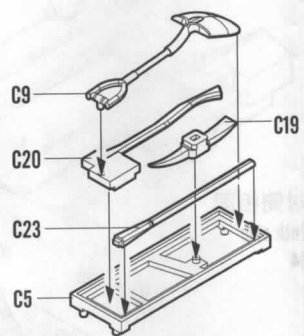


? B21
option
选择

C11

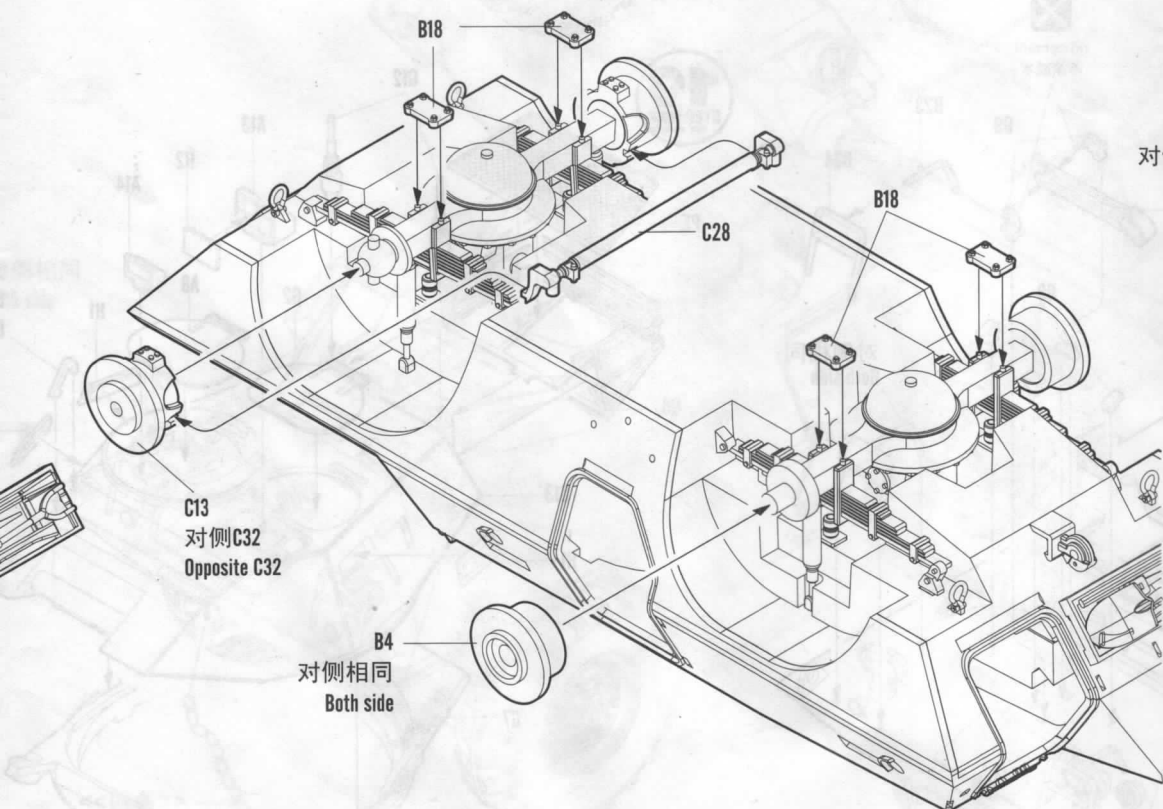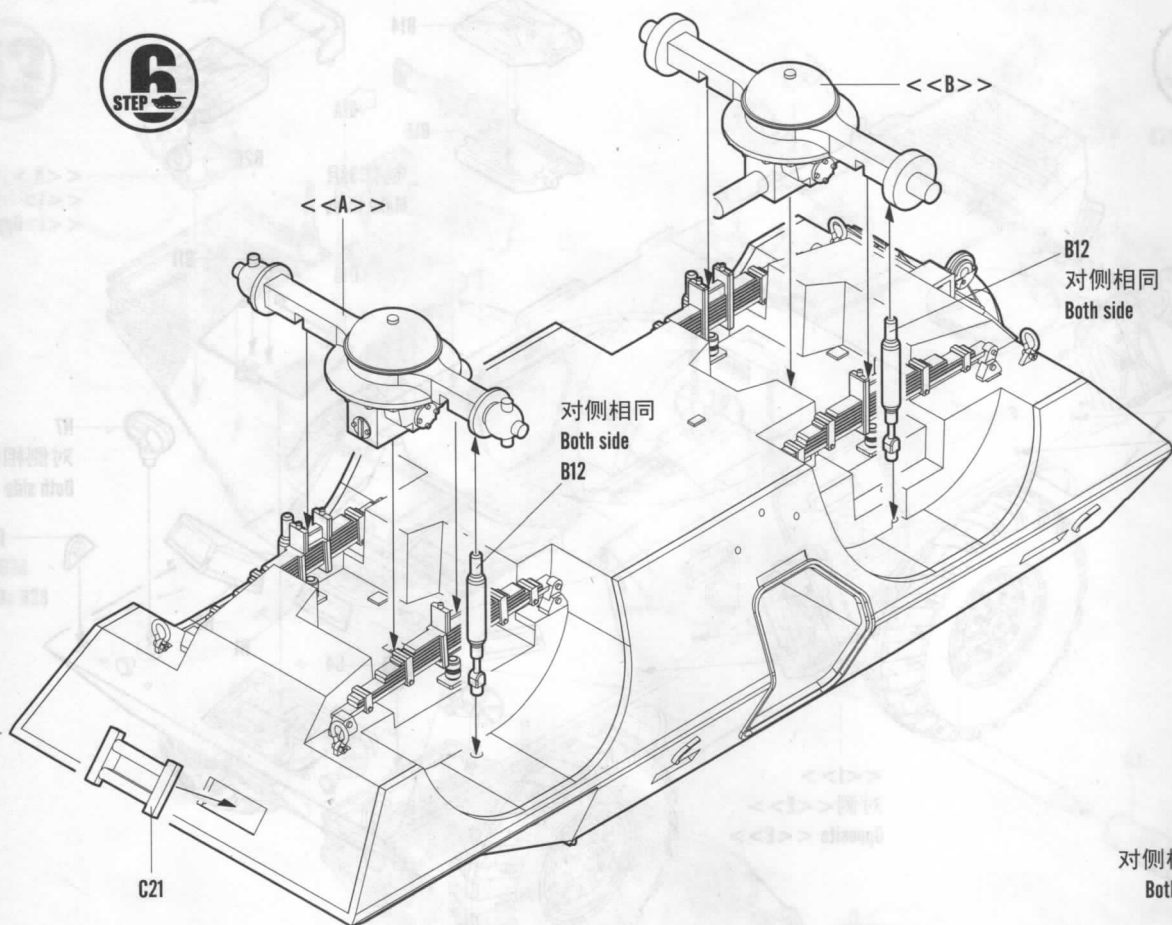


<<C>>

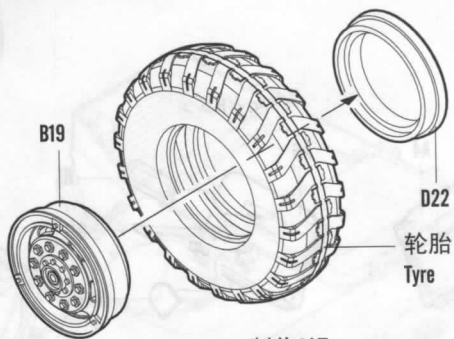


制作2组
Make two

<<D>>

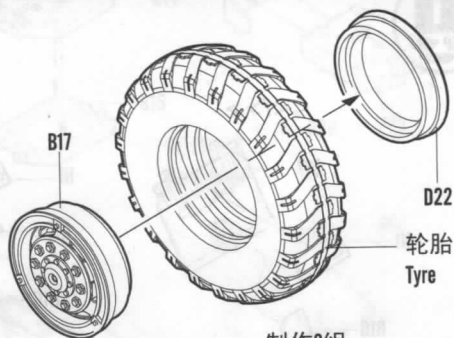


制作2组
Make two

<<E>>

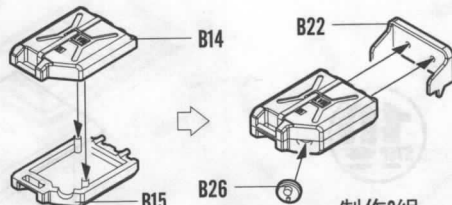


制作3组
Make three

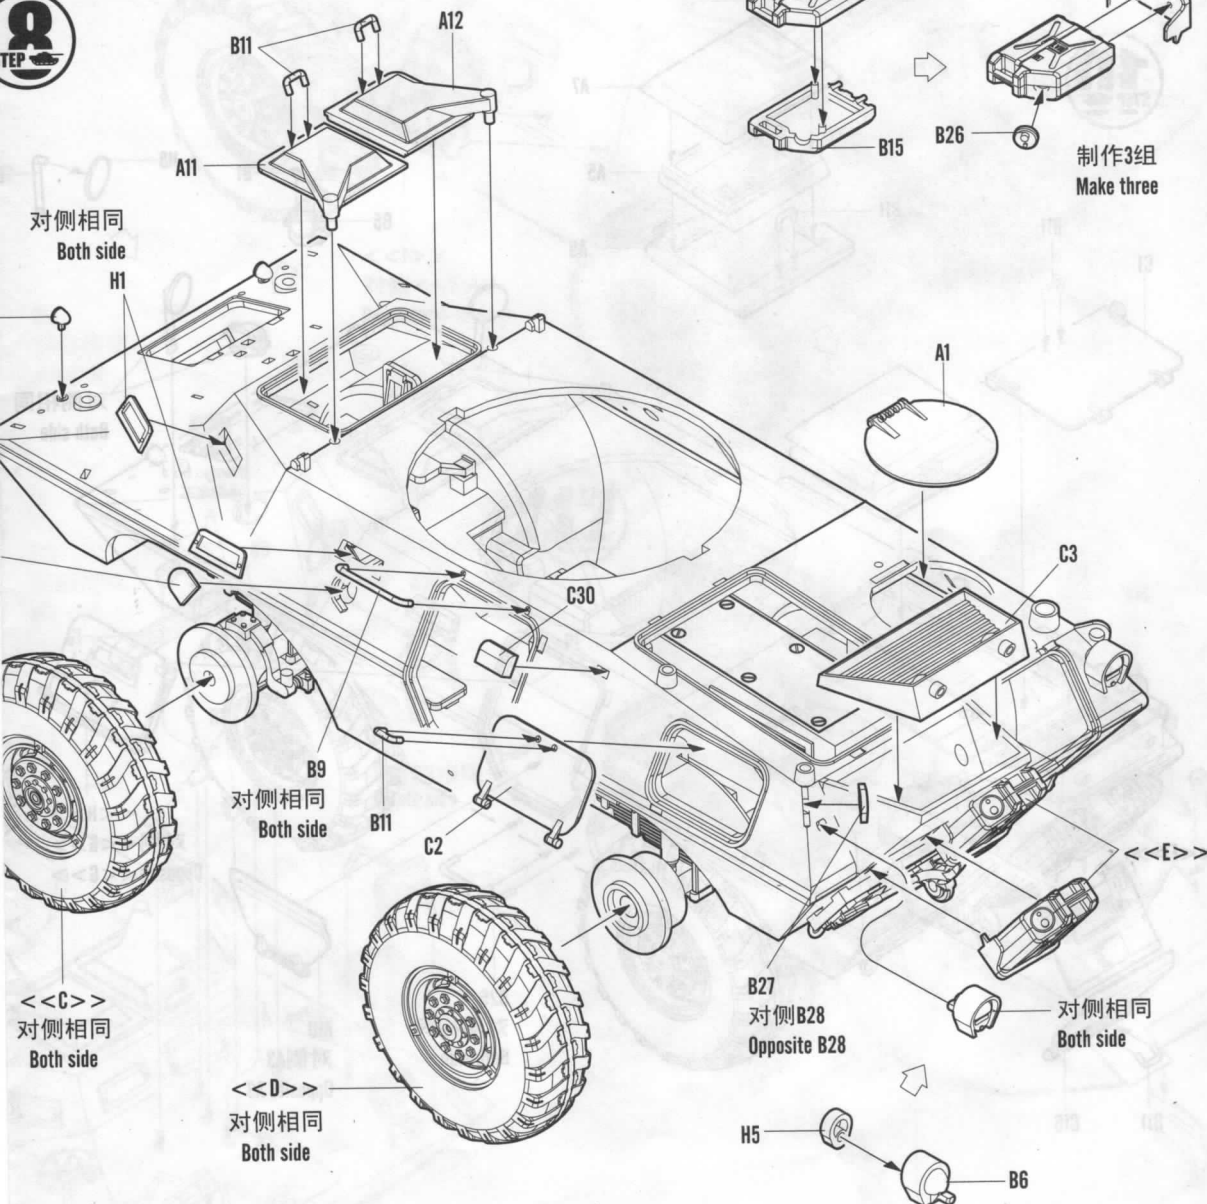


<<C>>
对侧相同
Both side

<<D>>
对侧相同
Both side




9
STEP


<<F>>

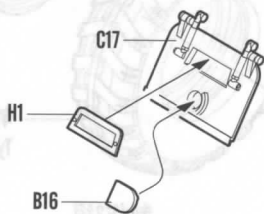




<<G>>

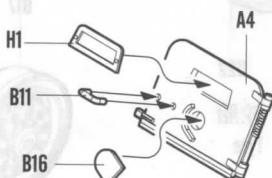


<<H>>

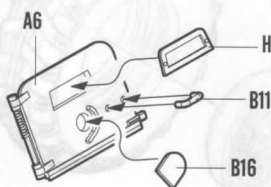

10
STEP

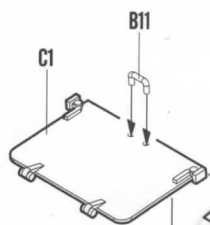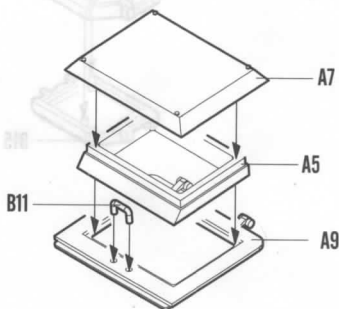

对侧相同
Both side

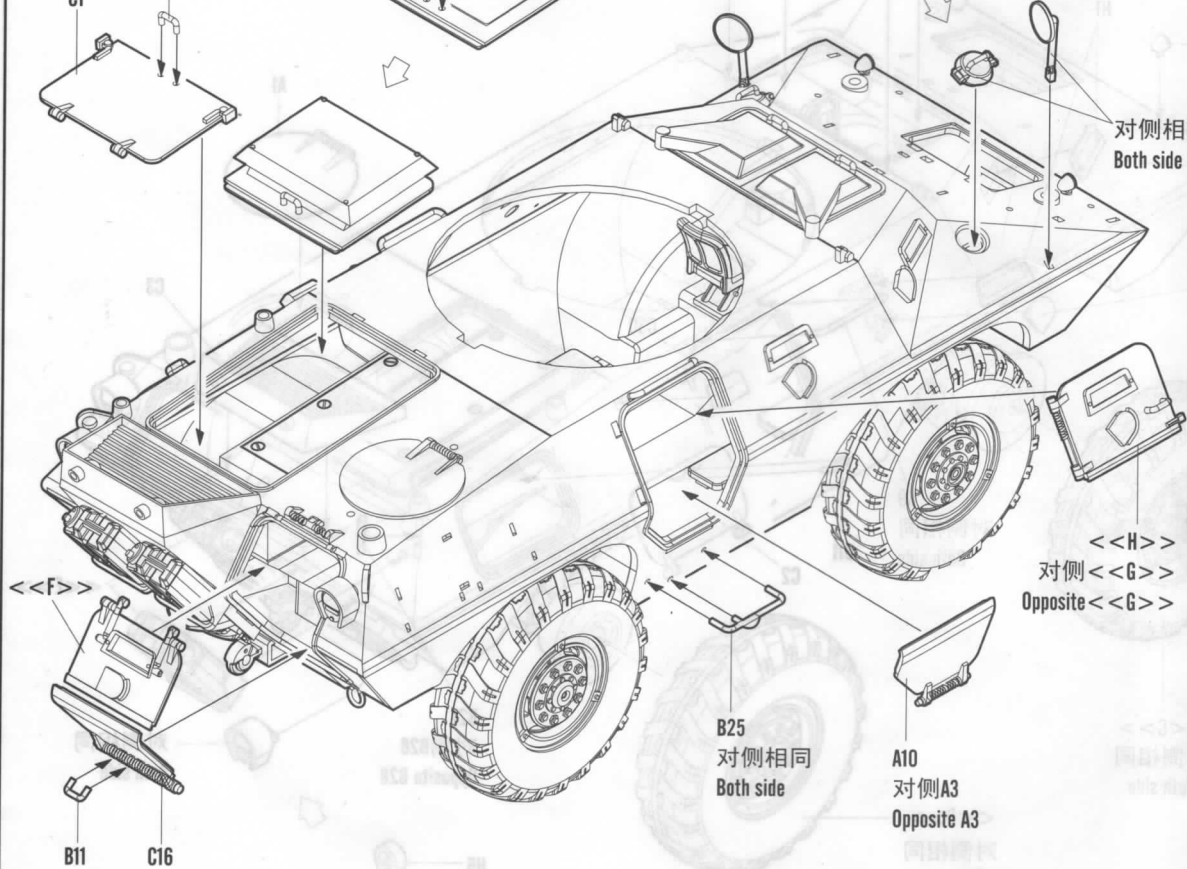


<<H>>
对侧<<G>>
Opposite<<G>>

B25
对侧相同
Both side

A10
对侧A3
Opposite A3

11
STEP

>>


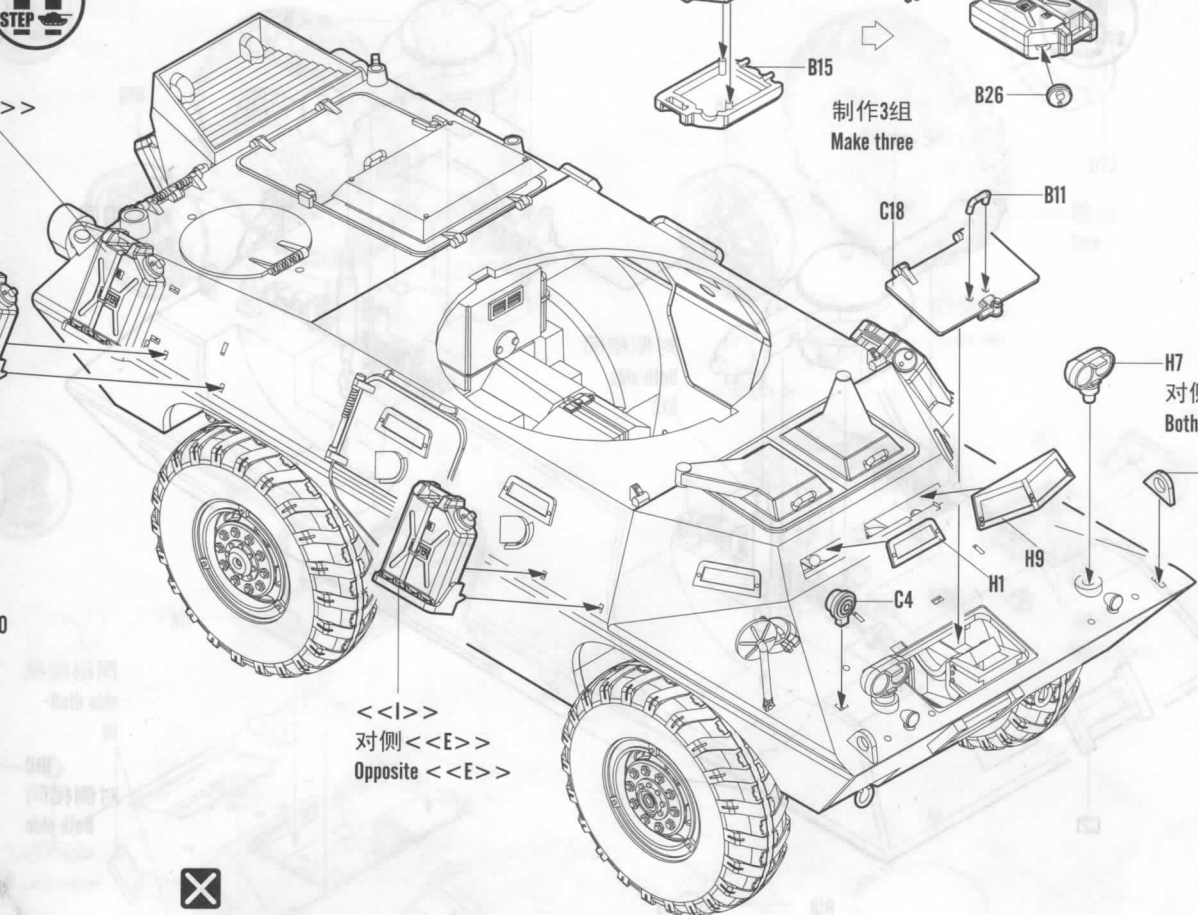


对侧
Opposite

对侧相同
Both side

对侧
Opposite

12
STEP

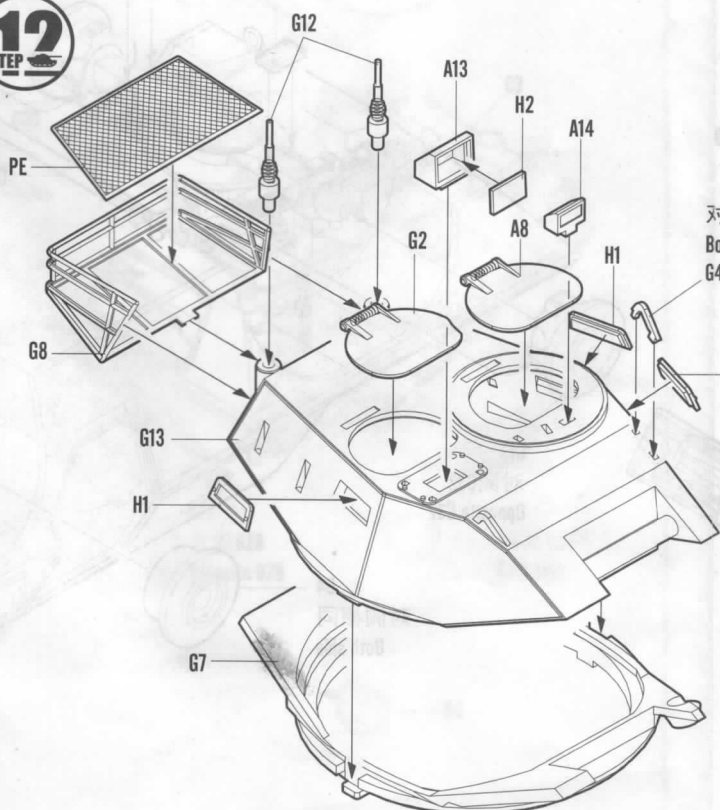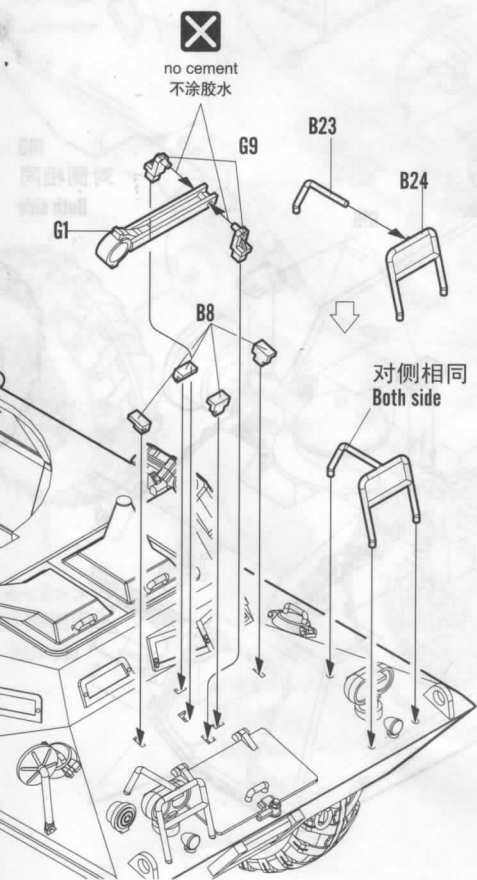

对侧
Both side


<<K>>
<<J>>
<<I>>

则B28
site B28

侧相同
th side

H1



<<链条>>
Chain

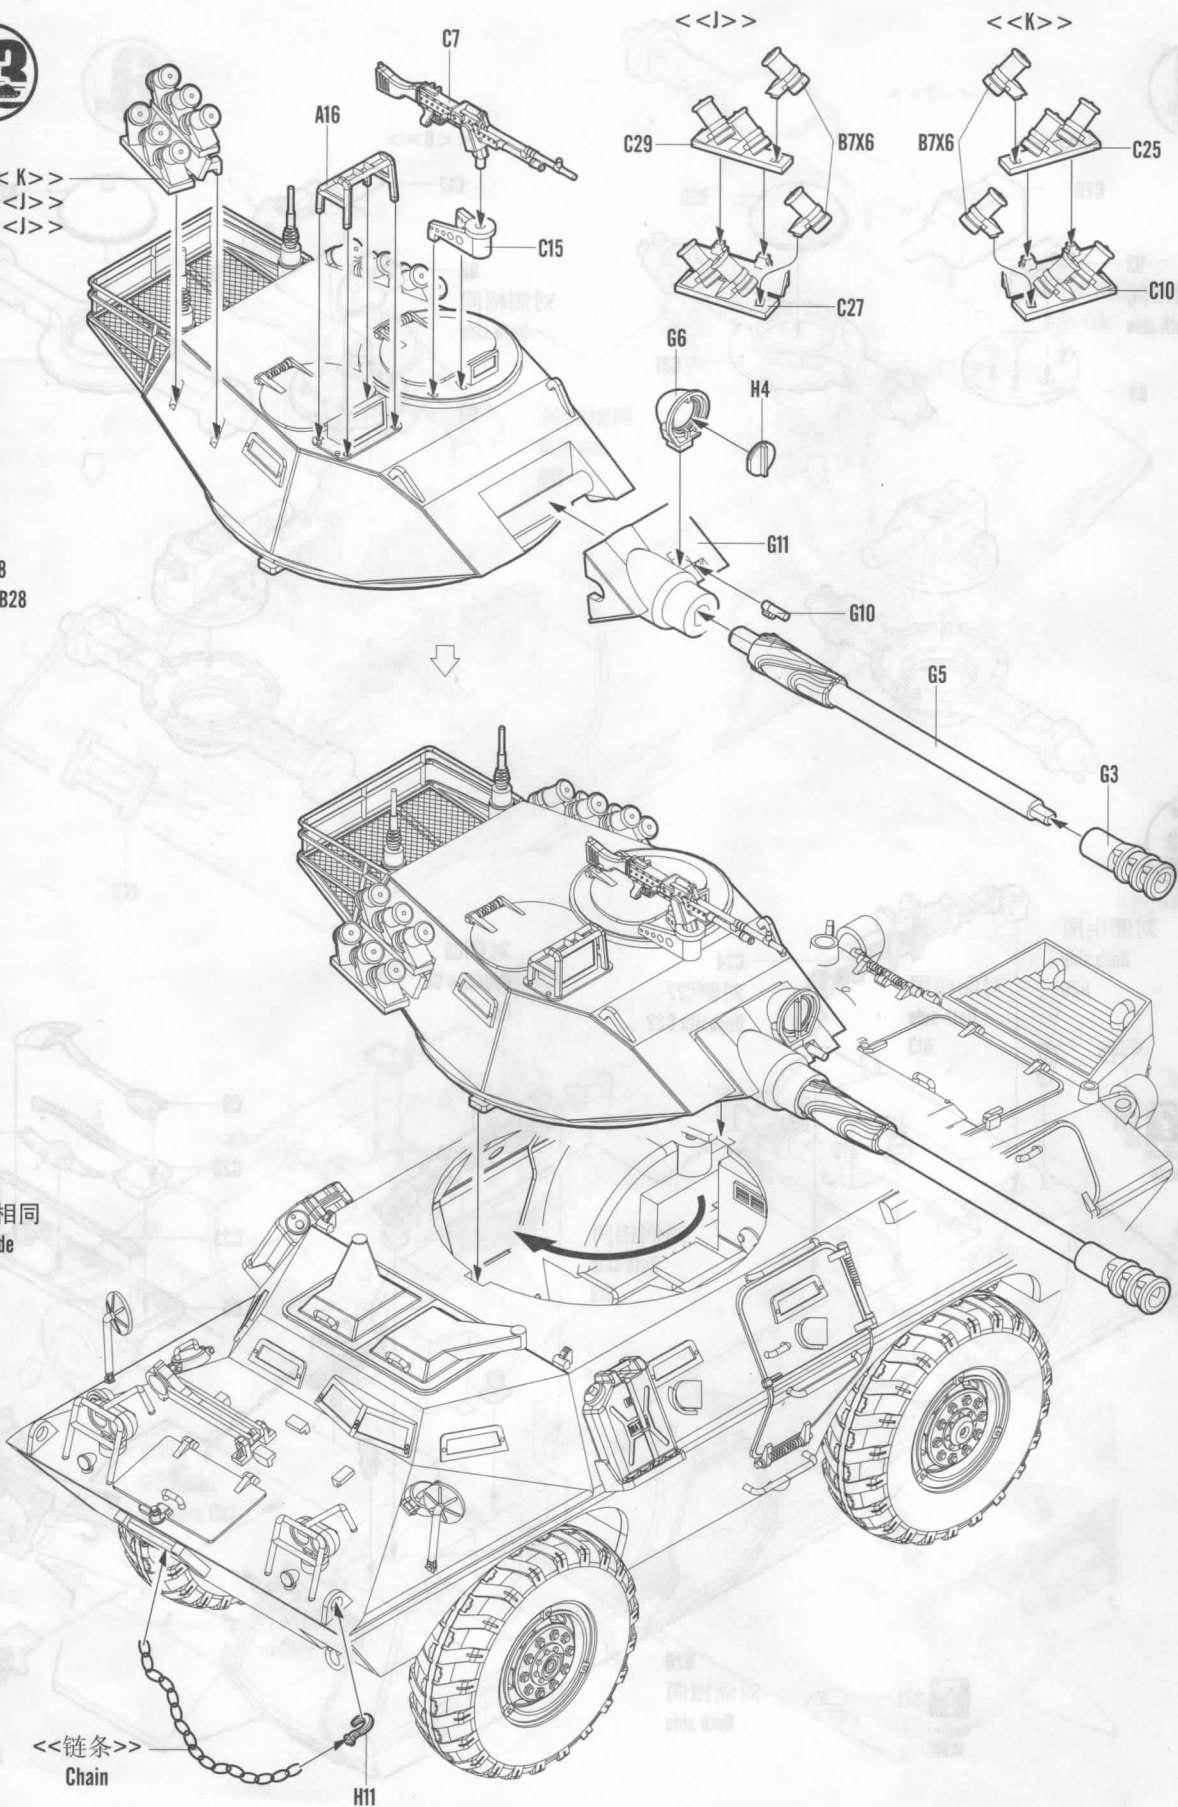


部品图 Parts

BX2


A

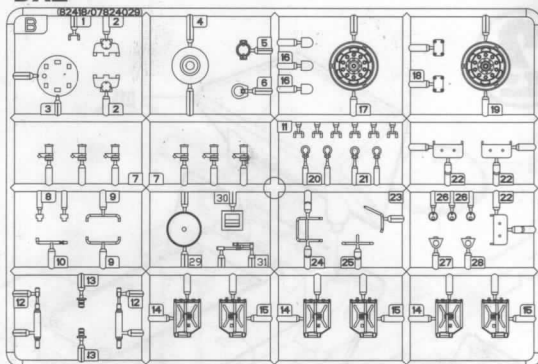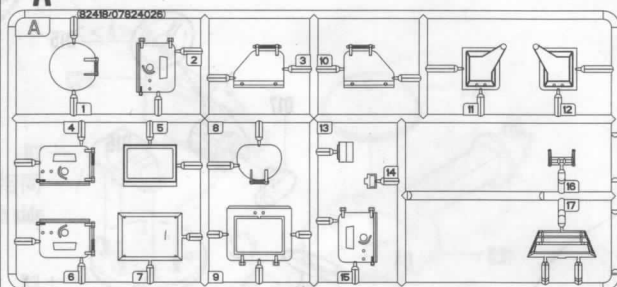


C

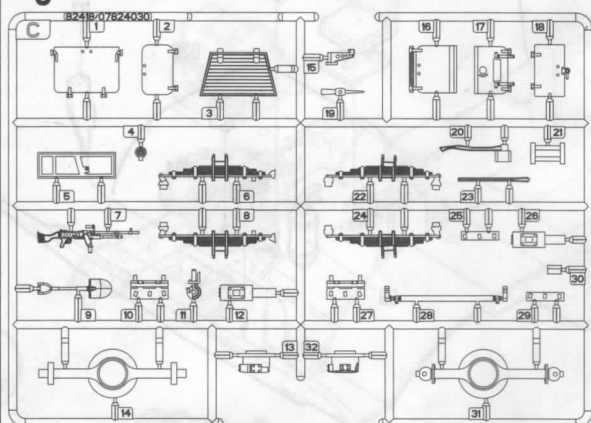


G

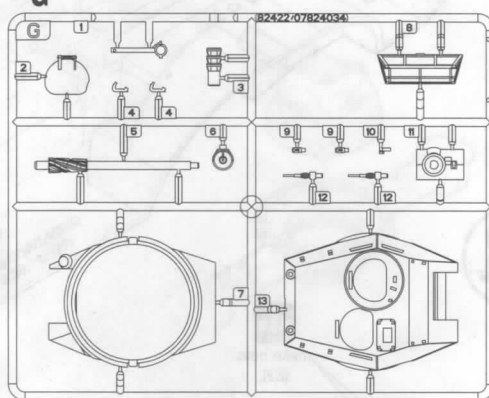

D

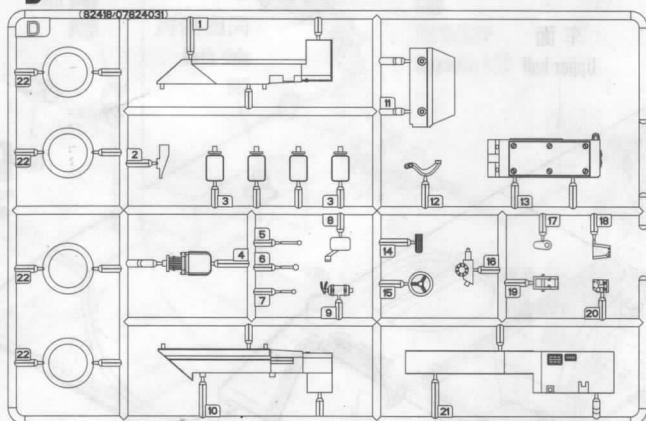

H

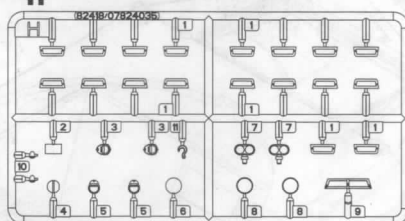

<<链条>> 0.5X50mm
Chain





轮胎 X4
Tyre X4




车面
Upper hull






车底
Lower hull

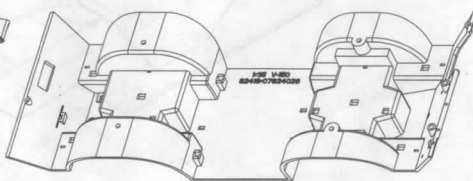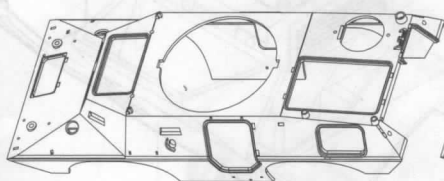

蚀刻片
Photo Etched parts



不用部品: A2,A15,A17,H3,H6
No used parts

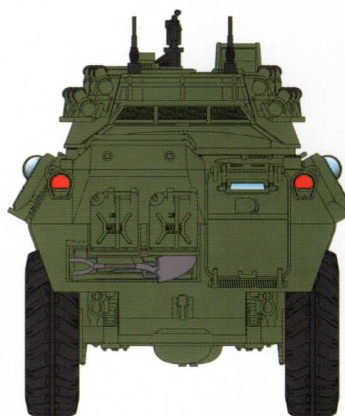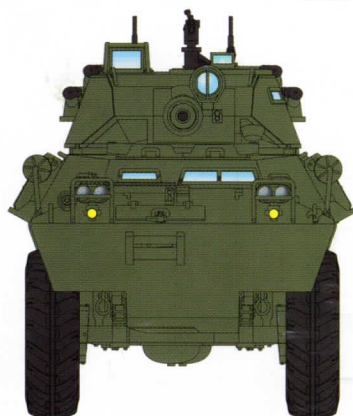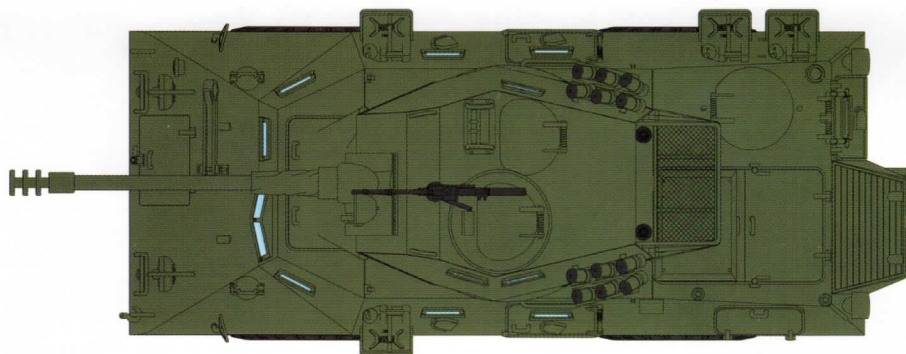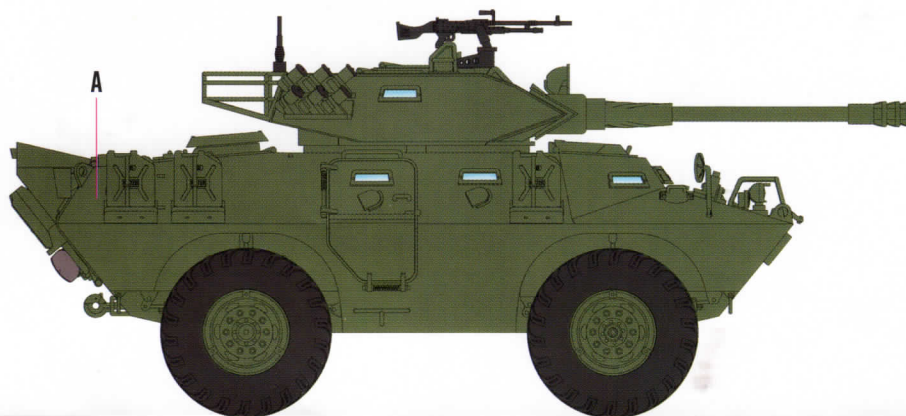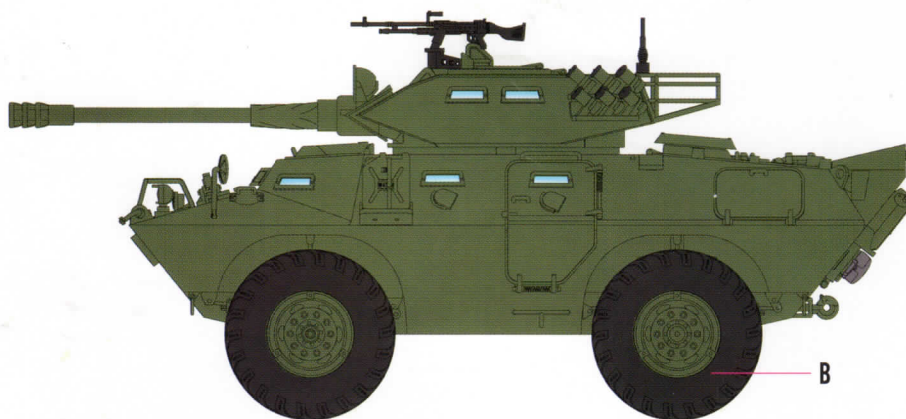

	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
A	绿色 Green	H 303 303	--	1713	XF20	117
B	胎黑色 Tire Black	H 137	--	--	--	--