
AUSTRALIAN ARMY / RAAF

AS-350B Ecureuil Squirrel

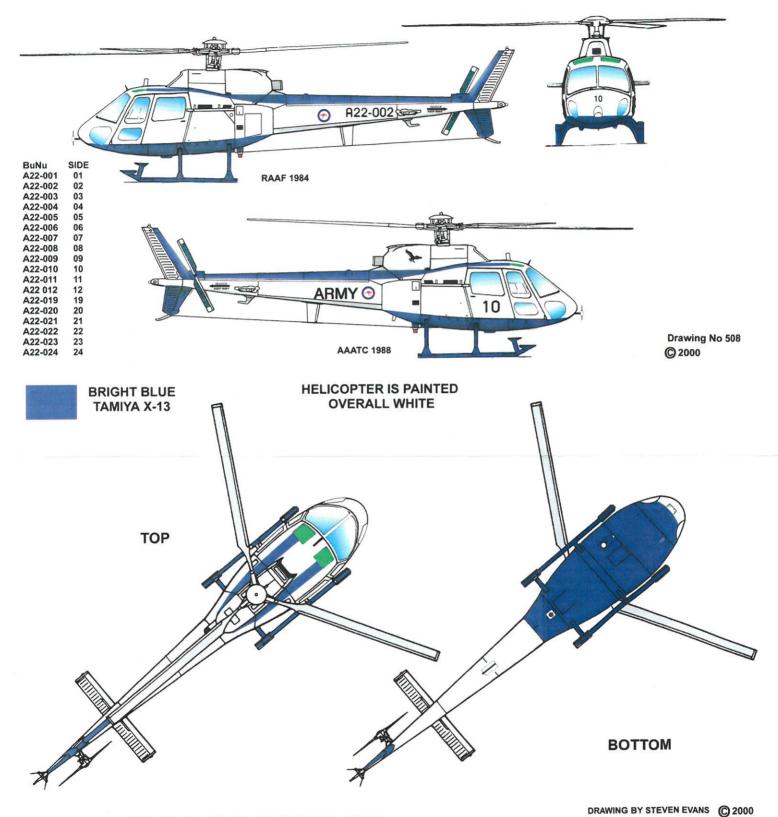

HAWKEYE MODELS AUSTRALIA

AA-05 AAAC/RAAF AS-350B SQUIRREL

INSTRUCTIONS:

Applying decals

- 1. When you are ready to start applying the decals, we recommend that you cut as close to the item as possible to achieve the best result.
- 2. Soak the decal in warm water to which a drop or two of dishwashing liquid has been added. Leave the decal for 11 seconds and then slide the decal off the paper and onto the model.
- **3.** Once on the model and in the right position, lightly press down on the decal with a dry tissue to soak up the excess water. You may then use a decal setting solution .
- **4.** Once the decal has set and is dry, you may then trim off any excess clear decal film if you wish to do so.

Notes:

These decals are still raw and do not have a clear varnish finish on them. This is to prevent them from cracking and turning yellow in storage. How ever, there is a thin film of oil on them so before you apply any clear lacquer to the applied film, we recommend that you give them a light wipe over with a damp soapy cloth. Then you can apply lacquer to your model.

Warning: When applying film to a model be very gentle as the decal film is very thin and may tear if mistreated.

We hope that you enjoy these decals.

If you experience difficulties with the decals please e-mail Peter Mahoney at peter@hawkeyemodels.com.au

PETER MAHONEY Owner / Manager Hawkeye Models Australia

LOOK FOR US ON THE WEB AT

www.hawkeyemodels.com.au



ARMY ARMY R22-001 R22-001

002 002 008 008 020 020 01 07 19 02 08 20 003 003 009 009 021 021 03 09 21 004 004 010 010 022 022 05 11 23

004 004 010 010 022 022 005 005 011 011 023 023 006 006 012 012 024 024 007 007 019 019

ARMY / RAAF VERSION