


1:72 SCALE

ITEM NO.: 07211

# German Brummbär Mid production

德国"灰熊"步兵突击炮 中期型

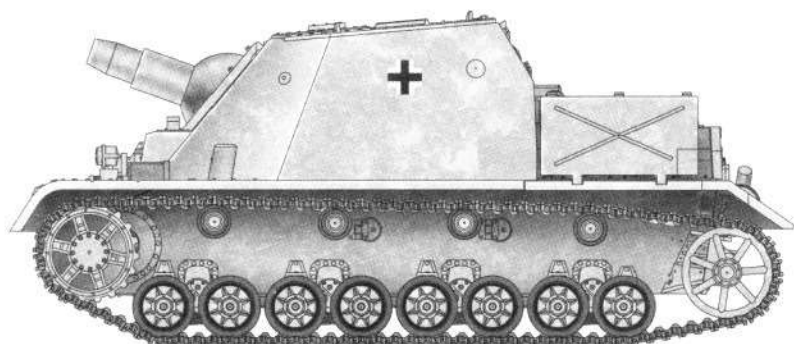

## READ BEFORE ASSEMBLY:

- This kit is not recommended for inexperienced modelers or for children under 14 years of age
- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.
- Keep out of reach of small children. They must not be allowed to ingest small parts or handle plastic bags in any way.

## 装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利刃划伤手指。
- 某些零件表面需贴水上贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。
- 谨防小孩吸吮塑料零件，或者将塑料袋套在头上，制作时应将套材远离小孩接触。
- 本产品不适合14岁以下没有经验的模型爱好者。



cyanoacrylate glue  
使用强力胶



weight  
配重



make hole  
钻孔



cut / remove  
切除



bend  
弯曲



file / sand  
锉平



option  
选择



no cement  
不涂胶水



decal  
贴纸



## 水贴纸的使用:

1. 从水贴纸上剪下印花;
2. 将印花放入温水中浸10秒, 然后放在干净布上。
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干, 气泡消失。



## DECAL APPLICATION

1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.
6. Allow decal to dry completely before handling model.


部品图  
Parts

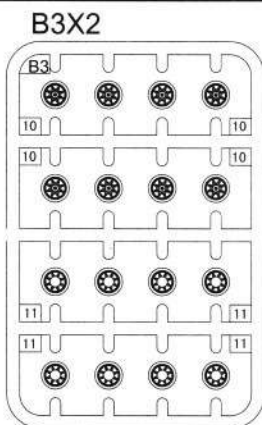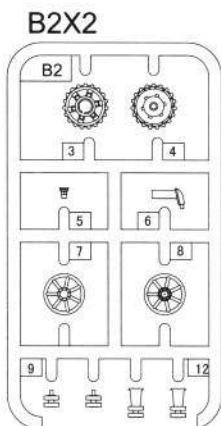


《车底》  
Lower hull

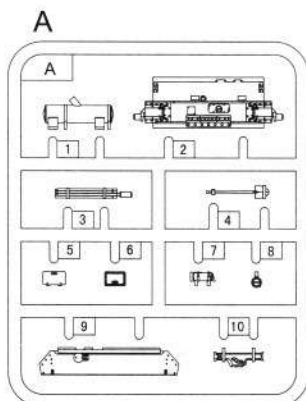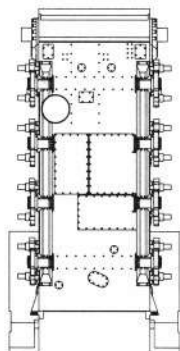

C

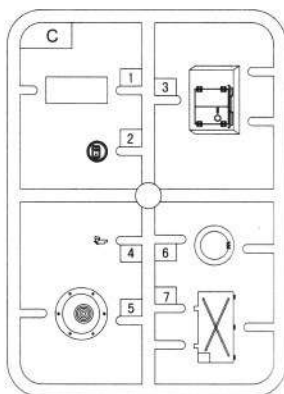

《车面》  
Upper hull

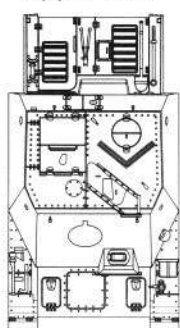

《贴纸》  
Decal




《履带》  
TrackX2




不用部件: .A3.A4.A5.A6.C2.C3.C4.C6.  
Unused parts:

# 1 车轮组装 Wheels assembly


## 《主动轮》 Sprocket wheel

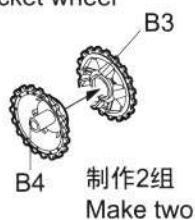



## 《诱导轮》 Ldler wheels

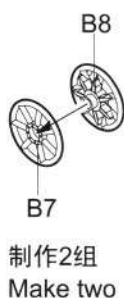

## 《负重轮》 Road wheel

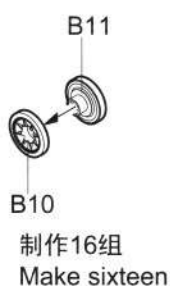


# 2 后板安装 Attaching rear panel

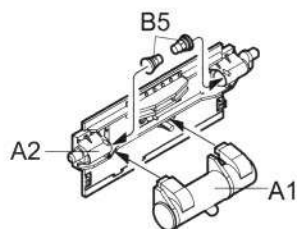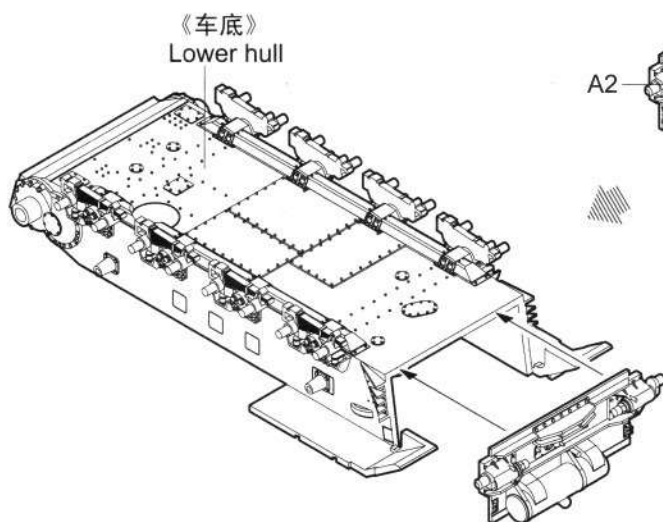

# 3 车轮安装 Attaching wheel

## 《主动轮》 Sprocket wheel

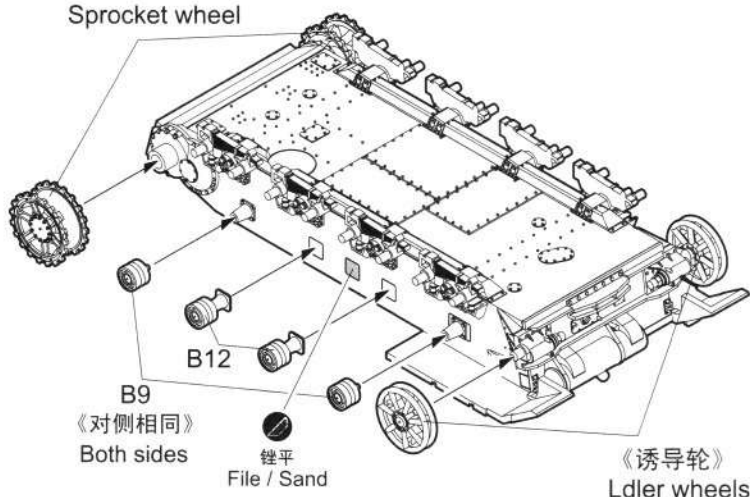


锉平  
File / Sand

## 《诱导轮》 Ldler wheels

4


## 车轮安装 Attaching wheel

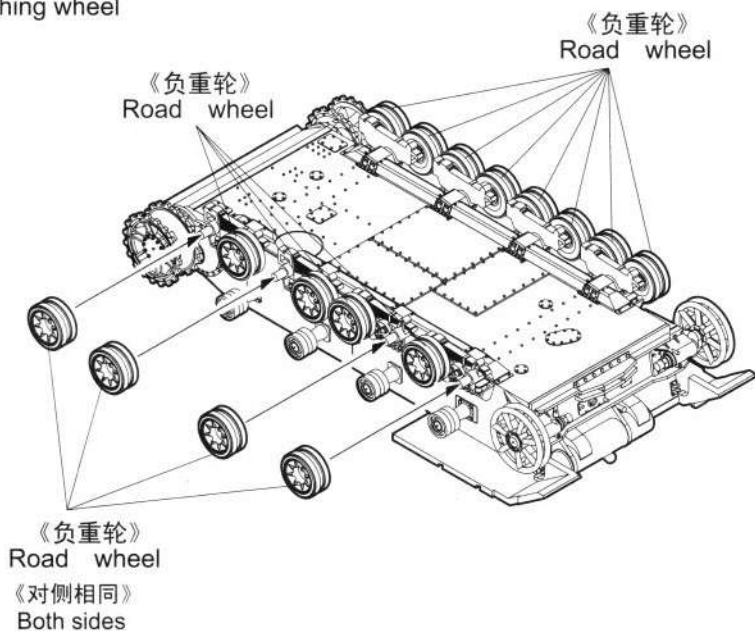

5


## 履带联接 Track construction

- \* 履带可用塑料胶水粘合。
- \* 履带可用模型油漆喷涂。
- \* 若履带断裂，用细丝线固定。
- \* The tracks in this kit can be glued using plastic cement.
- \* The tracks can be painted using plastic paints.
- \* If track is broken strengthen with staples or thread.

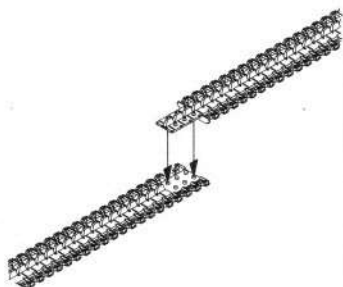


6


## 履带安装 Attaching track

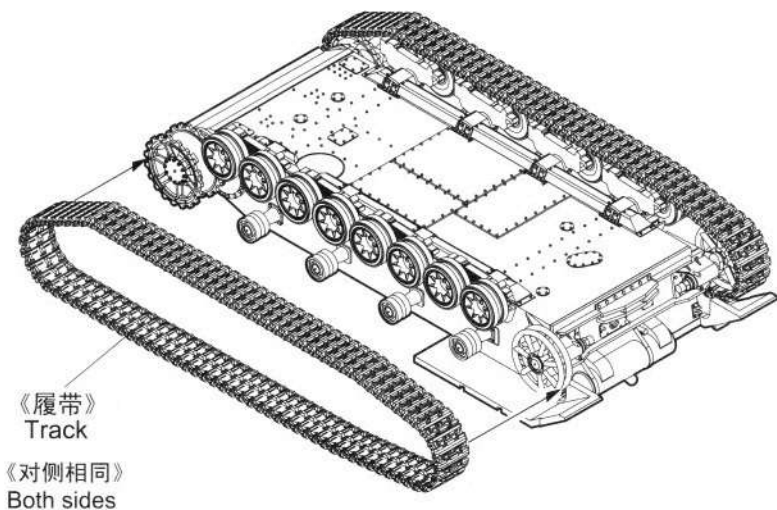


**7** 炮塔组装  
Turret assembly

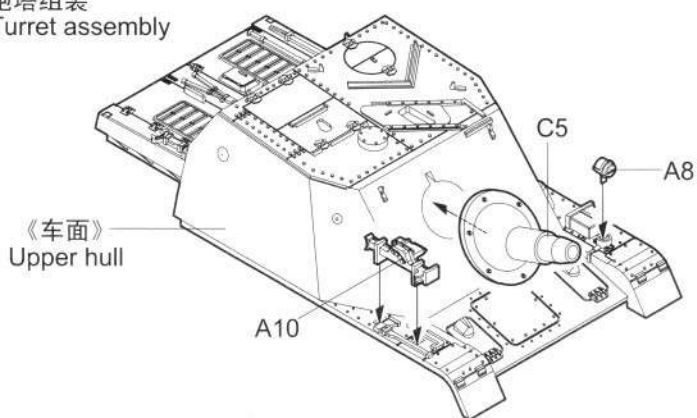

**8** 炮塔组装  
Turret assembly

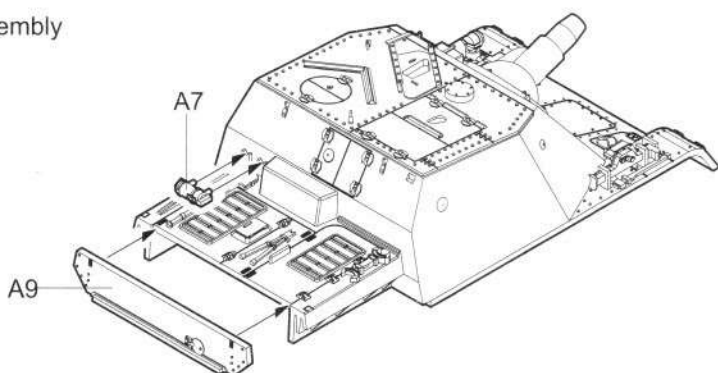


**9** 炮塔安装  
Attaching turret

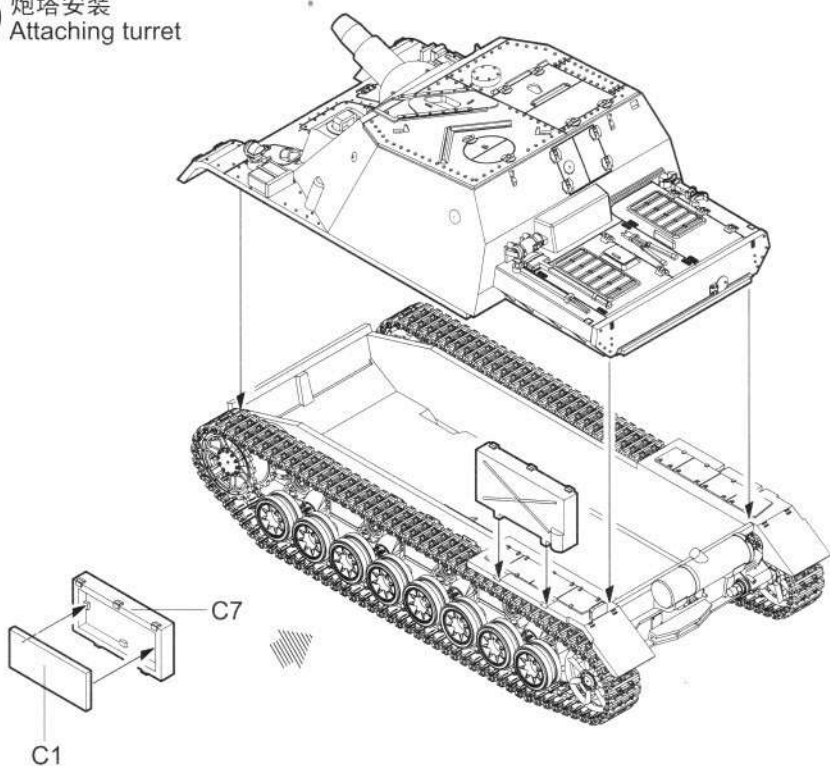

# 涂装同标贴指示 Painting & Marking guide


使用 MR.HOBBY 涂料 Mr. Color Used

**A**

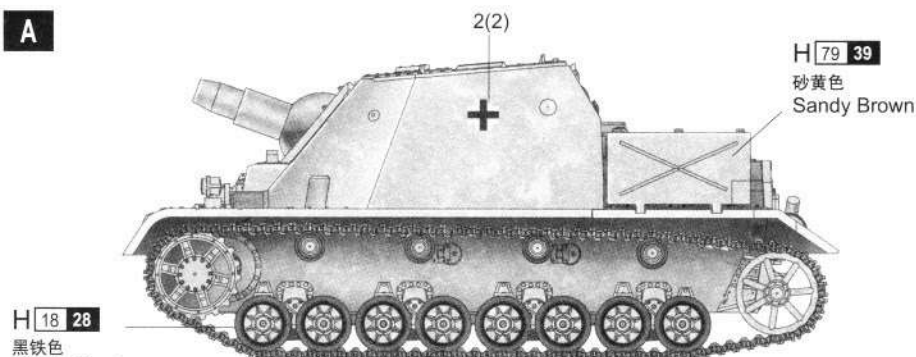


H 18 28  
黑铁色  
Metal Black


H 79 39  
砂黄色  
Sandy Brown

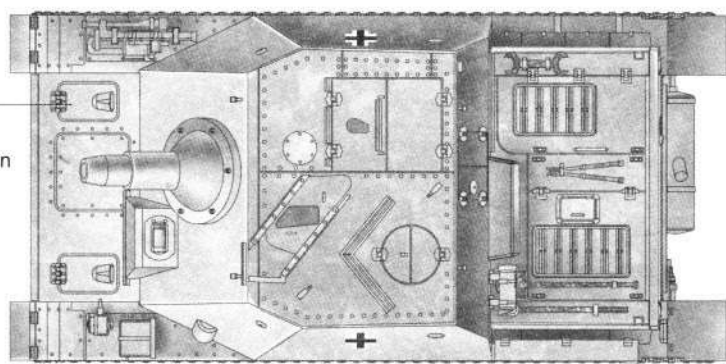


H 18 28  
黑铁色  
Metal Black

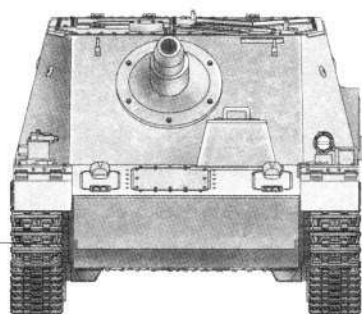

H 79 39  
砂黄色  
Sandy Brown

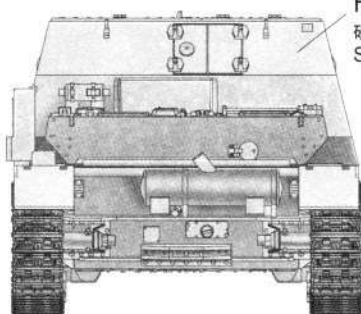


**B**

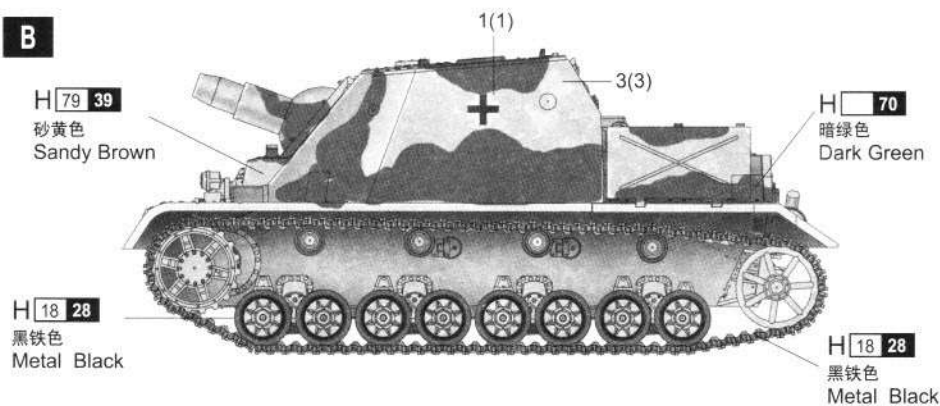

H AQUEOUS HOBBY COLOR

■ Mr. COLOR



**07211 07212 1/72**  
**Germany Brummbär**