

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。



使用强力胶
Cyanoacrylate glue



配重
Weight



钻孔
Make hole



切除
Cut / Remove



贴纸
Decal



锉平
File / Sand



选择
Option



不涂胶水
No cement



弯曲
Bend



先装
Install it first




水贴纸的使用:

1. 从水贴上剪下印花;
2. 将印花放入温水中浸10秒, 然后放在干净布上。
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干, 气泡消失。


DECAL APPLICATION

1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.
6. Allow decal to dry completely before handling model.


部品图 Parts

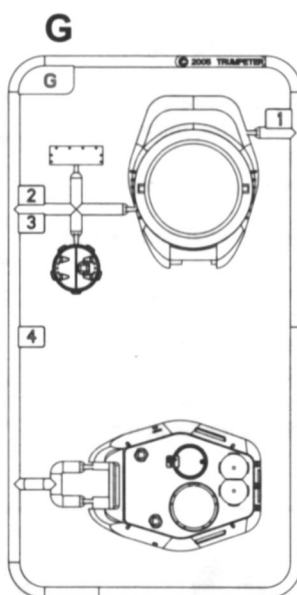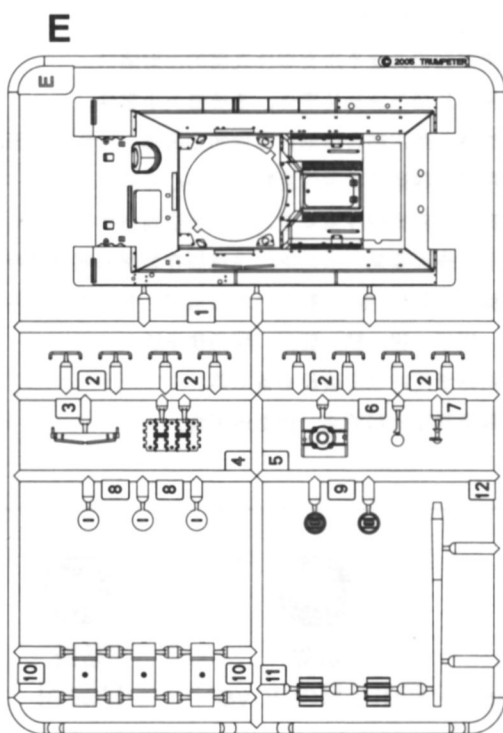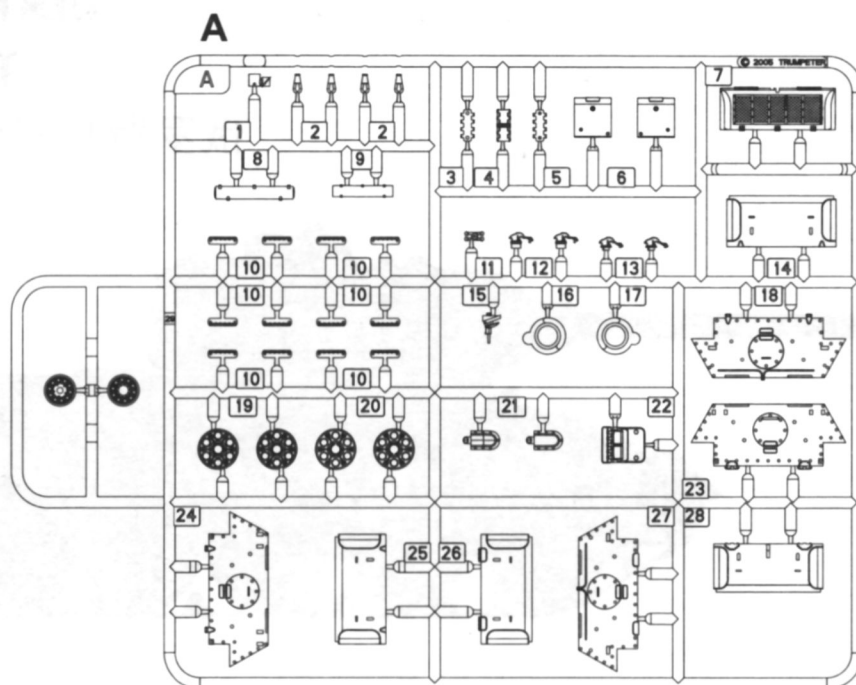


《底座》
Stand

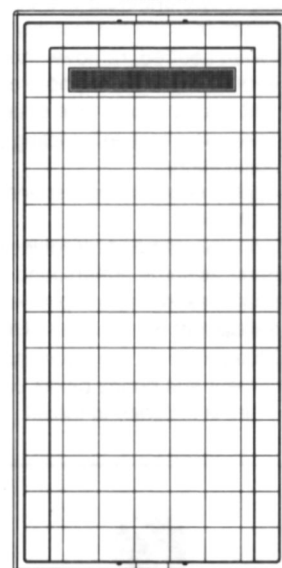


《车底》
Lower hull

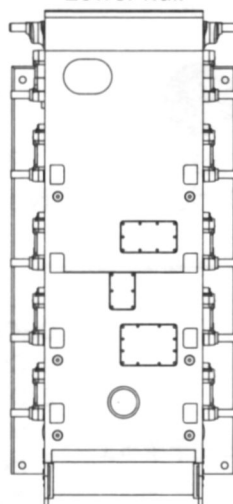


B1x2

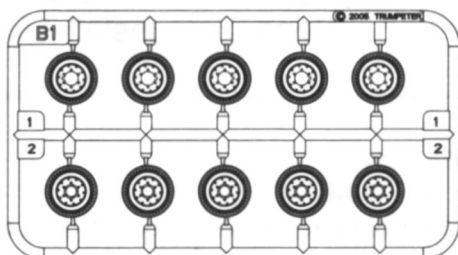

《履带》
Track x2




X4




《缆绳》 $\varnothing 0.5 \times 150 \text{mm}$
Tow rope $\varnothing 0.5 \times 150 \text{mm}$




《水贴》
DeacI



1 车轮安装 Attaching wheel

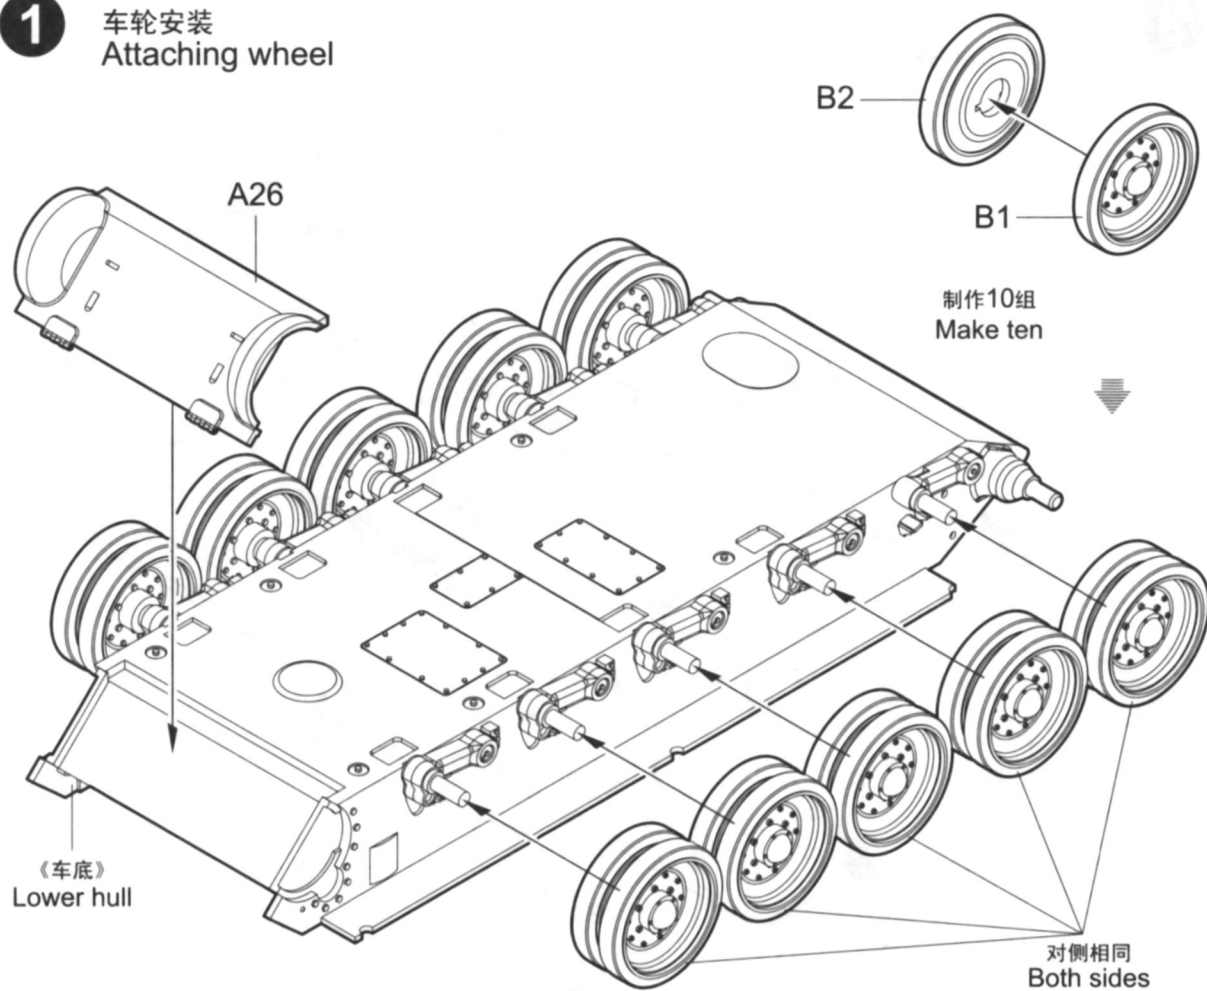


2 车轮安装 Attaching wheel

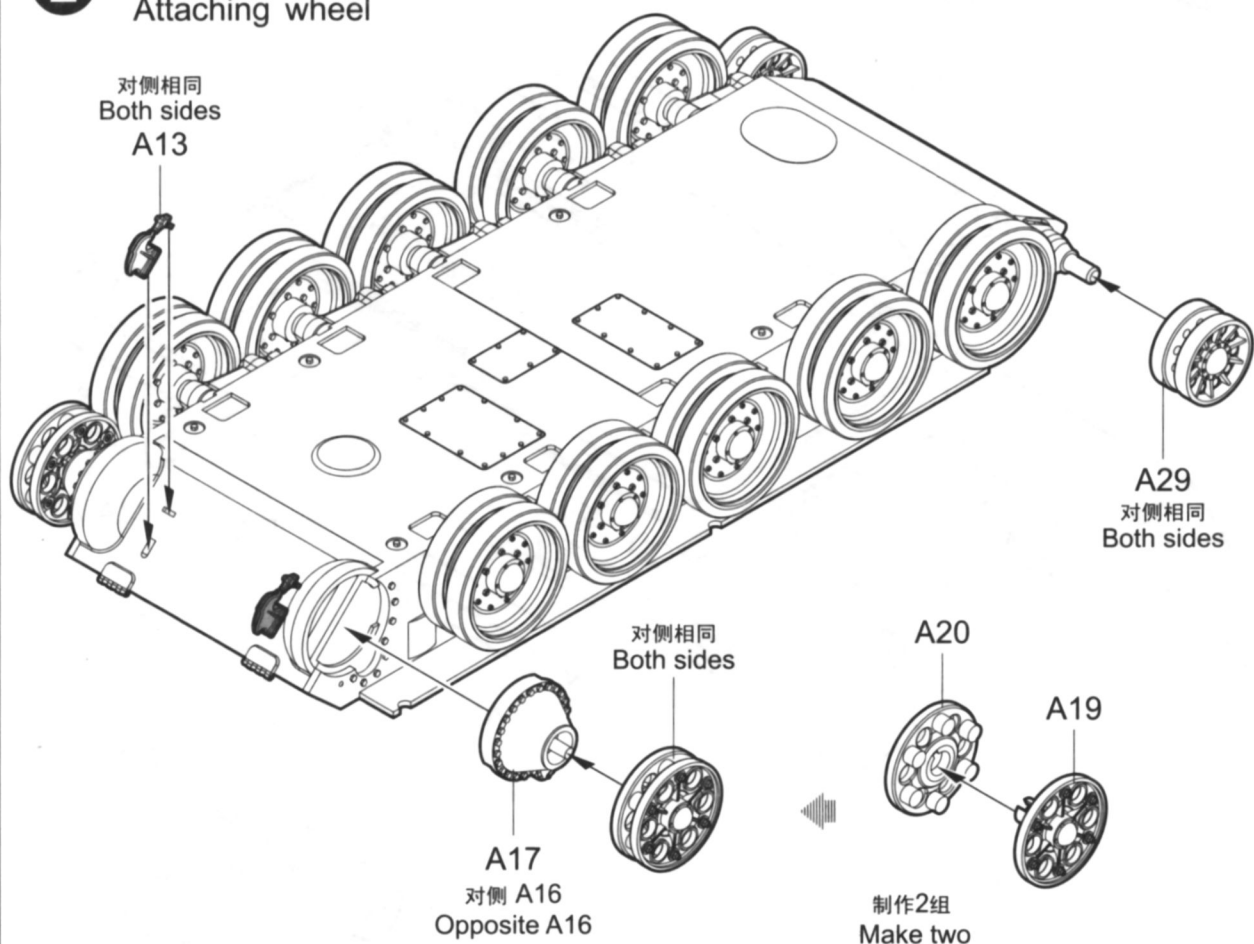


3

车面组装
Upper hull assembly

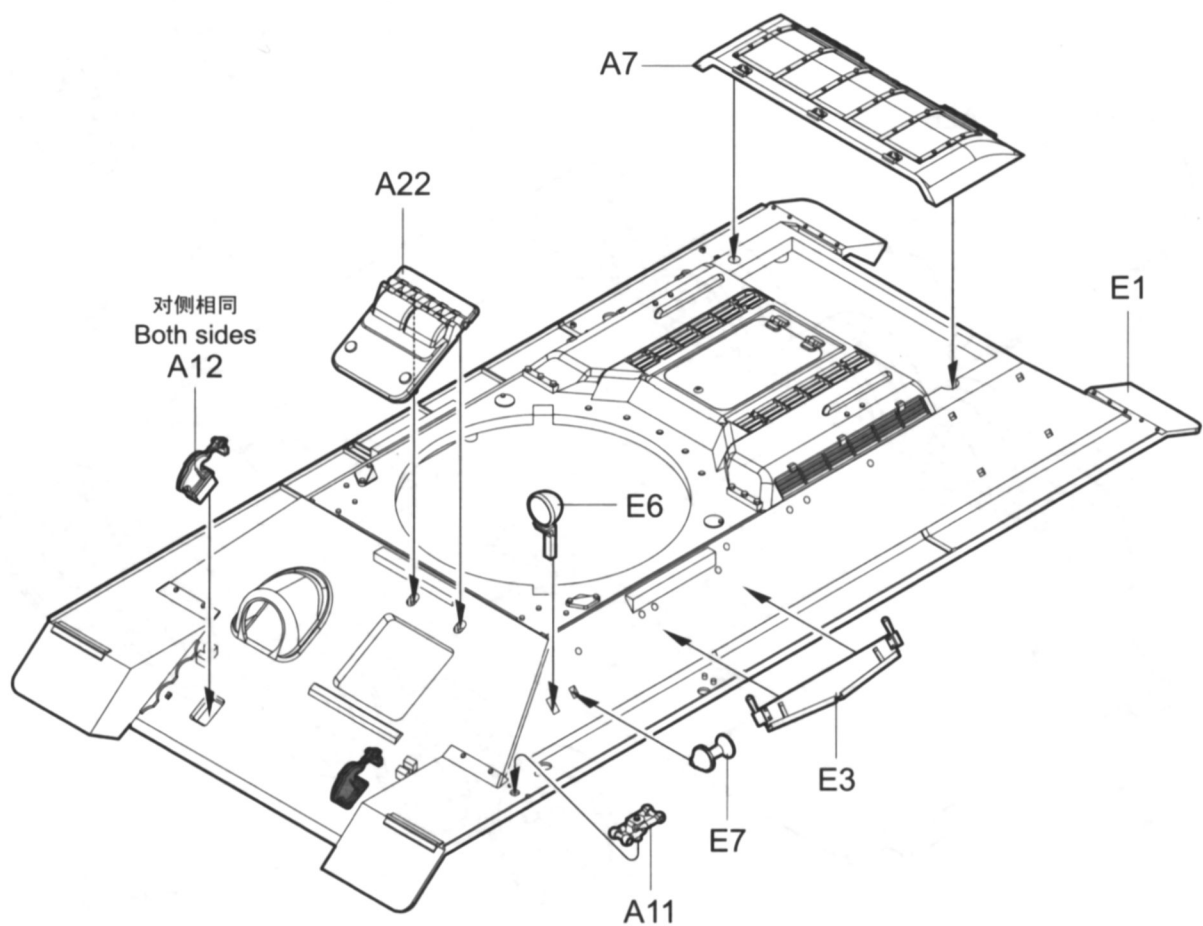


4

车面组装
Upper hull assembly

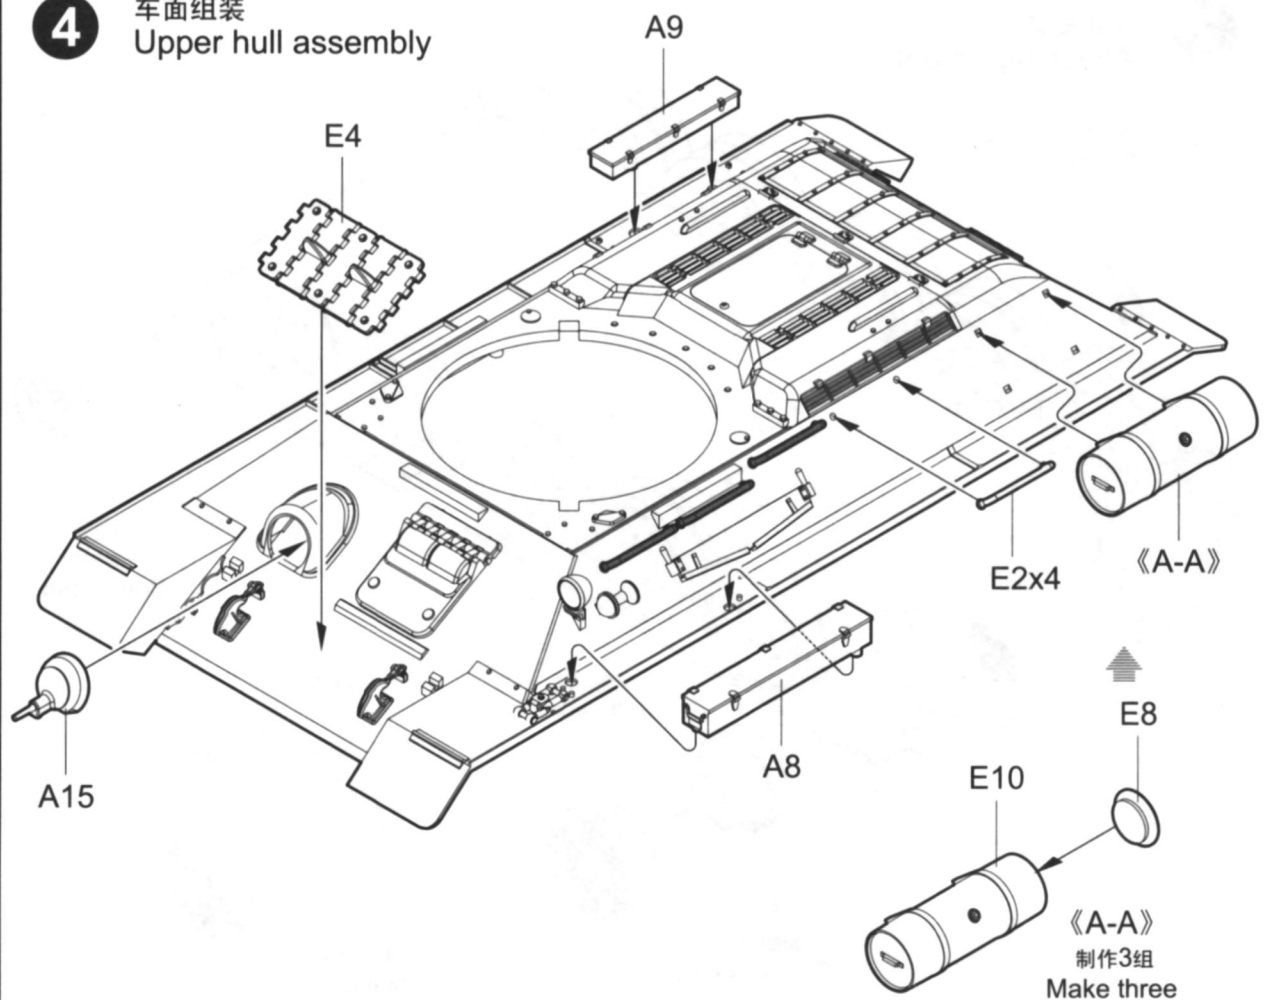


5

车面组装
Upper hull assembly

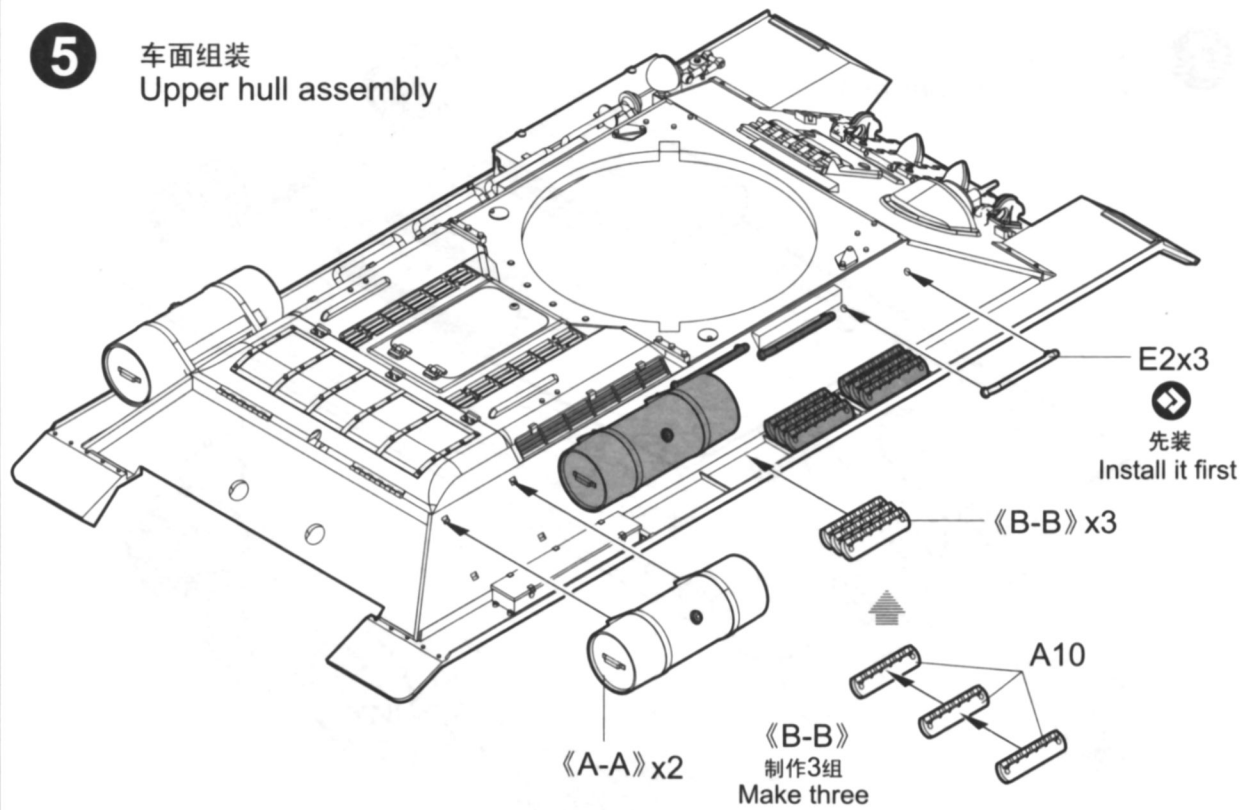


6

车面组装
Upper hull assembly

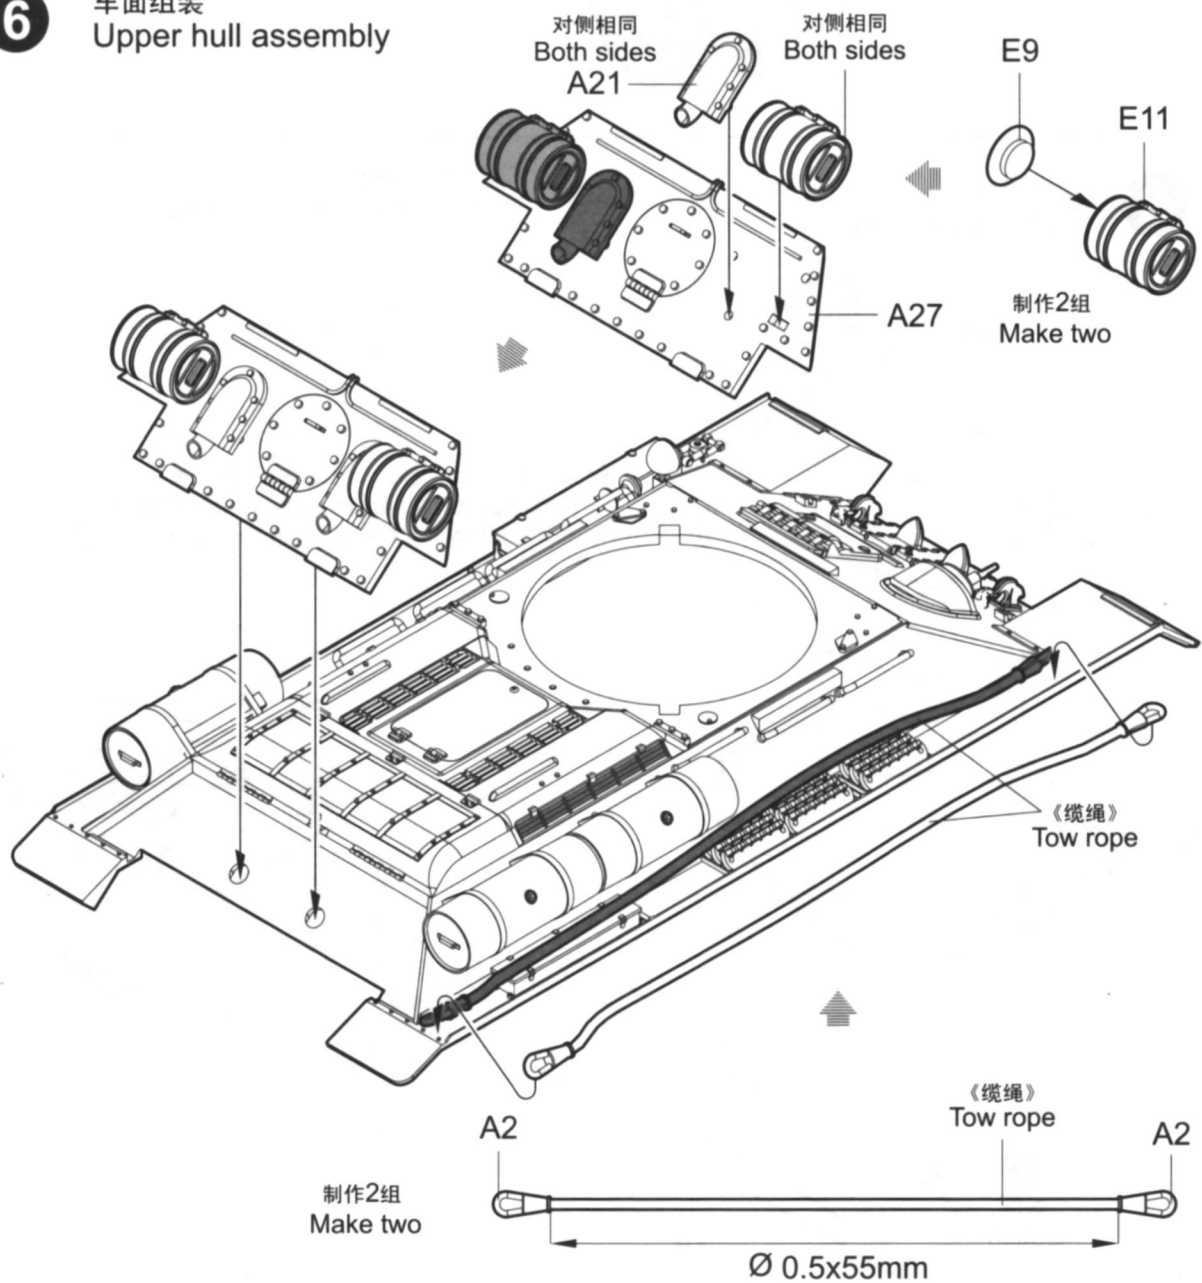


7

车面安装
Attaching upper hull

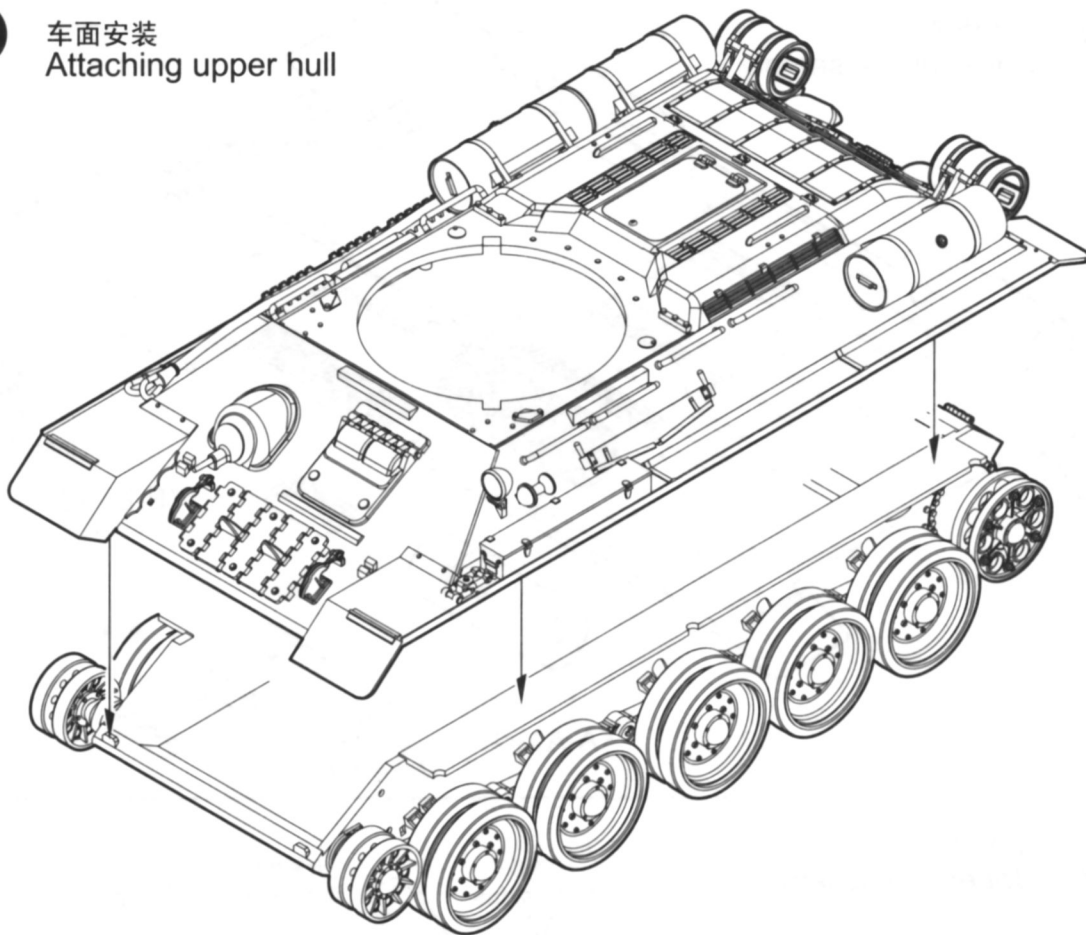

8

炮塔组装
Turret assembly

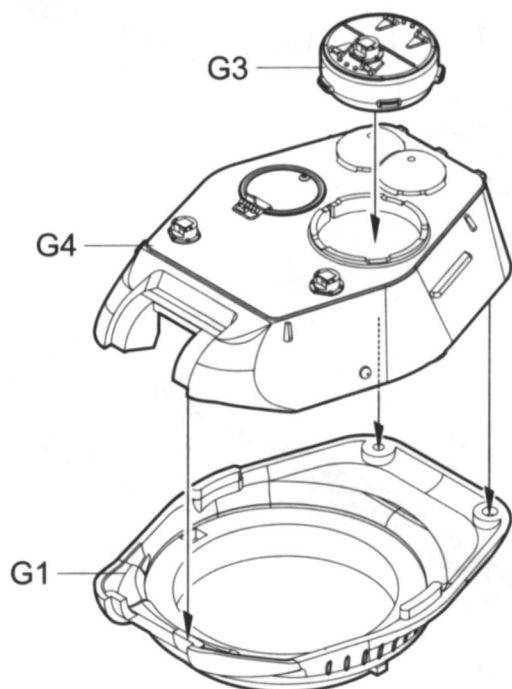


《天线制作》
How to make antenna




★加热 Heat

★加热浇口，拉线冷却，冷却后剪成所需长度
Heat sprue as shown, remove from flame and stretch allow to cool and cut to required length.

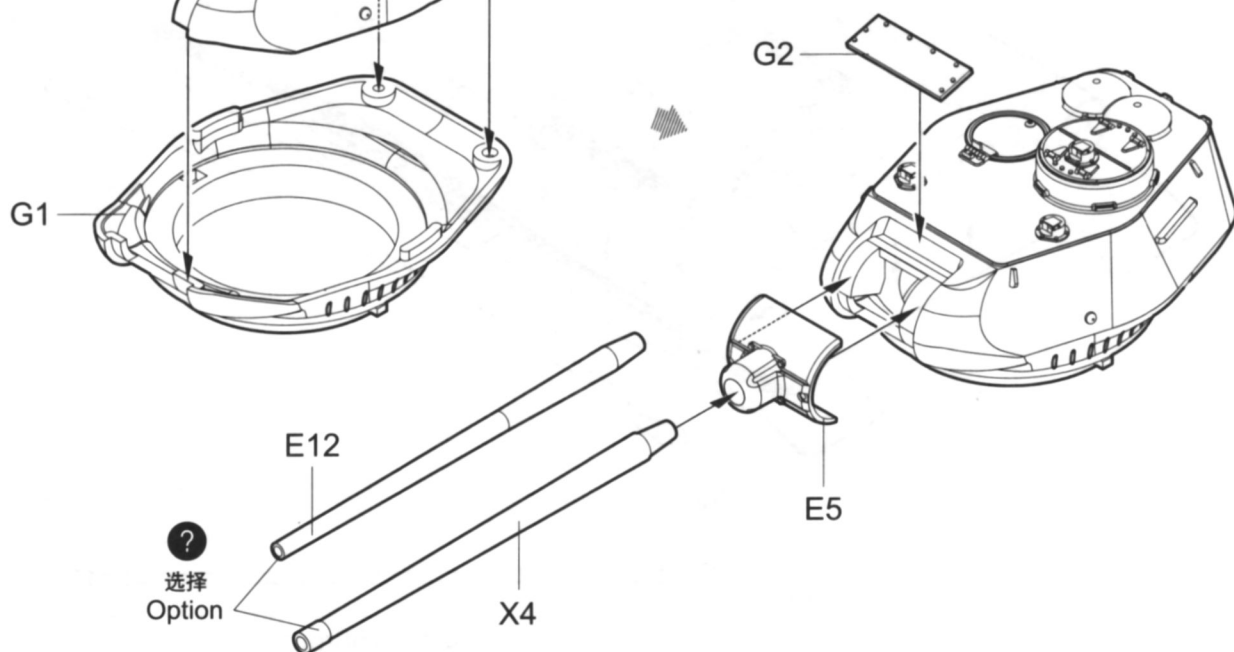


9 履带链接 Track construction

- 履带可用塑料胶水粘合。
- 履带可用模型油漆喷涂。
- 若履带断裂，用细丝线固定。
- The tracks in this kit can be glued using plastic cement.
- The tracks can be painted using plastic paints.
- If track is broken strengthen with staples or thread.

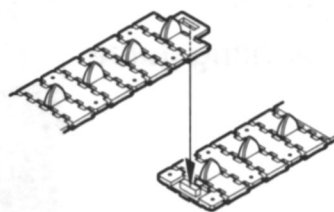


制作2组
Make two

10 炮塔组装 Turret installation

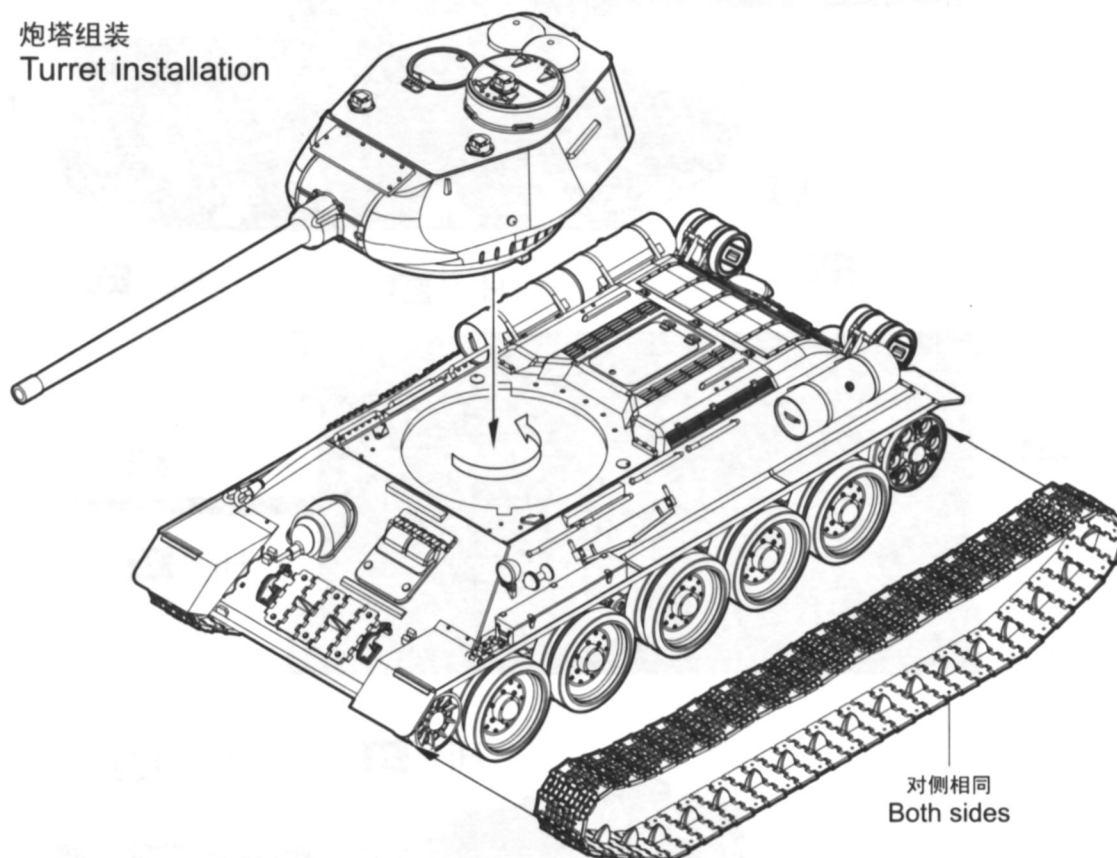

对侧相同
Both sides

11 底座 Stand

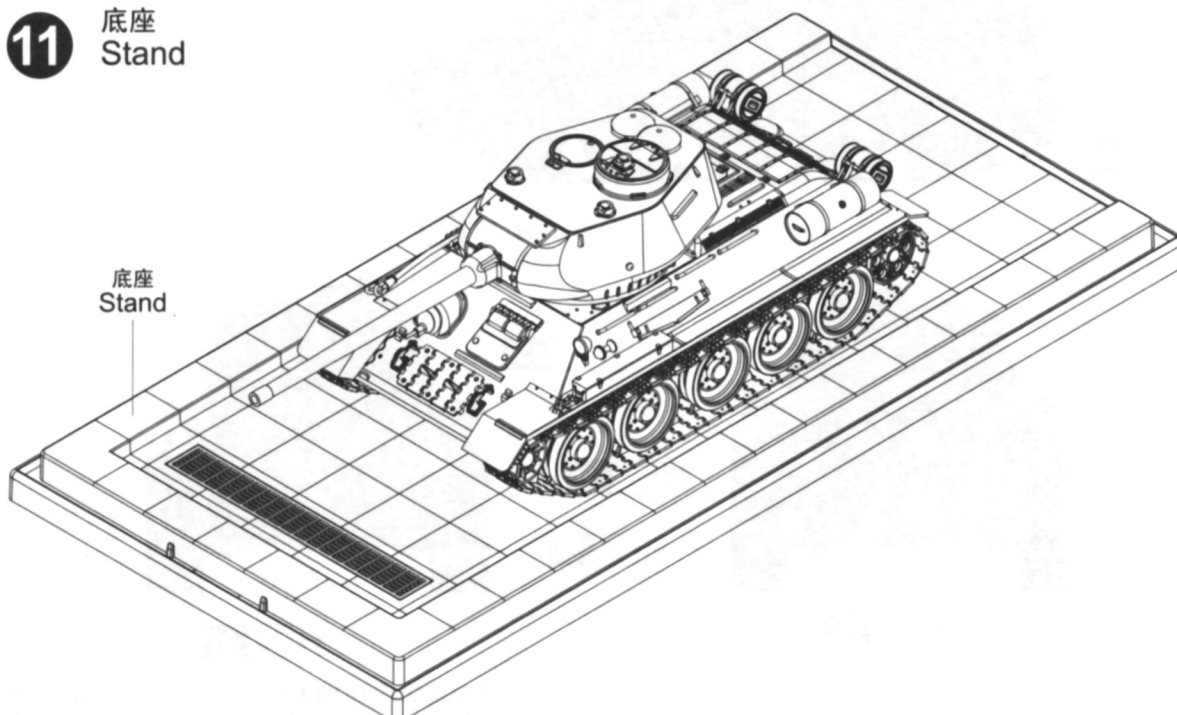


底座
Stand

涂装同标贴指示 Painting & Marking guide

PAINT REFERENCE COLOR

Color	Mr.Hobby	Acrycion	Vallejo	Model Master	Tamiya	Humbrol
Russian Green(1) 苏联绿	H 136	N 	823	—	—	—
Burnt Iron 烧铁色	H 76 61	N 76	863	1795	X10	53
Steel 黑铁色	H 18 28	N 18	864	1402	—	—
Tire Black 胎黑色	H 77 137	N 77	—	—	—	—

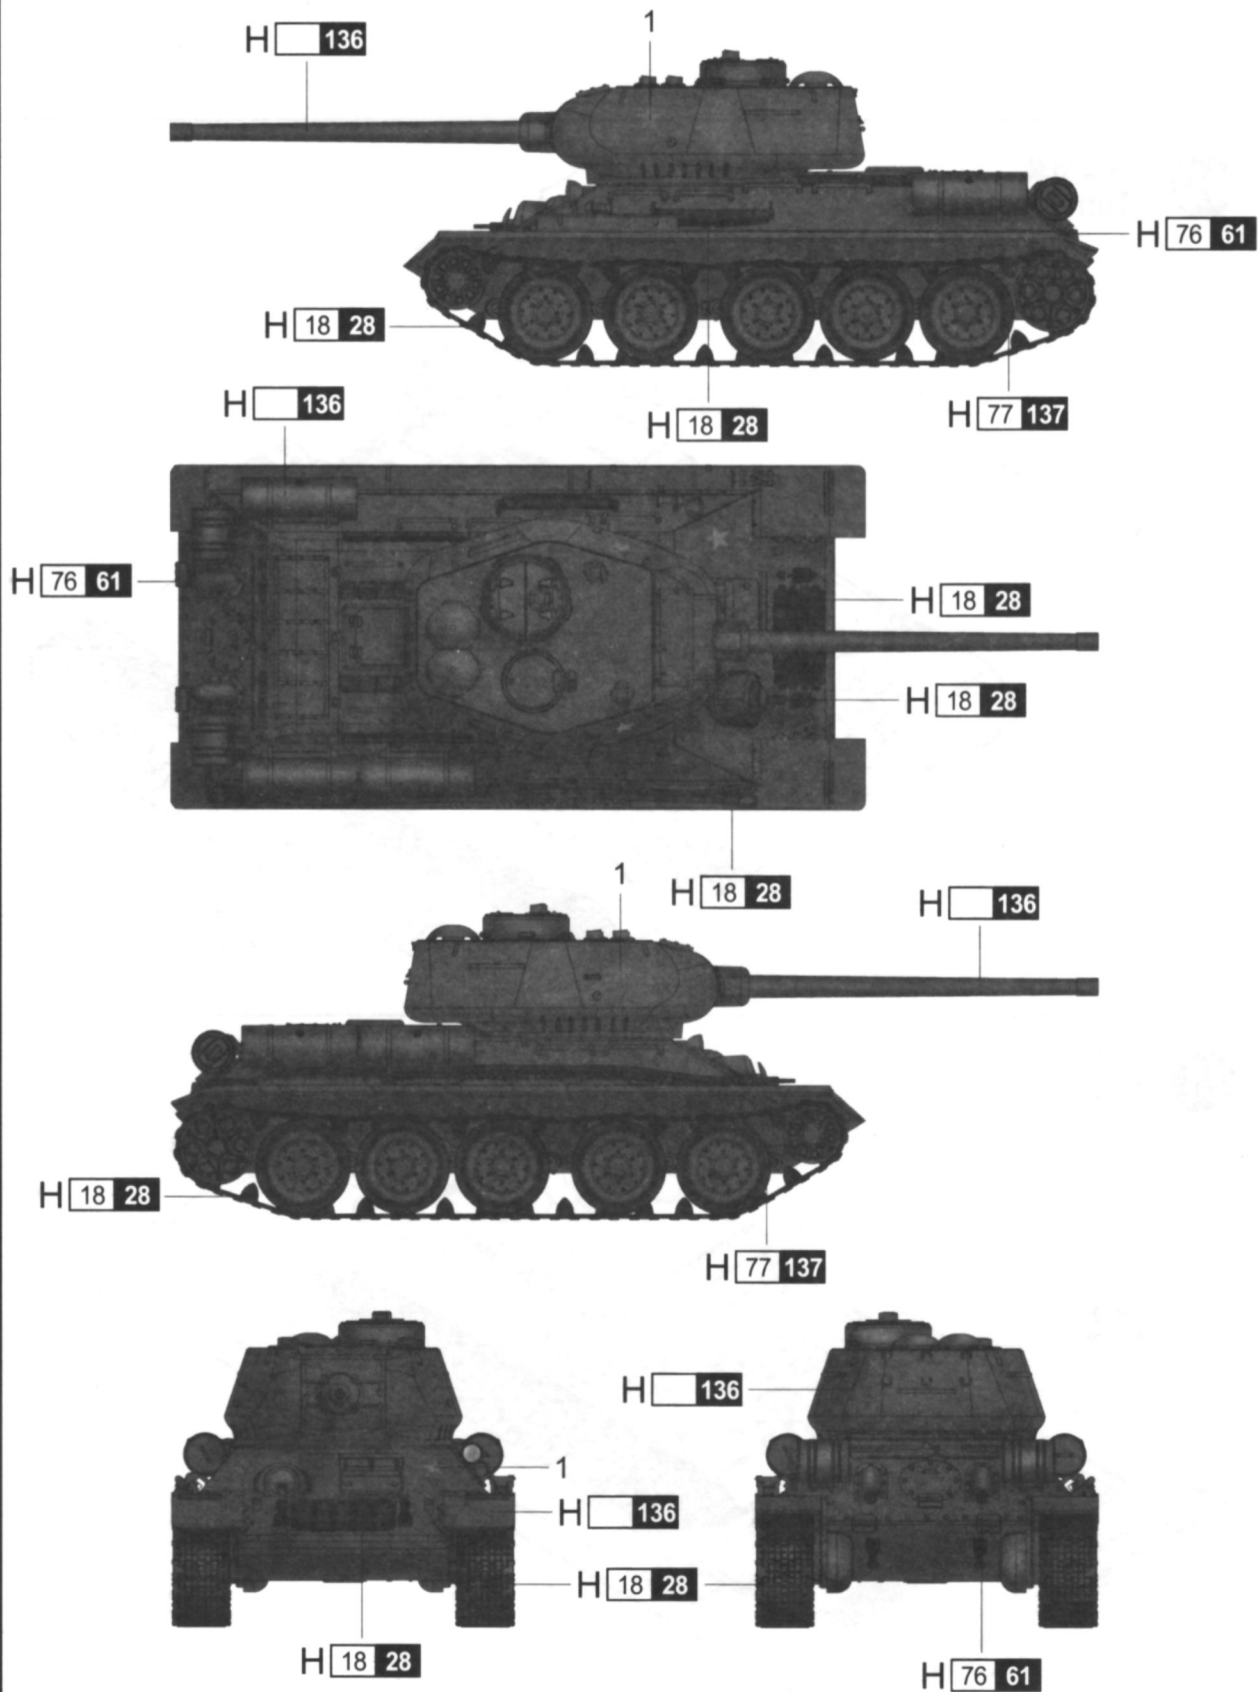

H 136 AQUEOUS HOBBY COLOR 76 61 Mr. COLOR
N 76 ACRYSION COLOR