



**DETAILS AFTER REMOVAL FROM SUPPORTS**

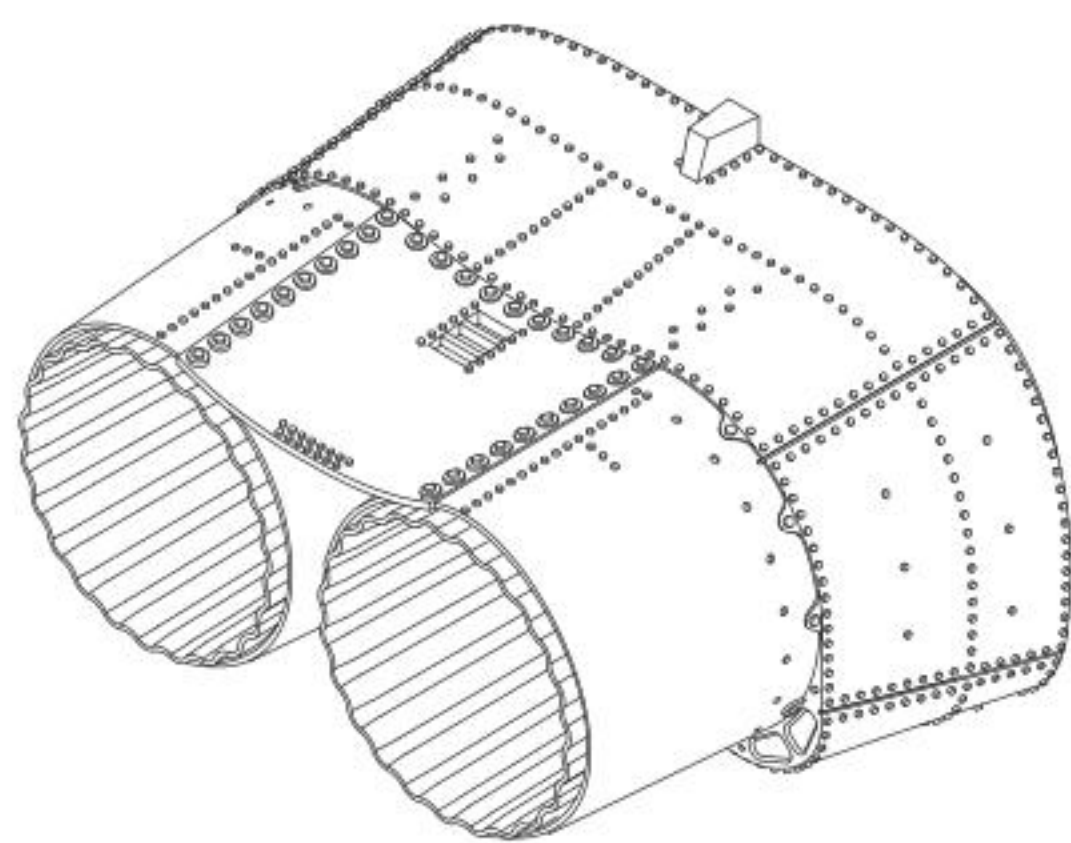

USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS



**R1**

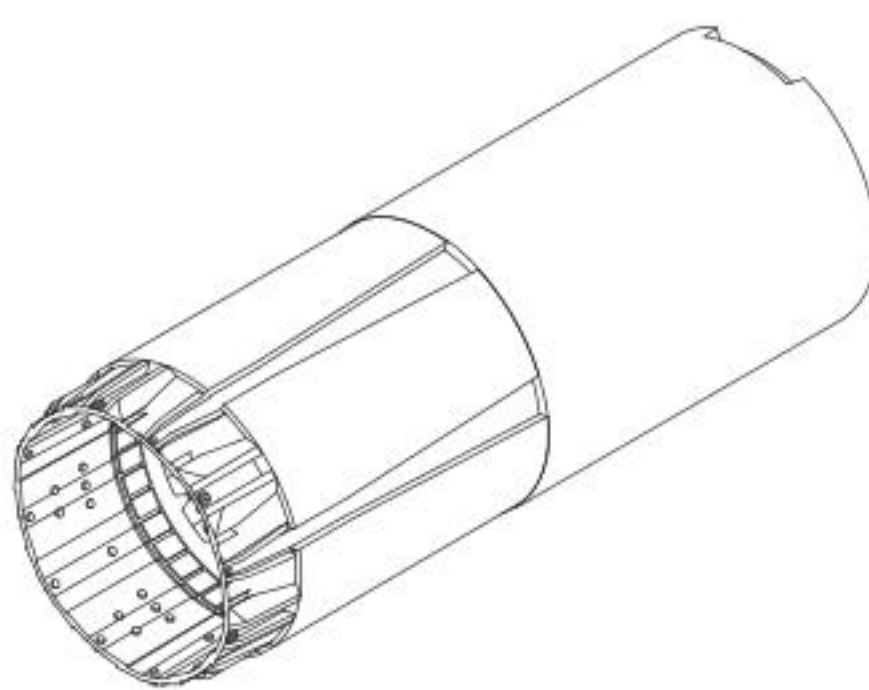

**R2 X2**




**R3 X2**




**R4 X2**


**1** X2

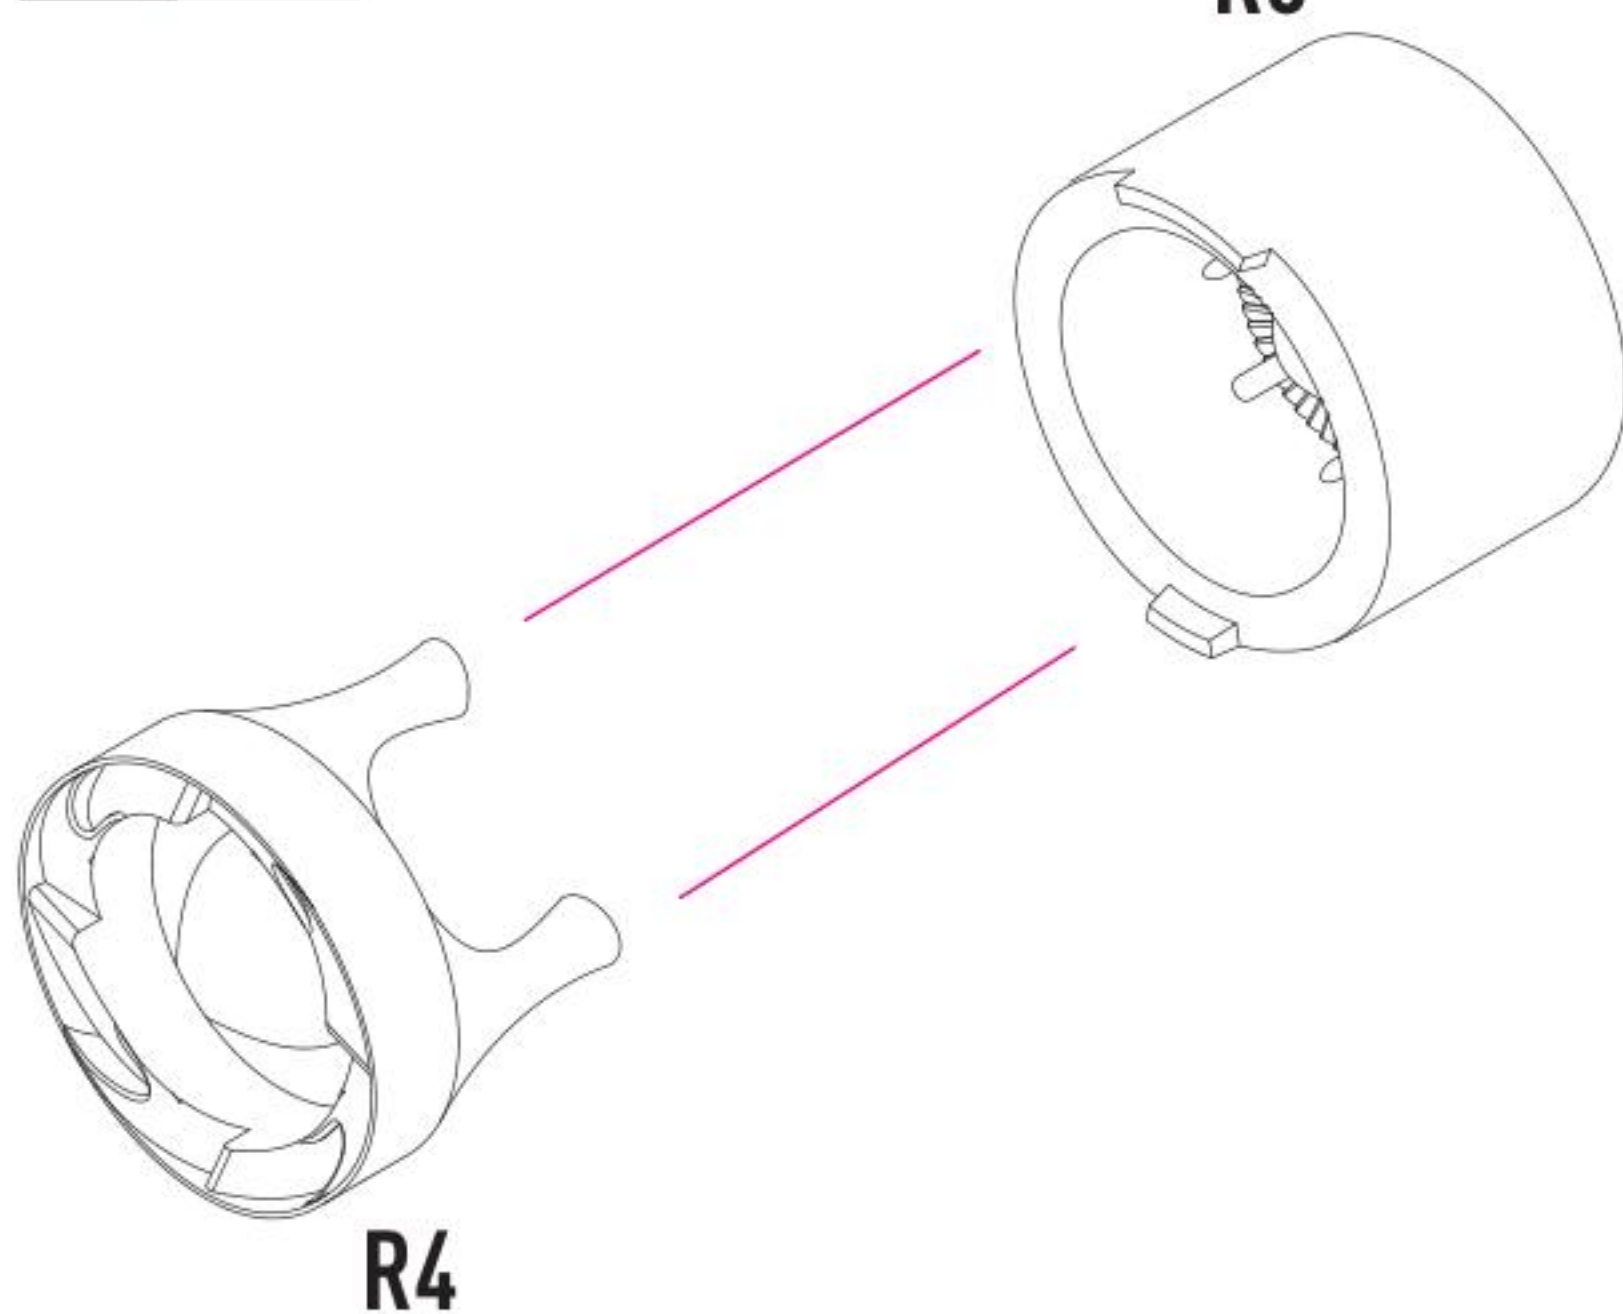

**2** X2

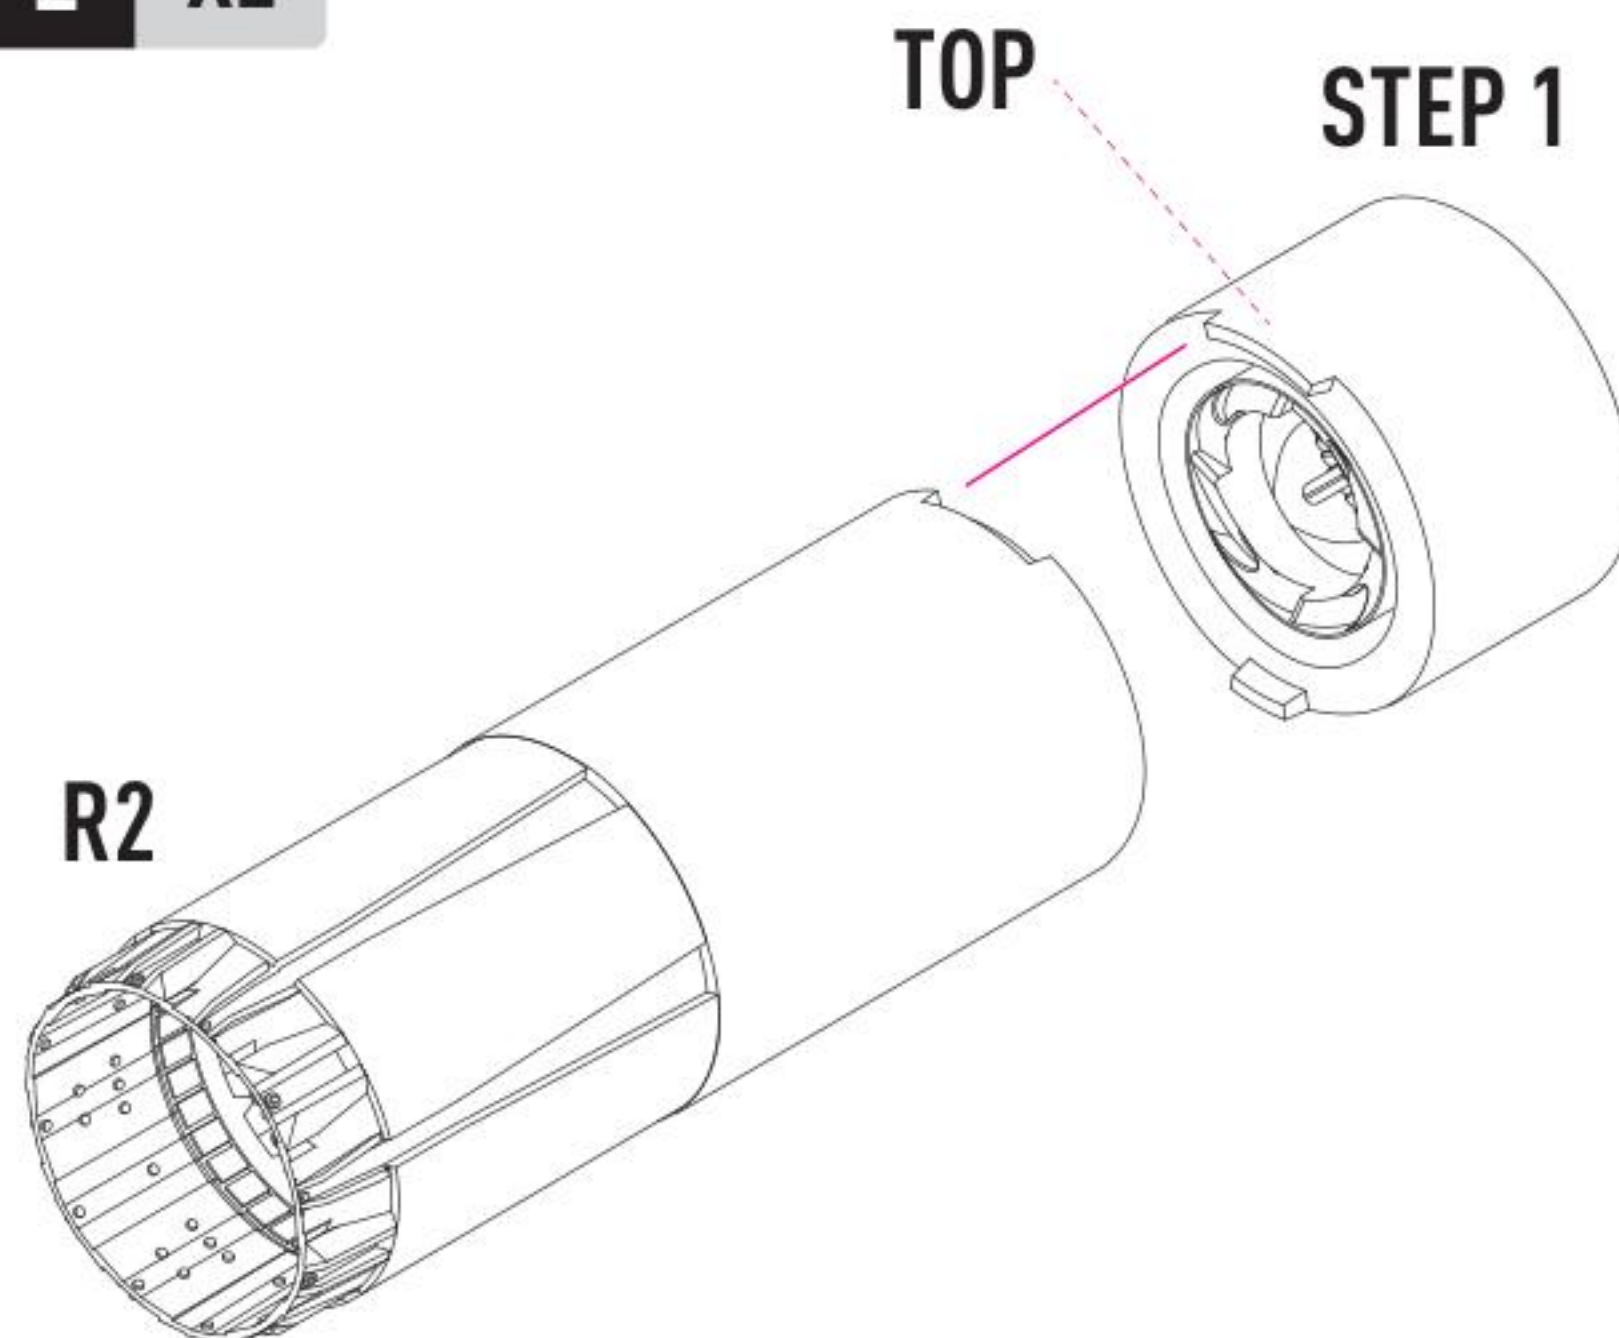


**3**

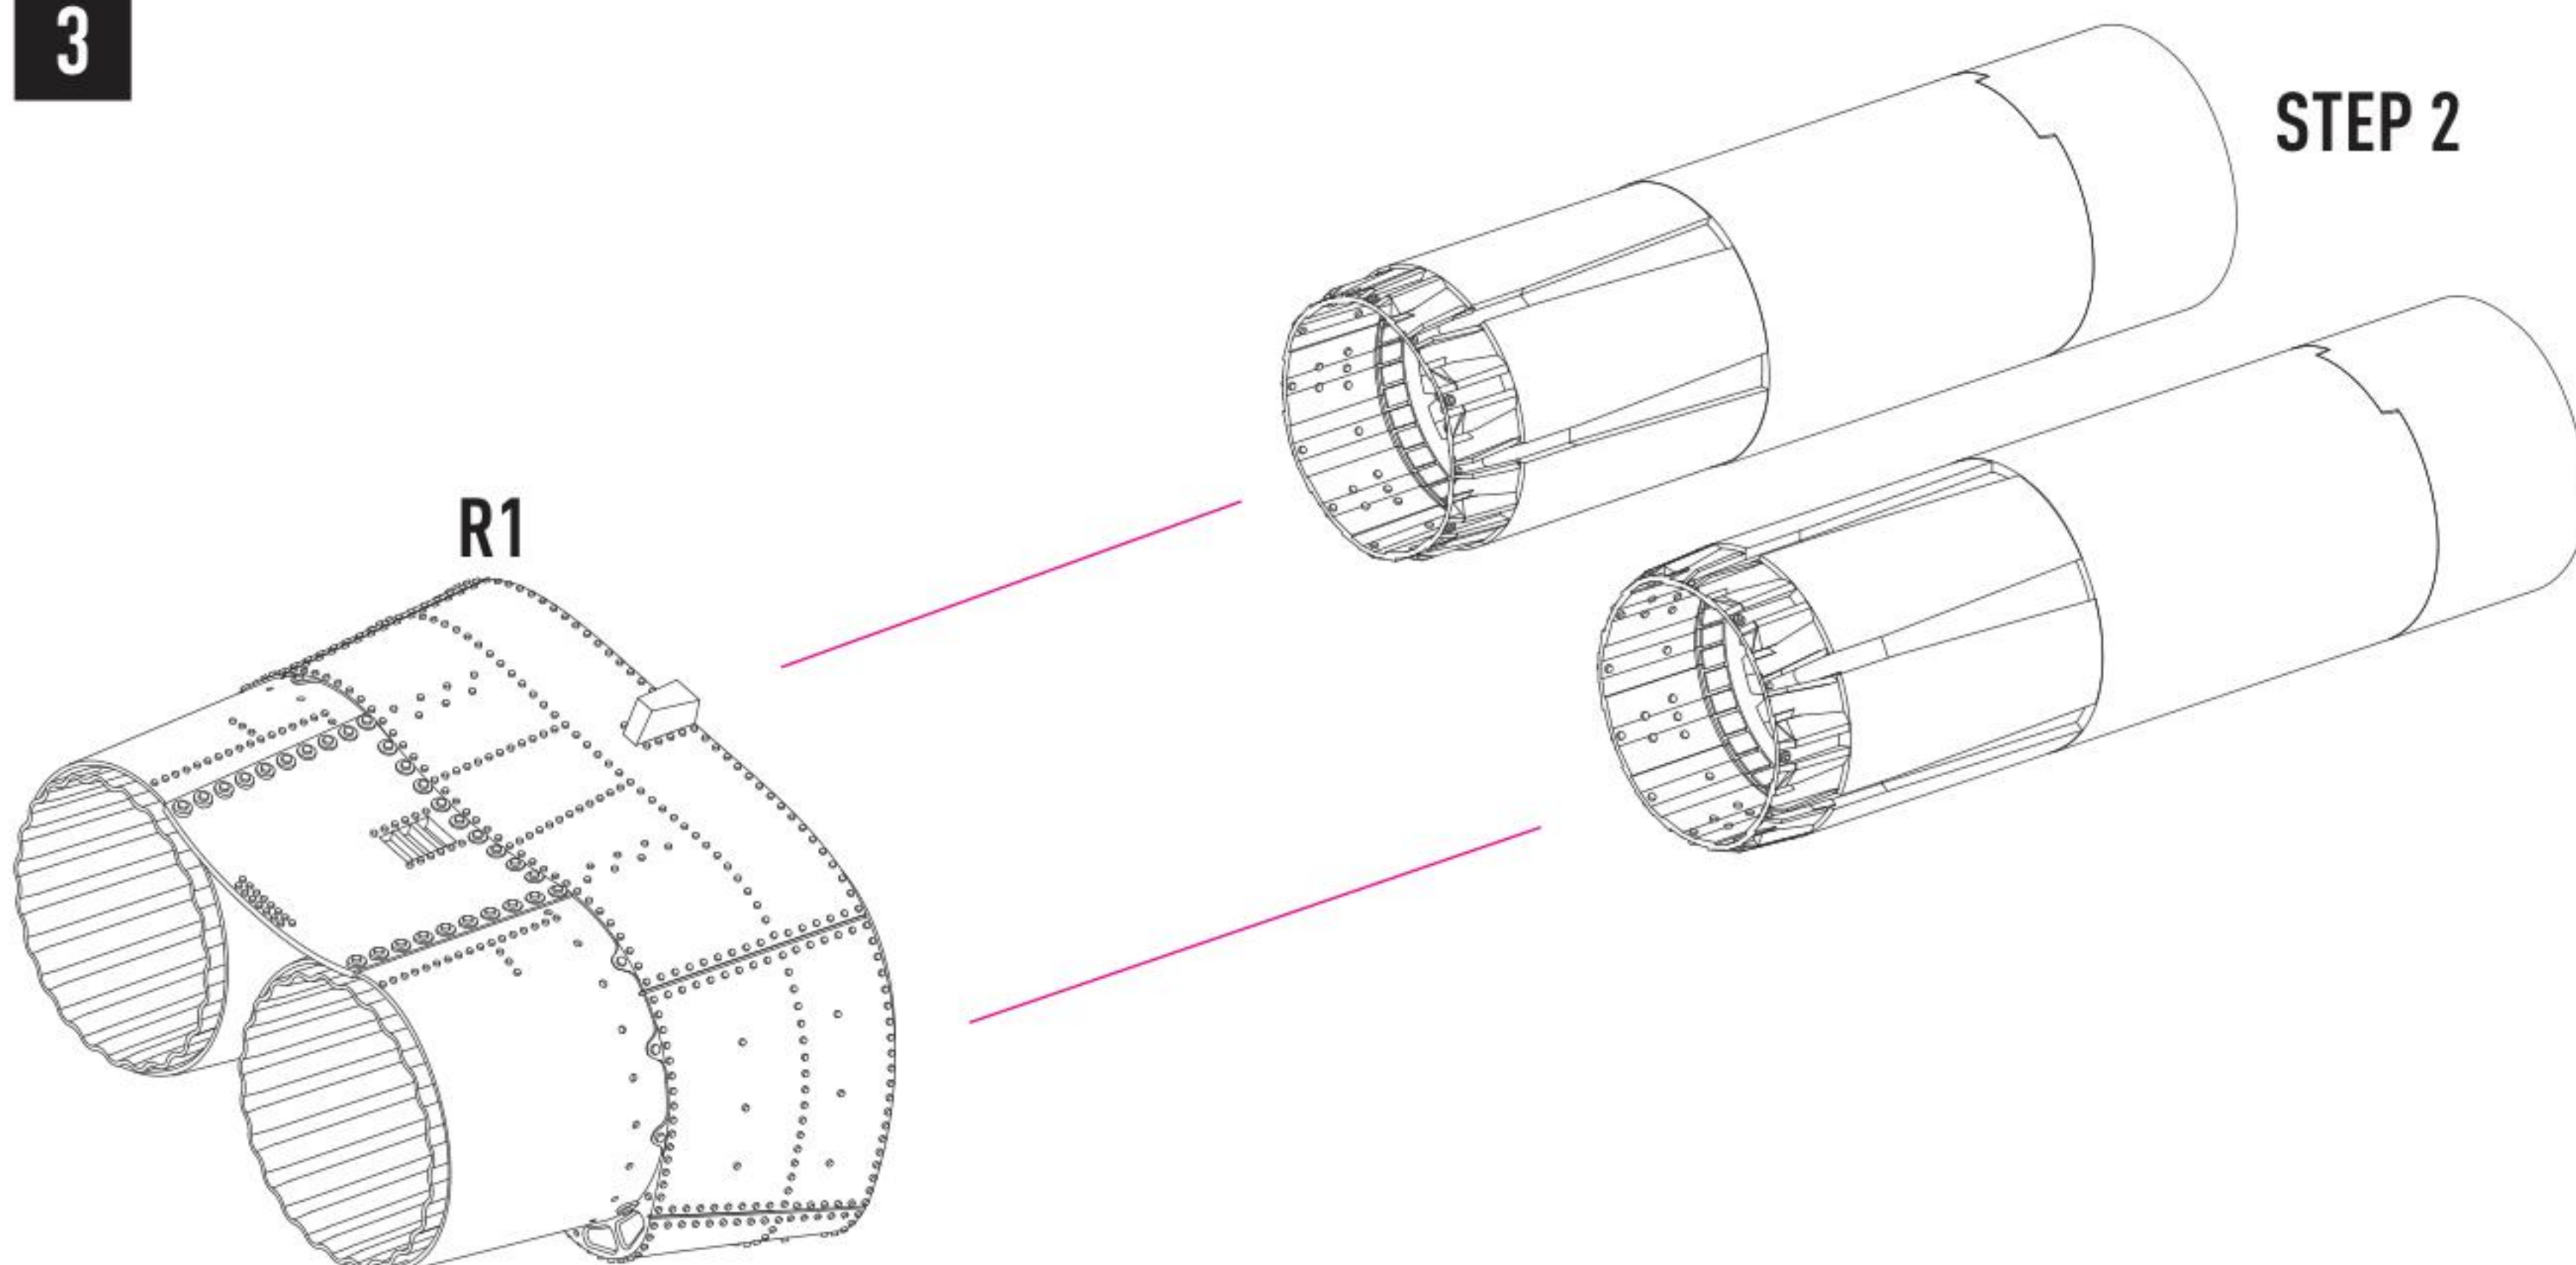




**4**

**REMOVE PART OF THE FUSELAGE  
TO 7,2 MM JOINTING**

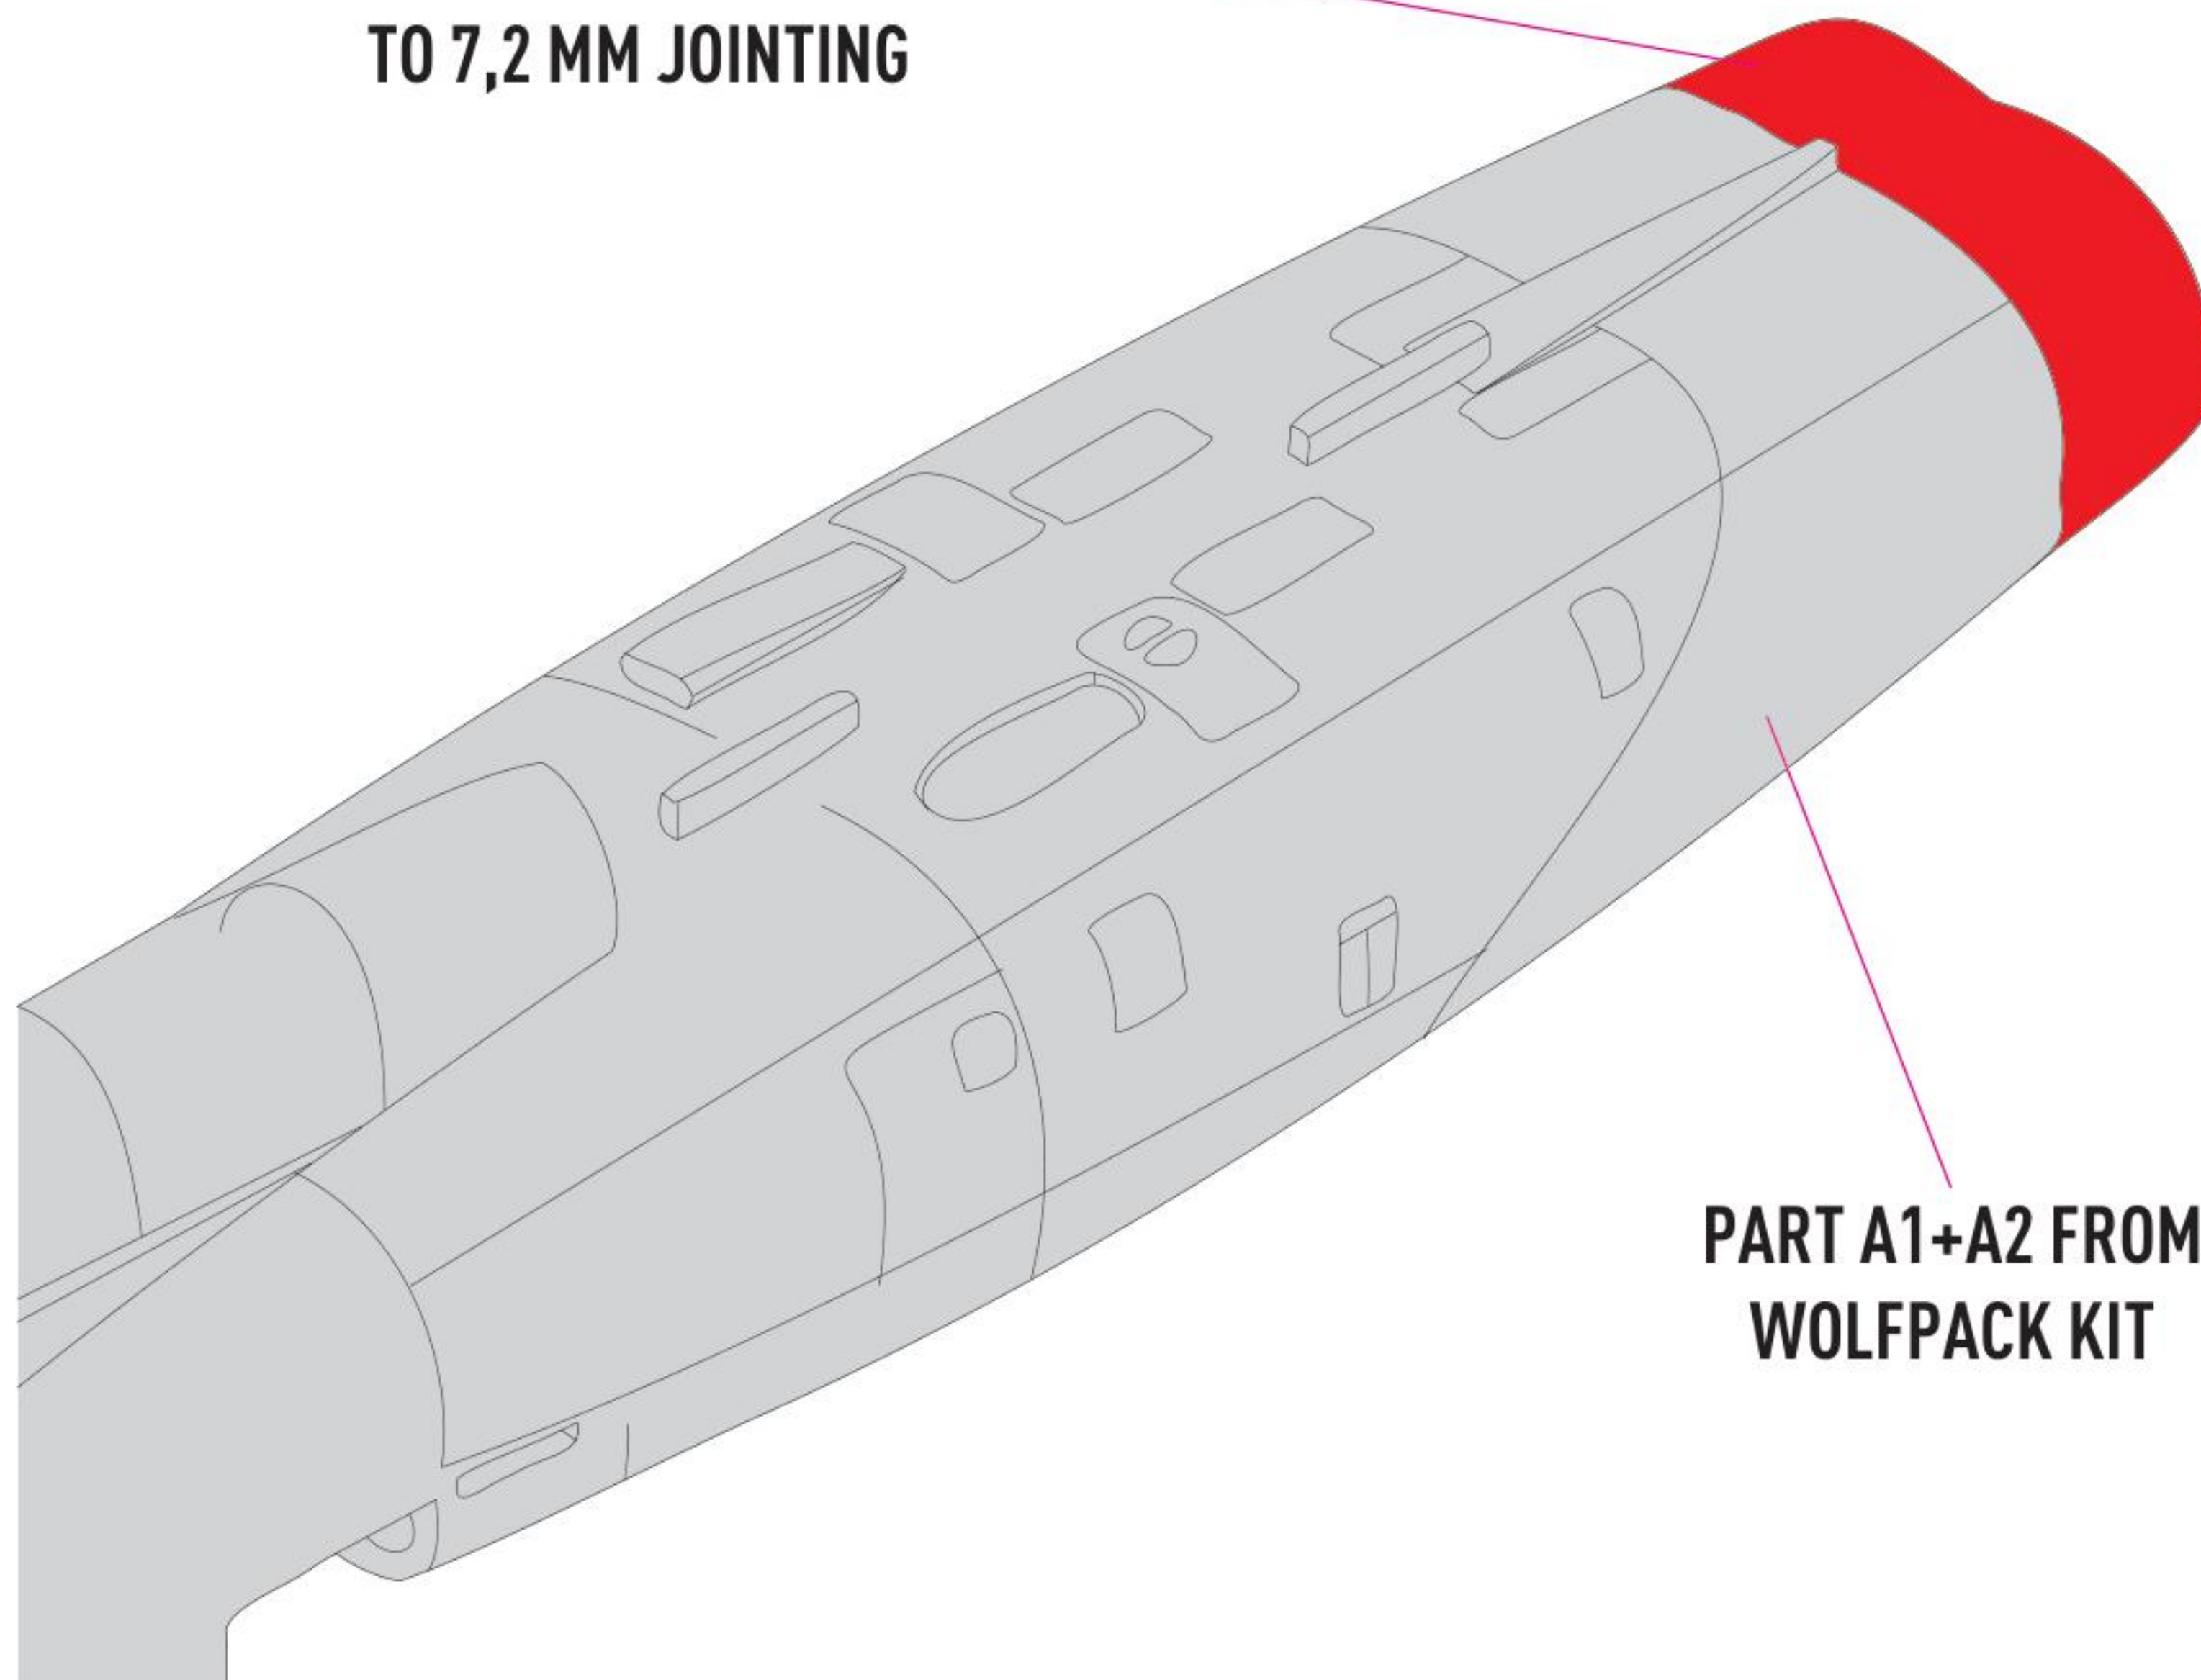

**PART A1+A2 FROM  
WOLFPACK KIT**

**5**

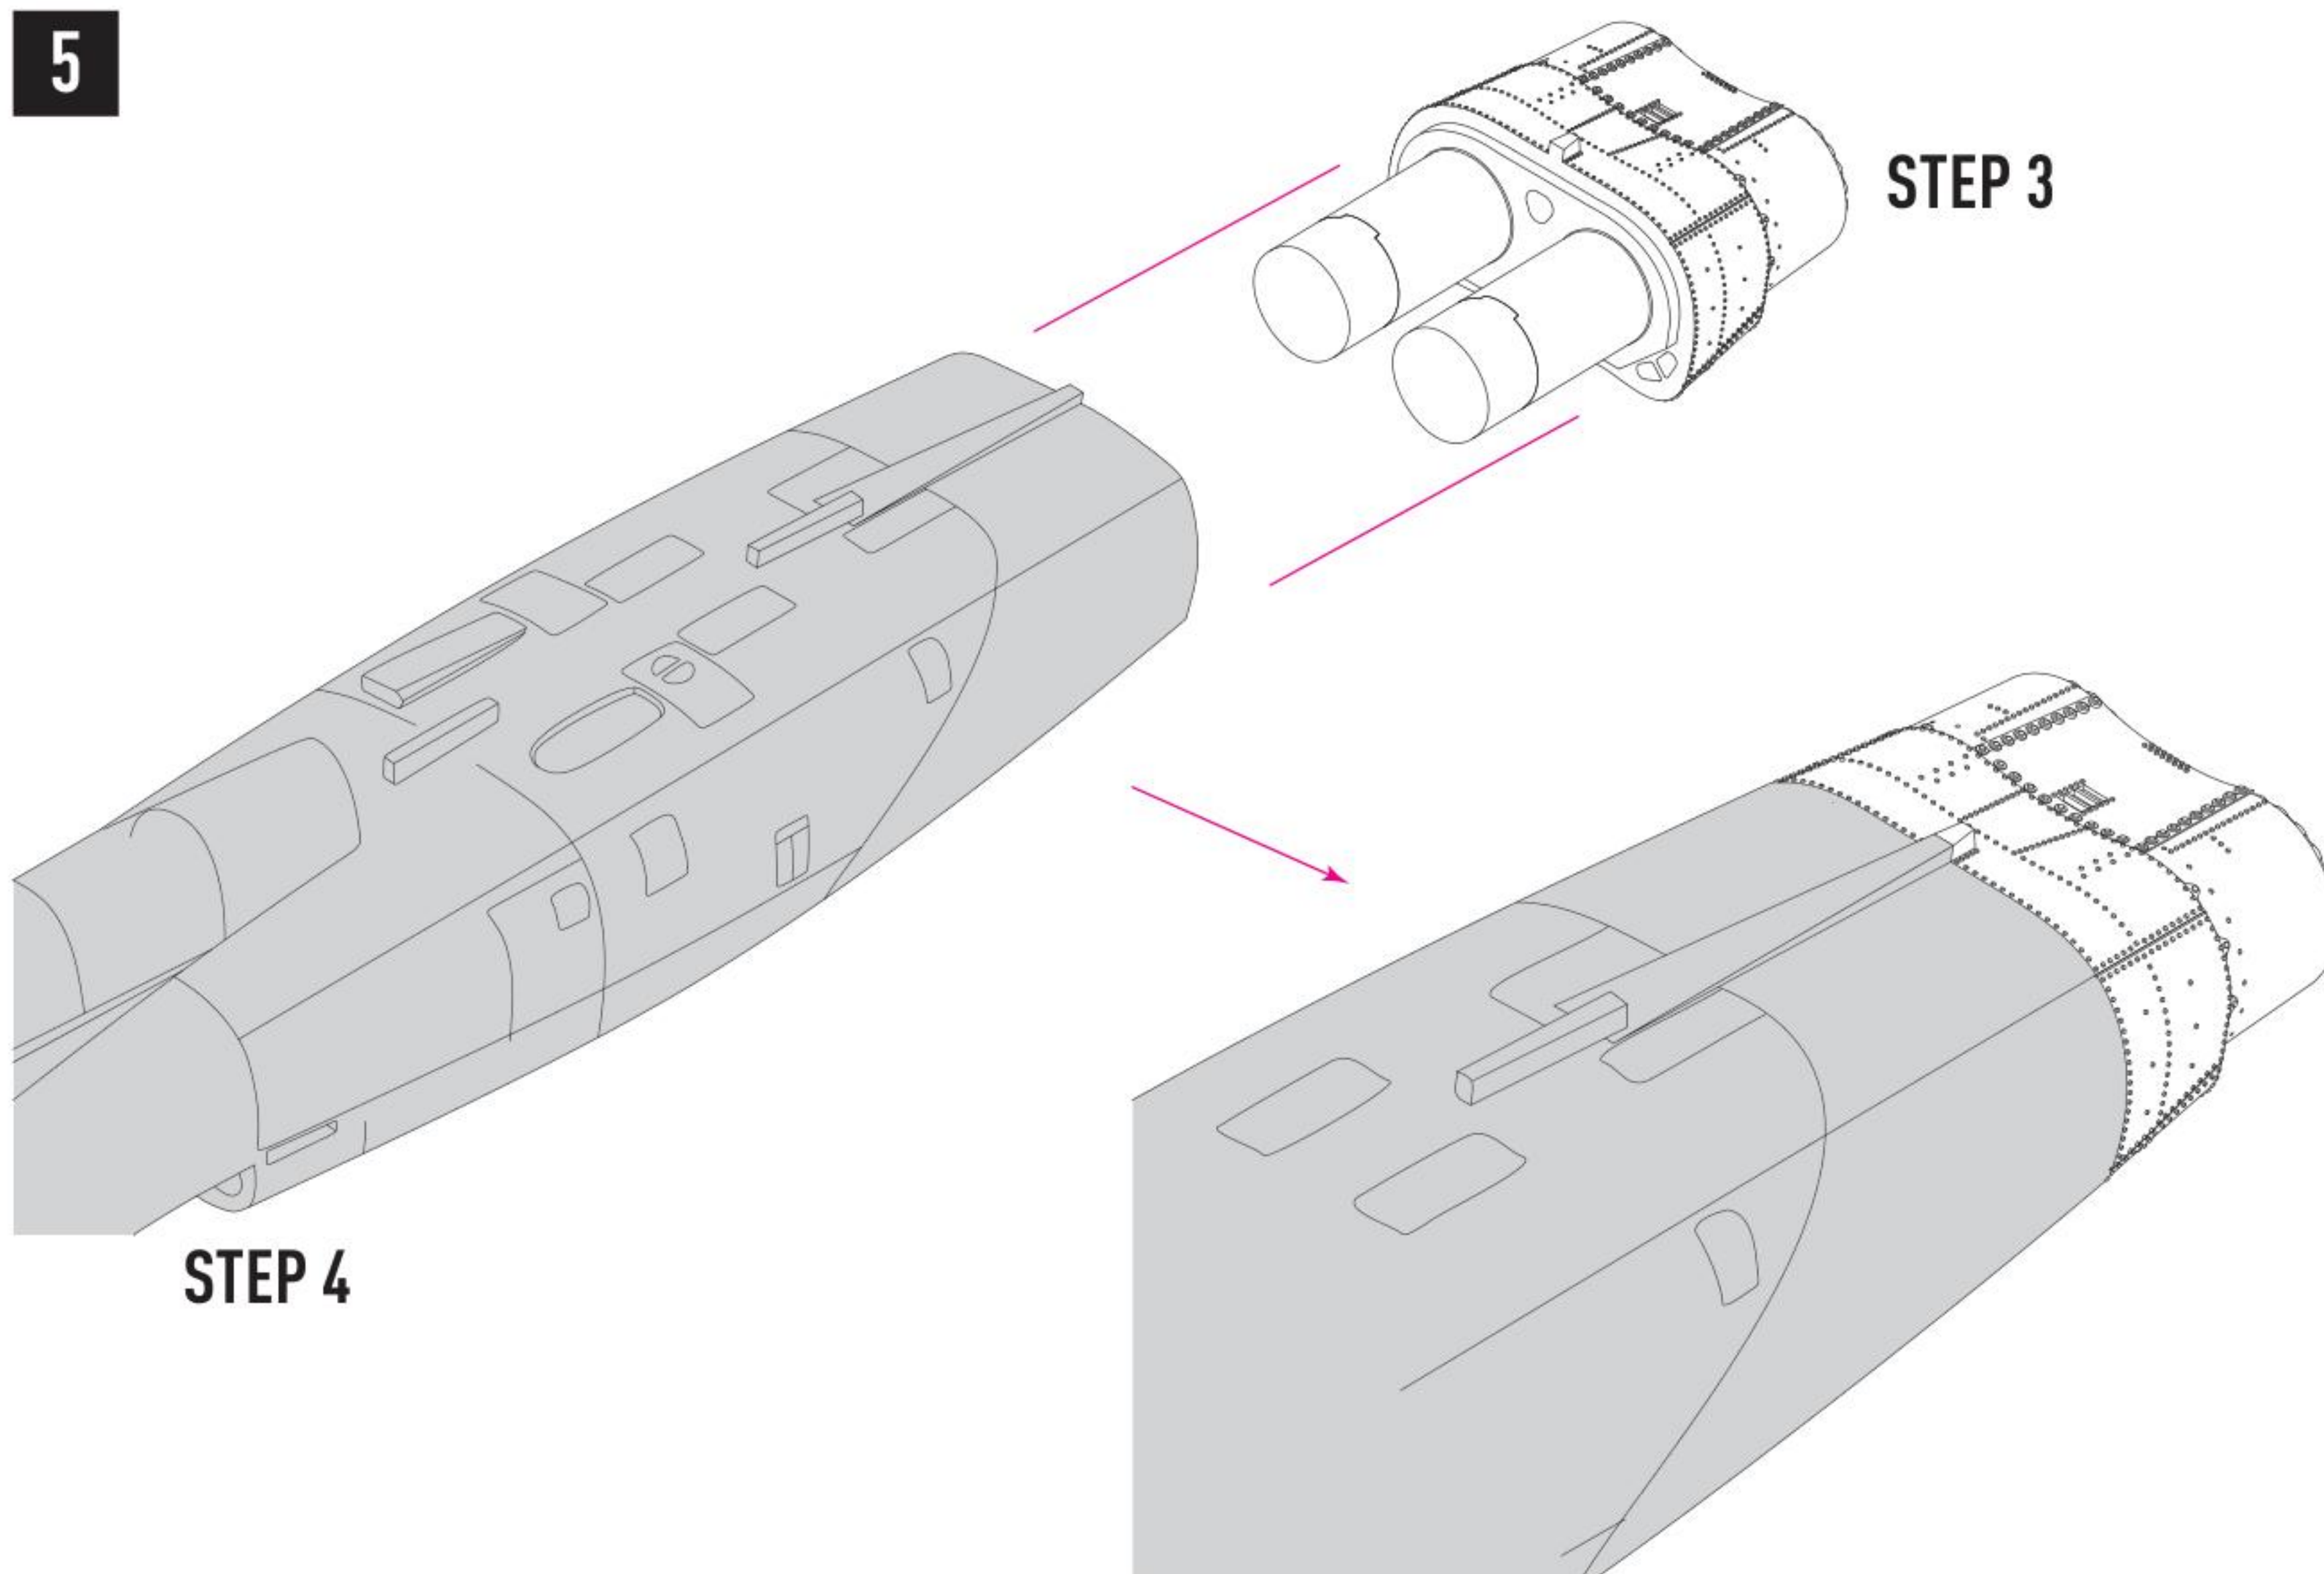

**STEP 3**

**STEP 4**