


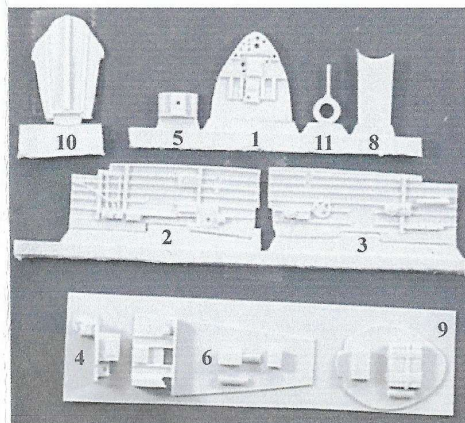
SBC-4 UPGRADE
I-72 COCKPIT DETAIL SET
 FITS HELLER KIT



\$ 12.50

Starfighter Decals
 by
 Mark's Models and Toys

7202 V2




Parts List

1. Front Bulkhead
2. Right Sidewall
3. Left Sidewall
4. Radio Gear
5. Aft Instr. Panel
6. Floor
7. Seat (Not Pictured)
8. Turtledeck insert
9. Fore Wheel Well Bulkhead
10. Aft Wheel Well Bulkhead
11. DF Loop

Step 1: Kit Preparation and Wheel Well

I suggest painting the resin parts before installation. Remove the tabs on the bottom of Kit Parts 1 & 8. Leave the "L" shaped tabs! Remove 0.09" from the center shelf on Kit Parts 1 & 8. Glue Kit Parts 1 & 8 together. Test fit Wheel well Bulkheads, Parts 9 & 10. Align Part 9 with the kit panel line just forward of the wheel opening. Sand to obtain a tight fit. Now fit Part 10 aligning with the part with the details facing forward along the aft opening of the wheel well. Once satisfied with the fit and location, glue into place. Complete the fuselage assembly by test fitting Kit Part 6, check the clearance of the bulkheads. Sand if necessary to assure a tight fit without interference. Once satisfied with the fit, glue into place.

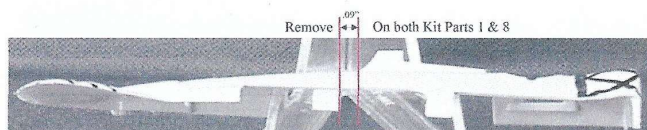

References:

Skywaves #84 October 2007

SBC Helldiver In Action by Thomas Doll

Air Wars #10 June 1987

Paint Guide

Interior and seat were Natural Metal with a clear lacquer overcoat.
 Instrument Panel and top of Control Column is Black. Radio Gear is Black.
 Boxes on the sidewalls are black. Shelf in rear cockpit are aluminum. Flotation
 Bottle (Cylinder in the rt front of the floor) is Green. Cylinders in rear cockpit
 are yellow.

Research by:
 Mike Lampros and Mark Tutton

Masters by Mark Tutton

Casting by Corsair Armada

MARKS MODELS AND TOYS 124 HIGHLANDER RD STEPHENS CITY VA 22655 USA
 7202 SBC-4 COCKPIT SET COPYRIGHT 2010 MARKS MODELS AND TOYS ALL RIGHTS RESERVED

Step 2: Cockpit Installation.

Slide Part 1 into the front of the cockpit opening resting the bottom against the "L" shaped tabs on the fuselage sides. Insert the two sidewalls into place. Do not glue anything into place yet! Now install part 4 between the sidewalls with the small box facing bottom left (Instruments facing aft). Look for the notches in the sidewalls for placement and align with the shelf that separates the front and rear cockpit. Now check alignment of all four parts making sure of tight fits and alignment with the cockpit edges and front bulkhead. Once satisfied with the position of the parts, glue into place. Glue Kit part 14 just behind the floor bulkhead aft of the Foot Trays. Place Part 7 on the pedestal behind the Control Stick and in front of the rear shelf. Next, cut the peg from Kit part 27 and install on the aft pedestal. Part 8 is provided for those who want to show the Turtledeck on the retracted position, or want to install the .30 cal Flexible gun mount. I suggest using the Photoetch Gun Ring from Toms Modelworks set 306 US Navy Aircraft accessories and use the .30 cal gun from Aeroclub or spares box. To finish the installation, glue Part 5 with the instruments facing aft on top of the shelf separating the front and rear cockpit. Install Part 11, the DF Loop, in the hole as provided.

Thank you for using Starfighter Decals products!

**Also Available
 From Starfighter Decals**

1/72 Resin Sets

- 7200 **F4B-4 Cockpit Set For Monogram Kit**
- 7201 **P-6E Cockpit Set for Monogram Kit**
- 7203 **F11C-2 Cockpit Set for Monogram Kit**
- 7204 **P-36 Upgrade Set For Monogram/Revell**
- 7205 **SBC-3 Conversion Set for Heller SBC-4**
- 7206 **P-26 Cockpit Set for Revell**
- 7207 **P-26 Engine Upgrade Set**
- 7208 **F4B-3/P-12E Conversion Set**

WWW.STARFIGHTER-DECALS.COM