

Soviet 122mm Howitzer 1938 M-30 Early Version

苏联M-30型122毫米榴弹炮1938-早期型

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。



配重
Weight



使用强力胶
Cyanoacrylate glue



钻孔
Make hole



切除
Cut / Remove



贴纸
Decal



锉平
File / Sand



选择
Option



不涂胶水
No cement



弯曲
Bend

水贴纸的使用:

- 1.从水贴上剪下印花;
- 2.将印花放入温水中浸10秒,然后放在干净布上。
- 3.拿着印花纸板将印花移到模型上;
- 4.手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干,气泡消失


DECAL APPLICATION

- 1.Cut decals from sheet as needed
- 2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
- 3.Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.


- 4.While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
- 5.When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
- 6.Allow decal to dry completely before handling model

部品图 Parts

AX1

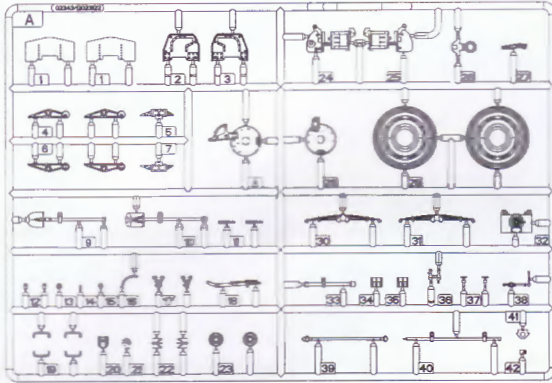

FX1

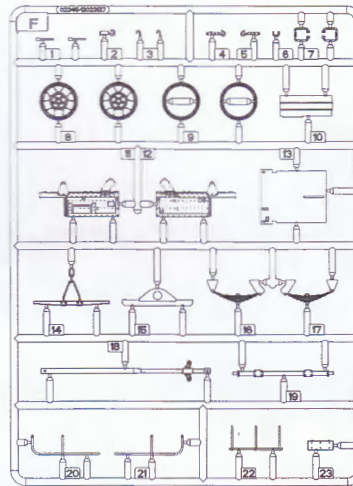


《轮胎 I》 X2
Tyre




《轮胎 II》 X2
Tyre



BX1

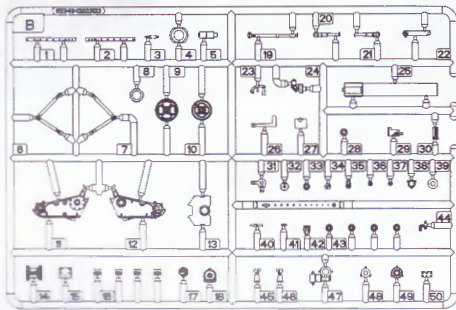

GX1

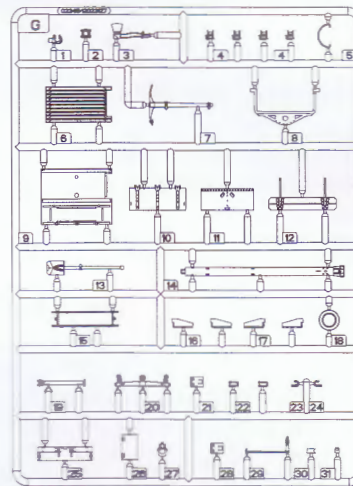

《金属炮管》
Metal gun




《金属片》
Sheet metal




C3X1




C4X1




DX1

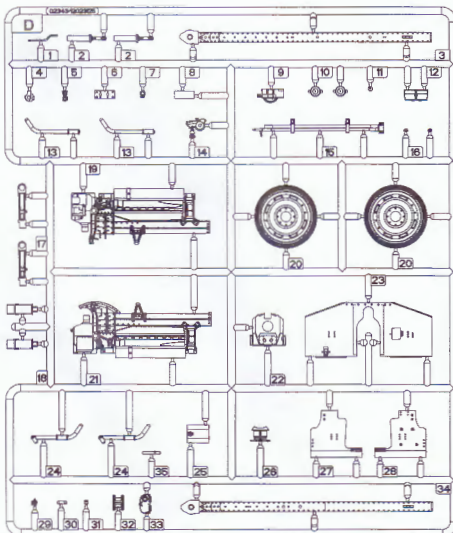

JX1

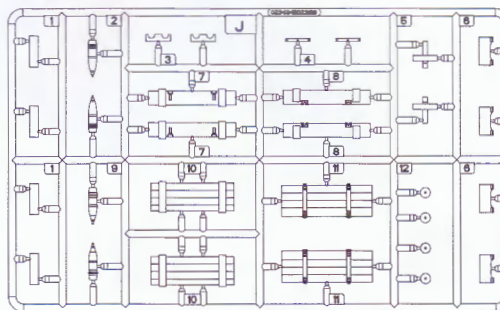

《蚀刻片 A》
PE-A

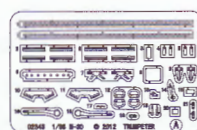


《蚀刻片 C》
PE-C




《水贴纸》
Decal




1

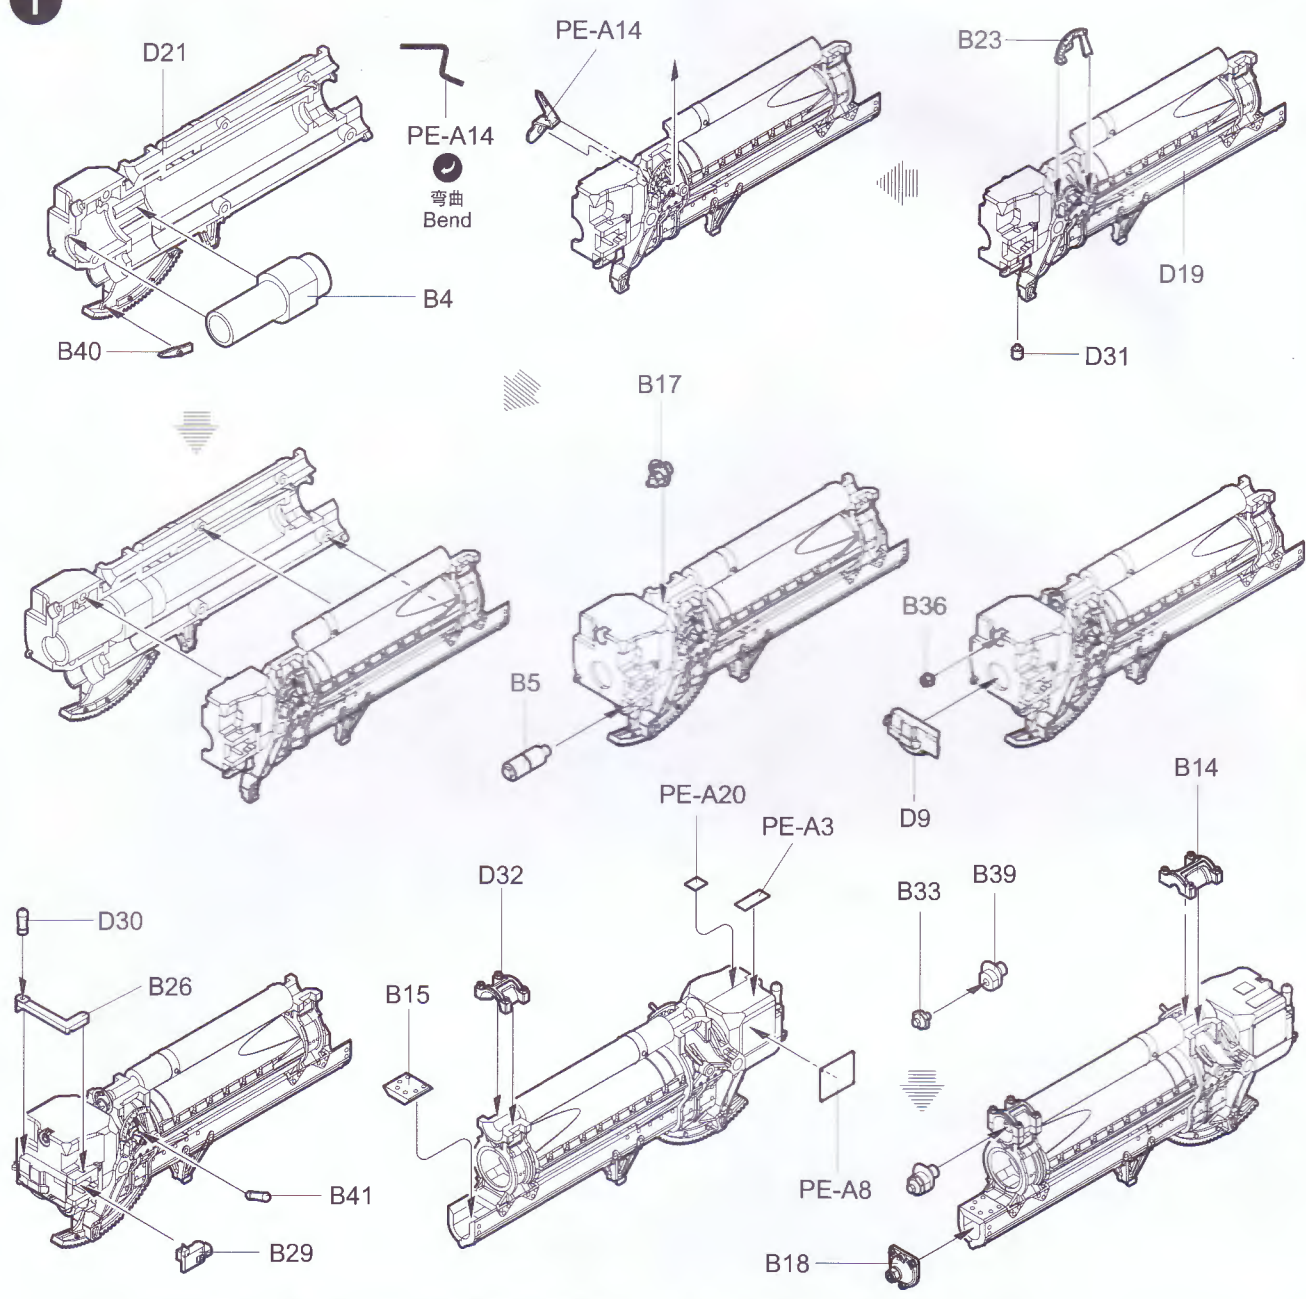


2

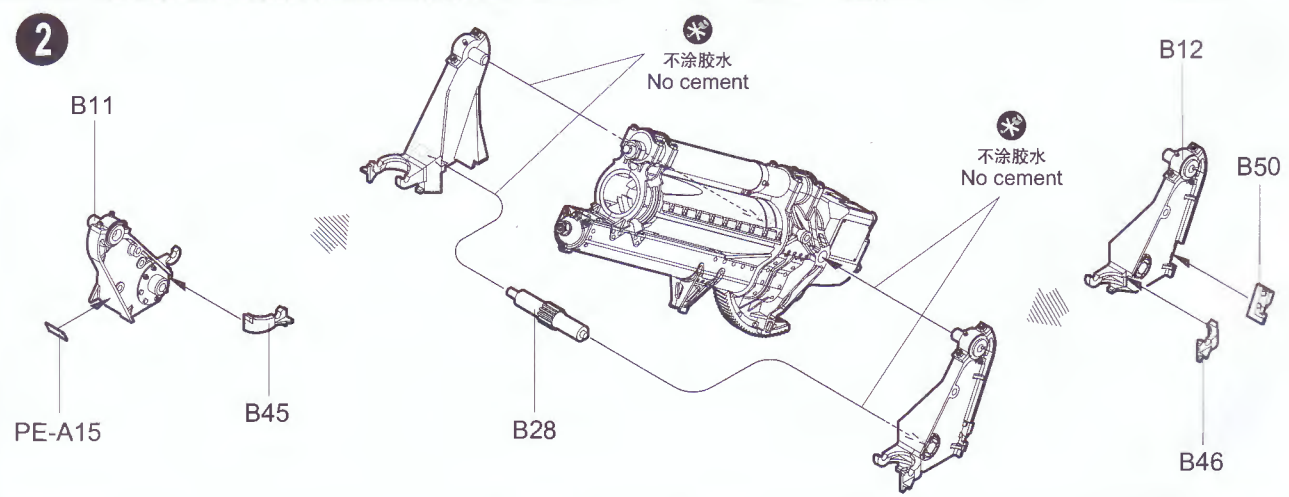


3

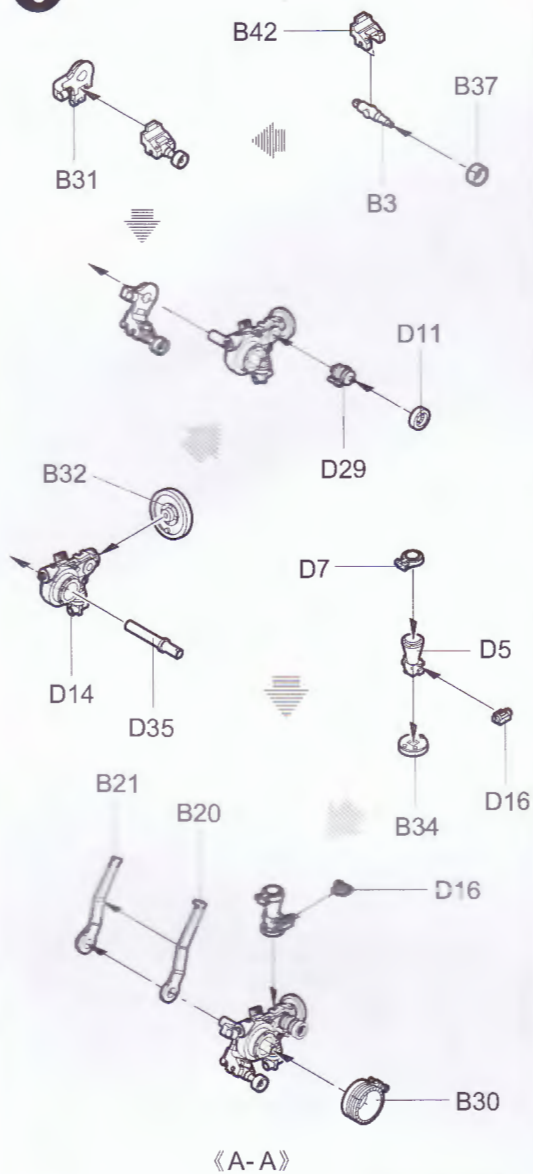

4

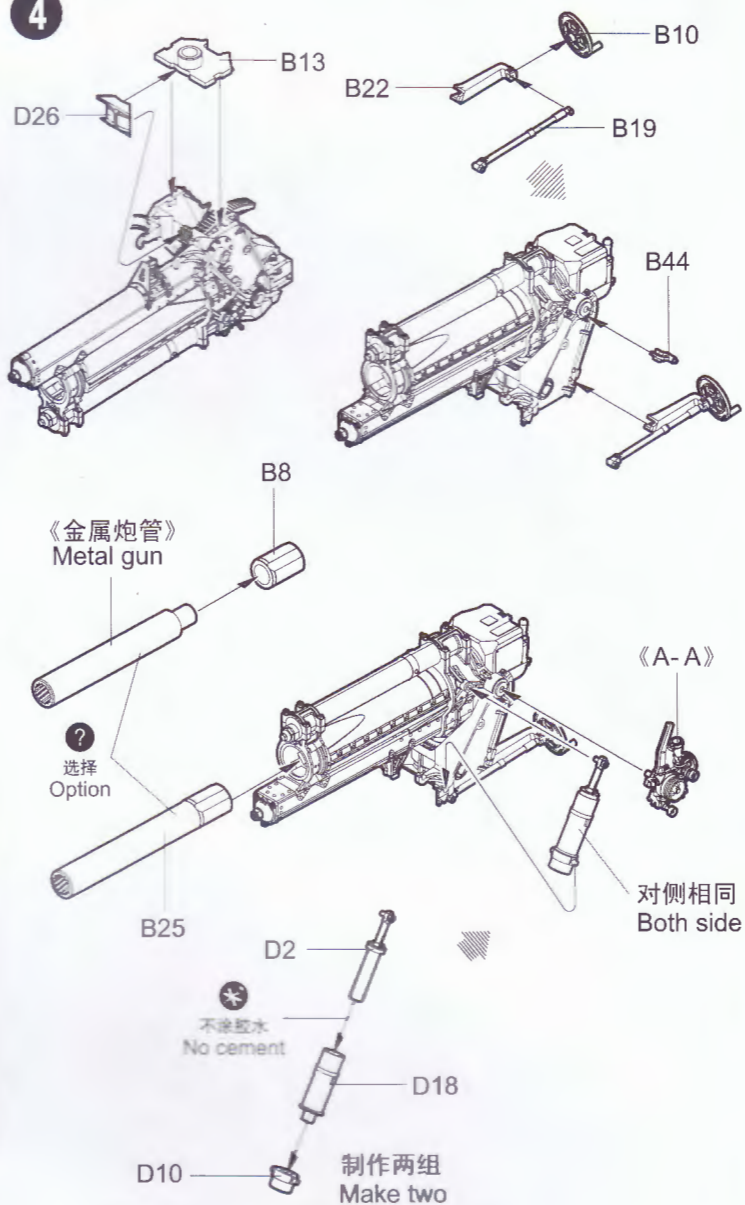


5

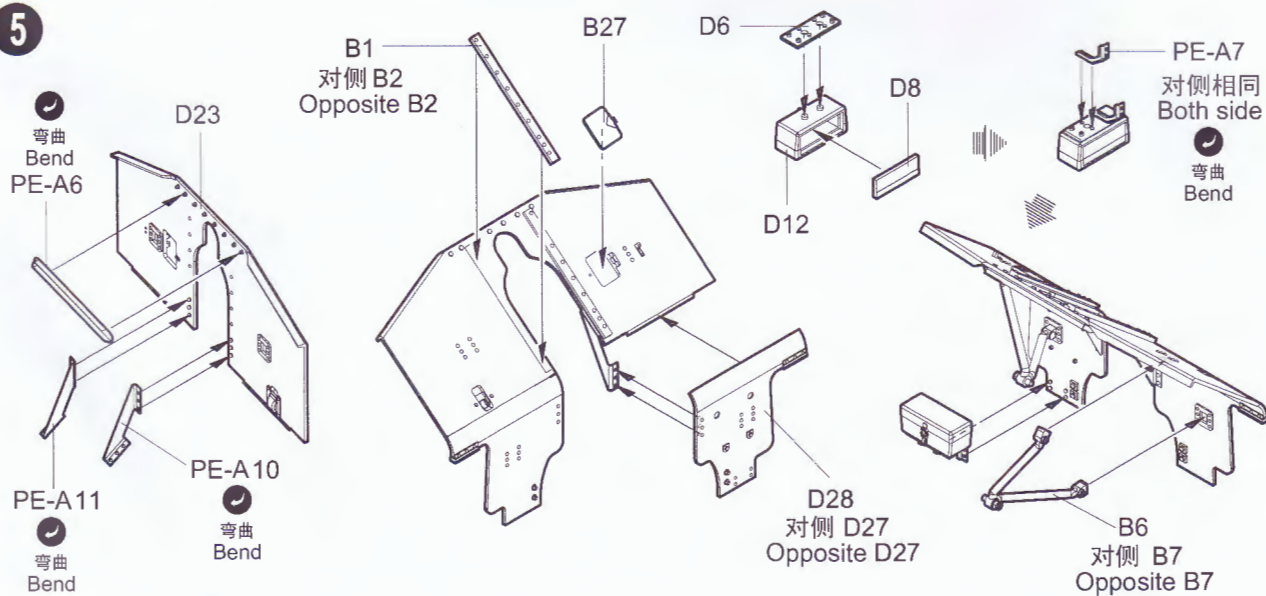

6


Sprue B

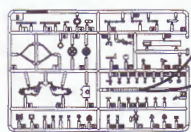


切下
Cut / Remove

《金属片》
Sheet metal


② X4

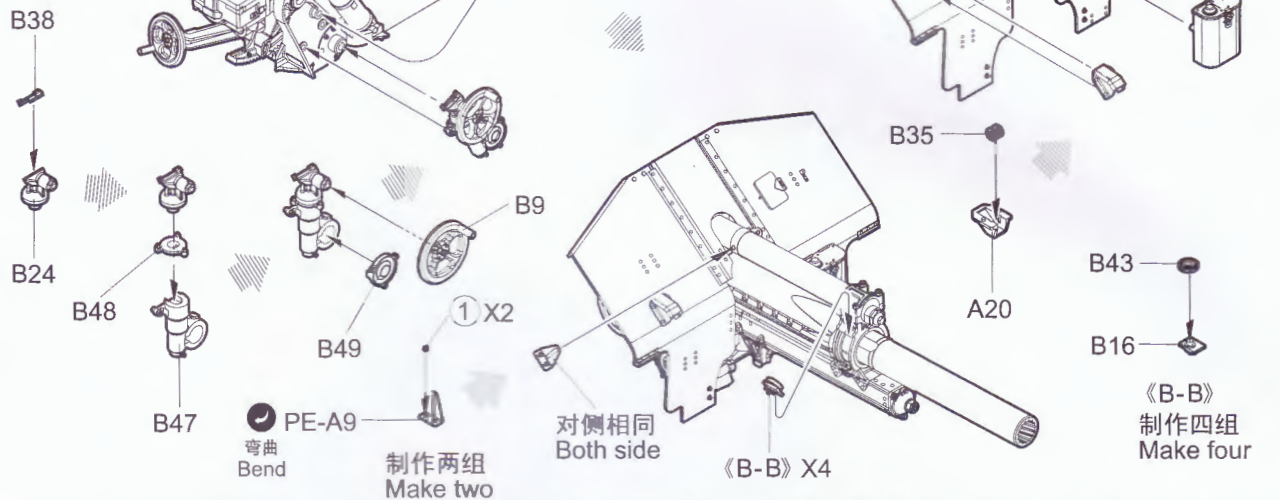


7

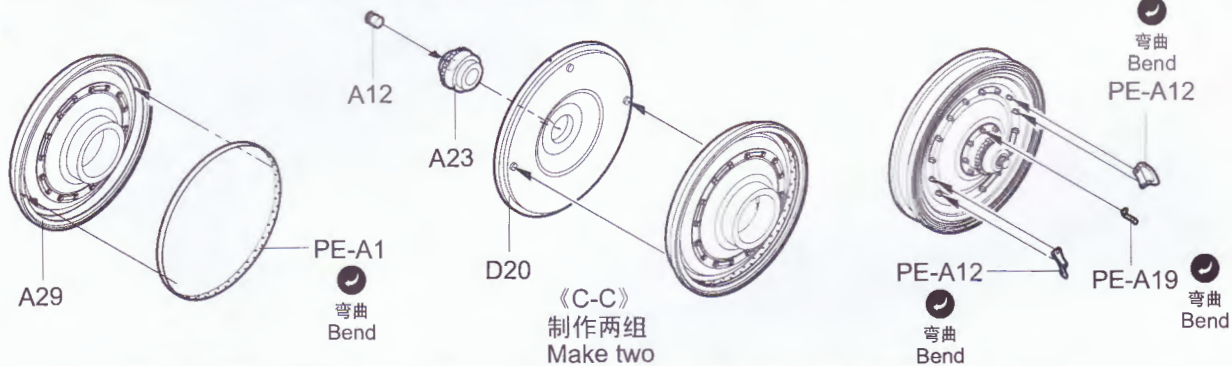


8

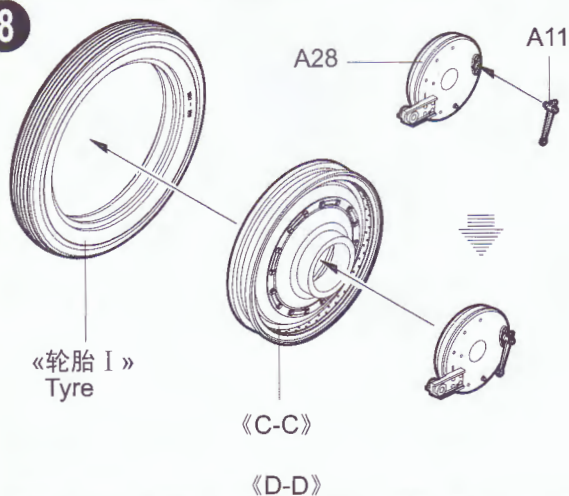


9

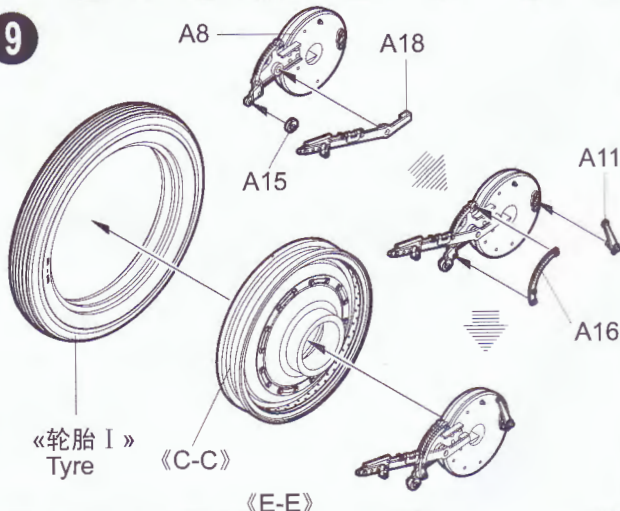


10

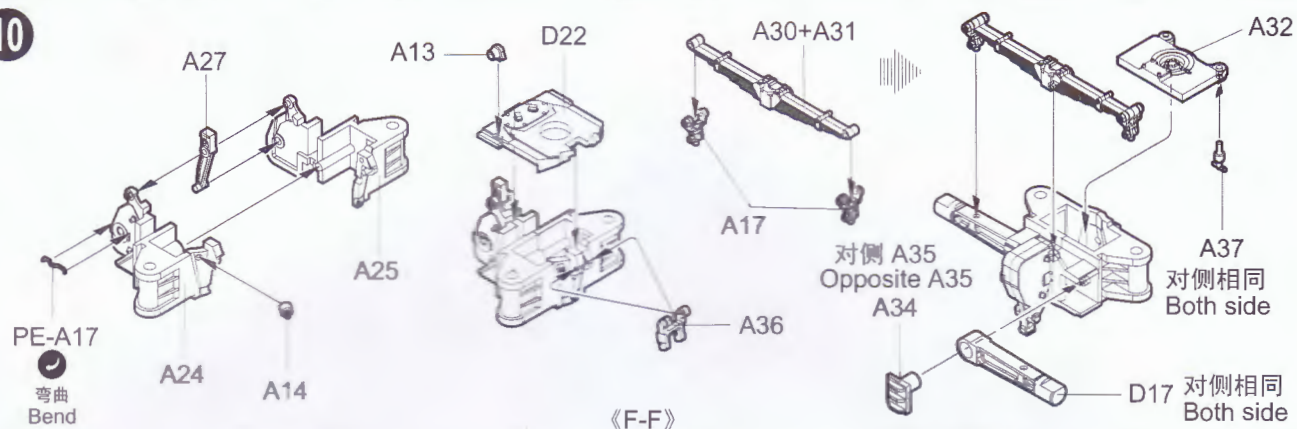


11

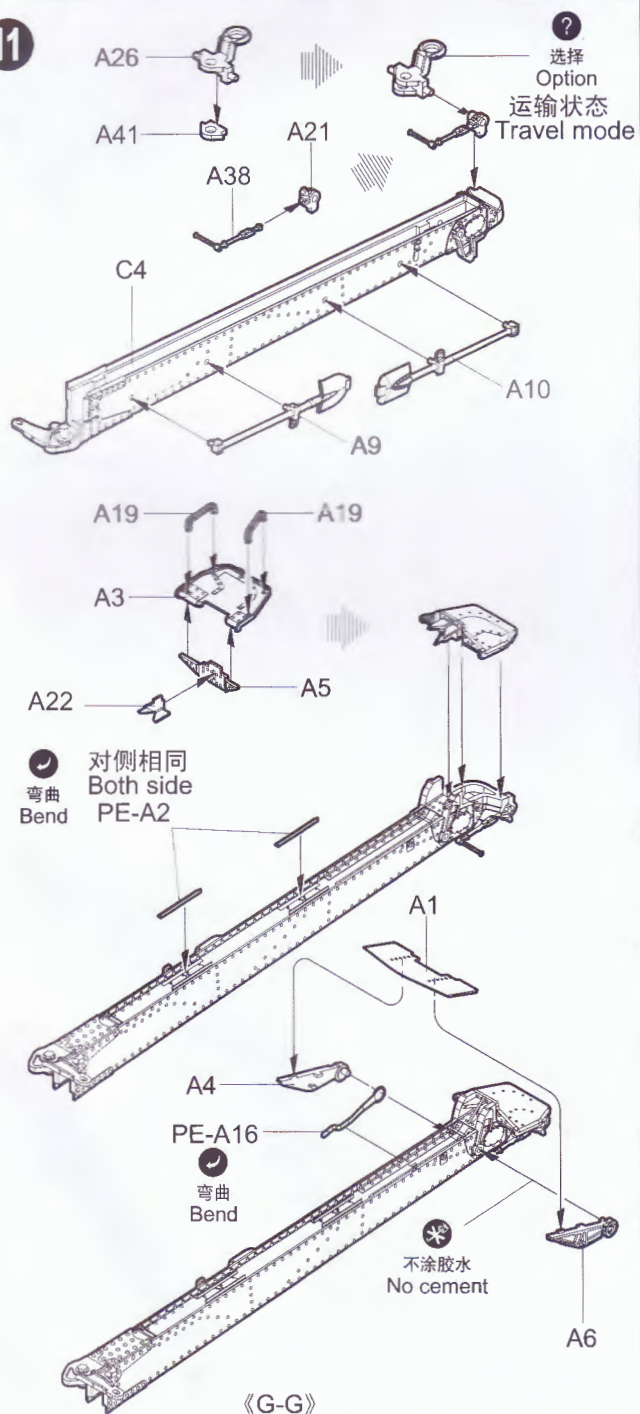


12

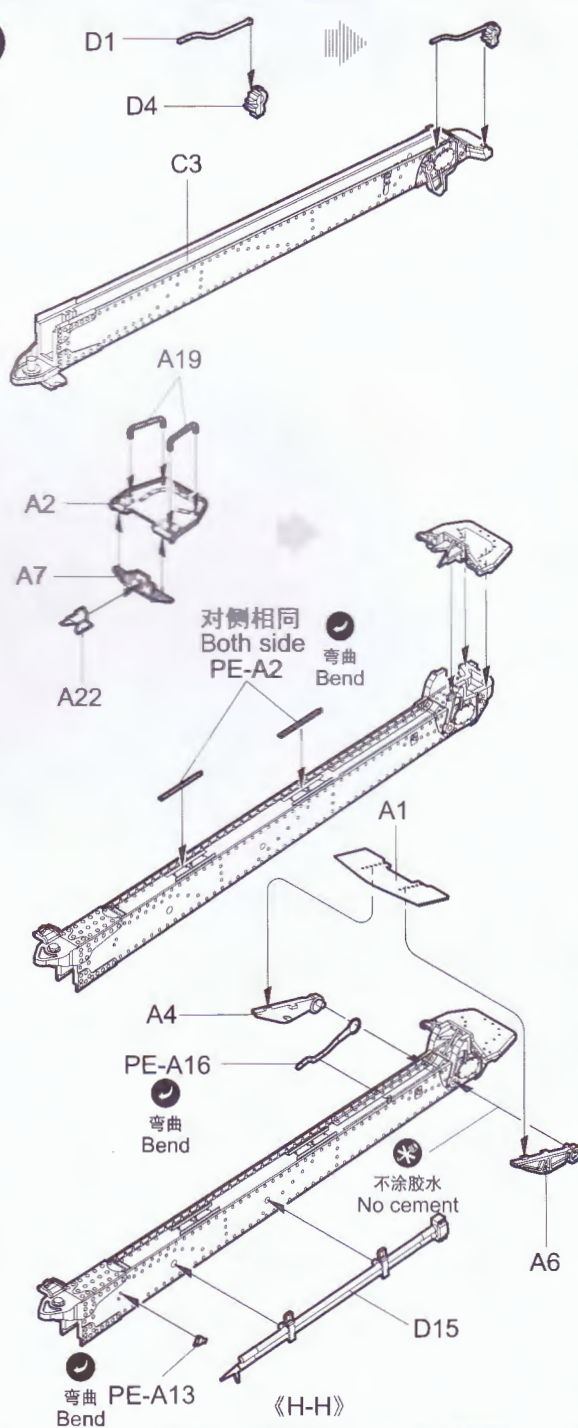


13

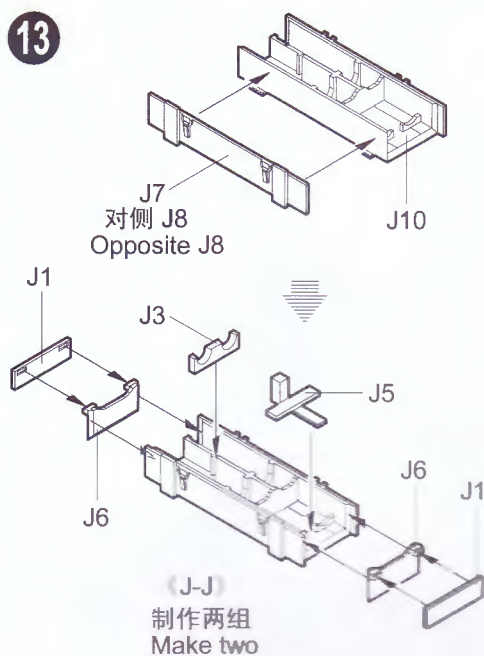


14

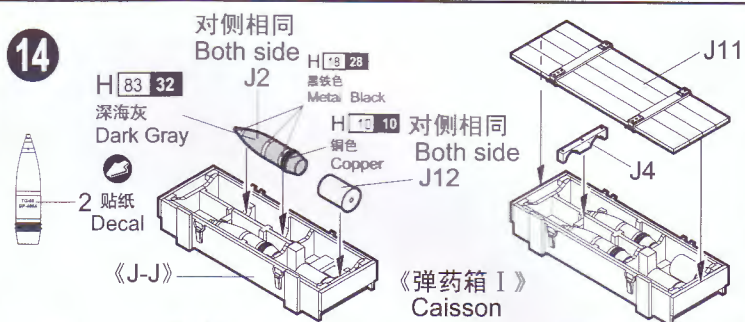


15

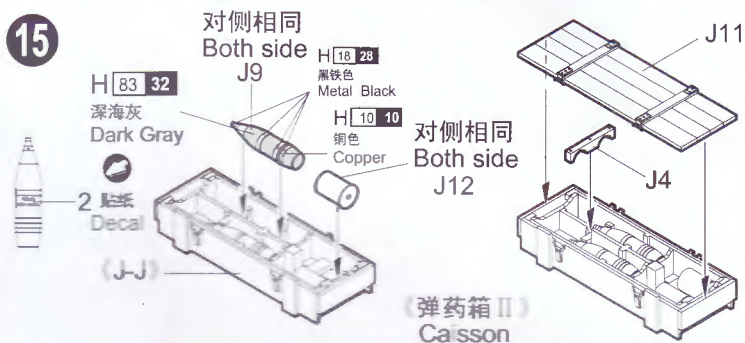


16

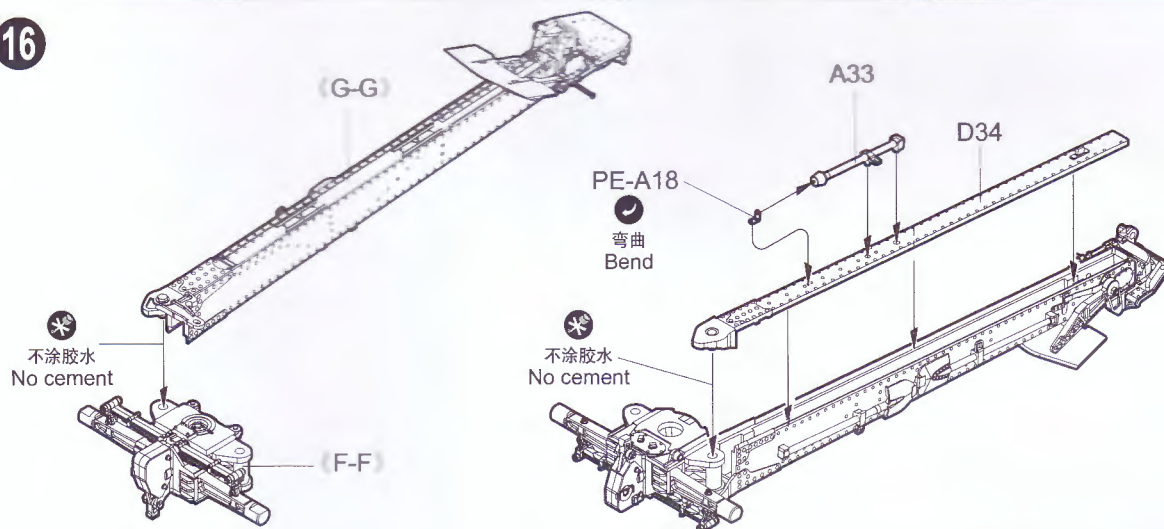

17

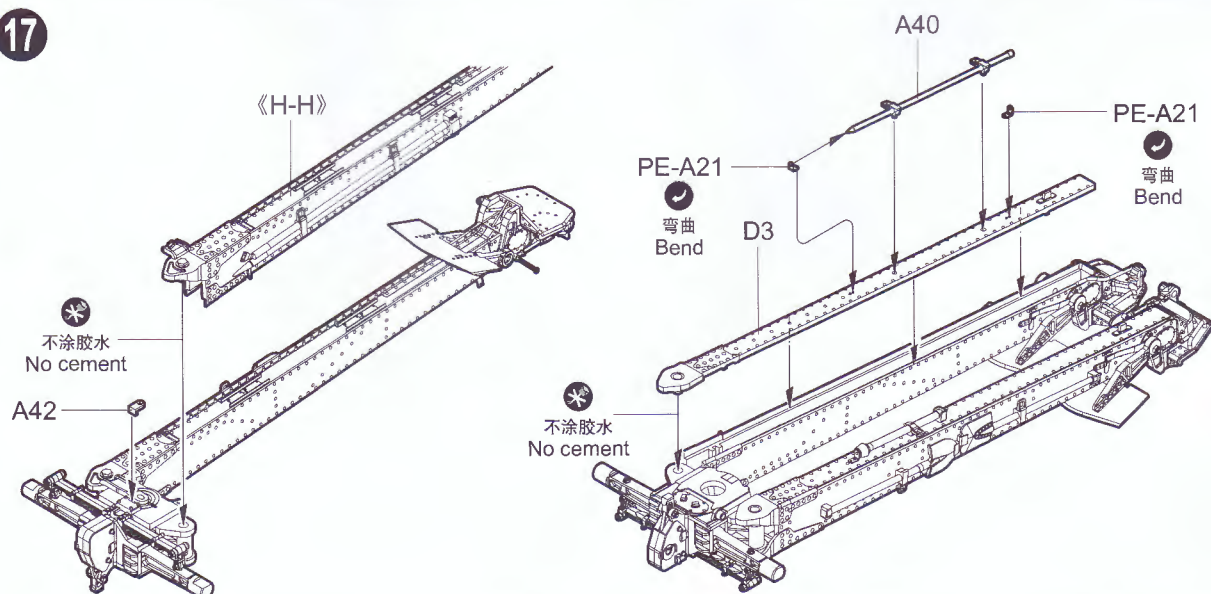


18

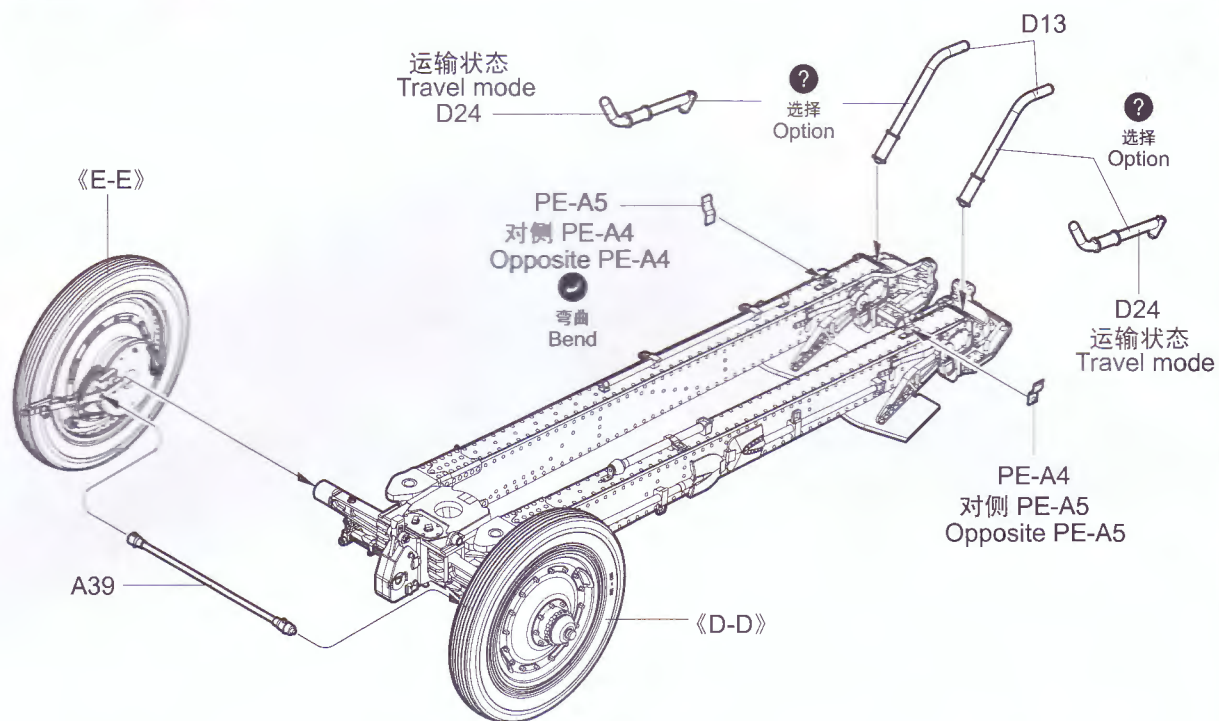


19

作战状态
Combat mode

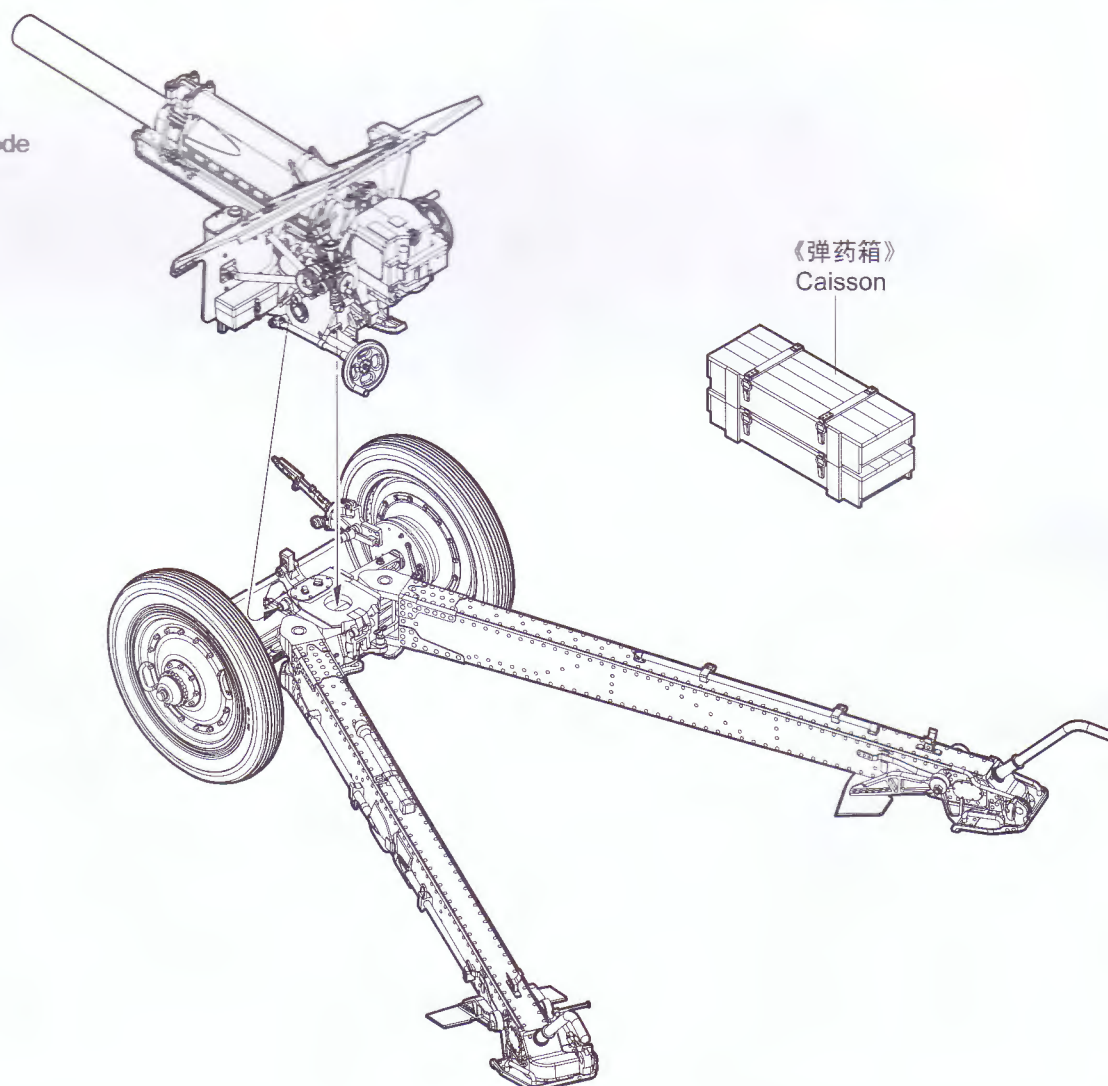


20

对侧 F12
Opposite F12

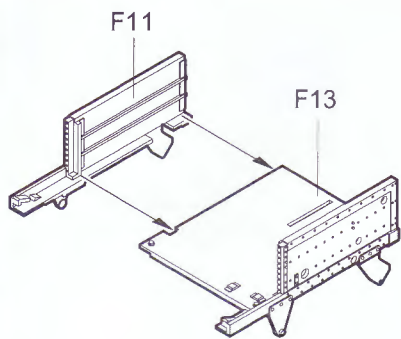


G11

F10

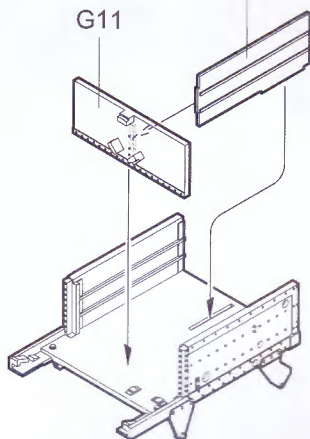

弯曲
Bend
PE-C1X6


G10

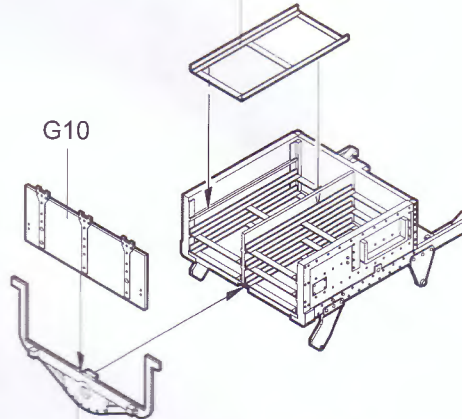


对侧相同
Both side
PE-C4



G9

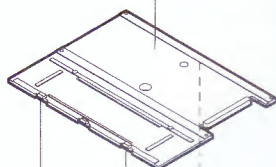


F6

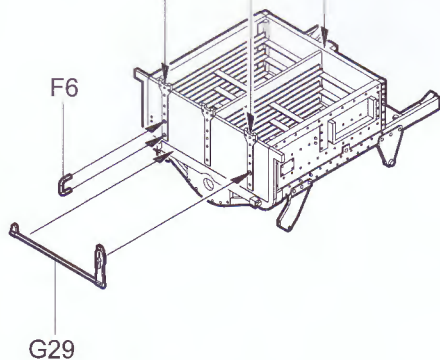

G31

F15

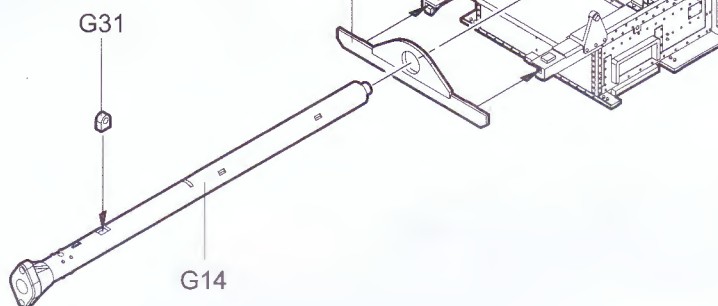


G14

G30

G19


不涂胶水
No cement

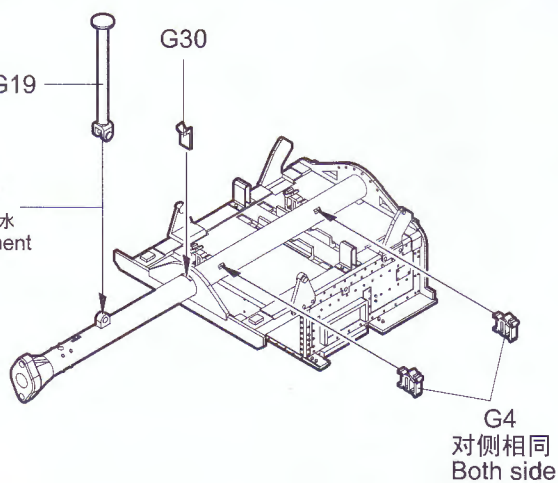

G4
对侧相同
Both side

G16
对侧 G17
Opposite G17


G17
对侧 G16
Opposite G16

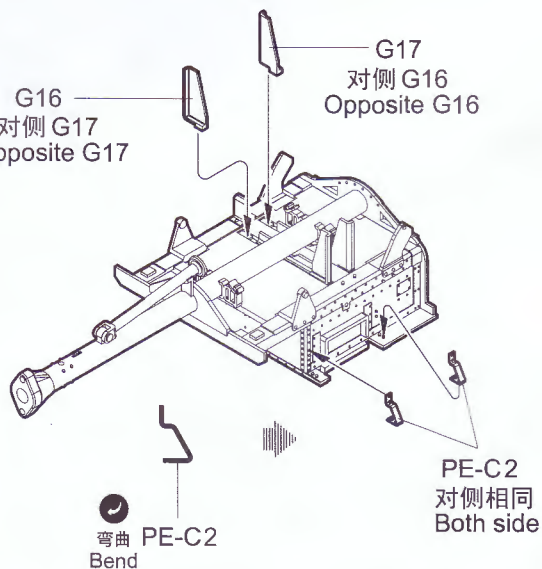


弯曲
Bend
PE-C2

PE-C2
对侧相同
Both side


21

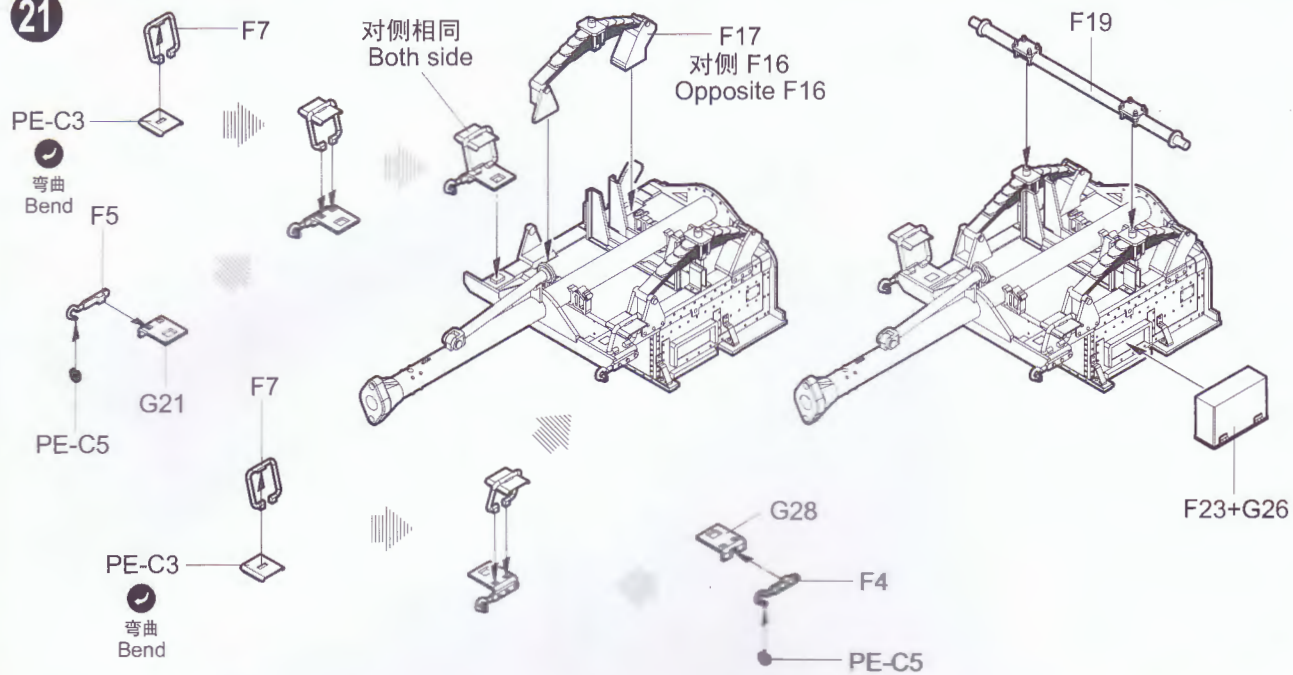


22

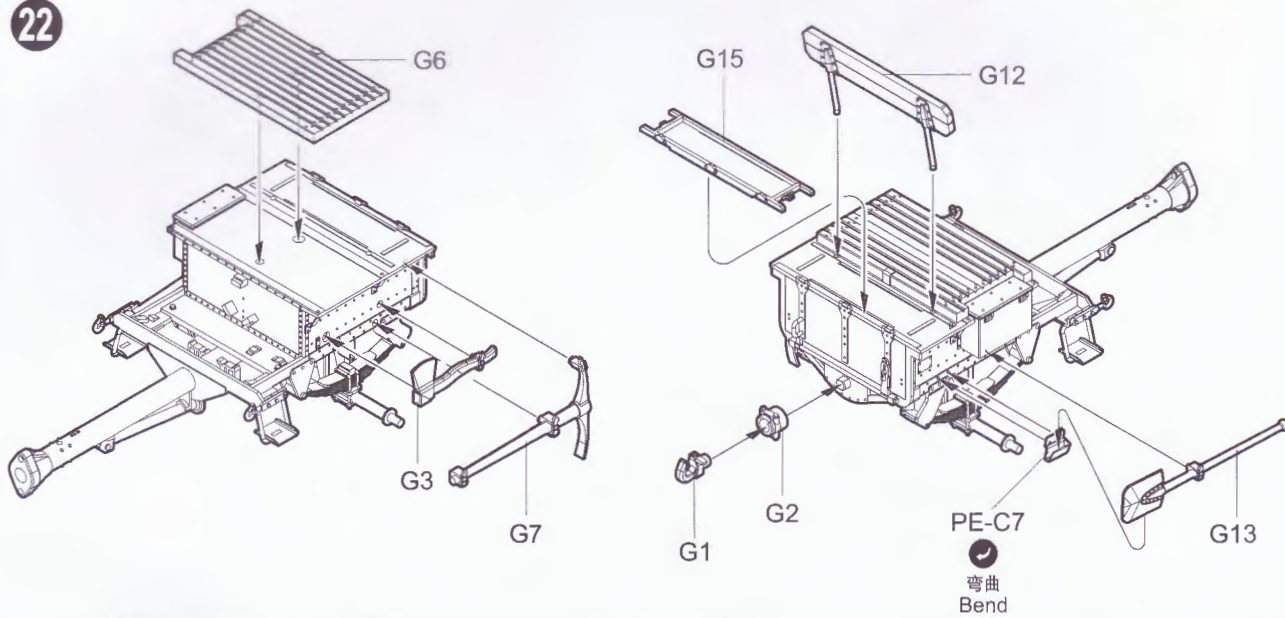


23

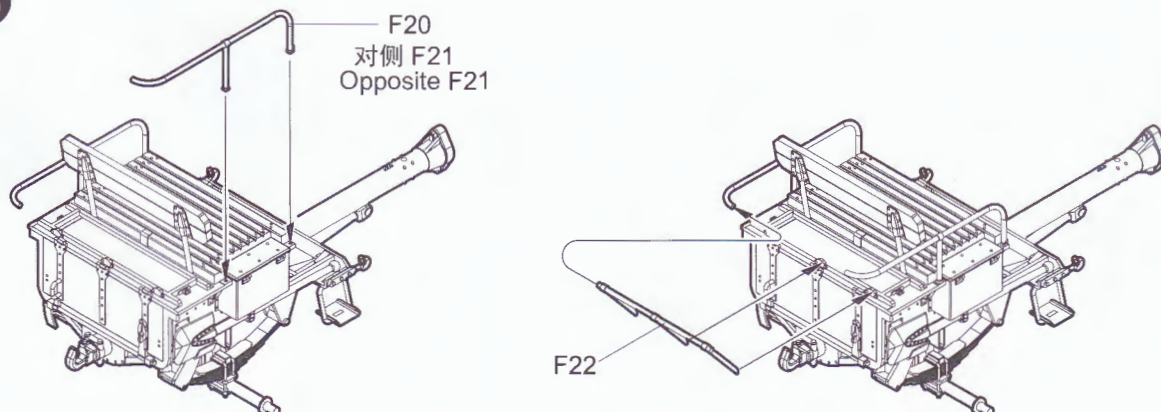


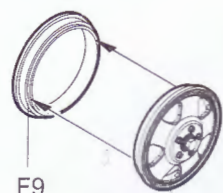


F9

F8

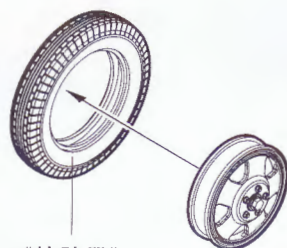《轮胎 II》
Tyre制作两组
Make two

G25

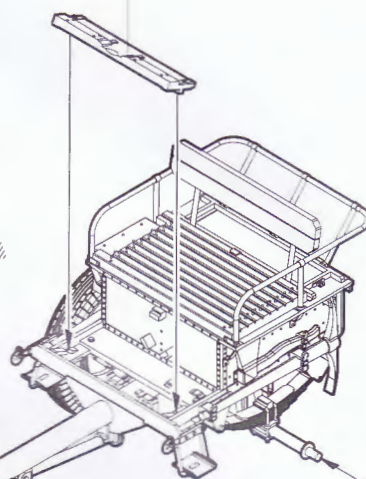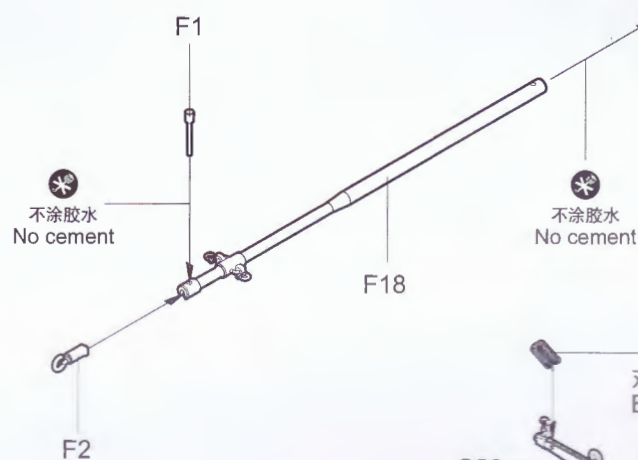
对侧相同
Both side不涂胶水
No cement不涂胶水
No cement

F18

F2


G22
对侧相同
Both side

G20

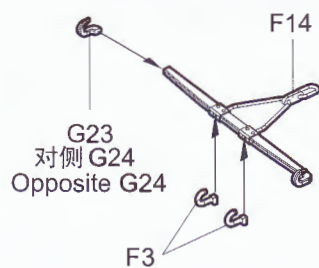G23
对侧 G24
Opposite G24

F3


F14

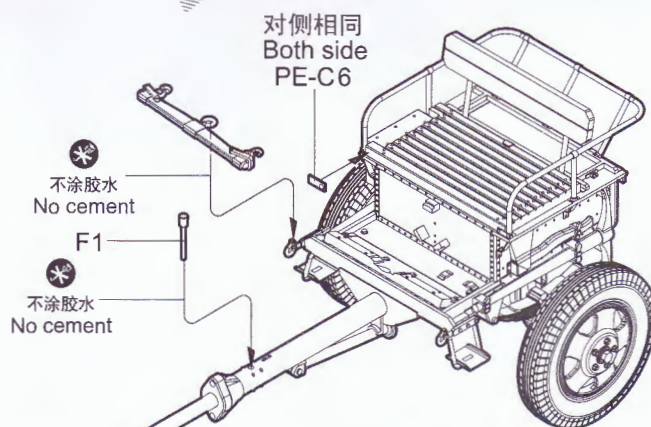对侧相同
Both side
PE-C6不涂胶水
No cement不涂胶水
No cement

F1


不涂胶水
No cement

25

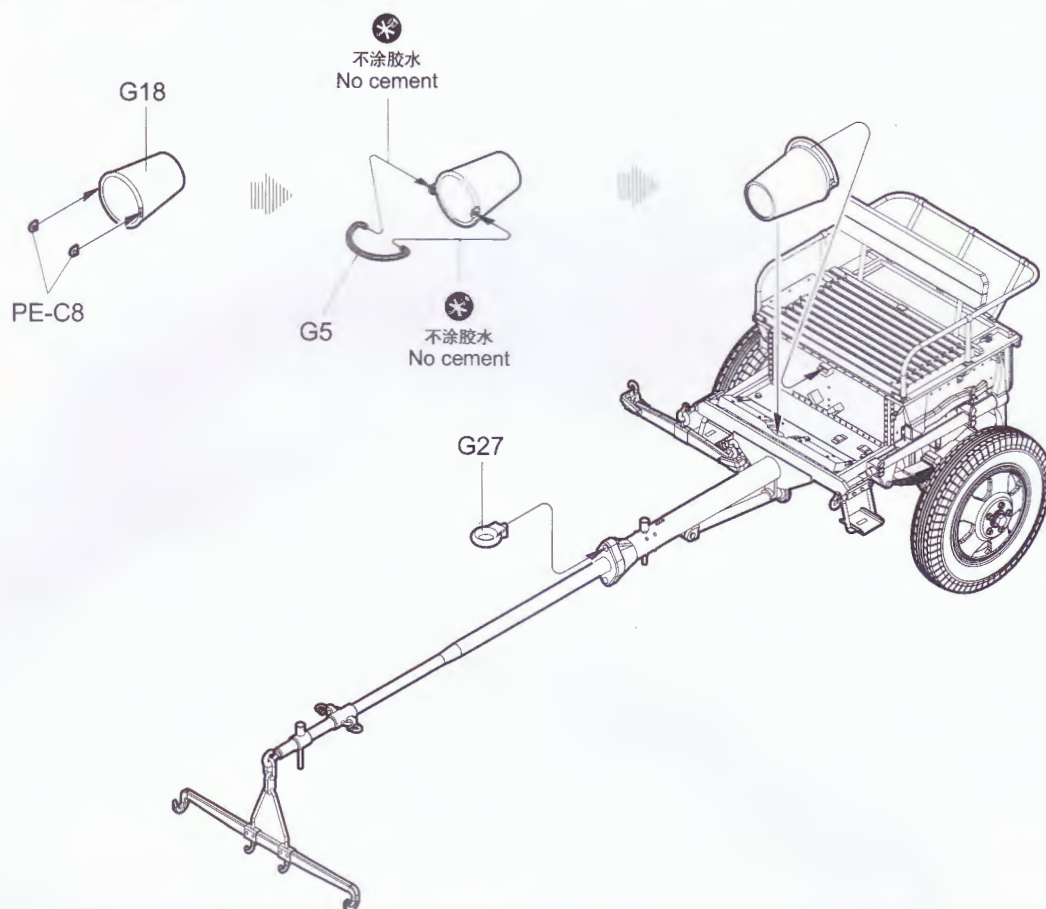


26

运输状态
Travel mode

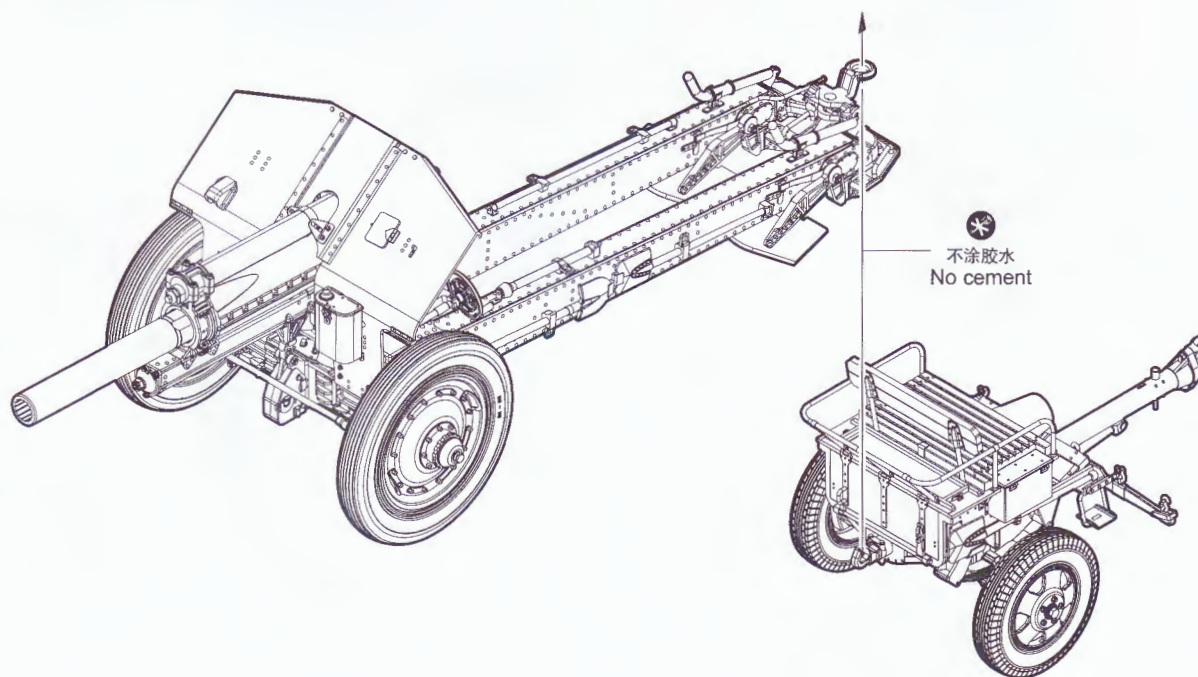

涂装同标贴指示 Painting & Marking guide

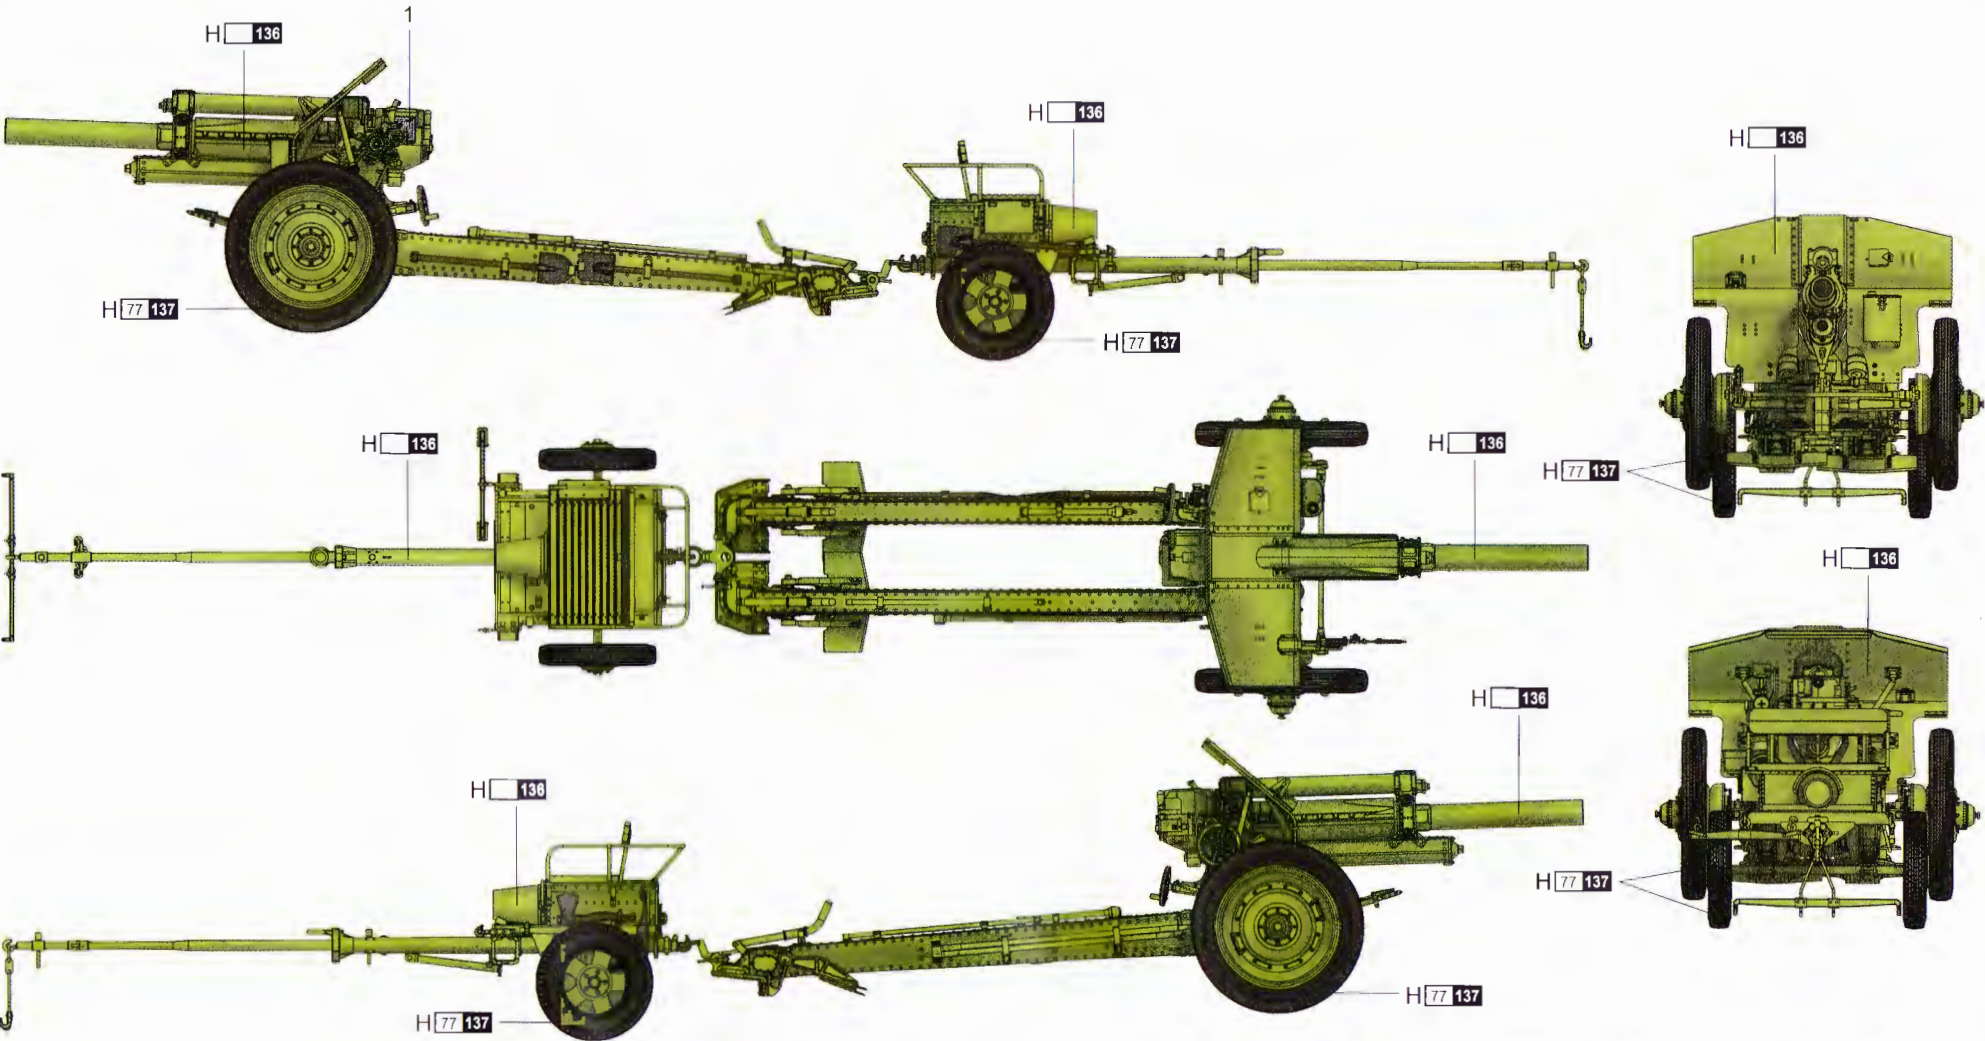

H ☒ AQUEOUS HOBBY COLOR ■ Mr. COLOR

PAINT REFERENCE COLOUR					
Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
Tire Black 胎黑色	H 77 137	--	--	--	--
Russian Green 苏式绿	H 136	823	--	--	--