






READ THIS BEFORE YOU BEGIN

AMT kits are molded from the finest High-Impact Styrene excess plastic from parts before joining. Use just enough cement to join parts, and be careful not to smear cement on exposed surfaces.

Look over this instruction sheet carefully before you begin building. Follow the assembly instructions and "test-fit" the parts without cementing. This will familiarize you with the location of the parts.

Built according to the instructions on this sheet, you should have no trouble assembling your model. Just FOLLOW THE NUMBERS. The parts are numbered in the order of assembly. (C) INDICATES "CHROME" PARTS.

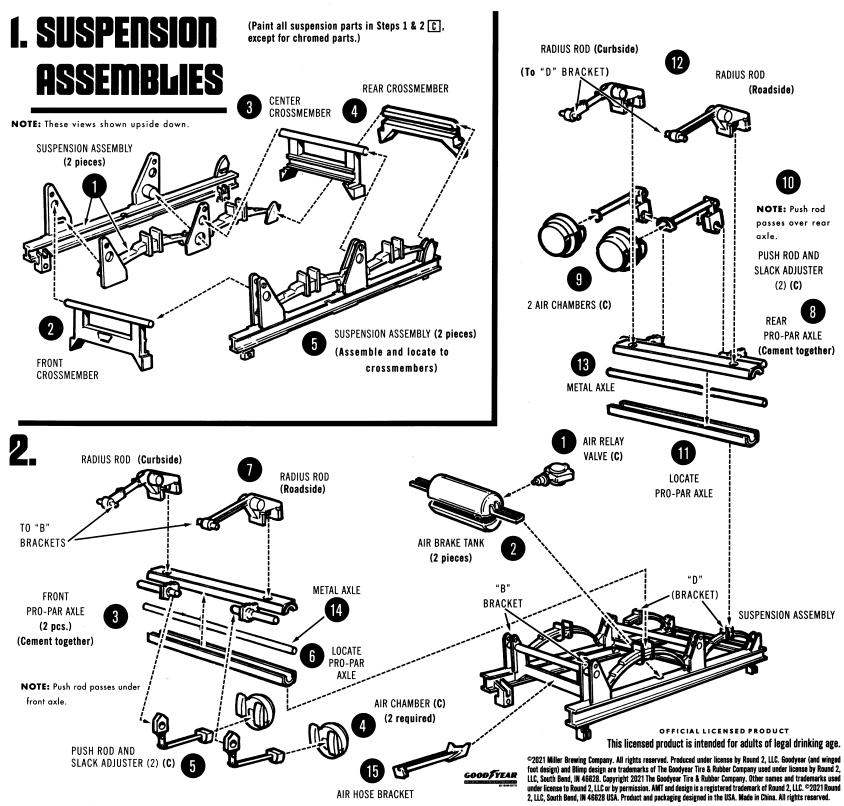

AIR HOSE BRACKET

