



**DETAILS AFTER REMOVAL
FROM SUPPORTS**

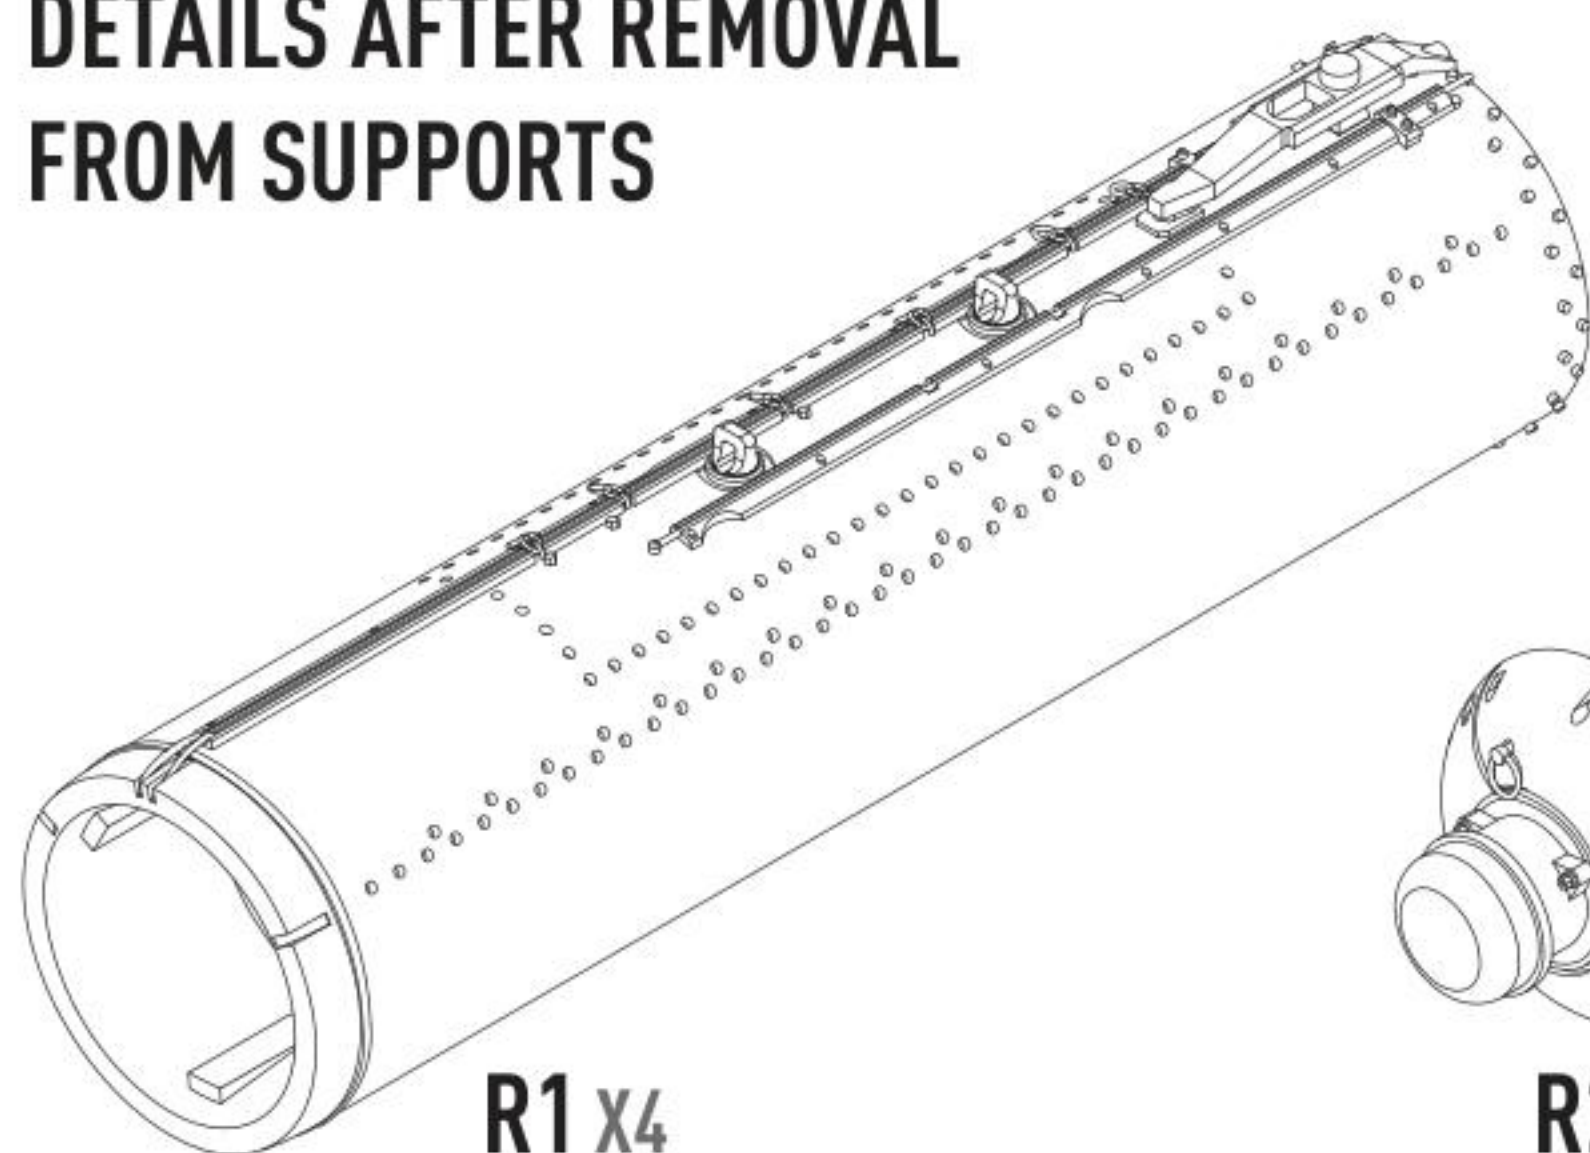


USE A SAW TO REMOVE SUPPORTS
FROM 3D PRINTED PARTS




R1 X4

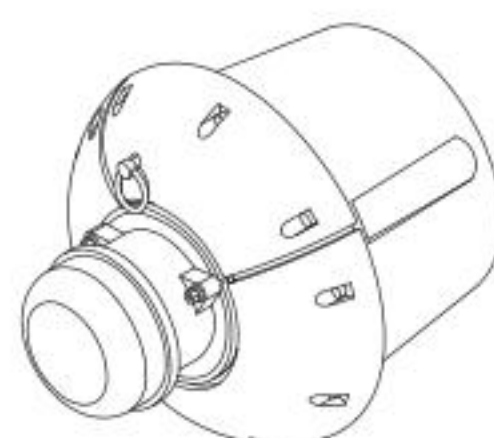

R2 X4


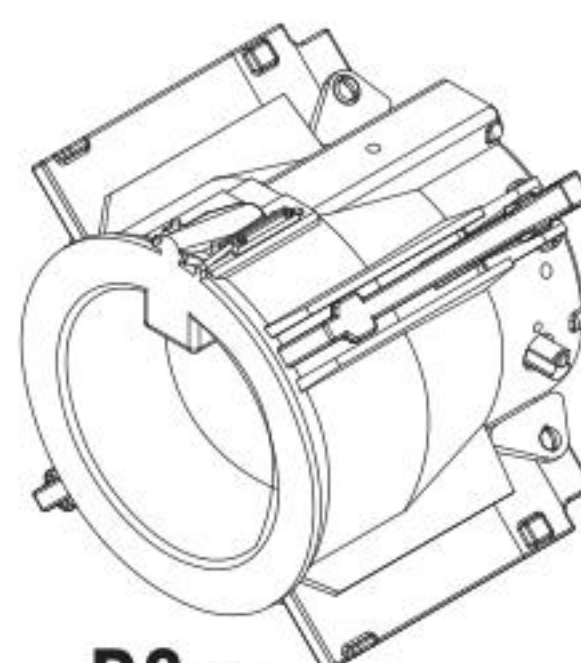





R3 X4

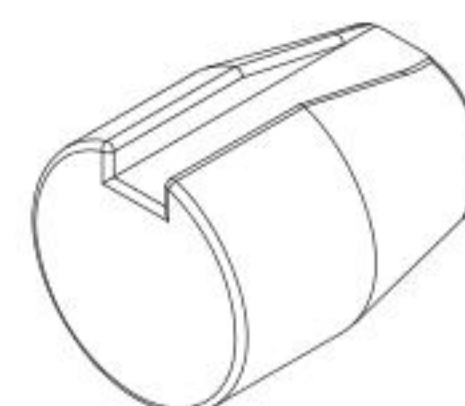

R4 X4

1 X4

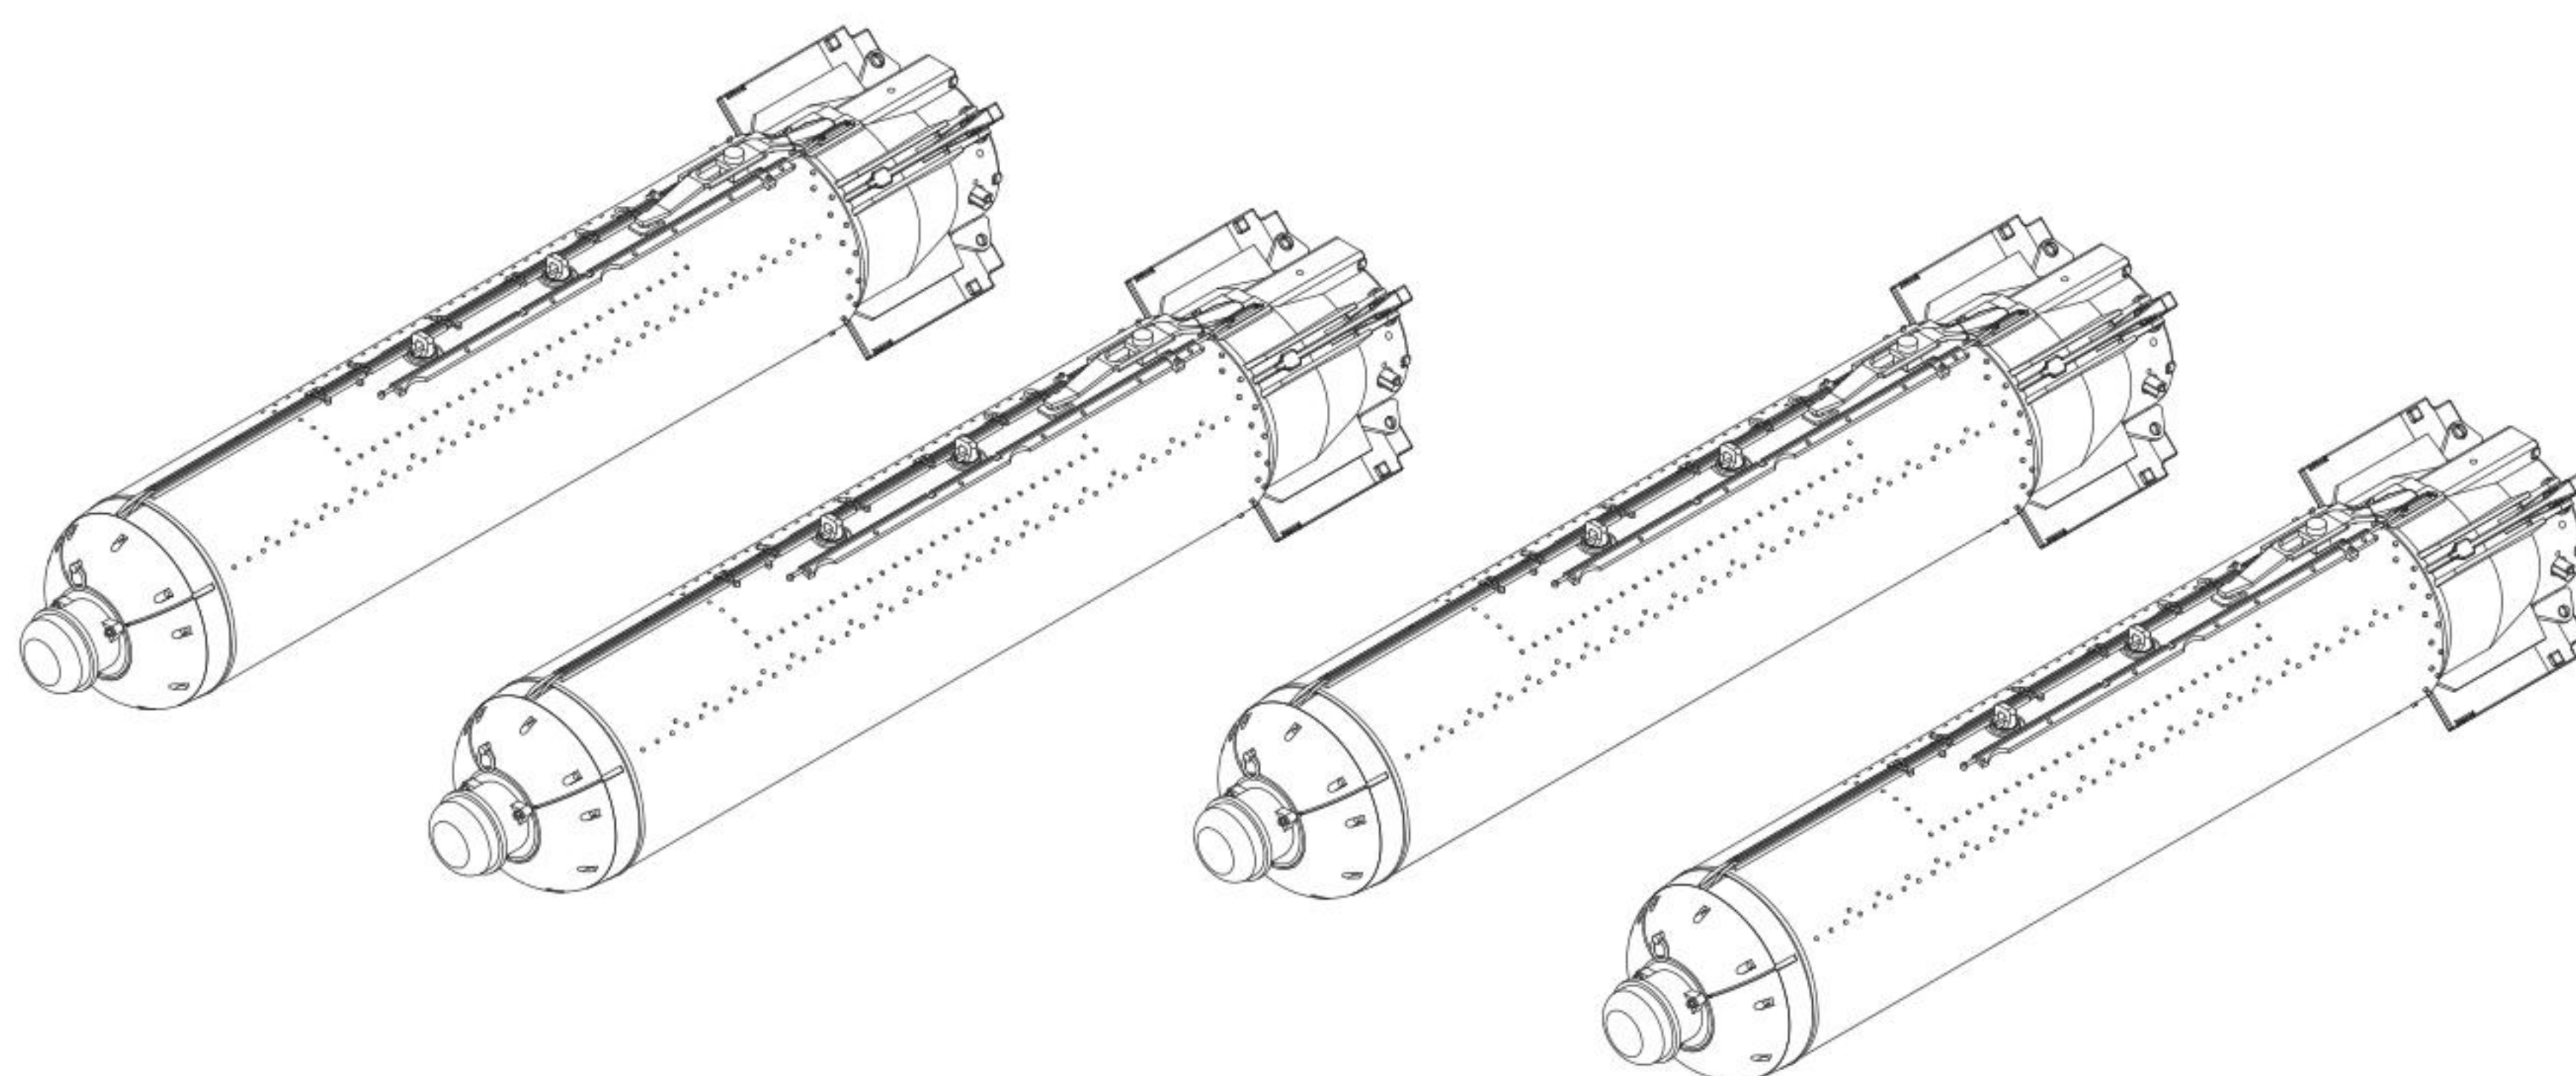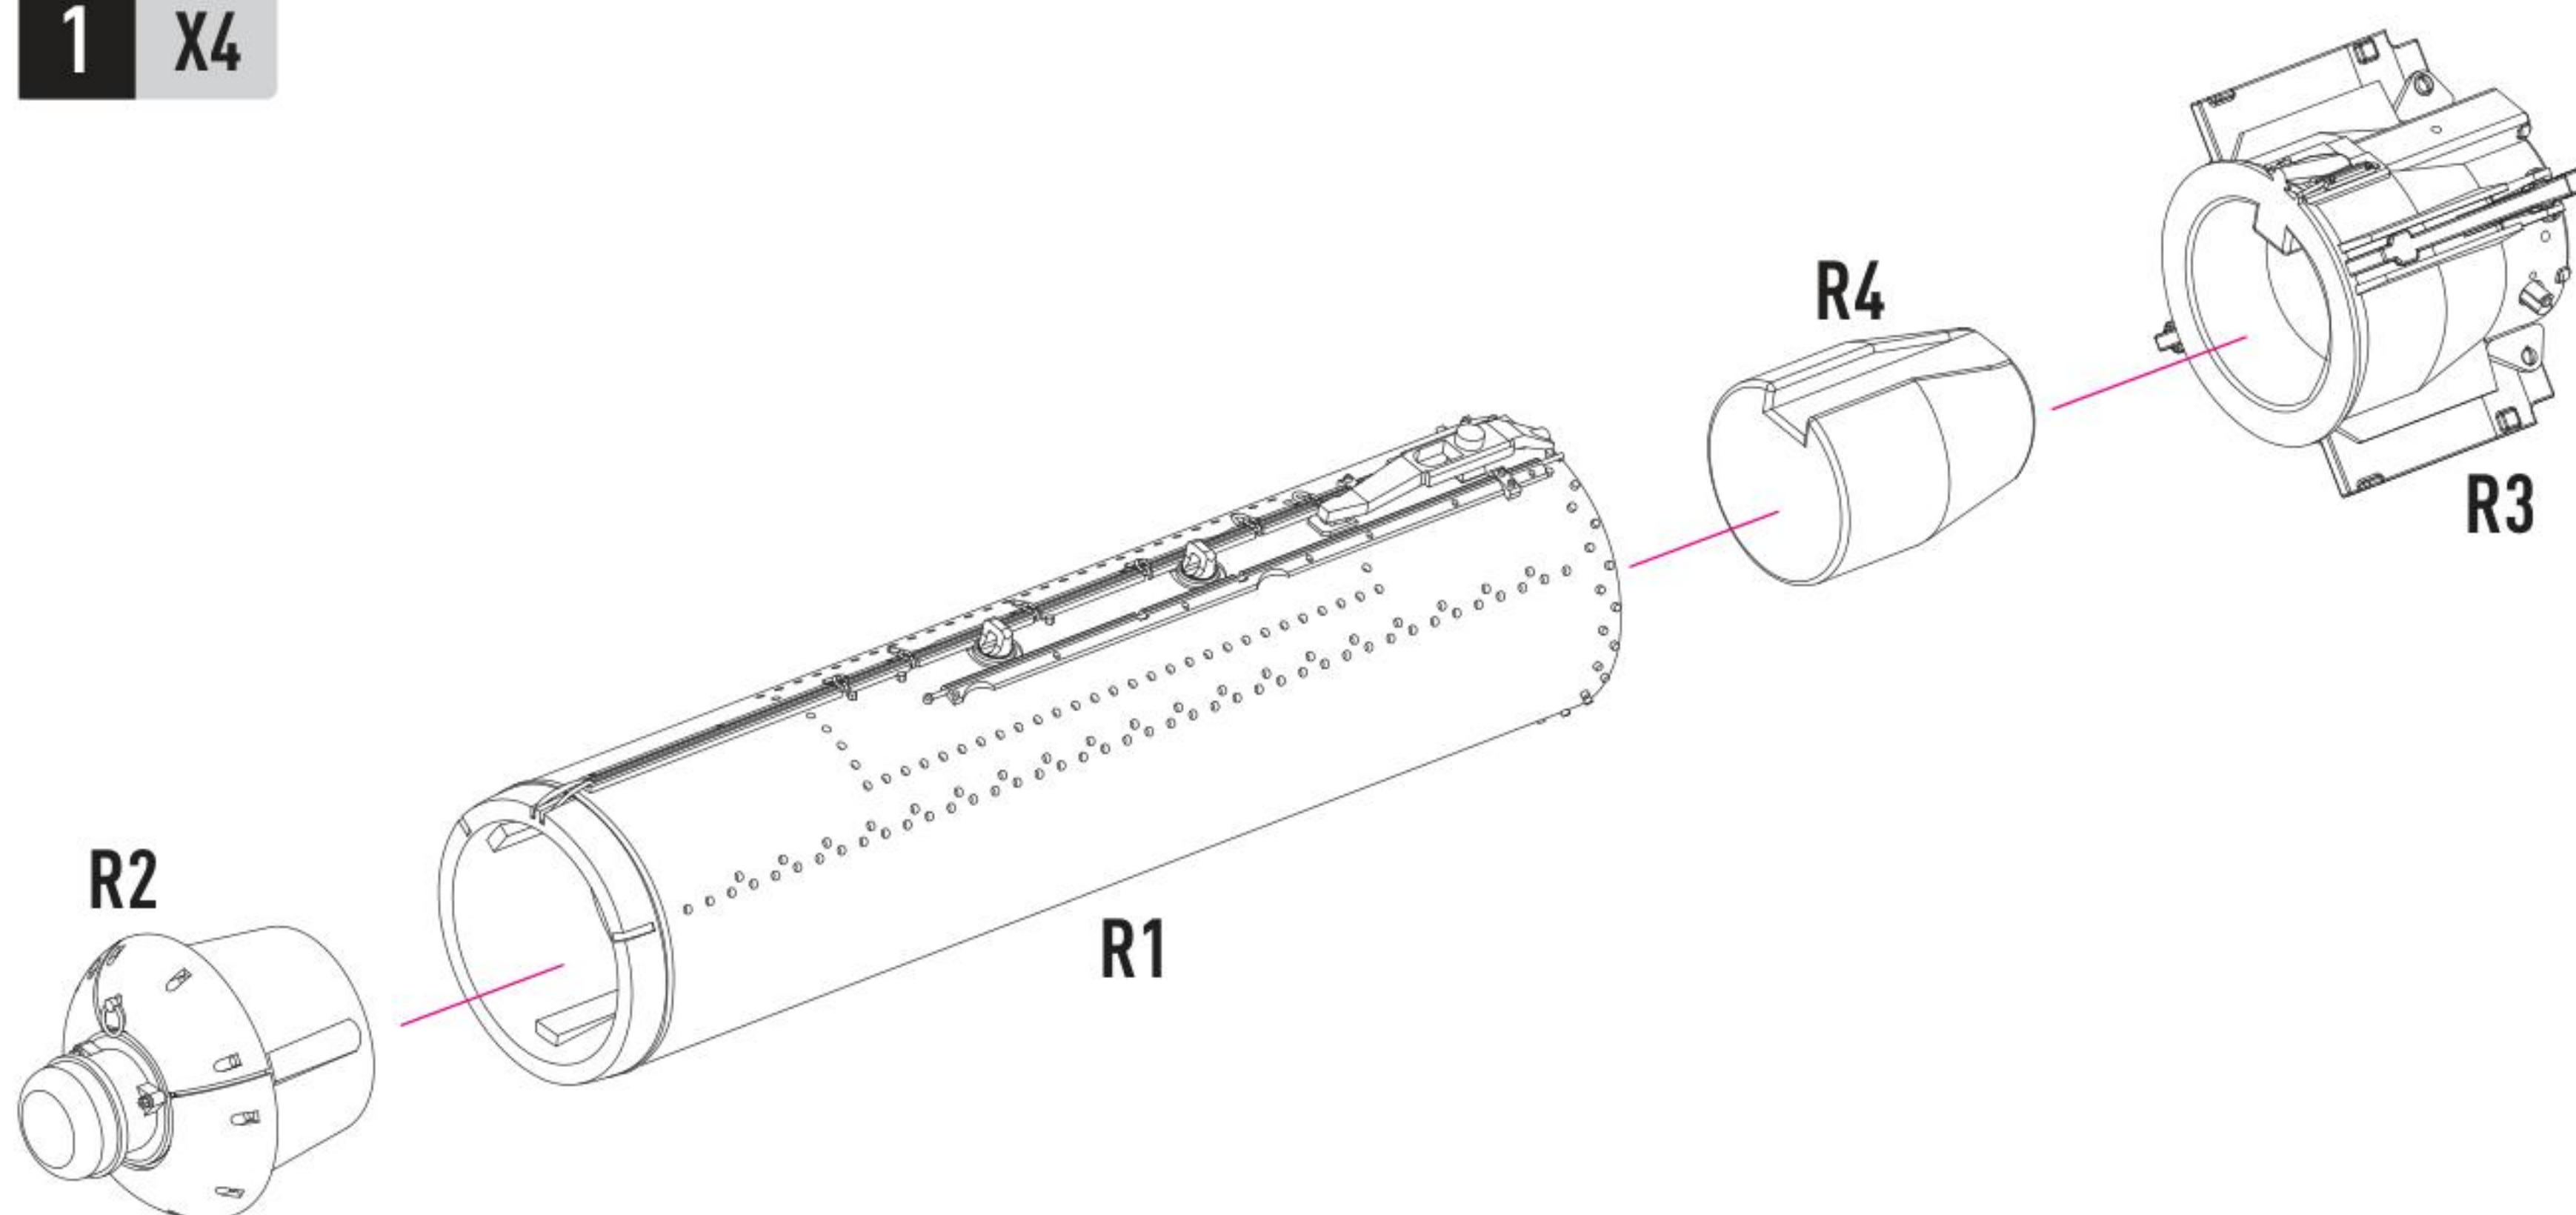

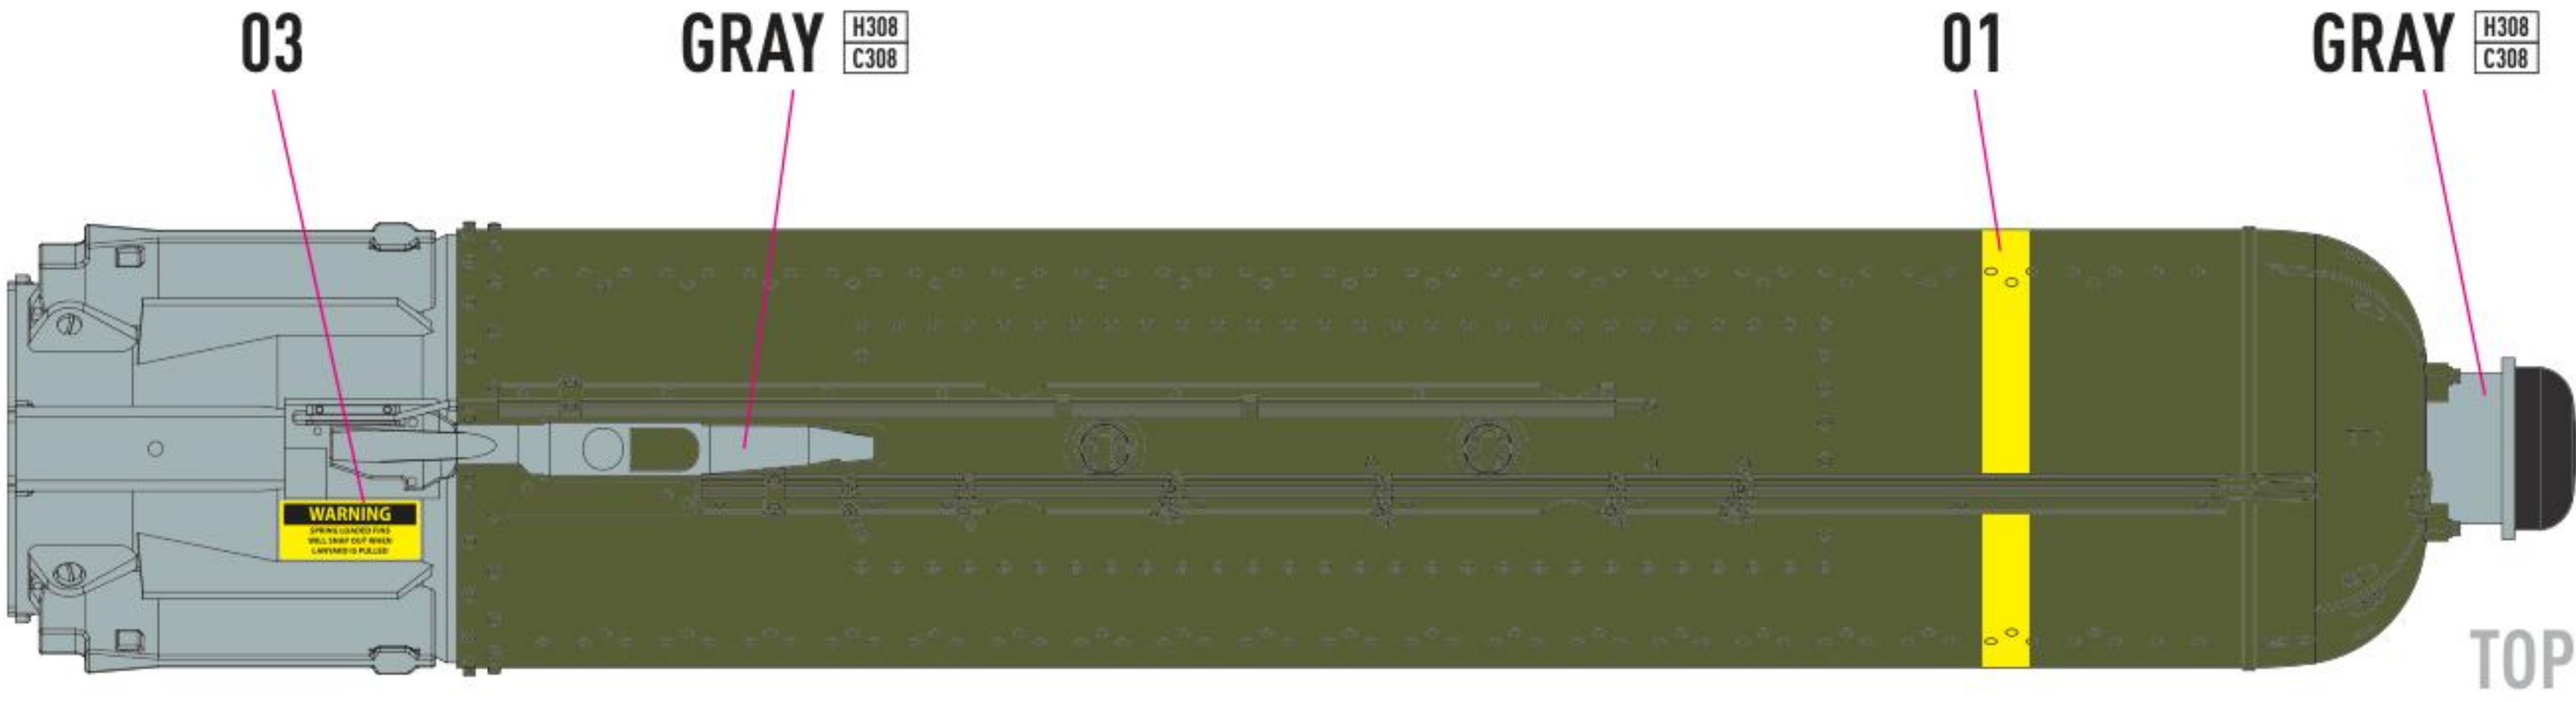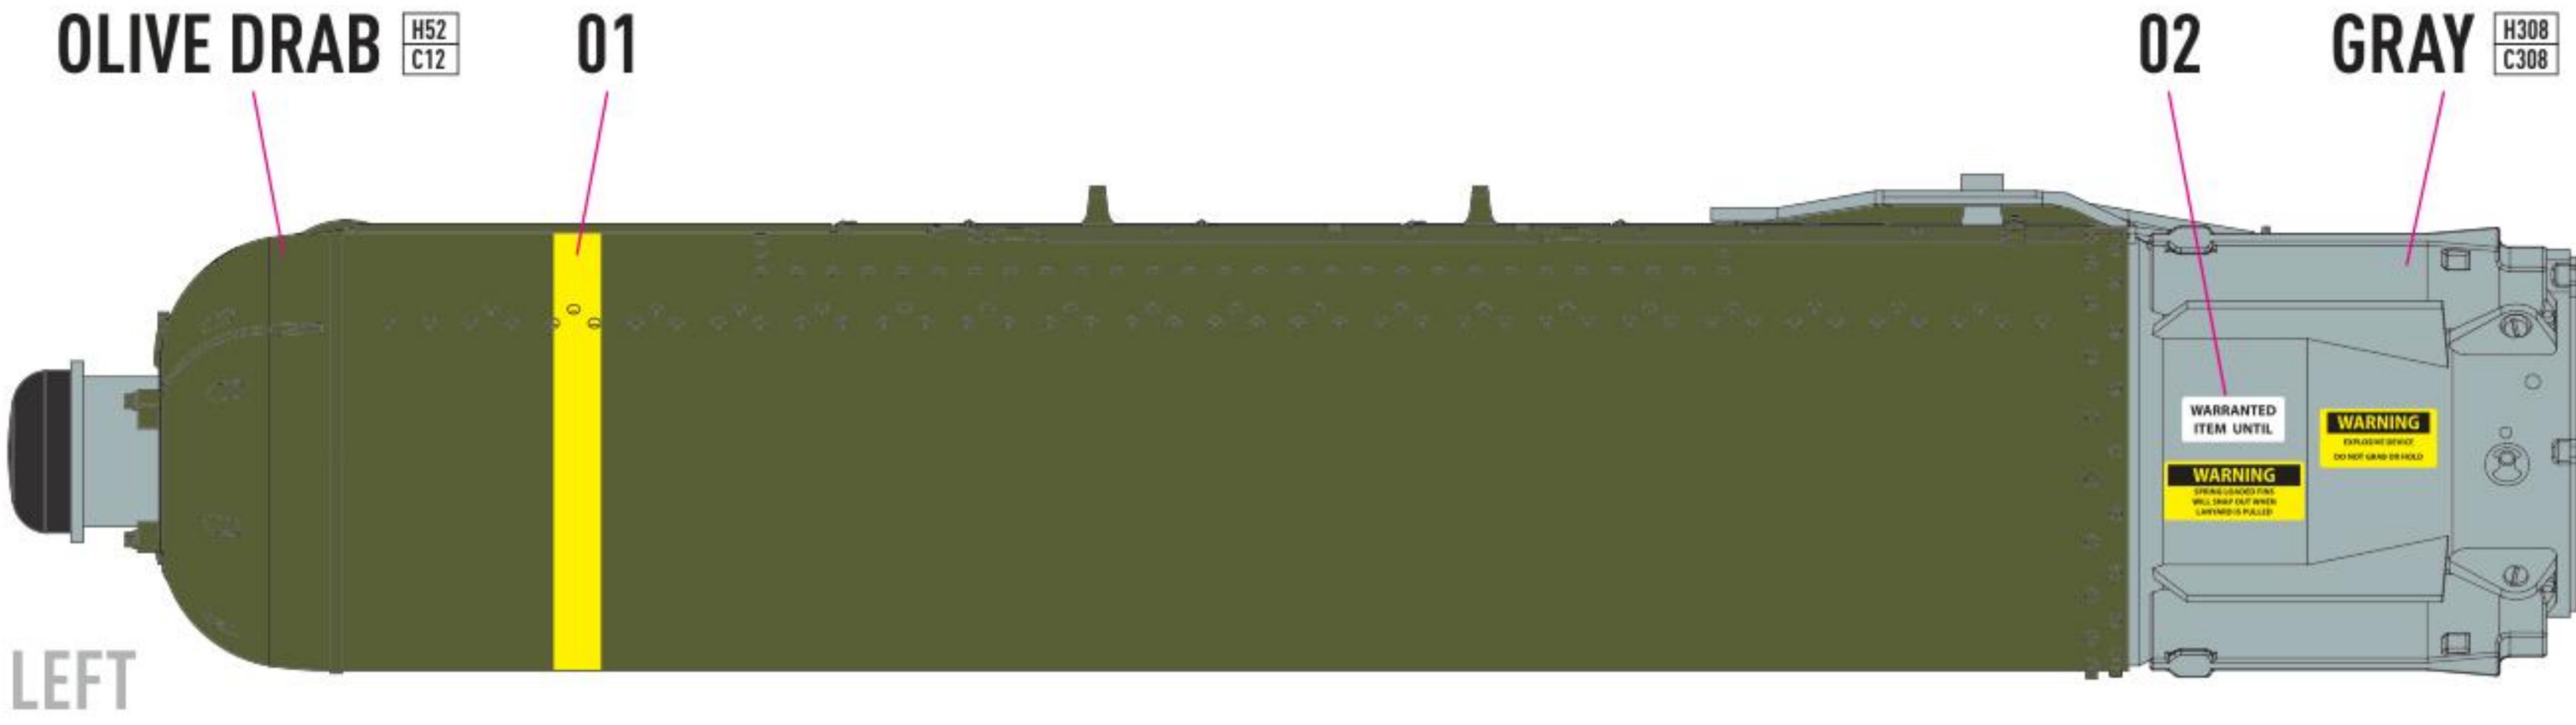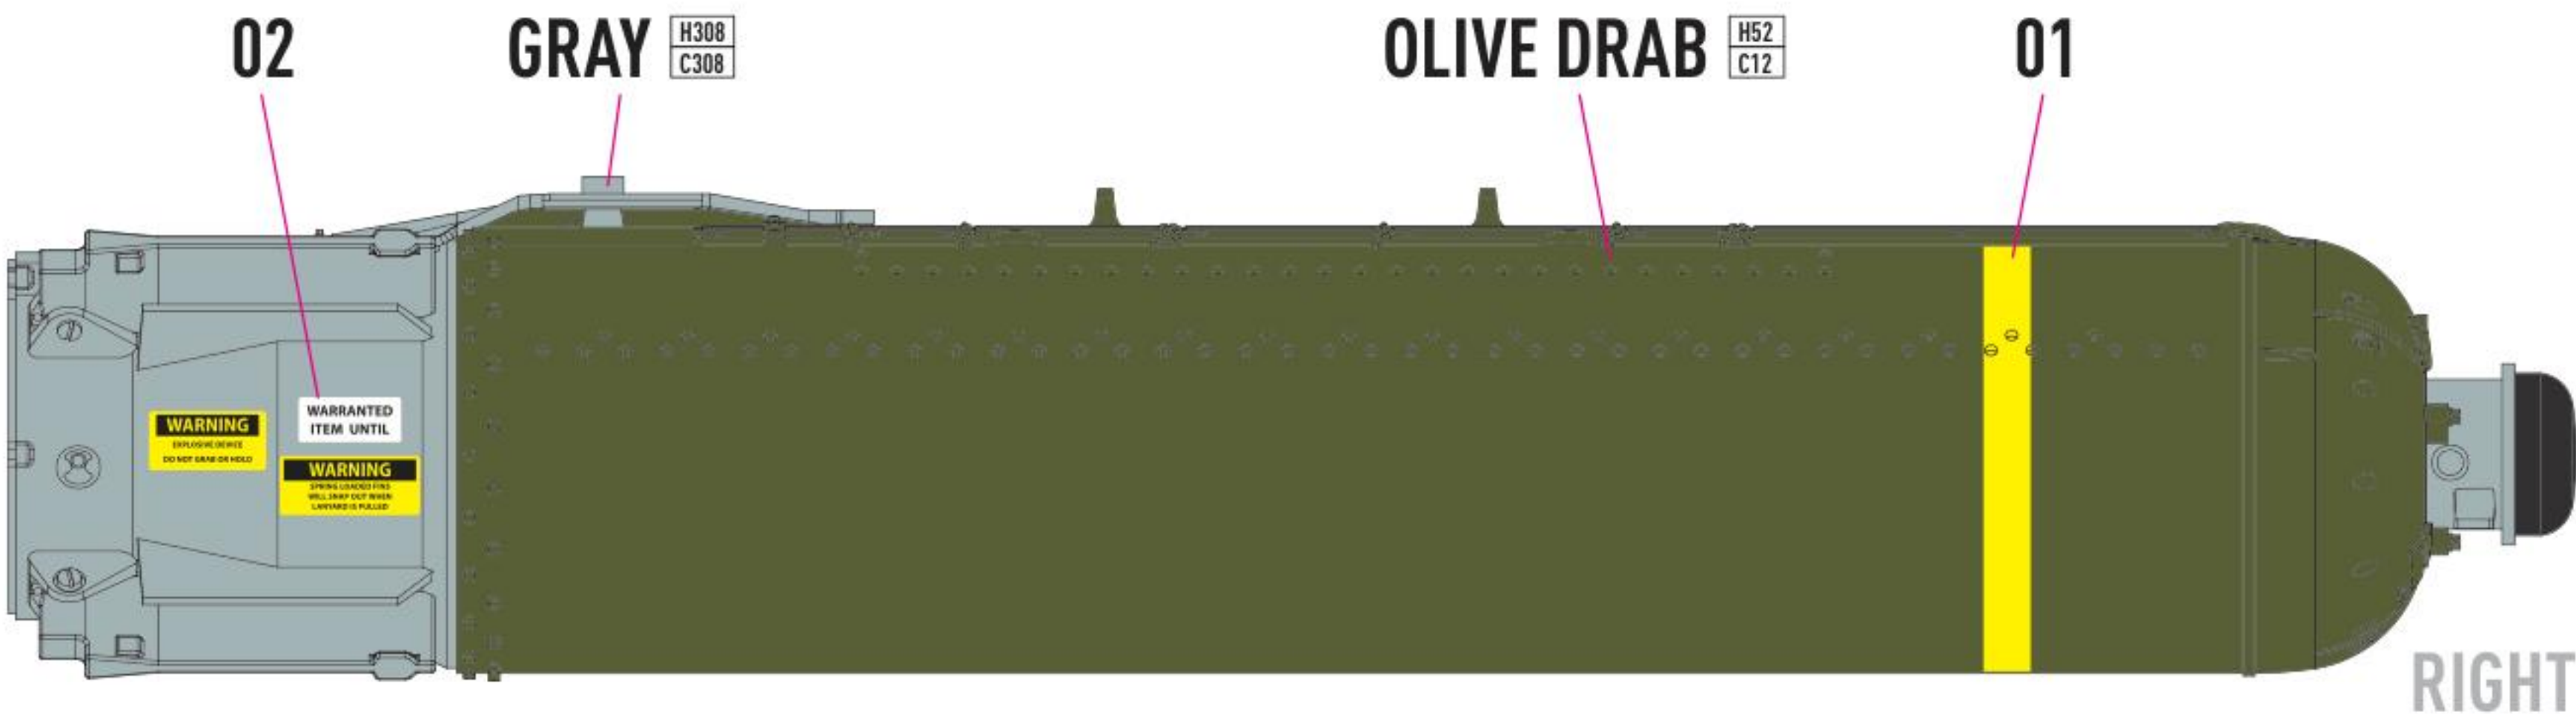

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
OLIVE DRAB	H52	C12

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
GRAY	H308	C308

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
FLAT BLACK	H12	C33