



# AIRBUS A340

AIR CANADA 



The Airbus A340 aircraft combines maximum fuel economy with low operating costs. The four-engined A340 has a capacity of 284 passengers and a range of 12,500 kms. The A340 is 63.7 metres long from nose to tail, and has an overall wingspan of 60.3 metres. Air Canada, founded in 1937 as Trans-Canada Airlines, is the largest A340 operator in North America. Air Canada has a total of 12 Airbus A340 aircraft in its fleet.

L'avion Airbus A340 allie une économie en carburant optimale à de faibles frais d'exploitation. Il possède quatre moteurs, a une capacité de 284 passagers et sa distance franchissable est de 12 500 km. L'A340 mesure 63,7 mètres du nez à la queue et son envergure totale est de 60,3 mètres. Air Canada, une société fondée en 1937 sous la raison sociale Trans-Canada Airlines, est le plus important exploitant d'avions A340 en Amérique du Nord. La flotte aérienne d'Air Canada compte 12 Airbus A340.

Mould manufactured by and property of Revell AG/Revell-Monogram Inc. Illegal imitations are subject to prosecution. "Revell" is a registered trademark of Revell-Monogram Inc., U.S.A. © 1999 Binney & Smith Canada  
Questions? Comments? Call 1-800-833-3570 Weekdays 9am-4pm EST.

Ce produit est propriété de la société Revell AG/Revell-Monogram Inc. Toute utilisation ou duplication frauduleuse fera l'objet de poursuites en justice. «Revell» est une marque déposée de Revell-Monogram Inc., E.-U. © 1999 Binney & Smith Canada  
Questions? Commentaires? Composez le 1 800 833 3570, en semaine, de 9 h à 16 h, HNE.

Visit our Web site! Visitez notre site Web! [www.revell-monogram.com](http://www.revell-monogram.com)


Printed in Canada / Imprimé au Canada

85-7812-0-400

## ASSEMBLY

### ATTENTION: Read the instructions thoroughly prior to assembly.

- Each component is numbered (1).
- Adhere to the specified sequence of assembly.
- Tools required: a knife and file for removal of components from the frame (2); rubber bands, adhesive tape and clothes pegs for clamping the components together after applying the adhesive (3).
- Clean the plastic components in a mild detergent solution and allow them to air dry so that the paint and transfers adhere better.
- Prior to applying the adhesive, check to see whether the components fit together. Use only cement for polystyrene plastic.
- Apply the adhesive sparingly.
- Remove chrome and paint from areas to be cemented.
- Paint small components before removing them from the frame (4), (5).
- Allow paint to dry well before continuing to assemble.

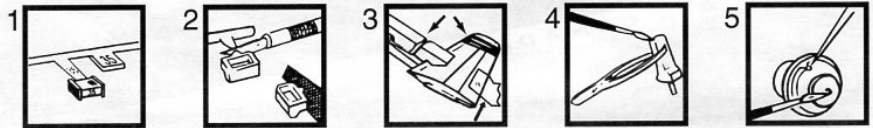

Please note the following symbols, which are used in the following construction stages. Veuillez noter les symboles indiqués ci-dessous, qui sont utilisés dans les étapes suivantes du montage.



Soak and apply decals  
Mouiller et appliquer les décalcomanies



Glue.  
Coller.



Don't glue.  
Ne pas coller.



Illustration of assembled parts  
Figure représentant les pièces assemblées



Optional  
Facultatif



Make a hole  
Faire un trou

## Paint Colours Required



A  
anthracite grey  
gris anthracite



B  
aluminum  
aluminium



C  
steel  
coloris fer



D  
gloss white  
blanc brillant



E  
satin grey  
gris satiné



F  
metallic grey  
gris métallisé



H  
80% mossy green, gloss + 20% night blue, gloss  
80 % vert mousse, brillant + 20 % bleu nuit, brillant



I  
flat grey  
gris mat



J  
flat medium grey  
gris moyen mat



K  
satin light grey  
gris clair satiné
















## Peintures nécessaires















### Decal Application Instructions












1. Cut desired decal from sheet.
2. Dip decal in water for a few seconds.
3. Place wet decal on paper towel.
4. Wait until decal is moveable on paper backing.
5. Place decal in position on model, face up, and slide backing away.
6. Press out air bubbles with a soft, damp cloth.
7. Milkiness that may appear is for better decal adhesion and will dry clear. Wipe away any excess adhesive.
8. Do not touch decal until fully dry.
9. Allow the decals 48 hours to dry before applying clear coat.

### Directives d'application des décalcomanies

1. Découper la décalcomanie désirée de la feuille.
2. Tremper la décalcomanie dans de l'eau pendant quelques secondes.
3. Placer la décalcomanie mouillée sur une serviette en papier.
4. Attendre que la décalcomanie puisse être déplacée sur son support en papier.
5. Mettre la décalcomanie en position sur le modèle face sur le dessus et faire glisser le support pour l'enlever.
6. Appuyer avec un chiffon doux humide pour éliminer les bulles d'air.
7. La substance laiteuse qui peut apparaître est destinée à améliorer l'adhésion de la décalcomanie et devient incolore au séchage. Essuyer pour enlever tout excédent d'adhésif.
8. Ne pas toucher la décalcomanie tant qu'elle n'est pas bien sèche.
9. Laisser la décalcomanie sécher pendant 48 heures avant d'appliquer une couche transparente.

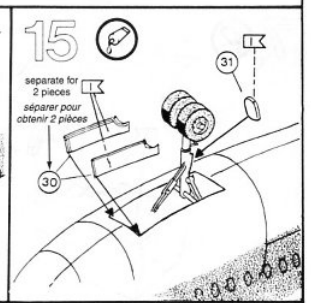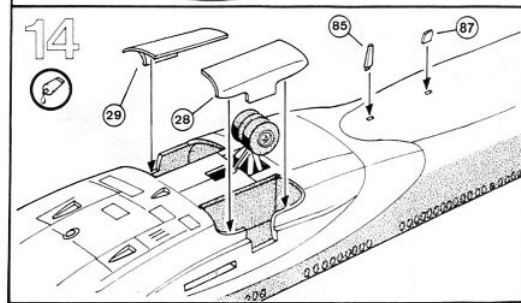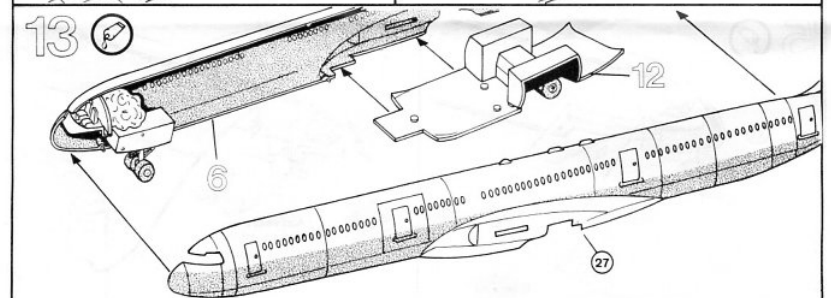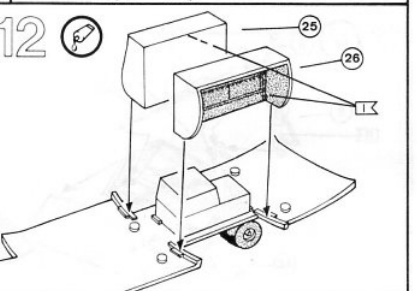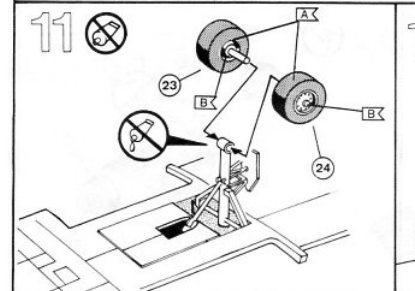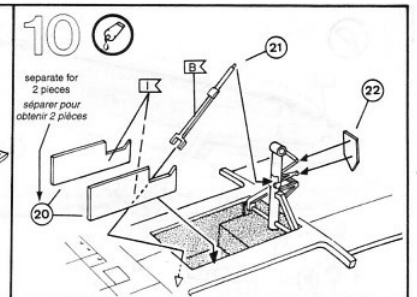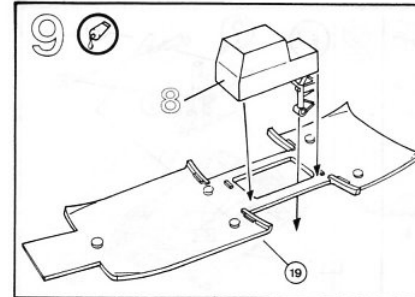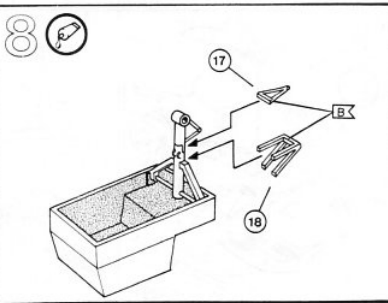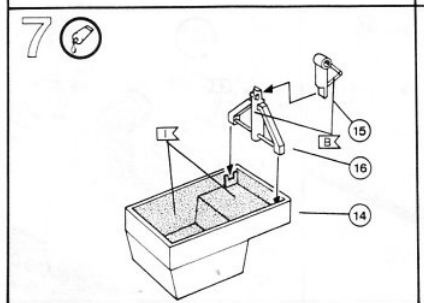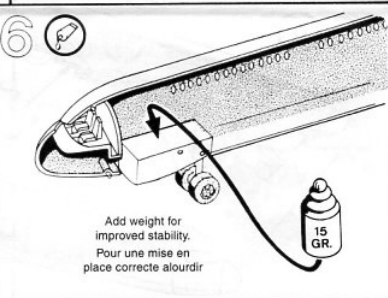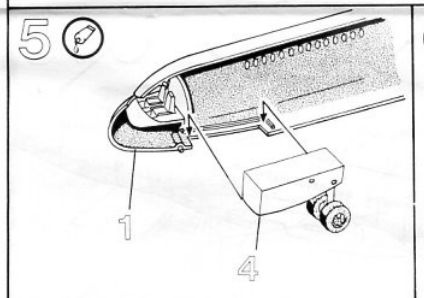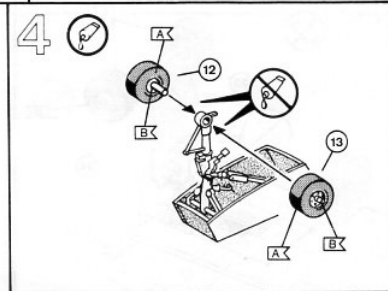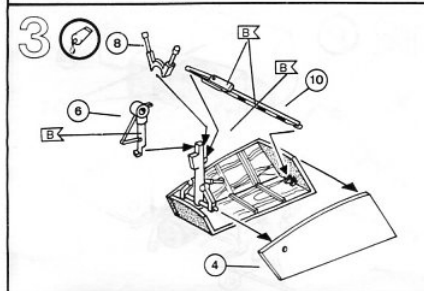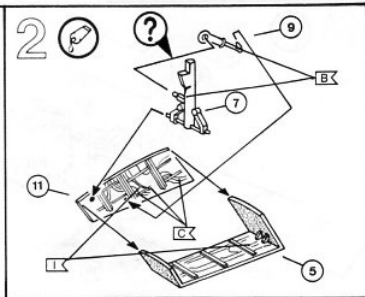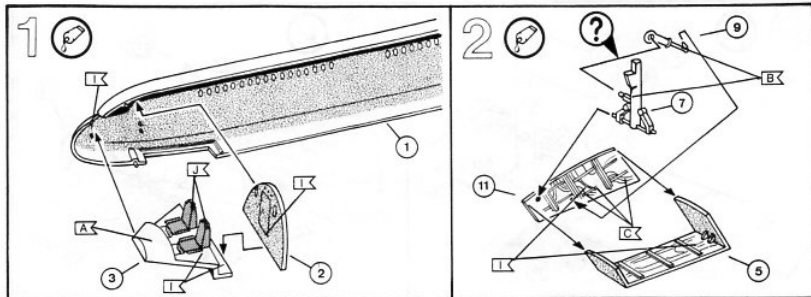


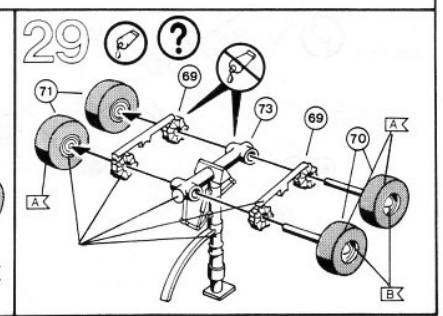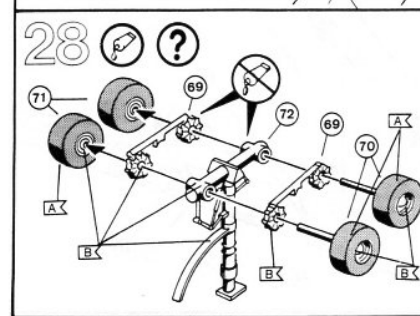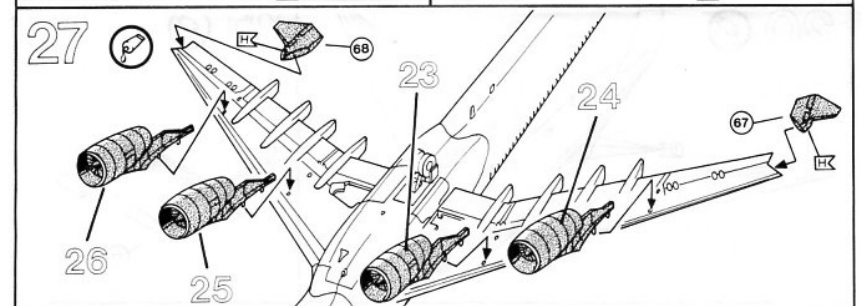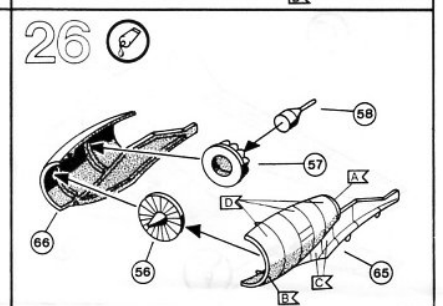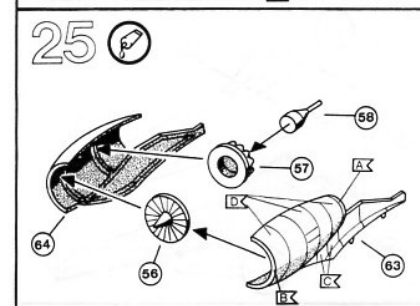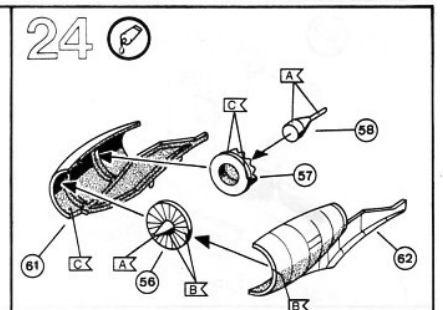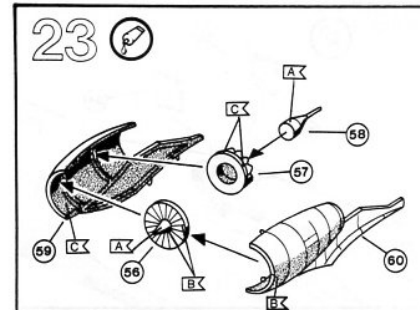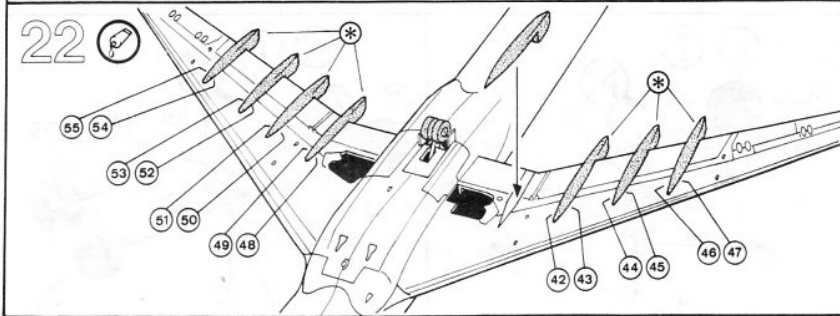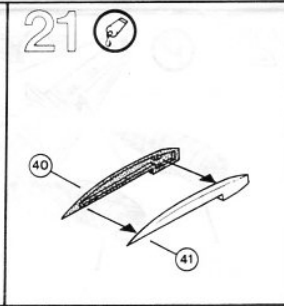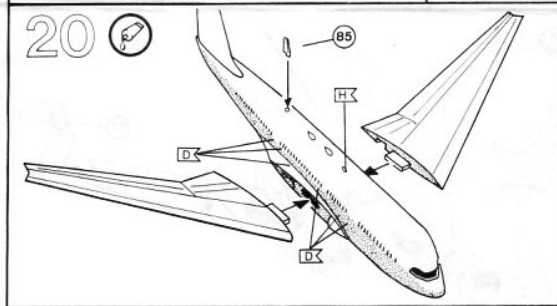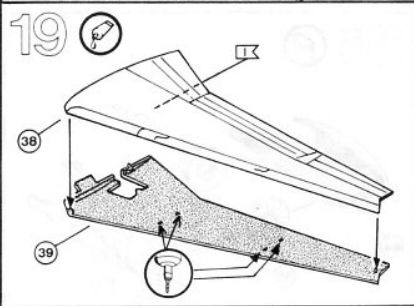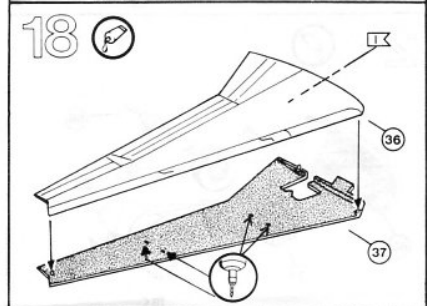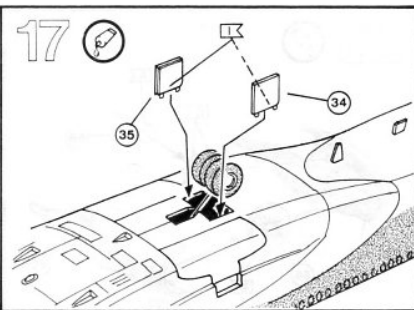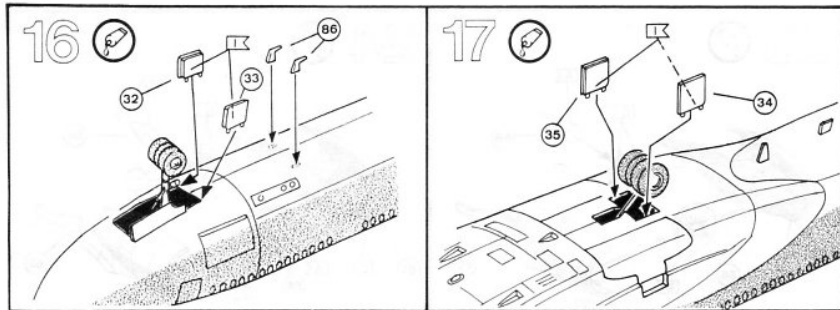

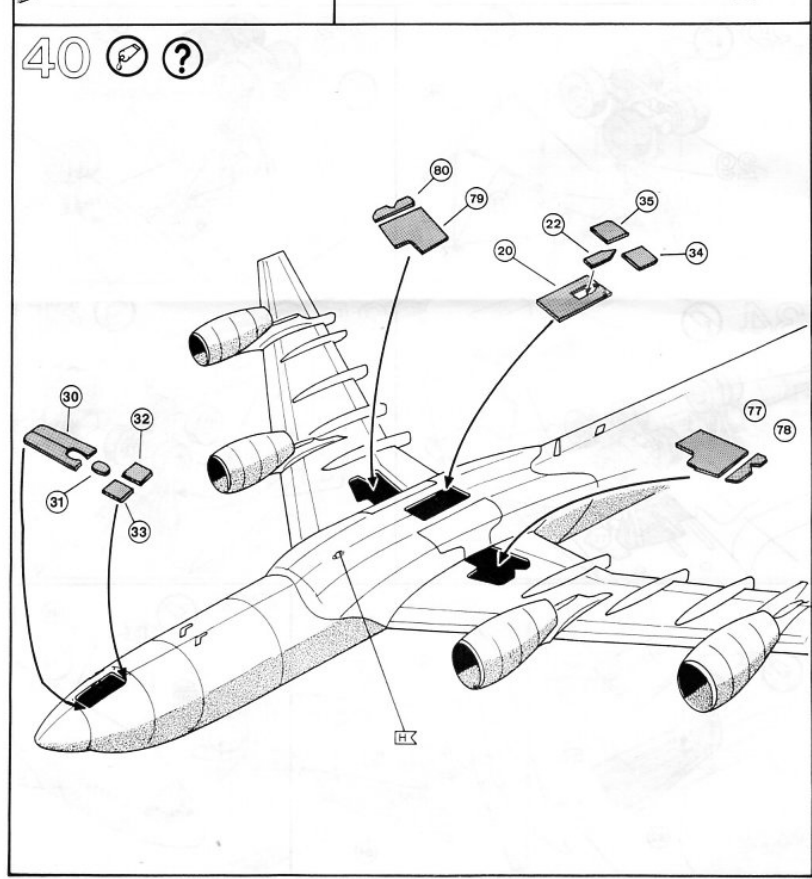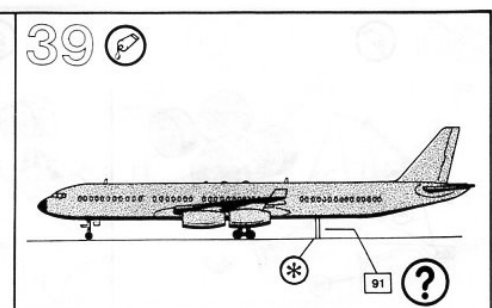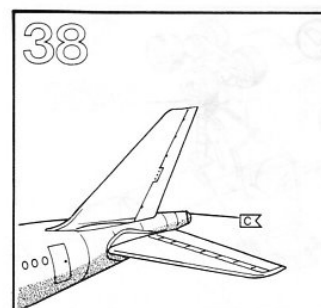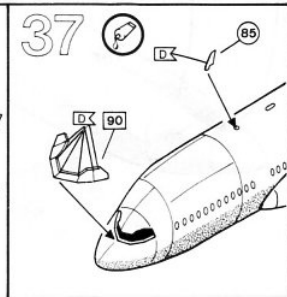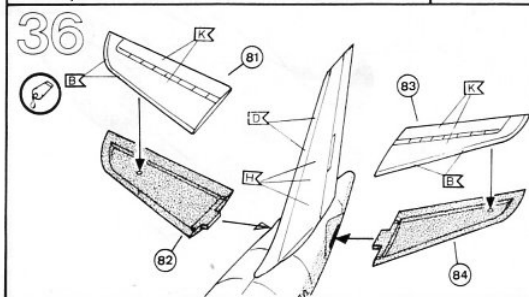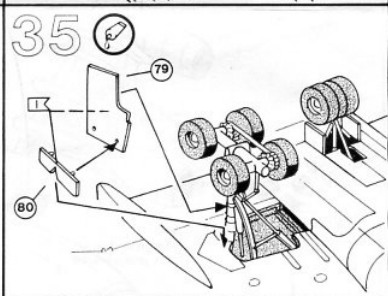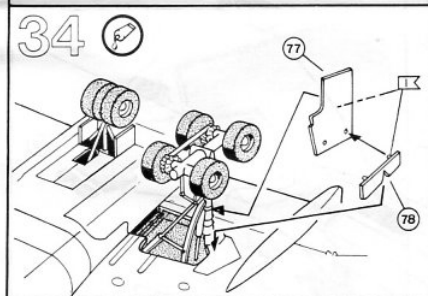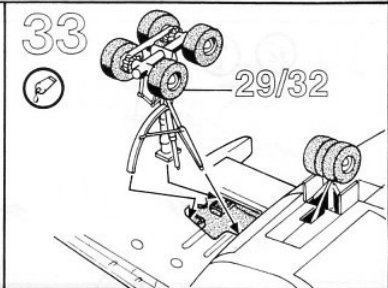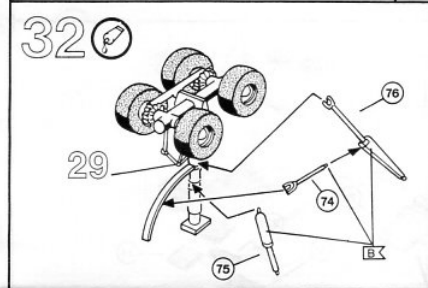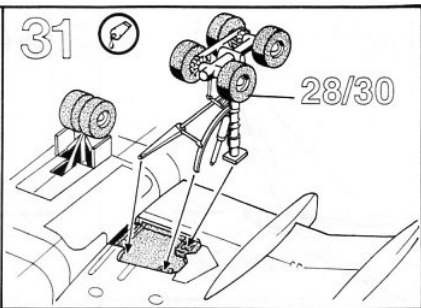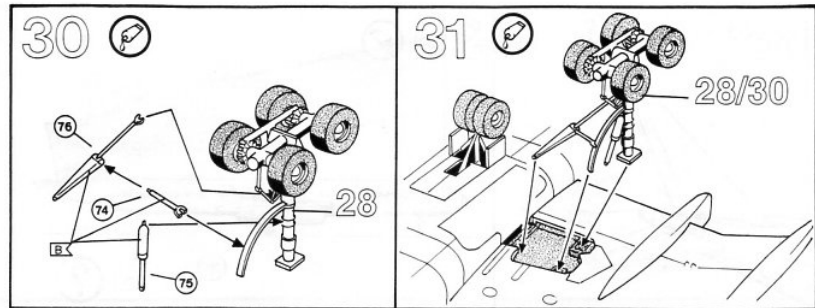




Decal Placement & Paint Instructions - Advanced Modeler  
 Pose des décalcomanies et instructions de peinture - Modéliste expérimenté

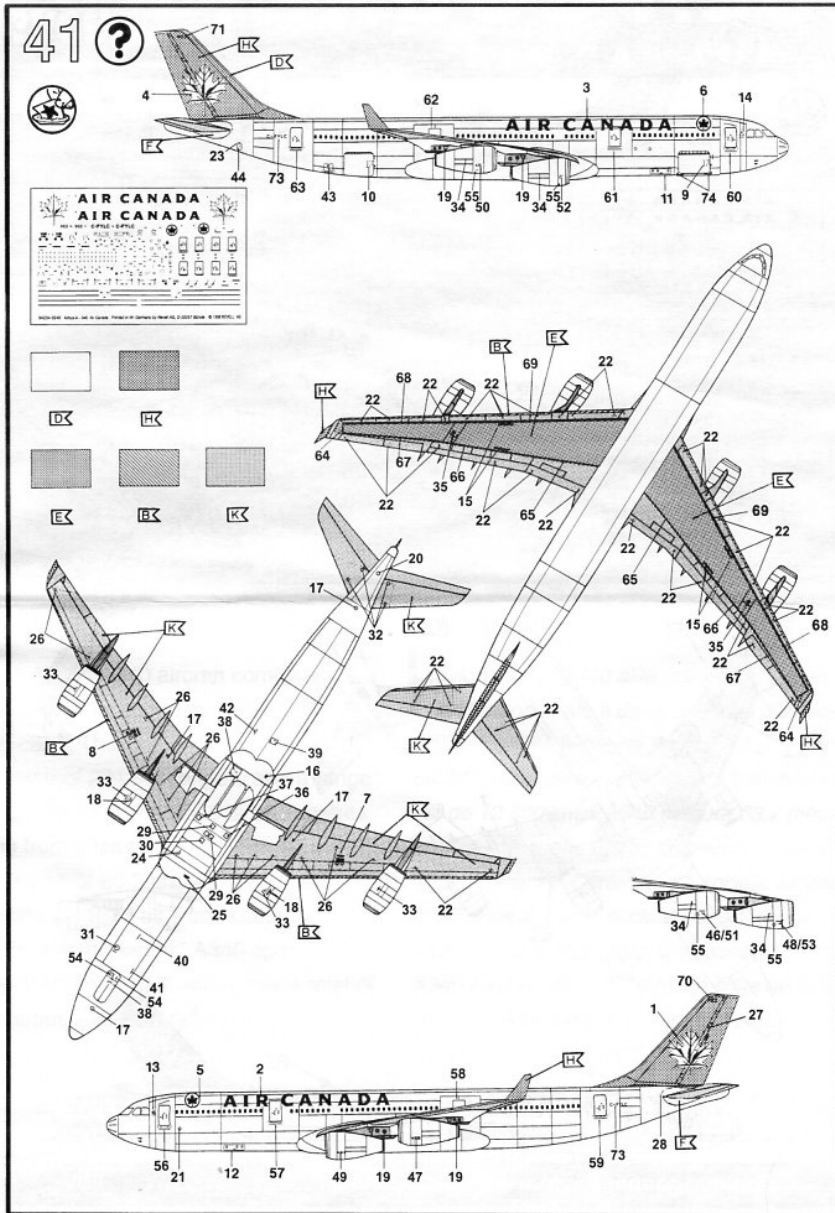

Decal Placement & Paint Instructions - Beginner/Intermediate Modeler  
 Pose des décalcomanies et instructions de peinture - Modéliste débutant/intermédiaire

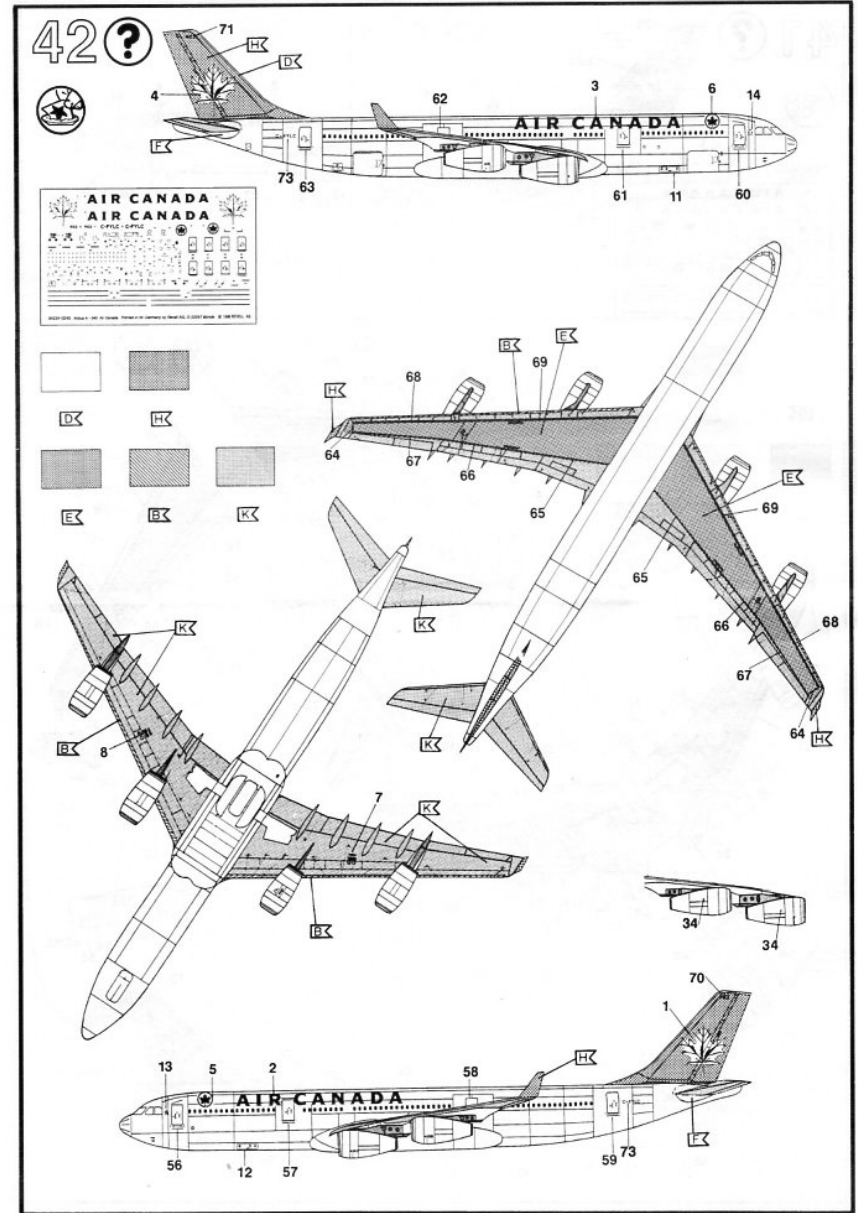



**AIR CANADA**

**AIR CANADA**



70 71 C-FYLC 73 C-FYLC

74

65 66 67 68 69