

**X72036**

# LUFTWAFFE SWASTIKAS

Swastikas were carried on the fins, and in some cases across the rudders, of all Luftwaffe aircraft from around 1937. Early presentation was on a white disc on a red band which ran across the fin and rudder. Soon after the start of WWII the red band was removed.

Although official sizes were laid down, as is normal in a wartime situation, these were not always strictly followed, particularly when applied in the field so reference to photographs of the aircraft being modelled is always advisable. Styles could vary considerably and we hope that most of these have been covered.

Arado Ar 196 430mm	Focke Wulf Fw 189 430mm	Junkers Ju 88 650mm
Arado Ar 232 1086mm	Focke Wulf Fw 190 540mm	Junkers Ju 188 710mm
Arado Ar 234 540mm	Focke Wulf Fw 200 810mm	Messerschmitt Bf 108 300mm
Arado Ar 240 540mm	Heinkel He111 early 710mm	Messerschmitt Bf 109 300mm
Bv 138 810mm	Heinkel He 111 late 650mm	Messerschmitt Me 110 540mm
Bv 141 430mm	Heinkel He 162 300mm	Messerschmitt Me 163 300mm
Bv 222 1350mm	Heinkel He 177 early 1086mm	Messerschmitt Me210 650mm
Dornier Do 17 540mm	Heinkel He 177 late 810mm	Messerschmitt Me 262 430mm
Dornier Do 217 430mm	Henschel Hs 123 540mm	Messerschmitt Me 410 650mm
Fiesler Fi 156 Storch 540mm	Henschell Hs 129 430mm	Siebel Si 204 430mm
Focke Wulf Ta 152 540mm	Junkers Ju 52/3m 810mm	
Focke Wulf Fw 154 540mm	Junkers Ju 87 Stuka 540mm	

For the best results these decals should be applied to a gloss surface such as provided by either Xtracolor or Xtracrylix paints. Cut out the decal required and soak in warm water until the decal is released from the backing paper. Wet the area to be decaled with MICRO SET which will help to eliminate air trapped under the decal and position the decal.

After 5 or 10 minutes wet the decal with MICRO SOL which will soften the decal and ensure that it settles down over any surface detail. Allow the decal to dry for at least 12 hours. During this time some wrinkling of the decal may occur, this is normal. Do not touch the decal at this time.

Carefully check for small air bubbles and if there are any prick with a needle and apply a drop of MICRO SOL. After all air bubbles have been eliminated and the decals are dry wash the entire model with water to remove any excess decal adhesive.

When completely dry the whole model should be sprayed with a coat of Xtracolor or Xtracrylix with a coat of Flat, Satin or Gloss varnish depending on the finish required.

Store in a cool dry place, avoid sunlight, dampness or extremes of temperature and/or humidity.



[www.hannants.co.uk](http://www.hannants.co.uk)

Harbour Road, Oulton Broad, Lowestoft, Suffolk, NR32 3LZ

Phone +44 1502 517444

Fax +44 1502 500521


[sales@hannants.co.uk](mailto:sales@hannants.co.uk)



300 mm

430 mm

540 mm

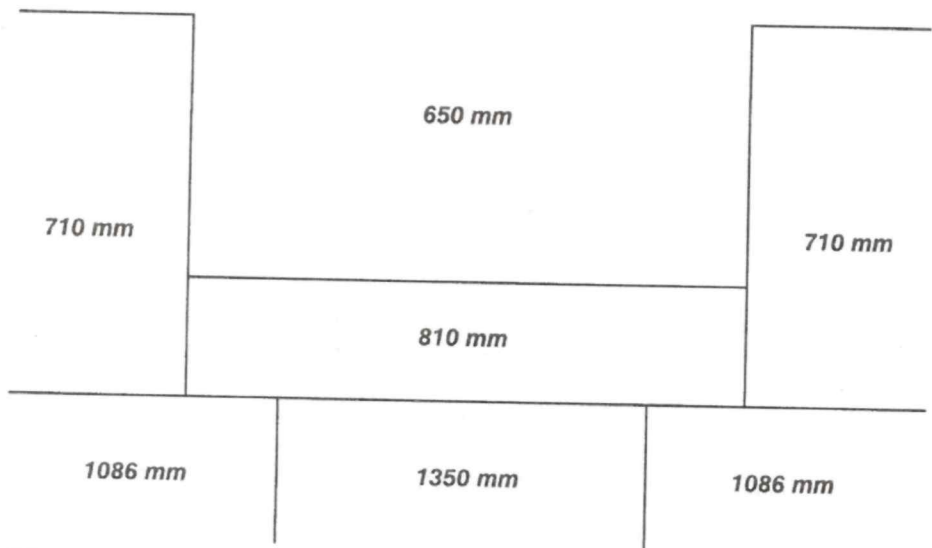

710 mm

650 mm

710 mm

810 mm

1086 mm

1350 mm

1086 mm

