




R1



USE A SAW TO REMOVE SUPPORTS  
FROM 3D PRINTED PARTS

**DETAILS AFTER REMOVAL  
FROM SUPPORTS**



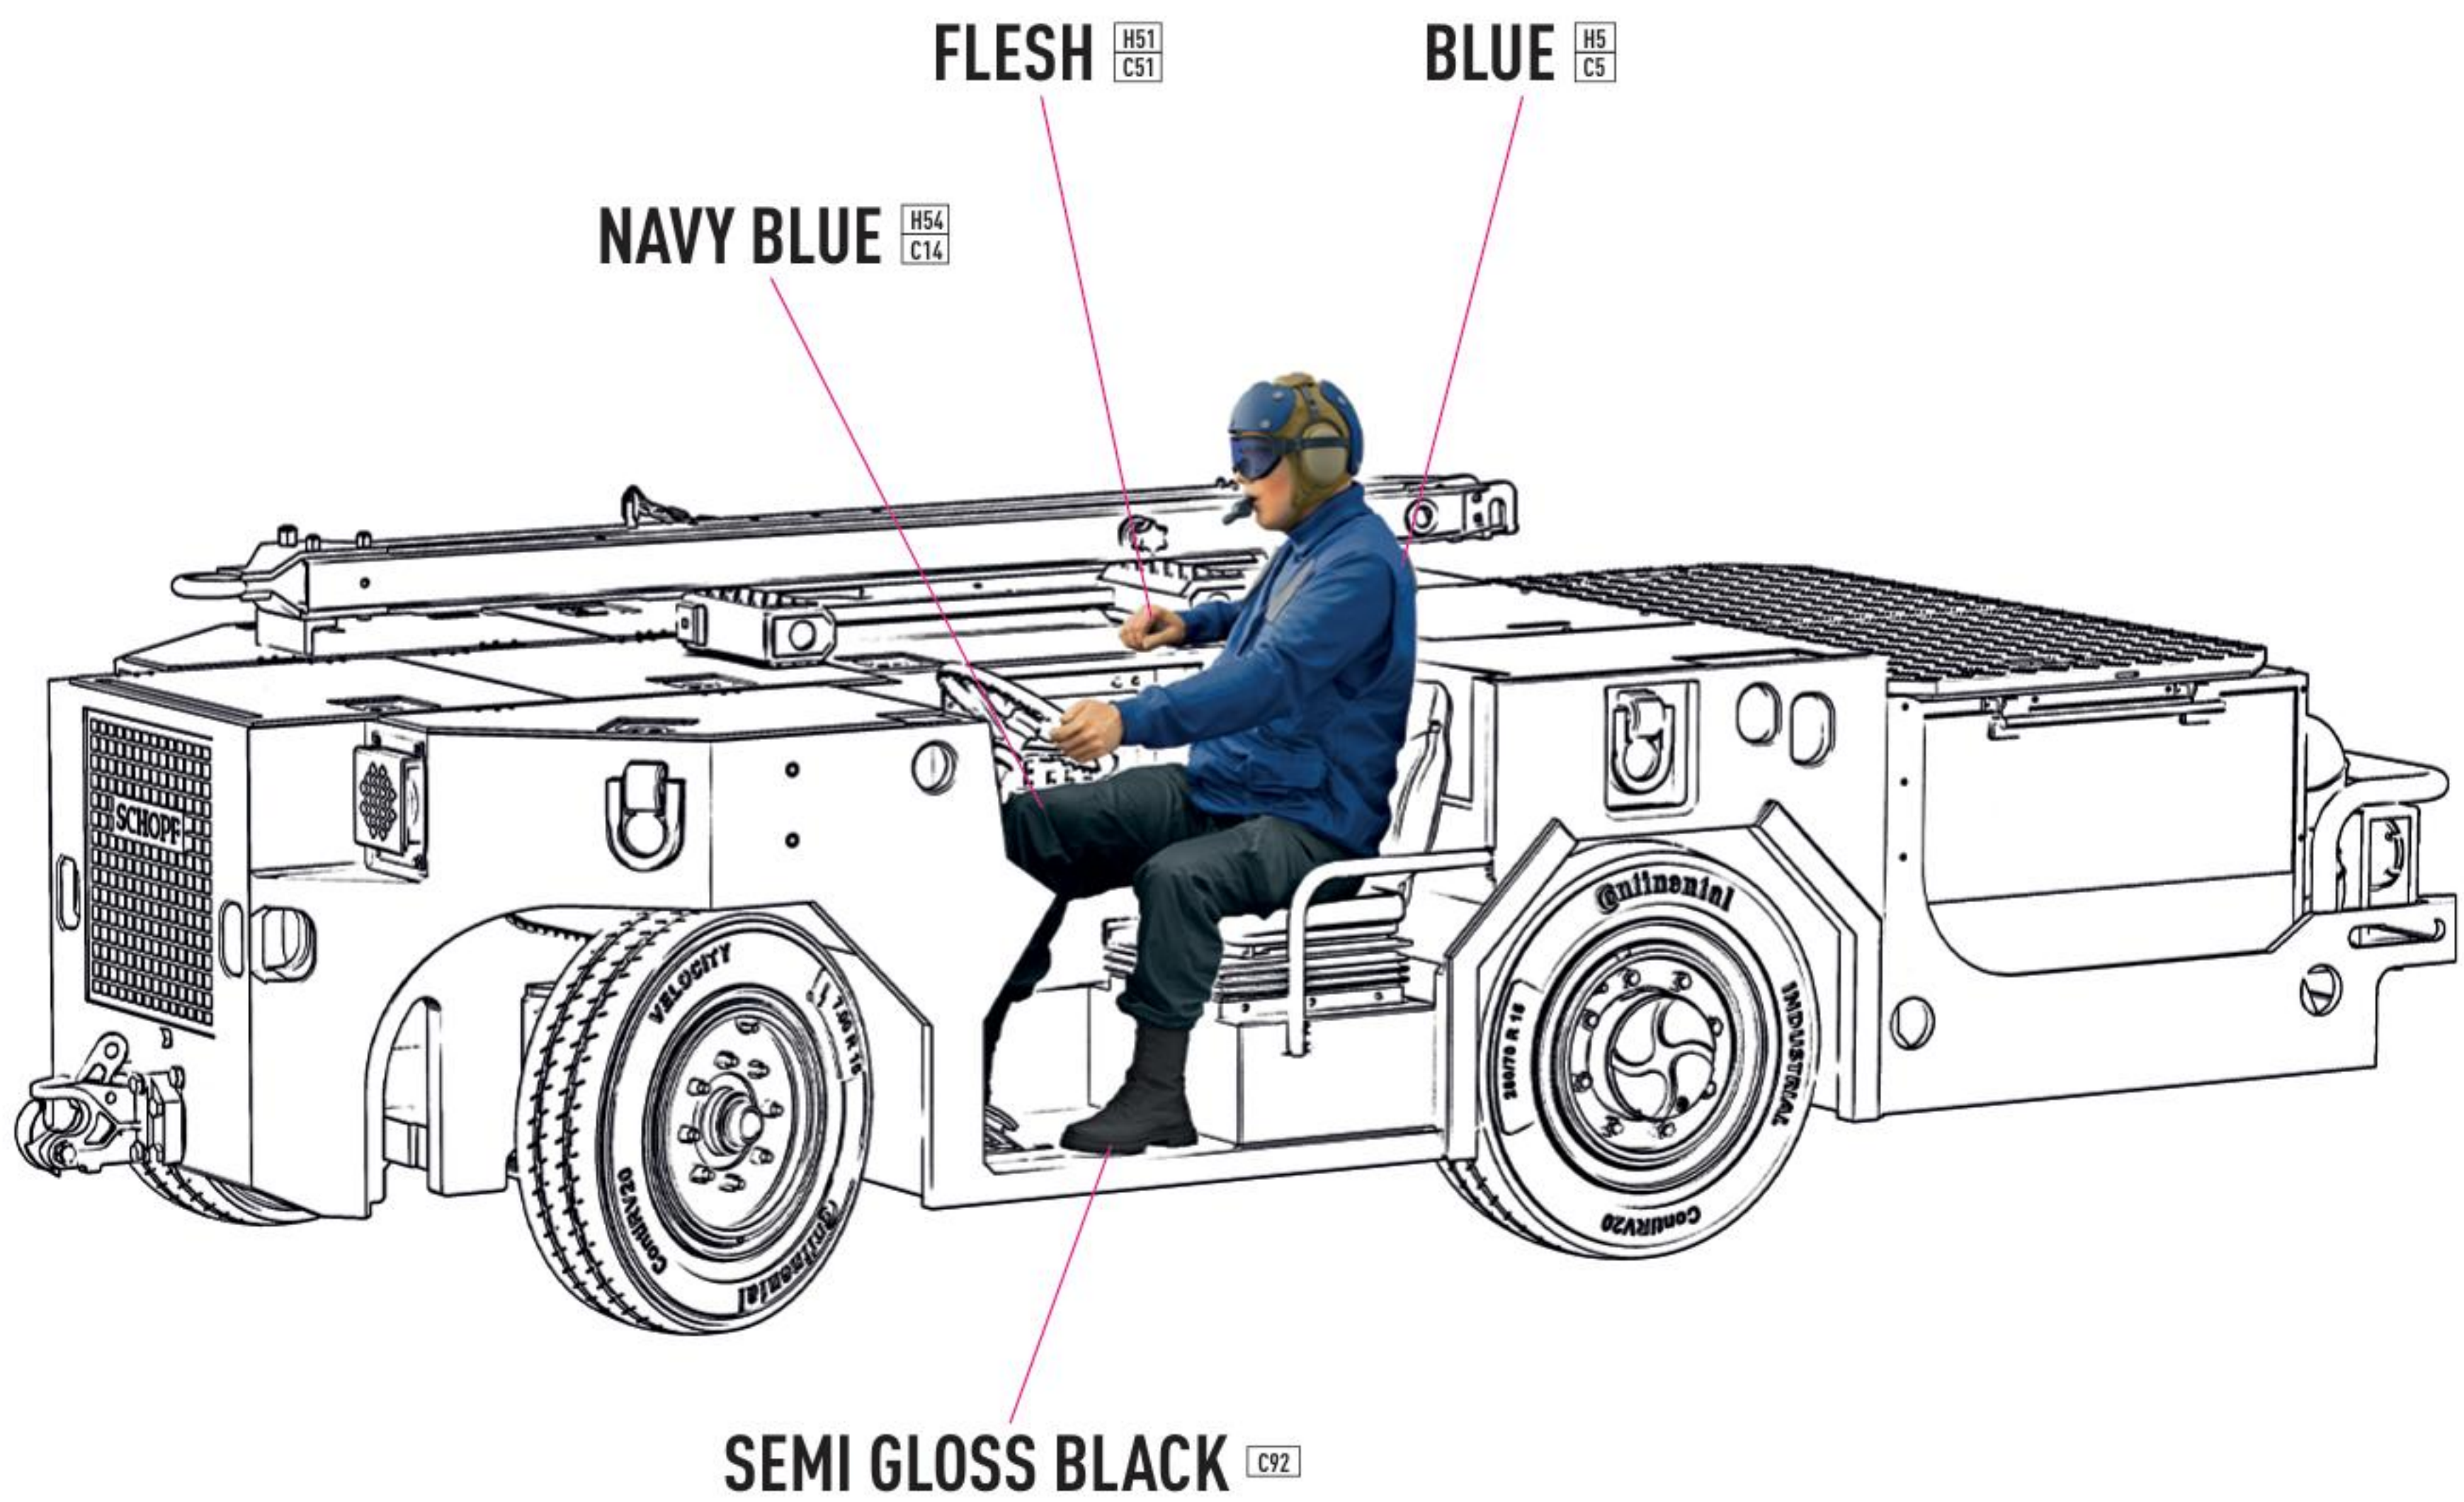

PAINT INSTRUCTION

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
BLUE	H5	C5
FLESH	H22	C22

COLORS	GUNZE / AQUEOUS	GUNZE / MR.COLOR
NAVY BLUE	H54	C14
SEMI GLOSS BLACK		C92